

DOCUMENT TITLE	Setting up the wireless connection and camera Lumix Club settings
----------------	---

APPLICABLE MODELS	DMC-FX90
-------------------	----------

This guide will help you through the setting up of a wireless connection and the camera stages of creating a Lumix Club ID.



Turn on the camera and select Playback mode.




Select the MENU option.





Select the Wi-Fi Setup option.

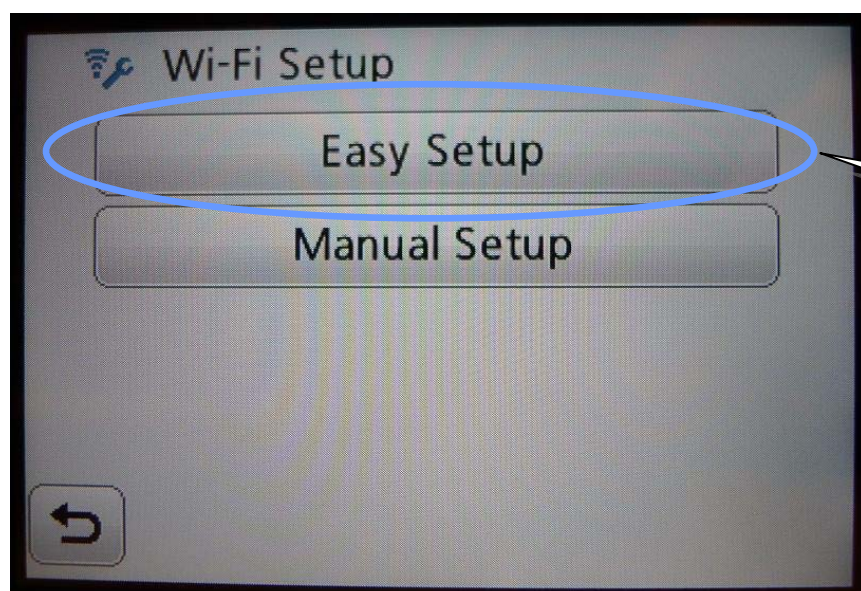


Select the Easy Setup option.




Select the Web Service option.




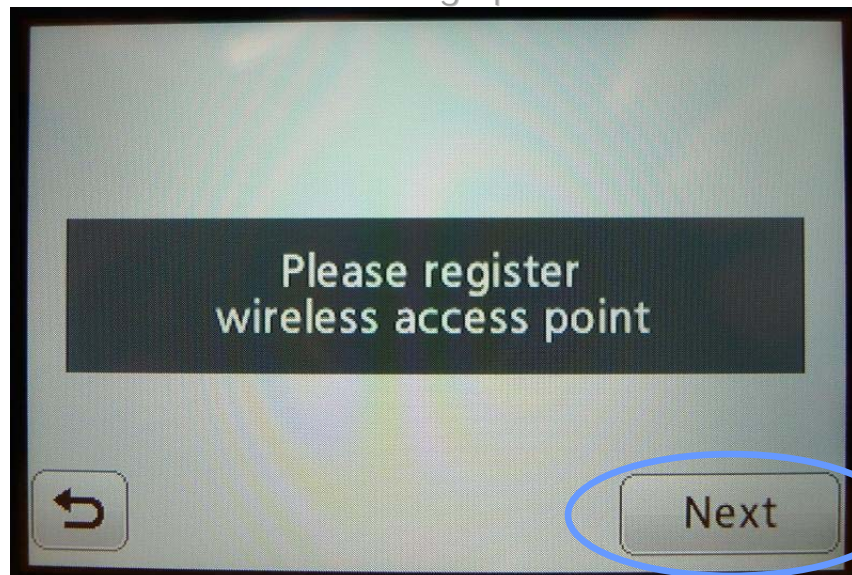

Click Next.

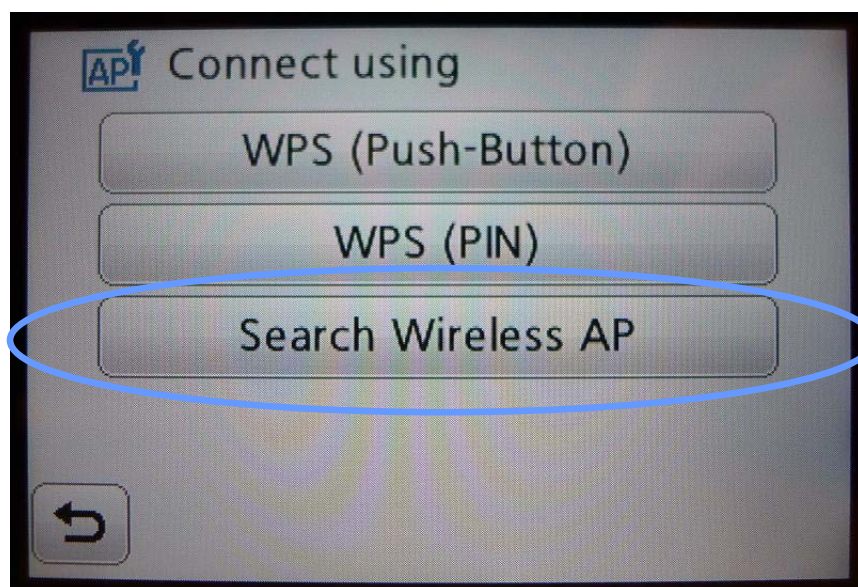

Select Search Wireless AP.

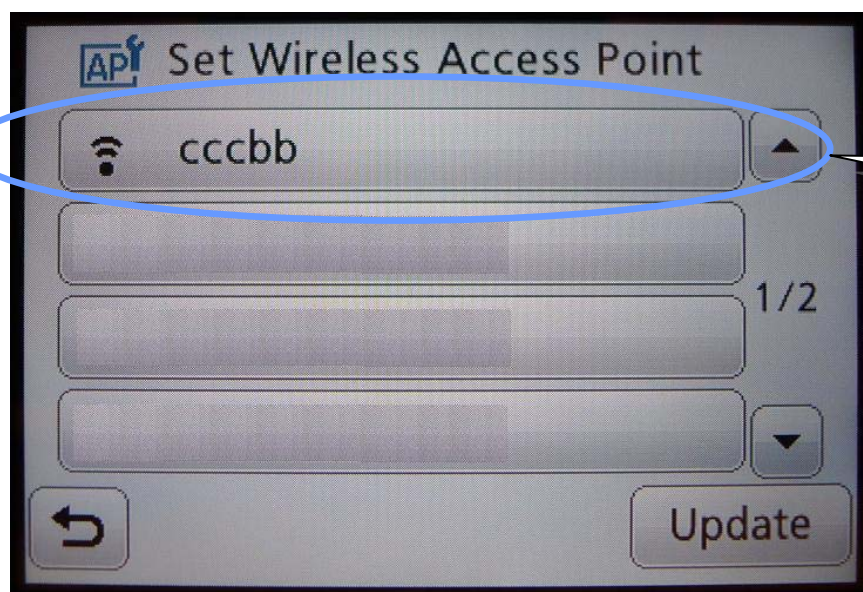


Select the access point that is your router.






Next you will enter the encryption key/password for your router.

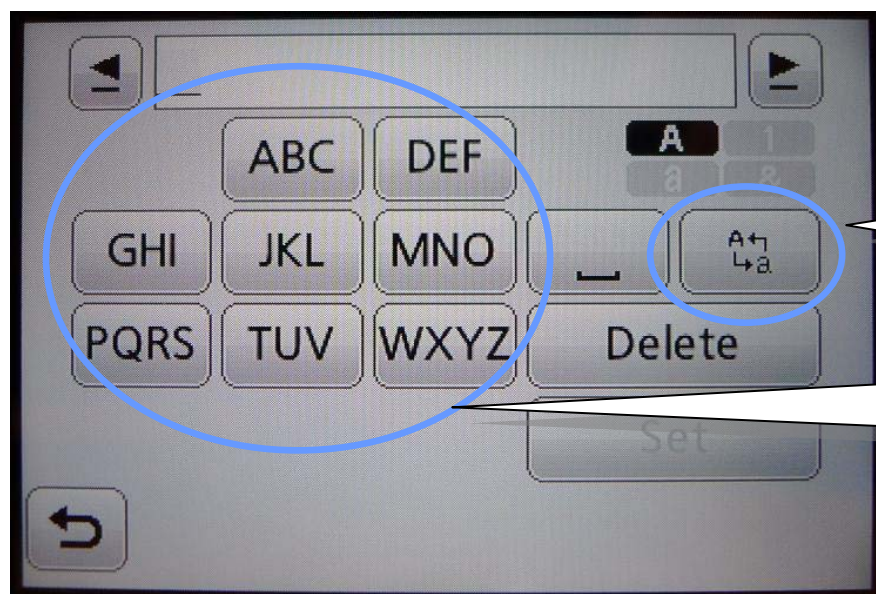

Enter the encryption key/password for your router. Use this button to switch between Upper and lower case, numbers and symbols.


Use these keys to enter the password. For example for a letter C, press the ABC button repeatedly until C is shown in the display.

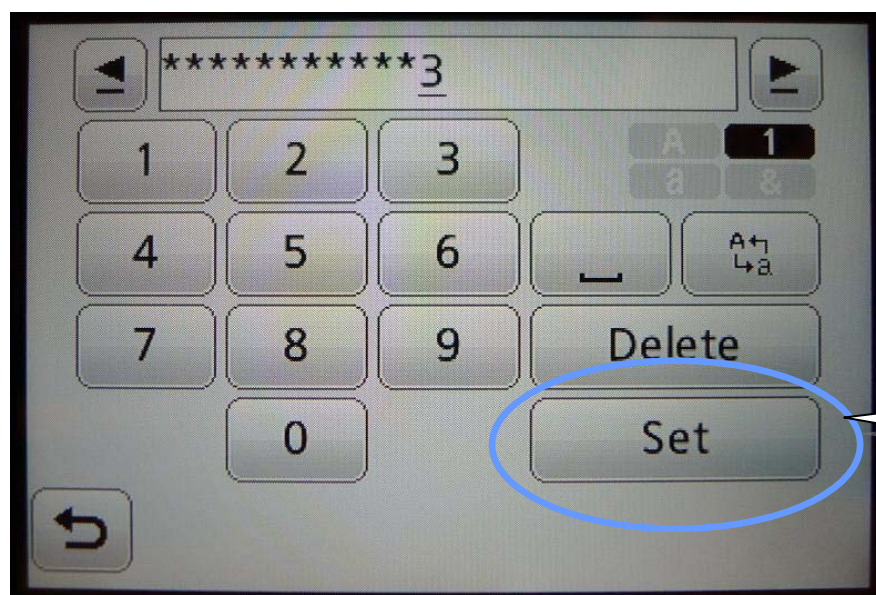


Once the key/password has been entered press the Set button.




## Setting up the wireless connection and camera Lumix Club settings

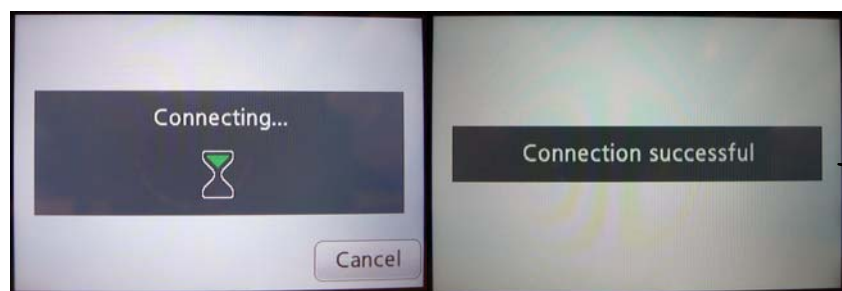

You will then see a Connecting message followed by the Connection successful screen.

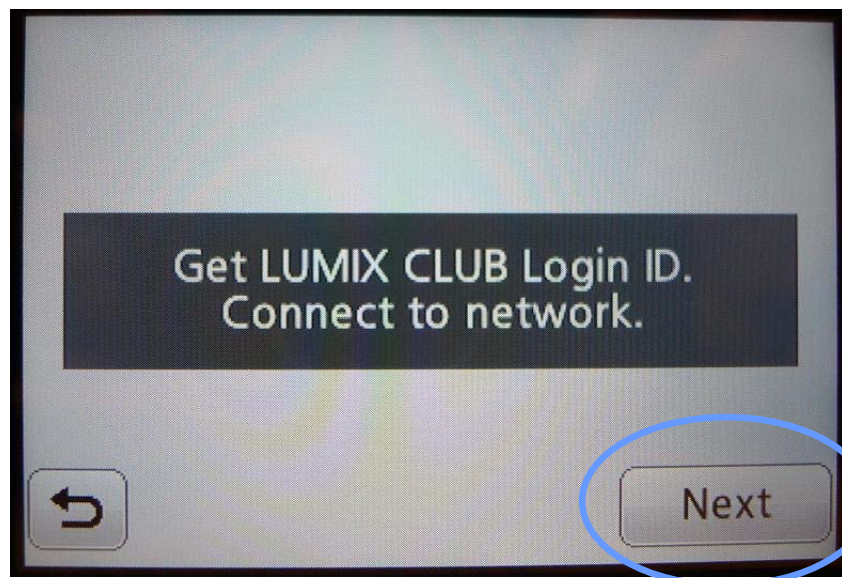


Click Next

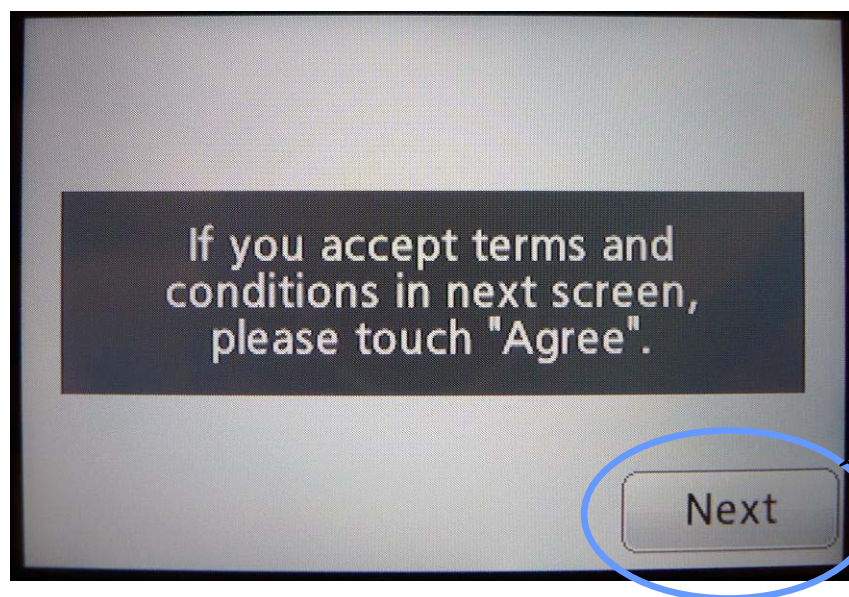


Click Next




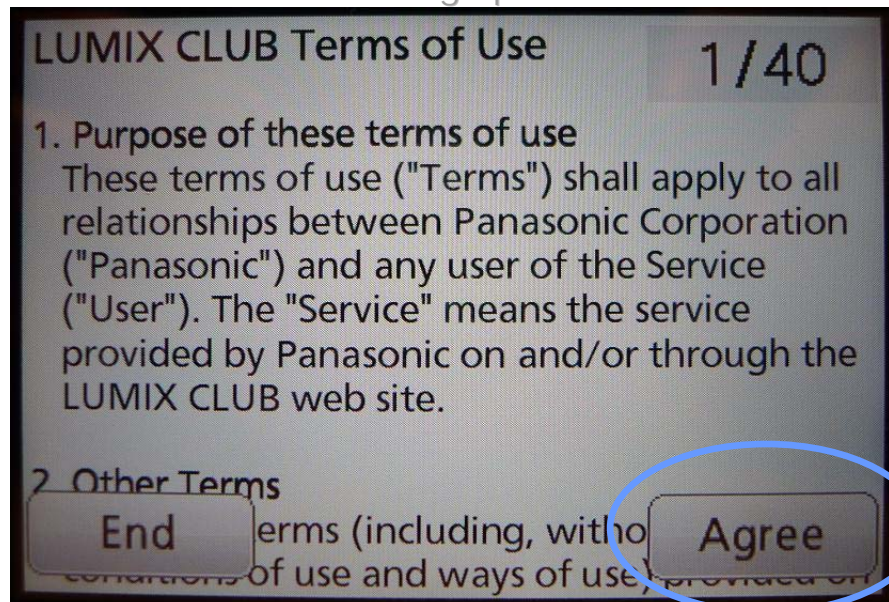

Select Agree.

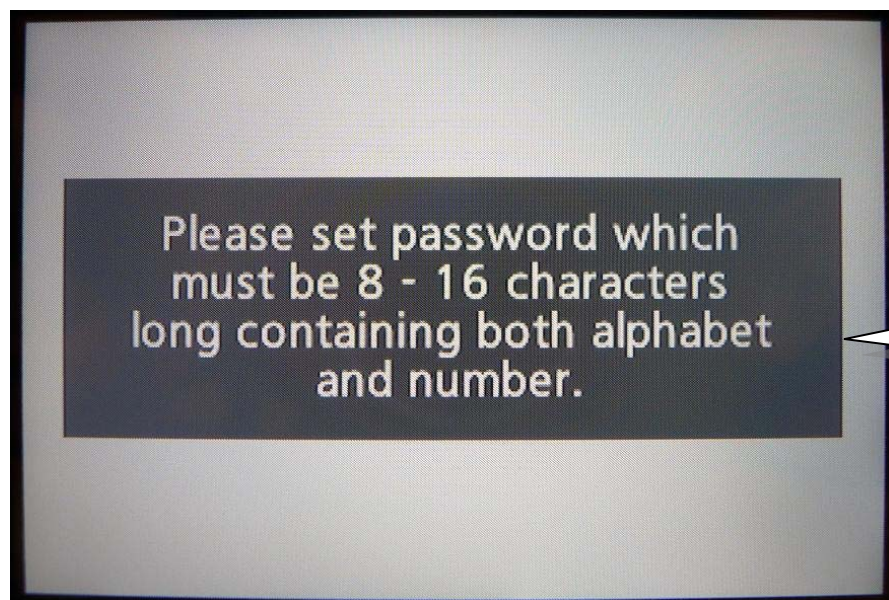


A password notification screen will be shown.

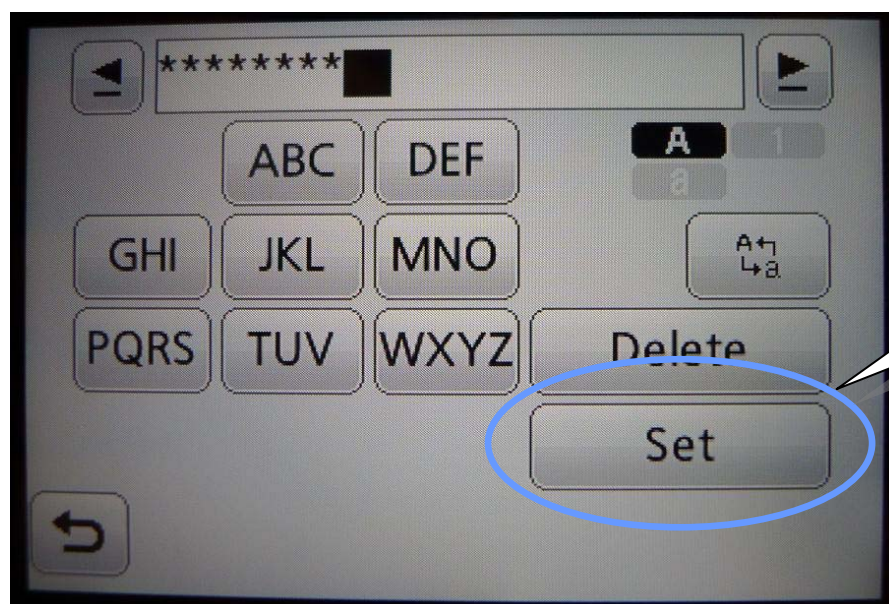

Enter a password of your choice in the same way as the wireless encryption key was entered earlier and the press Set.




## Setting up the wireless connection and camera Lumix Club settings

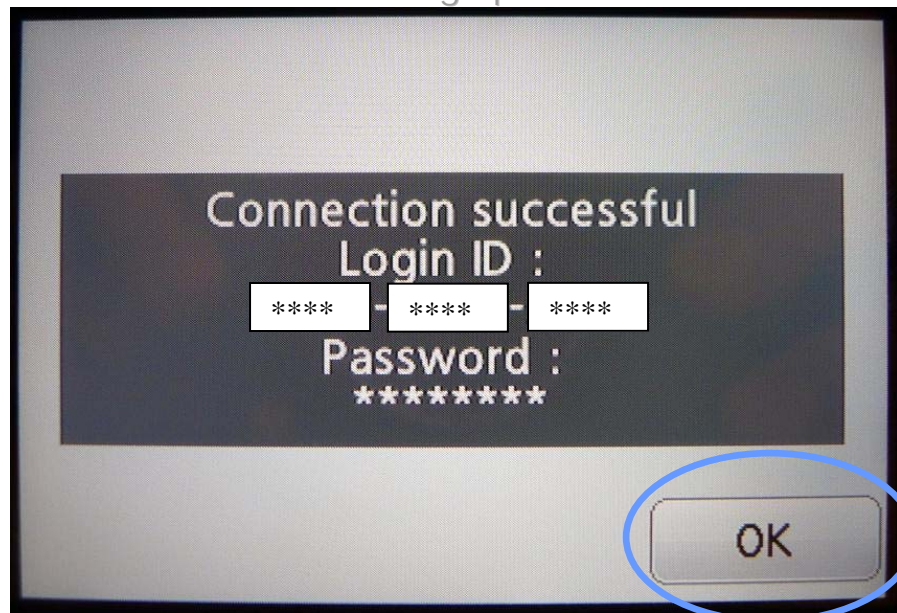

This page will show you your unique Lumix Club Login ID.

Please make a note of the ID number.

Select OK.

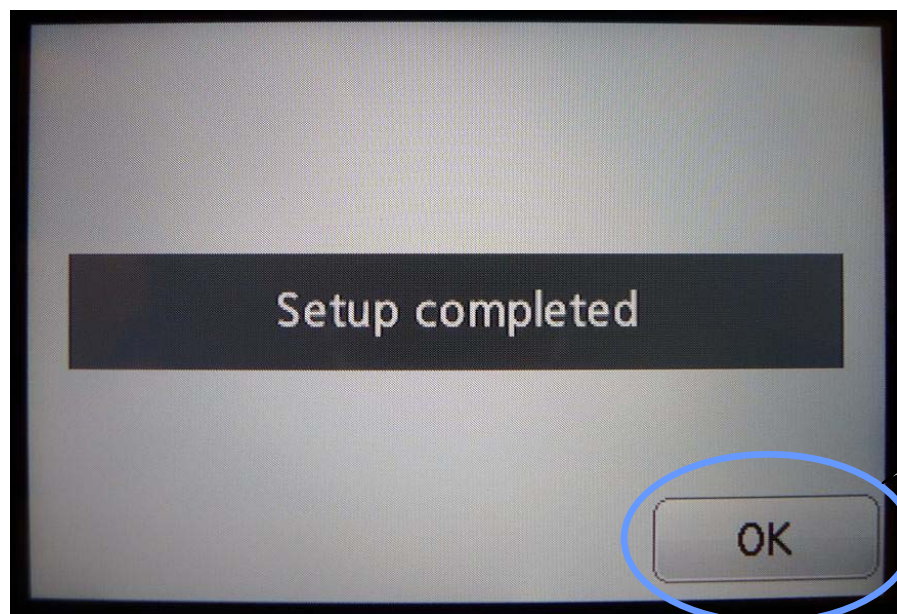

Select OK.