

Panasonic®

Installation Guide

Home Network System Indoor Siren

Model No. **KX-HNS105E**



Thank you for purchasing a Panasonic product.

This document explains how to install the indoor siren properly.
For details about how to use the system, refer to the User's Guide
(page 13).

Please read this document before using the unit and save it for future reference.

For dedicated help, support, or advice, available to help you Monday - Friday, 09:00 - 23:00. For U.K., please contact us on 0330 3331112 and for Ireland 01 4475228.

Table of Contents

Introduction

Accessory information	3
General information	4

Important Information

About this system	5
For your safety	5
Important safety instructions	6
For best performance	6
Other information	7

Setup

Part names and functions	8
LED indicator	8
Setup overview	8
Registering the siren	9
Confirming the usage area	10
Installation	11
Note about power connections	12

Appendix

Testing the siren	13
Adjusting the siren's volume	13
Features available when using the [Home Network] app	13
Accessing the User's Guide	13
Specifications	14
Conditions of guarantee	15

Accessory information

Supplied accessories

No.	Accessory item/Part number	Quantity
①	AC adaptor/PNLV236E0Z	1
②	DC extension cord/PNJA1159Z	1
③	Wall mounting screws (25 mm)/XTB4+25AVW	2



Other information

- Design and specifications are subject to change without notice.
- The illustrations in these instructions may vary slightly from the actual product.

Trademarks

- iPhone and iPad are trademarks of Apple Inc., registered in the U.S. and other countries.
- Android is a trademark of Google Inc.
- Microsoft, Windows, and Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- All other trademarks identified herein are the property of their respective owners.

Sales and support information

Customer Communications Centre

- For customers within the U.K.: 0330 3331112
- For customers within Ireland: 01 4475228
- For further support on your product, please visit our website:
www.panasonic.co.uk

Direct Sales at Panasonic U.K.

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Communications Centre Monday - Friday 9:00am - 5:00pm (Excluding public holidays).

Helpline Tel. No.: U.K. 0330 3331112 Ireland 01 4475228

3

Introduction

- Go on line through our Internet Accessory ordering application at **www.pas-europe.com**
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic U.K.

General information

- The objective hub for the following model is shown below:
 - KX-HNS105E (Hub: KX-HNB600E)
- Please read "General information" of the hub's system setup guide for information regarding R&TTE Directive.
- Please read "Ecodesign information" of the hub's system setup guide for information regarding ErP directive.

For your future reference

We recommend keeping a record of the following information to assist with any repair under warranty.

Serial No.	Date of purchase
(found inside the unit)	
Name and address of dealer	

Attach your purchase receipt here.

Important Information

About this system

- This system is an auxiliary system; it is not designed to provide complete protection from property loss. Panasonic will not be held responsible in the event that property loss occurs while this system is in operation.
- The system's wireless features are subject to interference, therefore functionality in all situations cannot be guaranteed. Panasonic will not be held responsible for injury or damage to property that occurs in the event of wireless communication error or failure.

For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.

WARNING

Power connection

- Use only the power source marked on the product.
- Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock.
- Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then

wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.

- Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact an authorised service centre.
- Unplug from power outlets and never touch the inside of the product if its casing has been broken open. Danger of electric shock exists.
- Never touch the plug with wet hands. Danger of electric shock exists.
- Do not connect non-specified devices.

Installation

- To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.
- Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
- Do not allow the AC adaptor to be excessively pulled, bent or placed under heavy objects.
- Install the product only on a vertical surface. Do not install the product on a ceiling, as the product may fall, resulting in damage or injury.
- Keep small parts (screws, etc.) out of the reach of children. There is a risk of swallowing. In the event they are swallowed, seek medical advice immediately.

Helpline Tel. No.: U.K. 0330 3331112 Ireland 01 4475228

5

Important Information

Operating safeguards

- Unplug the product from power outlets before cleaning. Do not use liquid or aerosol cleaners.
- Do not disassemble the product.
- Never put metal objects inside the product. If metal objects enter the product, turn off the circuit breaker and contact an authorised service centre.

Medical

- Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. DECT features operate between 1.88 GHz and 1.90 GHz with a peak transmission power of 250 mW.
- Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.



CAUTION

Installation and location

- Never install wiring during a lightning storm.
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.
- To avoid the risk of strangulation, keep the product and the AC adaptor cord at least 1 m from a child's crib and out of the reach of small children.

Preventing accidents and injuries

- Do not put your ear(s) near the product, as loud sounds emitted from the product may cause hearing impairment.
- Do not look directly at the strobe light when it is flashing. Light emitted from the strobe light may cause damage to the eyes.
- Consider the installation environment carefully when installing the product. Pay particular attention to infants, children, and the elderly, as they may be more sensitive to loud sounds and strobe lights.

Important safety instructions

When using your product, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Do not use this product near water for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
2. Use only the power cord indicated in this document.

SAVE THESE INSTRUCTIONS

For best performance

Hub location/avoiding noise

The hub and other compatible Panasonic devices use radio waves to communicate with each other.

Important Information

- For maximum coverage and noise-free communications, place your hub:
 - at a convenient, high, and central location with no obstructions between the product and hub in an indoor environment.
 - away from electronic appliances such as TVs, radios, personal computers, wireless devices, or other phones.
 - facing away from radio frequency transmitters, such as external antennas of mobile phone cell stations. (Avoid putting the hub on a bay window or near a window.)
- If the reception for a hub location is not satisfactory, move the hub to another location for better reception.

Environment

- Keep the product away from electrical noise generating devices, such as fluorescent lamps and motors.
- The product should be kept free from excessive smoke, dust, high temperature, and vibration.
- The product should not be exposed to direct sunlight.
- Do not place heavy objects on top of the product.
- When you leave the product unused for a long period of time, unplug the product from the power outlet.
- The product should be kept away from heat sources such as radiators, cookers, etc. It should not be placed in rooms where the temperature is less than 0 °C or greater than 40 °C. Damp basements should also be avoided.
- Operating the product near electrical appliances may cause interference.

Move away from the electrical appliances.

Other information

Routine care

- Wipe the outer surface of the product with a soft moist cloth.
- Do not use benzine, thinner, or any abrasive powder.

Disposal of Old Equipment (Only for European Union and countries with recycling systems)



 
This symbol on the products, packaging, and/or accompanying documents means that used electrical and electronic products must not be mixed with general household waste. For proper treatment, recovery and recycling of old products, please take them to applicable collection points in accordance with your national legislation. By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment. For more information about collection and recycling, please contact your local municipality. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Helpline Tel. No.: U.K. 0330 3331112 Ireland 01 4475228

7

Setup

Part names and functions

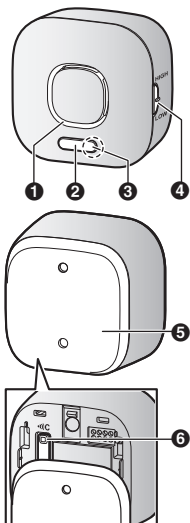

- 1 Horn**
- 2 Strobe light**
Flashes when the siren is sounding.
- 3 LED indicator**
- 4 [HIGH]/[LOW]**
Used to adjust the siren's volume (page 13).
- 5 Rear cover**
- 6 [(•)]C)**
Used to register the siren to the hub.

LED indicator

You can use the LED indicator to confirm the siren's status.

Indicator	Status
Green, lit	Normal operation
Red, blinking slowly	Siren is not registered to a hub
Red, blinking	Siren is out of range of the hub
Red, blinking quickly	Alarm system was triggered
Green, blinking	Registration mode (You pressed and held [(•)]C)
Off	No power

Setup overview

- 1 Initial setup**
Make sure you can access the system using your mobile device. For details, refer to the System Setup Guide included with your hub.
- 2 Registration**
Required only if the siren was purchased separately (i.e., not as part of a bundle).
- 3 Confirm the installation area**
Read the information in this document to confirm that the desired installation area is suitable to proper operation.

4 Installation

Install the siren in the desired location.

Registering the siren

This procedure is not required for devices that were included as part of a bundle.

Before you can use the siren, it must be registered to the hub.

If you purchased devices separately (i.e., not as part of a bundle), you must register each device to the hub.

You can register each device by using the registration buttons or the **[Home Network]** app.

Note:

- Before registering the siren, make sure the AC adaptors of the hub and siren are connected and each device is powered.

Using registration buttons

1 Hub:

Press and hold **[•]C OTHER DEVICE]** until the LED indicator blinks in green.

2 Siren:

Press and hold **[•]C]** until the LED indicator blinks in green (page 8).

- When registration is complete, the hub sounds one long beep.

Note:

- To cancel without registering the siren, press **[•]C]** on the hub and on the siren again.

- If registration fails, the hub sounds several short beeps.

Using the app

When you register the siren by using the **[Home Network]** app, you can assign a name to your devices and group them by location. For more information, refer to the User's Guide (page 13).

Setup

Confirming the usage area

Wireless communication range

The wireless communication range of each device in the system from the hub is approximately 50 m indoors and approximately 300 m outdoors.

Wireless communication may be unreliable when the following obstacles are located between the hub and other devices.

- Metal doors or screens
- Walls containing aluminium-sheet insulation
- Walls made of concrete or corrugated iron
- Double-pane glass windows
- Multiple walls
- When using each device on separate floors or in different buildings

Note:

- You can use the siren's LED indicator to confirm the siren's communication status (page 8). If the LED indicator is lit in green or is blinking quickly in red, the siren is communicating properly with the hub.

Usage area cautions

Using the siren in the following areas may cause deformation, malfunction, or operational failure.

- In direct sunlight
- Areas exposed to grease or steam, such as kitchens
- Near fire or heating devices

- Near magnetic fields (such as near microwaves and magnets)
- Areas subject to extreme temperature changes, such as next to air conditioners
- Areas with reflective objects, such as glass, that can interfere with detection of temperature variation
- Areas where the temperature is affected by strong illuminating objects (such as fluorescent lights)
- Near devices that emit strong radio waves, such as mobile phones

 
Installation

Mount the siren on a wall using the holes in the rear cover.

Note:


- The strobe light flashes when the siren sounds. Mount the siren in a location where its strobe light will be visible.
- Mount the siren on the stable location where the siren can be adequately supported when mounting.
- Mount the siren securely to a wall. Vibrations may cause it to fall if it is not secured.
- Do not mount siren on a soft material. It may fall down, break or cause injury.
- Do not mount the siren on the following places: gypsum board, ALC (autoclaved lightweight cellular concrete), concrete block, plywood less than 25.4 mm thick, etc.
- Use only the supplied Panasonic AC adaptor PNLV236E.

- 1 Remove the rear cover by pressing the upper sides of the cover (1) and sliding it down (2).

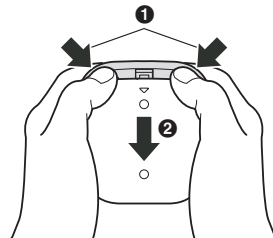


- 2 Attach the rear cover to the wall by using screws (A).

 - Place the rear cover with "UP" mark facing upwards.
- B 37 mm

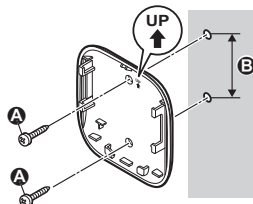


Setup

 - 3** Use the DC extension cord (①) to connect the AC adaptor (②) to the siren.
- Insert the male plug of the DC extension cord (③) firmly into the DC jack (④, ⑤).
 - Insert the female plug of the DC extension cord (⑥) firmly into the AC adaptor plug (⑦).
- 4** Connect the AC adaptor to the power outlet (⑧).

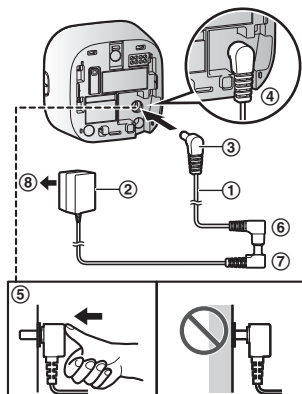

 - 5** Attach the siren to the rear cover.
- Insert the grooves on the siren to the 4 tabs on the rear cover, and then push down the siren.

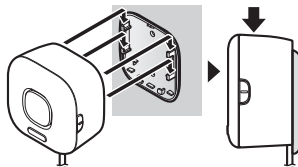

Note:

While the siren is sounding or the strobe light is flashing, you can stop the siren by pressing **[•/C]**.

Note about power connections

AC adaptor connection

- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.

Power failure

- The siren will not work during a power failure.

Testing the siren

After you have installed the **[Home Network]** app on your mobile device, you can use your mobile device to test the siren. For more information, refer to the User's Guide (page 13).

- 1 Start the **[Home Network]** app, and tap **[Settings]**.
- 2 Tap **[Device Profiles]**.
- 3 Tap **[Siren]** and then select the desired siren.
- 4 Tap **[Installation Test]**.
- 5 Tap **[Play]**.

Adjusting the siren's volume

You can adjust the siren's volume using the siren's **[HIGH]/[LOW]** switch (page 8).

Features available when using the **[Home Network]** app

Some of the siren's features that are available when using the **[Home Network]** app are listed below. For more information, refer to the User's Guide (page 13).

– Alarm system

You can use the app to arm and disarm the alarm system, confirm the current status of the system's devices, and view a log of previous events. You can also use the app to stop the siren from sounding.

– Device management

You can use the app to confirm the wireless signal strength of the siren, change the siren's name, change whether the siren sounds, flashes, or both, and test the siren.


Accessing the User's Guide

The User's Guide is a collection of online documentation that helps you get the most out of the **[Home Network]** app.

1 iPhone/iPad

Tap  in the app's home screen.

Android™ devices

Tap  or press your mobile device's menu button in the app's home screen.

2 Tap **[User's Guide]**.

Note:

- Microsoft® Windows® Internet Explorer® 8 and earlier versions are not supported.
- Android 4.1 or later versions are recommended.
- You can also access the User's Guide at the web page listed below.



www.panasonic.net/pcc/support/tel/homenetwork/manual/

Appendix

Specifications

- **Standards**
DECT (Digital Enhanced Cordless Telecommunications)
- **Frequency range**
DECT: 1.88 GHz – 1.90 GHz
- **RF transmission power**
DECT: Approx. 10 mW (average power per channel)
- **Power source**
220 – 240 V AC, 50/60 Hz
- **Power consumption**
Standby: Approx. 2.0 W
Maximum: Approx. 3.0 W
- **Alert tone volume**
High alert level: approx. 110 dB
Low alert level: approx. 104 dB
(measured approx. 10 cm from the product)
- **Operating conditions**
0 °C – 40 °C
- **Dimensions (height × width × depth)**
Approx. 71 mm × 73 mm × 46 mm
- **Mass (weight)**
Approx. 90 g

Conditions of guarantee

This guarantee is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. If within the applicable guarantee period, the product proves to be defective by reason of faulty design, workmanship or materials, we undertake subject to the following conditions to have the defective product (or any part or parts thereof) repaired or replaced free of charge.

1. The product shall have been purchased and used solely within either the U.K. or Ireland and in accordance with standard operating instructions and the technical and/or Safety Standards required in the U.K.
2. On being found defective, please consult with the retailer from where it was purchased for assistance.
3. This guarantee shall not apply to damage caused through fire, accident, lightning, misuse, wear and tear, neglect, incorrect adjustment or repair, to damage caused through installation, adaption, modification or use in an improper manner or inconsistent with the technical and/or safety standards required in the country where this product is used, or to damage occurred during transit to or from the purchaser.
4. If at any time during the guarantee period any part or parts of the product are replaced with a part or parts not supplied or approved by us or of an objective quality safe and suitable for the product, or the product has been dismantled or repaired by any person not authorised by us, we shall have the right to terminate this guarantee in whole or in part immediately without further notice.
5. The purchaser's sole and exclusive remedy under this guarantee against us is for the repair or replacement of the product or any defective part or parts and no other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.
6. This guarantee shall not apply to batteries and any other items of limited natural life.
7. Our decision on all matters relating to complaints shall be final. Any product or defective part which has been replaced shall become our property.
8. The guarantee period applicable to this product shall be 12 months.

Please keep these operating instructions with your receipt.

Panasonic U.K. a branch of Panasonic Marketing Europe GmbH

Receipt No.	Date of purchase
Model No.	Serial No.

IMPORTANT!

If your product is not working properly. . .

- ① **Reconnect the AC adaptor to the siren.**
- ② Use the **Home Network app** to access the **User's Guide** and refer to the **Troubleshooting** section.



If you still have any problems, please call the Helpline
0330 3331112 (U.K.)
01 4475228 (Ireland)
or contact us through our website:
www.panasonic.co.uk

C€0470

Sales Department:

Panasonic U.K. a branch of
Panasonic Marketing Europe GmbH

Panasonic House, Willoughby Road, Bracknell, Berkshire, RG12 8FP

Panasonic System Networks Co., Ltd.

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

© Panasonic System Networks Co., Ltd. 2015



PNQX7285ZA

PNQX7285ZA CC0415WK0 (E)