 
## Guide for registering a sensor or siren to the hub

Press and hold [•»)COTHER DEVICE ] on the hub until the LED blinks in green.



Press and hold [-3))C] until the LED blinks in green.

Water leak sensor



The button is under the cover



Wait for the hub to sound one long beep.

