

Panasonic

Stereo Cassette Player
RQ-SX40

Operating Instructions
Bedienungsanleitung
Istruzioni per l'uso
Mode d'emploi
Instrucciones de funcionamiento
Gebruiksaanwijzing
Bruksanvisning
Brugsvejledning
Návod k obsluze
Инструкция по эксплуатации
Instrukcja dla użytkownika

Note:
The "EB" indication shown on the packing case indicates United Kingdom.

Before connecting, operating or adjusting this product, please read these instructions completely. Please save this manual.




Niniejsza instrukcja została opracowana na podstawie oryginalnej publikacji firmy MATSUSHITA ELECTRIC INDUSTRIAL CO., LTD.

Matsushita Electric Industrial Co., Ltd.
Central P.O. Box 288, Osaka 530-91, Japan







ROT410-E
F0297Z1037 (D)



103E

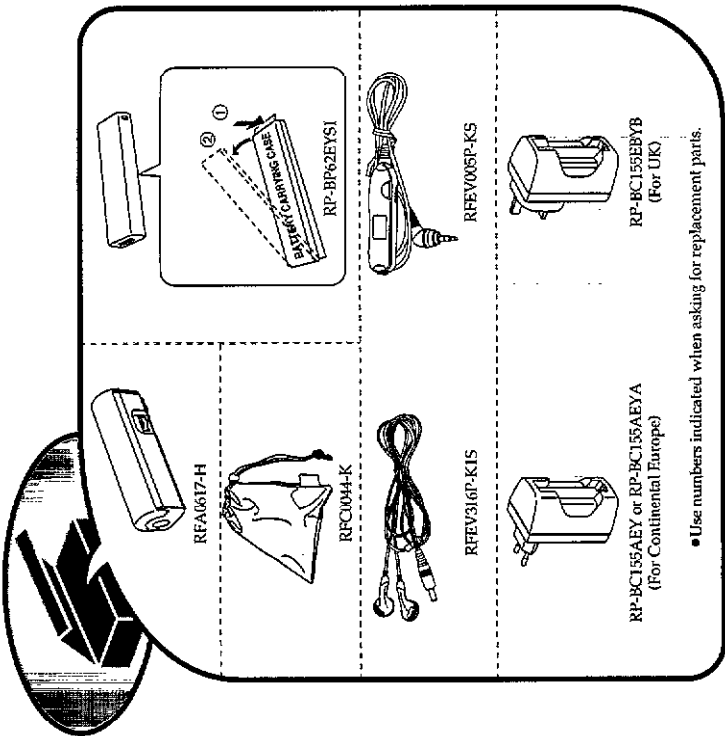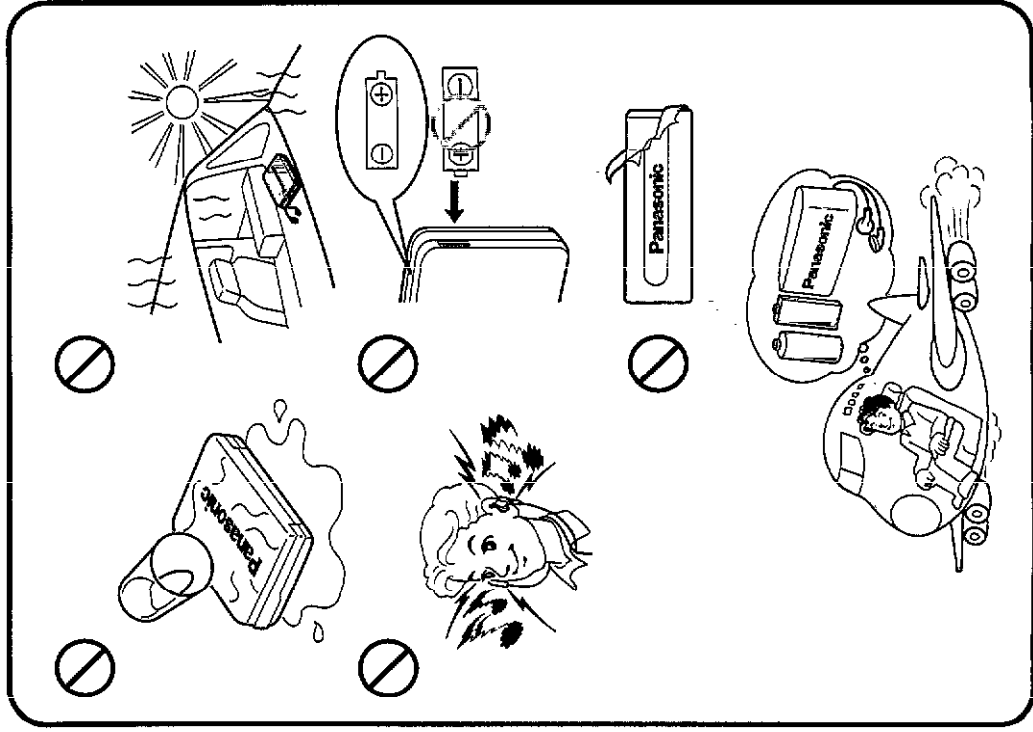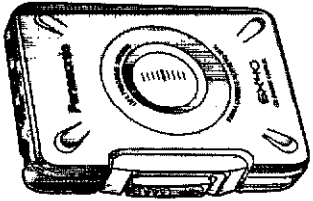

Use numbers indicated when asking for replacement parts.

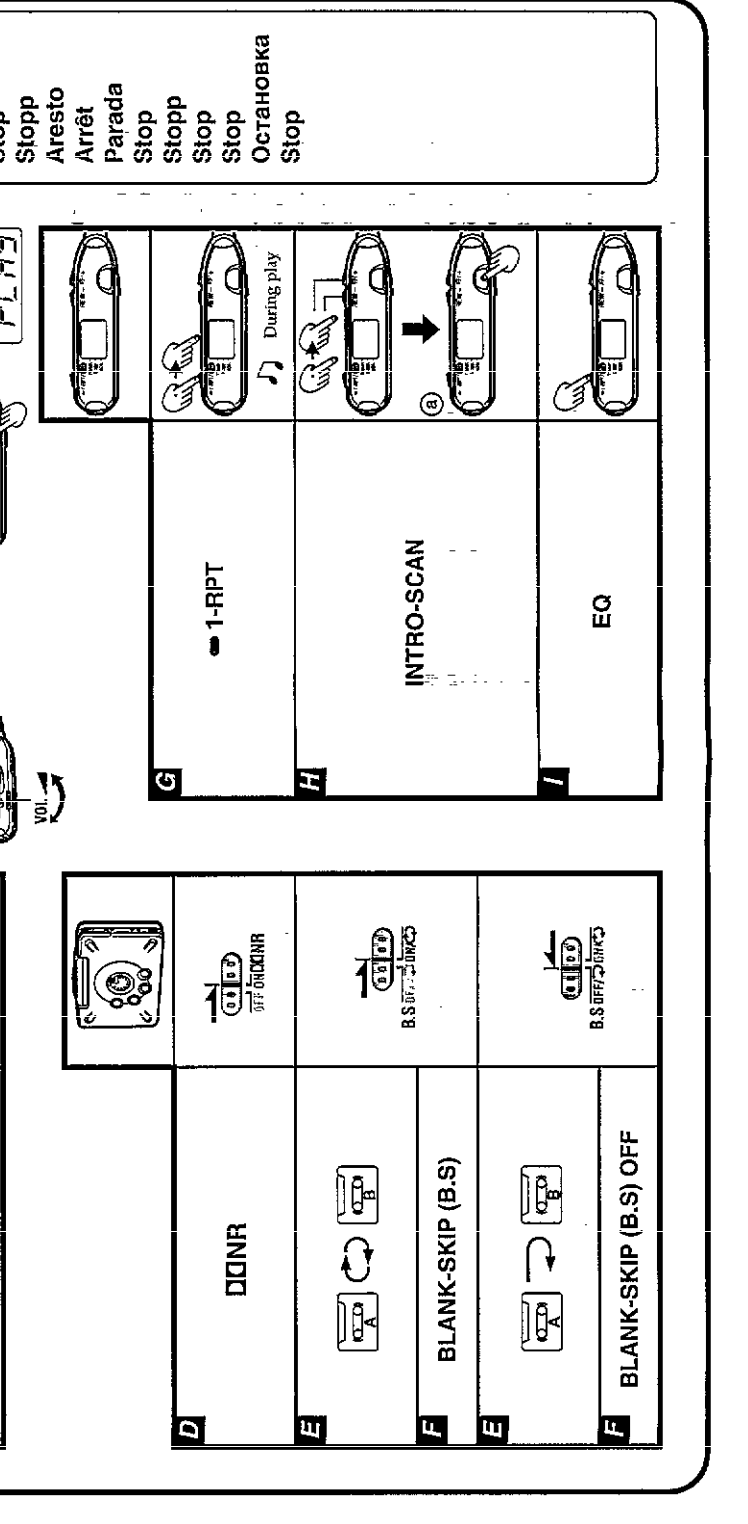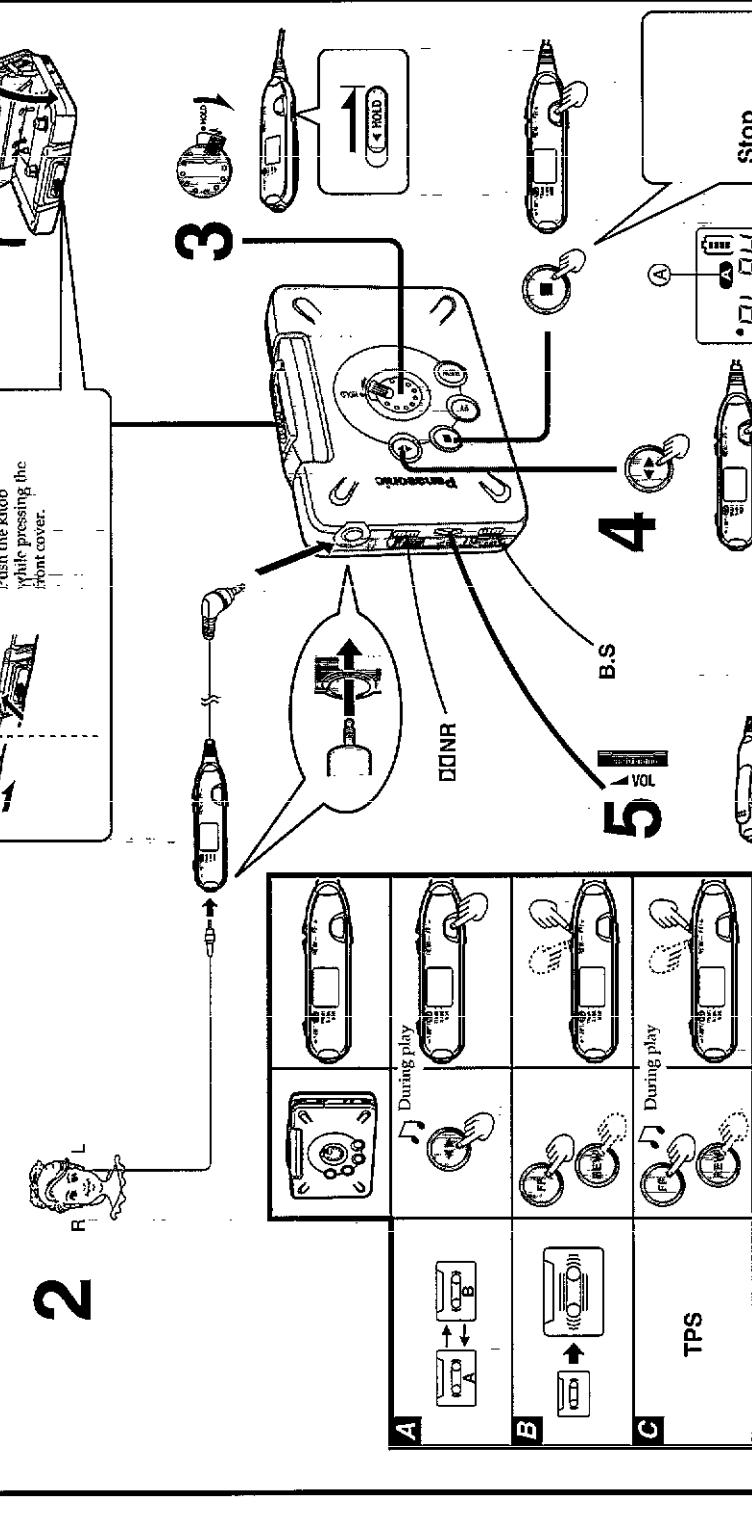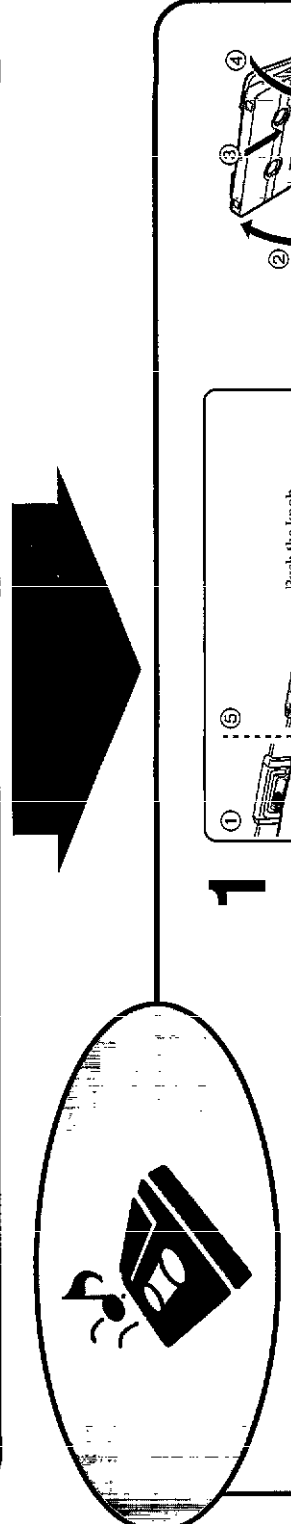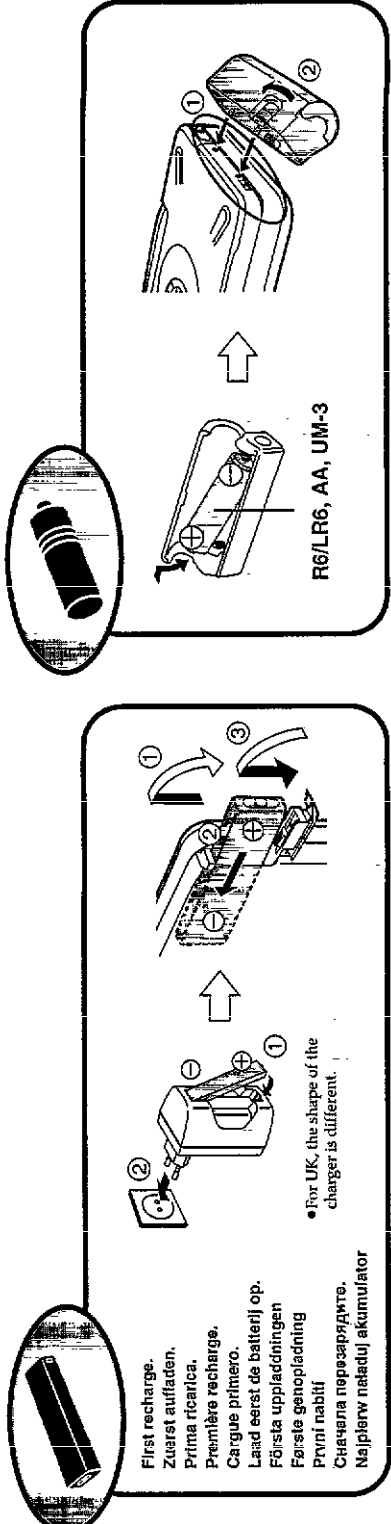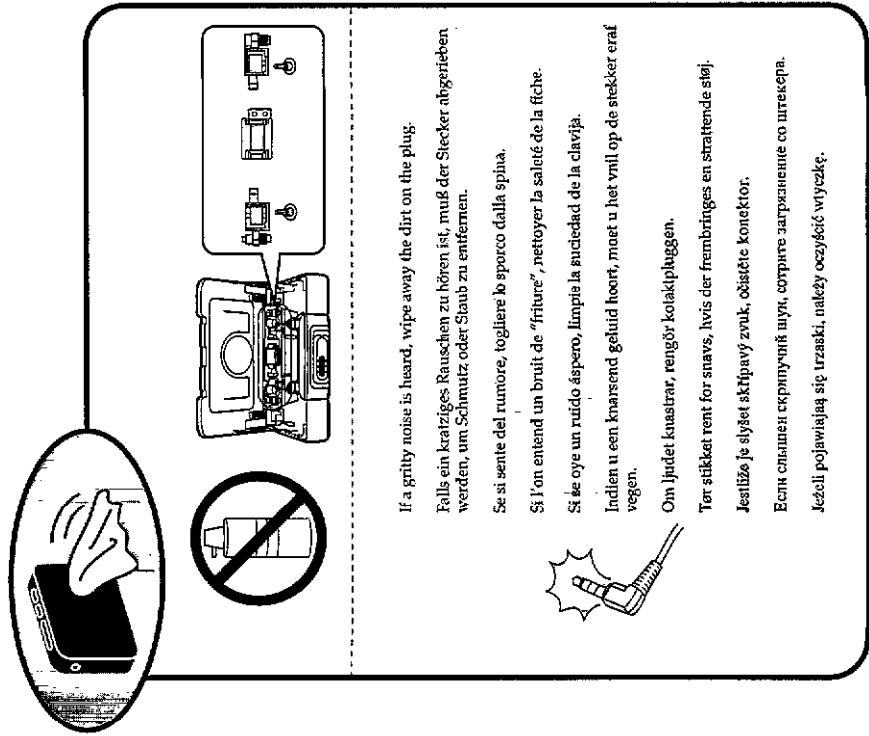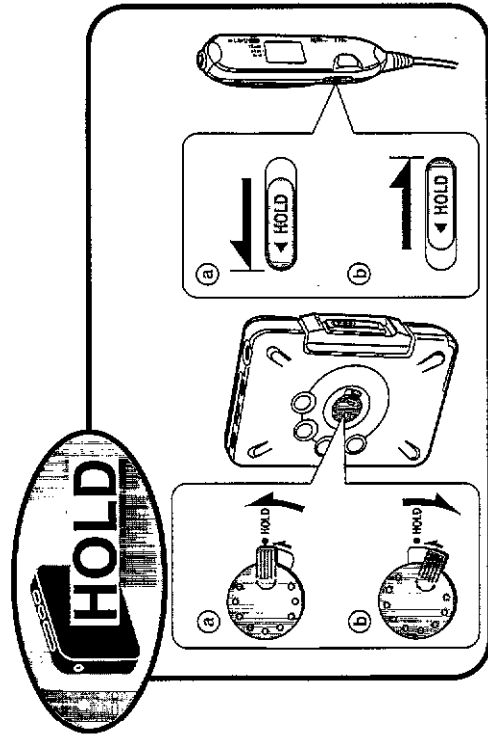

ENGLISH

Regarding the basic operation, refer to the left illustrations.

Press. Press and hold.

To change the play mode **BLANK-SKIP**

When a silent part of more than 13 seconds is detected during playback, fast-forwarding automatically starts and then playback of the opposite side of the tape starts from the beginning.

When weak sound continues for more than 13 seconds (classical music, etc.)
Since the unit may start fast-forwarding, set the selector to OFF.

To repeat a current song (ONE-REPEAT)
Press and hold 1-RPT/EQ once more. ONE-REPEAT is also cancelled when tape operations are switched.

To search a song on the cassette (INTRO-SCAN)
Allows you to listen to the beginning portion (intro) of the songs for about 10 seconds each, in order.

When you find your desired song:
Start normal play.

About the EQ function
NOR: The EQ effect is cancelled.
S-XBS: Boosts the low frequency range.
• If sound distortion occurs, turn down the volume.
TRAIN: Lessens the leaking noisy high sound disturbing people around you.

Specifications

Track system: 4 track 2 channel stereo
Power output: 4 mW±4 mW (RMS, max)
Power requirement: DC 1.2 V (included rechargeable battery)
DC 1.5 V (one R6/LR6 battery)
Dimensions (W×H×D): 110×76×21.8 mm
Weight: 189 g (with rechargeable battery)
Charger: AC 230 V (for Continental Europe), AC 240 V (for UK), 50 Hz
Output: 1.2 V, DC 340 mA (for Continental Europe), DC 360 mA (for UK)

Play time:
When used in hold mode, at 25°C (77°F) temperature and on flat and stable surface:
Rechargeable battery (A) About 10 hours
Panasonic alkaline battery About 30 hours
Rechargeable battery (A) and Panasonic alkaline battery About 40 hours

(A) When the included rechargeable battery is fully recharged (2 hours required).
• The play time may be less depending on the operating conditions.
Note:
Specifications are subject to change without notice.
Weight and dimensions are approximate.

Playing a tape
This unit is equipped with an auto tape select function, so you can use normal, high or metal position types of tape. Closing the cover, the tapesack will be wound automatically and playback will be expected to start from the Side A (on Step 4).
• Before using VOL on the remote controller, be sure to adjust VOL on the main unit to "5-7" position.

To change sides
To wind the tape
(Tape Program Sensor)
You can skip as many songs as the number of times the button is pressed (up to 9 times).

Dolby B NR
When playing a tape recorded with Dolby B NR, setting the selector to ON reduces noise to 1/2.

Dolby noise reduction manufacture under license from Dolby Laboratories Licensing Corporation. "DOLBY" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.