

Panasonic®

Operating Instructions

DVD Recorder

Model No. DMR-ES35V



SHOWVIEW™



Please read the operating instructions, the safety notes and the notes on setting up the unit on page 3 before connecting, operating or setting up the unit.

Contents

	Page		Page		Page
Safety precautions	3	TIME SLIP	20	Checking or changing timer recordings	35
Information on the unit	4	Delayed playback	20	Timer Off/On	35
Licence information	4	Quick View (PLAY/x1.3)	20	Delete	35
Before you start	5	Simultaneous recording and playback	20	Stop Recording	35
Included accessories	5	Changing the audio channel	20	Timer recording via external units	36
Inserting batteries	5	Playback (VHS)	21-22	Delete	37
Remote Control	6-7	Preparation	21	Deleting titles and pictures	37
Front Panel	8	Playing a video cassette	21	Properties	37
On-screen displays	8	Repeat playback	21	Set up Protection/Cancel Protection	37
Rear Panel	9	Stopping playback	21	Copy	38-39
Connections	10-11	Pausing playback	21	Copying with a copy list	38
Connection with 21-pin Scart cable	10	Slow-motion playback	21	Time-triggered copying	39
Connection with Audio/Video cable	10	Frame playback	21	COPYING	40
Connection with S VIDEO-cable	11	Forwards/backwards search	21	Copying from VHS to DVD	40
Settings	11	Fast forward/Jet rewind	21	Finalising	40
Country	11	JET REW	21	Copying from DVD to VHS	40
Auto-Setup	11	VHS Index Search System (VISS)	21	ShowView Record	41
Download from TV with Q Link	11	S-VHS Quasi Playback (SQPB)	22	ShowView Record	41
TV Aspect	11	Manual tracking	22	Playlists	42-44
Setting the date and time	11	Automatic tracking	22	Creating a playlist	42
External units	12-14	Handling video cassettes	22	Launching the Playlists menu	43
Connection of Set Top Box or satellite receiver	12	Write-protecting cassettes	22	Editing playlists in the SUB MENU	43
Connecting a decoder	12	Cleaning video heads	22	Editing chapters in the SUB MENU	44
Connecting an analogue amplifier	13	Recording	23-25	Flexible Rec	45
Connecting a digital amplifier	13	Before recording	23	Flexible recording mode (FR)	45
Connecting to AV3 (e.g. camcorder)	13	Disc Protection, CPRM	23	DV Auto Rec	45
Connecting to DV IN	13	Formatting	23	Recording via DV input	45
COMPONENT VIDEO OUT	14	For recording	23	Manual recording via DV input	45
Connecting a TV with COMPONENT VIDEO input sockets	14	Record	24	Setup	46-51
Progressive television picture	14	Pause the recording	24	Tuning	46-47
STATUS displays	15	DVD recording of TV programmes	24	Disc, List of language codes	47
Screen information, Symbols	15	Changing the recording mode	24	Picture	48
Disc formats	16-17	VHS recording of TV programmes	24	Sound	49
Playback and recording discs	16	The approx. time remaining on the cassette	24	Display	49
Playback discs	17	Specifying a time as the recording duration	25	Connection	50
Handling discs	17	DVD playback during recording	25	AV-Link function	50
Playback (DVD)	18-20	Direct TV recording	25	VHS	51
Preparation, Playback	18	Recording from an external unit	25	Others	51
Playback of a selected title	18	Selecting the sound track to record for programmes with dual-channel sound	25	DVD Management	52-53
Playback starts automatically	18	Recording in dual-channel audio	25	Disc Name	52
Selecting programmes/titles for playback	18	FUNCTIONS	26-53	Disc Protection	52
Finalising	18	Notes on the menus	26	Delete all Titles	52
Pausing playback	19	Entering text	27	Format Disc	52
Stopping playback	19	DIRECT NAVIGATOR	28-30	Auto-Play Select	53
Saving the playback position	19	Overview of DIRECT NAVIGATOR	28	Finalise	53
Slow-motion playback	19	Launching the DIRECT NAVIGATOR menu	28	Close First Layer	53
Fast forward	19	Delete	28	Create Top Menu	53
Dividing a recording into chapters	19	Properties	28	Picture and sound settings	54-55
Skipping	19	Editing titles in the SUB MENU	29	If you need help	56-58
MANUAL SKIP	19	Editing chapters in the SUB MENU	30	Specifications	59
Frame playback	19	DivX playback	31	Index	last page
		MP3 playback	32		
		JPEG/TIFF playback	33		
		Recording	34		
		Manual programming	34		
		VPS/PDC feature	34		
		Autom. SP/LP switching	34		
		Drive	34		

Information on the unit



DivX-compatible

DivX files can be played back from CD-R/CD-RW and DVD-R.

Quick start

You can record to DVD-RAM about one second after switching on the unit.

COPYING

With the push of a button, you can copy the content of a VHS cassette to a disc or vice versa.

DV interface

You can connect your digital camcorder directly to this unit via the DV IN connection. This way it's easy to copy your movies.

Licence information

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.



Dolby Digital

Method of encoding digital signals. The signals are very much compressed in the process to enable recordings of large volumes of data.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



DTS (Digital Theater Systems)

Sound system used in cinemas or movie theaters all over the world. "DTS" and "DTS 2.0 + Digital Surround" are trademarks of Digital Theater Systems, Inc.

MP3 or MPEG 1 Audio Layer 3 is a file compression format used for digital audio files. It provides files of an extremely small size and may cause a consequential loss of quality. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia.

-If you see this symbol-

Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

Before you start

Dear customer




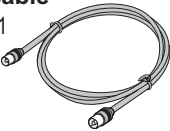
Thank you for your trust and your decision to purchase this top-quality device. Panasonic is one of the leading manufacturers of entertainment electronics devices. We are sure that you will be completely satisfied with this device.


Matsushita Electric Industrial Co., Ltd.

<http://www.panasonic.co.jp/global/>



Included accessories
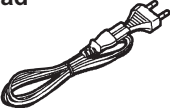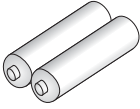
<p>Remote Control EUR7659YF0</p>	<p>AC Mains Lead RJA0043-1C</p> 
<p>Batteries AA, UM3 or R6</p> 	<p>Audio/Video cable K2KA6BA00003</p> 
<p>Operating Instruction Guarantee Card</p>	<p>RF Coaxial cable K1TWACC00001</p> 

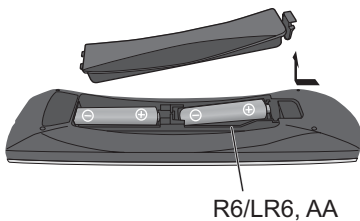

Inserting batteries

The batteries last for about a year, depending on how often you use the remote control unit.


- Do not mix old with new batteries, or batteries of different types.
- Only use batteries without any harmful substances (lead, cadmium, mercury).
- Do not use rechargeable type batteries.
- Remove the batteries if the remote control unit will remain unused for longer periods of time.
- Do not heat or short-circuit the batteries.
- Immediately remove used-up batteries and replace with batteries of type AA, UM3 or R6.
- Be sure to put in the batteries the right way round + and -.

Dispose of **batteries**, packaging material and the unit according to statutory regulations.

They must not be thrown into the household refuse.



Remote Control

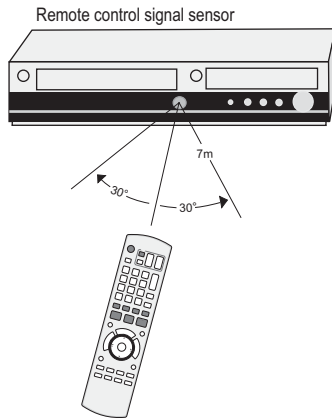

Point the remote control at the sensor of the unit. Avoid obstacles along the transmission path. The maximum reach of the remote control is 7 metres directly in front of the unit. Make sure that the transmission window and the sensor on the unit are clean. The process can be impaired by direct sunlight and glass cabinet doors.

Child protection

You can lock the buttons on the unit and the remote control.

- Press and hold the **RETURN** and **ENTER** buttons until **[X HOLD]** appears in the display. The buttons on the unit are locked.
- To unlock the child protection, repeat the process until **[X HOLD]** disappears.

Operating a television

Change the code on the remote control to control your TV.

- Press and hold the **TV** on and off button.
- Enter the two-digit code for your television.

Trademark	Code	Trademark	Code	Trademark	Code	Trademark	Code
Panasonic	01-04,45	GOODMANS	05,06,31	NOKIA	25-27	SANYO	21
AIWA	35	GRUNDIG	09	NORDMENDE	10	SBR	06
AKAI	27,30	HITACHI	22,23,31,40-42	ORION	37	SCHNEIDER	05,06,29-31
BLAUPUNKT	09	INNO HIT	34	PHILIPS	05,06	SELECO	06,25
BRANDT	10,15	IRRADIO	30	PHONOLA	31,33	SHARP	18
BUSH	05,06	ITT	25	PIONEER	38	SIEMENS	09
CURTIS	31	JVC	17,39	PYE	05,06	SINUDYNE	05,06,33
DESMET	05,31,33	LOEWE	07	RADIOLA	05,06	SONY	08
DUAL	05,06	METZ	28,31	SABA	10	TELEFUNKEN	10-14
ELEMIS	31	MITSUBISHI	06,19,20	SALORA	26	THOMSON	10,15,44
FERGUSON	10	MIVAR	24	SAMSUNG	31,32,43	TOSHIBA	16
GOLDSTAR/LG	31	NEC	36	SANSUI	05,31,33	WHITE WESTINGHOUSE	05,06


Some television models of the listed brands (e.g. older Panasonic units) cannot be controlled via the remote control.

Switching to AV input on your Panasonic television

- Press **AV**.
Switches between TV reception and AV input each time the button is pressed.

Setting up the remote control

If you are using another Panasonic unit at the same location, change the setting of the remote control so that you can operate the units independently of each other.

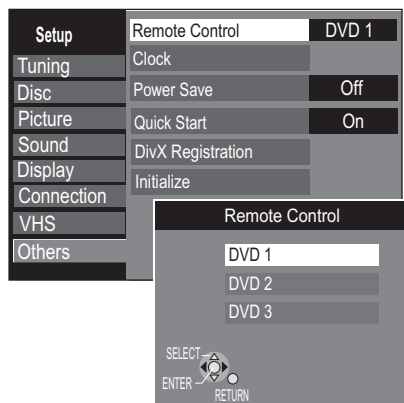

Set up the remote control for the unit.

- Press **FUNCTIONS**.
- Select **[To Others]** with **▲▼** and confirm with **ENTER**.
- Select **[Setup]** with **▲▼** and confirm with **ENTER**.
- Select **[Others]** with **▲▼**, **[Remote Control]** with **▶** and confirm with **ENTER**.
- Select **[DVD 1, 2 or 3]** with **▲▼** and confirm with **ENTER**.

Apply the selected setting [DVD 1, 2 or 3] to the remote control.

- Press and hold **ENTER** and press the appropriate number button 1, 2 or 3 for at least 2 seconds.
- Exit the menu with **RETURN**.

If the remote control setting does not match that of the unit, [DVD 1, 2 or 3] appears on the unit's display.

- Press **ENTER** and press the appropriate number key 1, 2 or 3 simultaneously for at least 2 seconds.

If you want to operate two units independently of each other using the same remote control, then change the the remote control setting.

Remote Control



Standby/on switch
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.



DRIVE SELECT
Select the DVD or VHS drive.

Direct entry using the number buttons
Selection of channels, title numbers, etc.

VCD 5: 0 5 15: 1 5
JPEG/MP3 5: 0 0 5 15: 0 1 5
JPEG 5: 0 0 0 5 15: 0 0 1 5



Delete a function.

VHS: **RESET** = Reset the tape counter.



SKIP = Skip chapters, titles or pictures. 19

VHS: **INDEX** = Find the beginning of a recording. 21



Stop a recording or playback.

VHS: Stop jet rewind.
Press for more than 3 seconds to eject the cassette.



TV



Switch the TV on and off.



Select the AV input on the TV set.



CH = Select the programme position on the TV set.
VOLUME = TV volume control.

TRACKING/LOCK



CH = Programme selection button

VHS: **TRACKING/LOCK+/-** = Optimise the playback picture. 22

ShowView



ShowView Record menu 41



Delete a title.



Switch button to switch AV input between tuner, AV1, AV2, AV3 (front) and DV IN.

SLOW/SEARCH



SLOW = Slow-motion playback. 19
SEARCH = Search during playback.

VHS: **REW** = Jet rewind 21

FF = Fast forward from **STOP** mode.

REW = Rewind

FF = Forward search during playback.



Pause a recording or playback. 19

VHS: Press and hold for more than 2 seconds for slow-motion playback. 21



Start playback. 18

RAM Quick View: You can increase the playback speed. 20

VHS: Playback or repeat playback 21

You can also switch on the unit from Standby mode using the **DIRECT NAVIGATOR**, **PROG/CHECK** and **ShowView** buttons.

TIME SLIP/JET REW



DVD: **TIME SLIP** = Select the time frame. 20

VHS: **JET REW** = Jet rewind to the beginning of the tape. 21



Direction buttons in the menu guide.
Select **▲▼◀▶** groups or titles.



Frame or slow-motion playback.

SUB MENU



Launch the sub-menu.



Select the audio channel/soundtrack. 20

A = Delete selected stations. 46
Menu guide



DVD only: Picture and sound settings. 54

B = Insert station. 46
Menu guide




DVD only: Divide a recording into chapters. 19

C = Move selected stations. 46
Menu guide

STATUS



Detailed information appears on the screen. 15

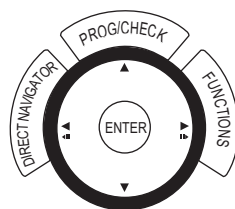

ENTER = Select or save a setting.

MANUAL SKIP



DVD only: Jump ahead 30 seconds. 19

PROG/CHECK = Check or change a Timer recording 35

DIRECT NAVIGATOR = Launches the Title View. 18

FUNCTIONS = Launch the selection menu. 26

RETURN



Return to the previous menu.

REC



Recording 24

REC MODE



Record mode button (XP, SP, LP, EP) 24

EXT LINK




Timer Recording with external recording control. 36

DIRECT TV REC



Direct TV recording to DVD and VHS. 25

Front Panel

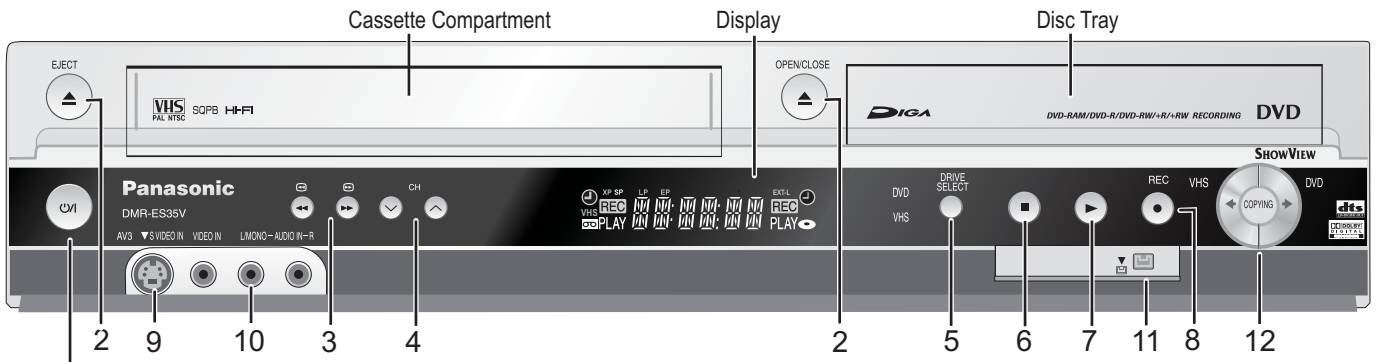

1 **Standby/On switch** : Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power. Switching this unit into standby mode does not disconnect it from the mains.

1 Standby/On switch	2 EJECT : Eject the cassette. OPEN/CLOSE : Open and close the disc tray.	3 Forward/rewind Search during playback	4 CH Channel select button
5 Drive select VHS or DVD	6 STOP	7 PLAY : Playback Quick View	8 REC : Record
9 S VIDEO input AV3	10 AV3 VIDEO IN LMONO-AUDIO IN-R AV3 input terminal	11 DV input	12 Copy

Display

	Shows Timer standby or Timer recording.	XP, SP LP, EP	Recording mode / All on: FR mode Flexible recordings/timer recordings.
	The inserted medium is being shown.	DVD VHS	The selected drive is being displayed.
	The selected drive is recording. Flashes shortly before a Timer recording starts.	EXT-L	External-Link: A Timer recording is being made from an external unit.
PLAY	The selected drive is playing.		Current time, recording/playback counter, various messages.


Other messages









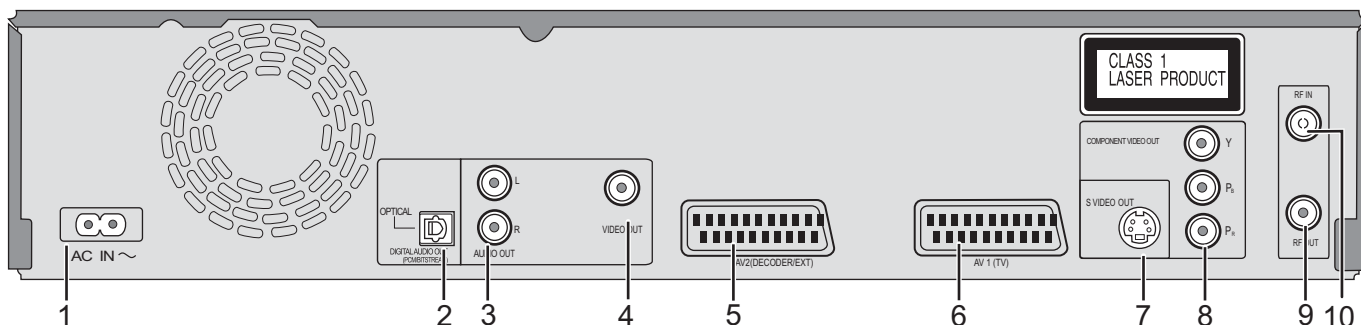

PLEASE WAIT Please wait.
DVD 1, 2, 3 Wrong remote control code.
SETUP You are in the Setup menu.
READ Disc is being read.
No READ Disc cannot be read.
FINAL DVD is being finalised.
No CASSETTE No cassette has been inserted.
No DISC No disc has been inserted.
PROTECT Disc is write-protected.
RETURN Cancellation of a function.
JETREW A cassette is being jet-rewound.
OFF0:30 The recording time is set to 30 minutes.
REPEAT Repeat playback is on.

START A function (copying) is beginning.
COPY Copying is taking place.
STOP A function has been stopped (copying).
PROG FULL All 16 timer programme positions are full.
UNSUPPORT Disc format is not supported.
UNFORMAT Disc is unformatted.
X HOLD Child protection is active.

Error messages

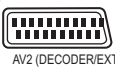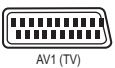Rear Panel



<p>1  AC IN~ = Power supply Connection for the power cable.</p>	<p>2  OPTICAL Digital audio output</p>
<p>3  L R AUDIO OUT Audio output, right/left channel</p>	<p>4  VIDEO OUT Video output</p>
<p>5  AV2 (DECODER/EXT) = 21-pin Scart socket External unit connection</p>	<p>6  AV1 (TV) = 21-pin Scart socket TV connection</p>
<p>7  S VIDEO OUT S VIDEO output socket</p>	<p>8  COMPONENT VIDEO OUT Y = Luminance signal (brightness signal) P_B = Chrominance signal (colour difference) P_R = Chrominance signal (colour difference)</p>
<p>9  RF OUT Aerial output</p>	<p>10  RF IN Aerial input</p>

The outputs of 2, 3, 4, 7 and 8 are dedicated to modules of digital signal processing (DVD).

The video and audio outputs of 5 and 6 are dedicated to modules of digital (DVD) or analogue (VHS) signal processing.


Both groups of outputs are used for analogue and digital sources. But there are limitations, e.g.: During recording or scheduled recording on DVD, the VHS playback is only possible on outputs of 5 and 6.

For a conventional tube television, we recommend using the Scart socket.

You retain a high-quality RGB video picture with an RGB-compatible television.

- If you want to use a progressive-capable LCD/plasma television or LCD projector, connect it to COMPONENT VIDEO OUT to get a high quality progressive video picture.

Connections

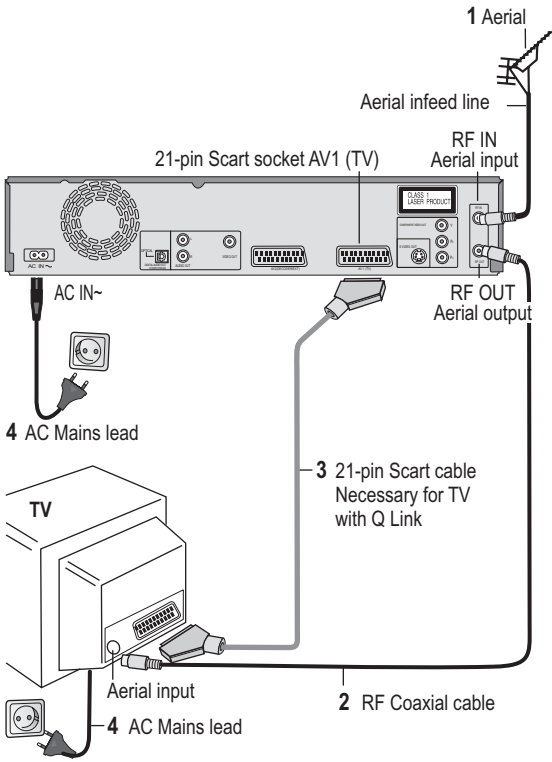


Connection with 21-pin Scart cable (not provided)
 You need a fully wired 21-pin Scart cable for this optimal connection type.

Disconnect all units from the power supply system.

- 1 Connect the aerial to RF IN (Aerial input) of the DVD Recorder.
- 2 Connect RF OUT (Aerial output) of the DVD Recorder with the aerial input of the TV.
- 3 Connect the AV1 socket (21-pin Scart socket) of the DVD Recorder with the Scart input of the TV.
- 4 Connect the DVD Recorder and the television to the power supply system.

If your television supports Q Link, use a fully wired 21-pin Scart cable to connect it to the TV. The stations are automatically downloaded through [Download from TV].

If your television supports RGB, set the AV1 Output to RGB 1 or RGB 2 in the Setup menu.

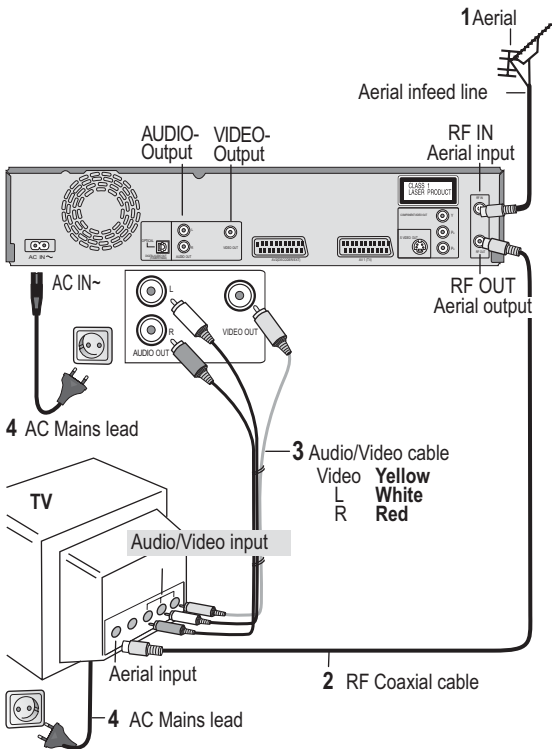


Connection with Audio/Video cable

You can use this frequently used standard connection with the provided accessories.

Disconnect all units from the power supply system.

- 1 Connect the aerial to RF IN (Aerial input) of the DVD Recorder.
- 2 Connect RF OUT (Aerial output) of the DVD Recorder with the Aerial input of the TV.
- 3 Connect the AUDIO OUT (L/R) and VIDEO OUT of the DVD Recorder with the Audio/Video input of the television.
- 4 Connect the DVD Recorder and the television to the power supply system.

Connections

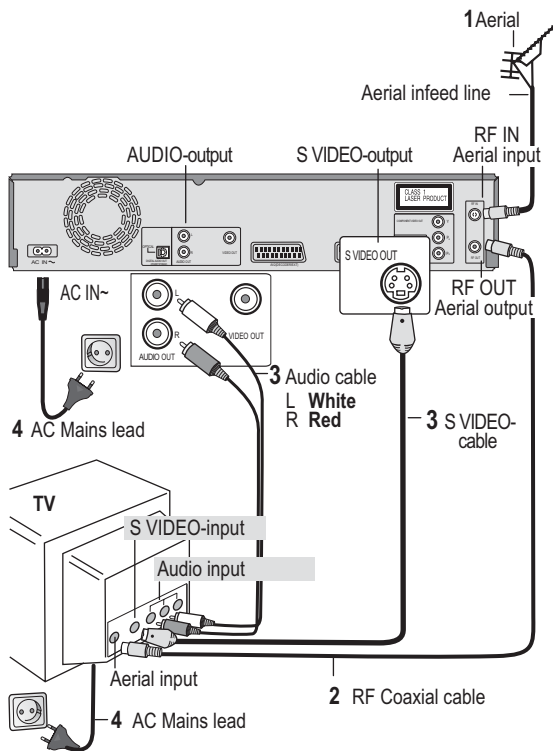

Connection with S VIDEO-cable (not provided)

Depending on the television, the connection with the S VIDEO cable results in a higher quality picture than the connection with an Audio/Video cable.

Disconnect all units from the power supply system.

- 1 Connect the aerial to RF IN (Aerial input) of the DVD Recorder.
- 2 Connect RF OUT (Aerial output) of the DVD Recorder with the aerial input of the TV.
- 3 Connect AUDIO OUT (L/R) and S VIDEO OUT of the DVD Recorder with the S VIDEO and audio input of the TV.
- 4 Connect the DVD Recorder and the television to the power supply system.

Settings

- Switch on your television and select the AV channel.
- Switch on the unit using the **Standby/On** button.

Country

- Select the corresponding country with **▲▼◀▶** and confirm with **ENTER**.

For **EC** models: If you select Schweiz, Suisse or Svizzera, the Power Save menu appears after auto setup. If you select Power Save [On], the unit's power consumption reduced to a minimum in Standby mode.

Auto-Setup

The auto setup saves all available television stations and takes approx. 5 minutes. If the station also broadcasts Date and Time, the time will be set automatically. If the automatically set time does not match the current time, you can set it manually.

Download from TV with QLink (Registered trademark of Panasonic)

If your television is equipped with the Q Link feature, the stations are downloaded through the transfer of the station table. In order to be able to use Q Link, the unit must be connected to a TV with Q Link or a similar feature via a fully wired 21-pin Scart cable.

Setting the date and time

If the Date and Time are not transferred via a television station, the Clock menu appears.





- Change Time and Date with **▲▼** or **[0]—[9]** and **▶**.
- Confirm the change with **ENTER**.

An incorrect date or time affects the programmed recording of television programmes (observe summer and winter time).


TV Aspect

- Select the desired screen format with **▲▼** and confirm with **ENTER**.

Auto setup for your unit is complete. The availability of stations may differ regionally. The completeness of the downloaded stations can be checked in the Setup menu. 46

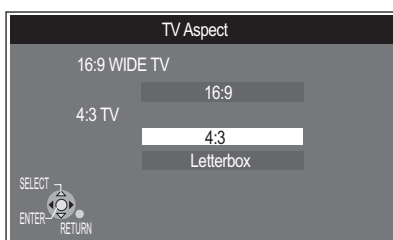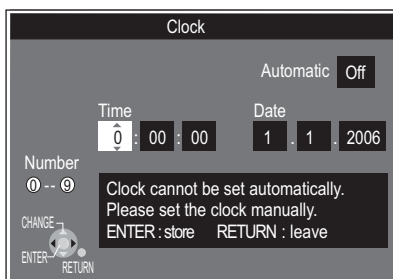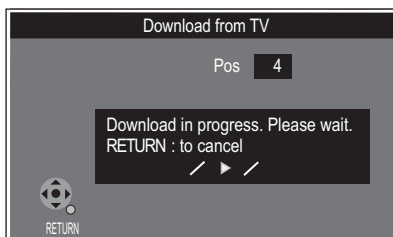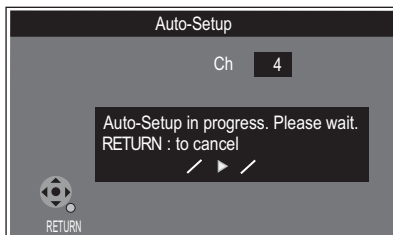

External units

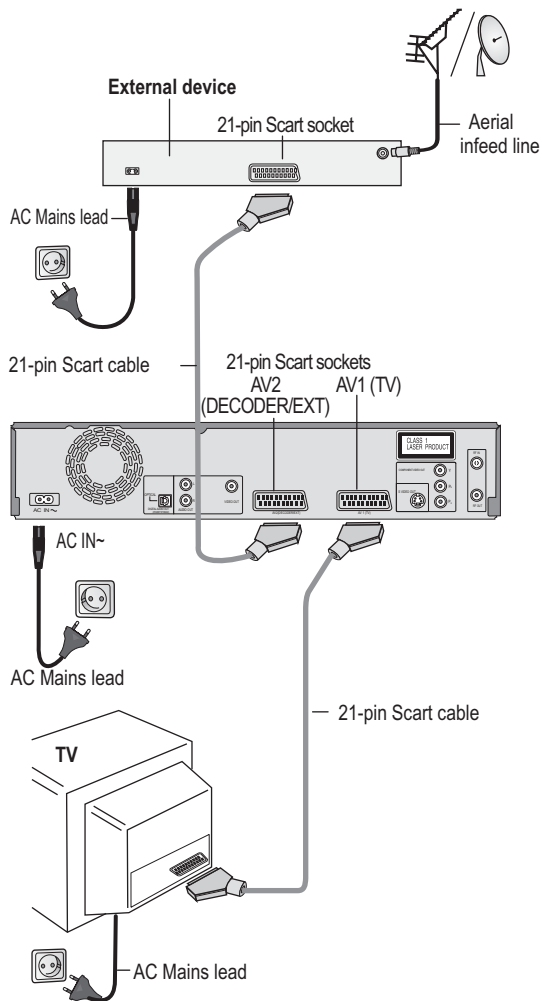

Connection of Set Top Box or satellite receiver

If you receive your television programme via a Set Top Box (DVB-T) or a satellite receiver (digital/analogue), connect your DVD Recorder as a downstream unit.

Disconnect all units from the power supply system.

- 1 Connect the AV1 socket (21-pin Scart socket) of the DVD Recorder with the Scart input of the television unit.
- 2 Connect the external unit with a 21-pin Scart cable to the AV2 connection of the DVD Recorder.
- 3 Connect the aerial (DVB-T or SAT) to the aerial input of the external unit.
- 4 Connect the DVD Recorder, the TV and the external unit to the power supply system
- 5 Switch on the external unit, the TV and the DVD Recorder.

- Switch your TV to the AV channel.
- Select the appropriate country from the Country menu with **▲▼** and confirm with **ENTER**.
- [Auto-Setup] follows automatically and it ends with the note: [No stations found !].
- Select [No] with **▶** and confirm with **ENTER**. The available stations are downloaded from the external unit.
- Select the desired screen format with **▲▼** and confirm with **ENTER**.
- Switch the DVD Recorder to AV2 with **CH ◊**. You see the television picture from the external unit.


The date and time are not set automatically. Set them manually.

11

Connecting a decoder

- 1 Connect the DVD Recorder as described under Connection with 21-pin Scart cable. 10
- 2 Connect the decoder to AV2 (DECODER/EXT) with an additional 21-pin Scart cable.

In the connection to the Auto Setup, change the setting for the AV2 socket in the [Setup] menu. 50

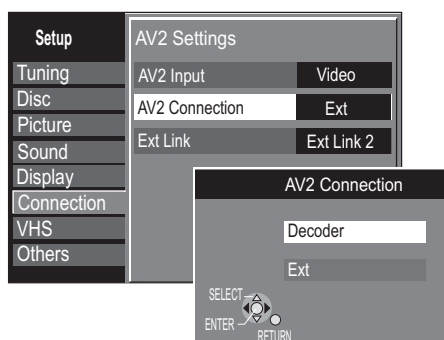

- Press **FUNCTIONS**.
- Select [To Others] with **▲▼** and confirm with **ENTER**.
- Select [Setup] with **▲▼** and confirm with **ENTER**.
- Select [Connection] with **▲▼**, [AV2 Settings] with **▶**, **▲▼** and confirm with **ENTER**.
- In the next screen, select [AV2 Connection] with **▲▼** and confirm with **ENTER**.
- Select [Decoder] with **▲▼** and confirm with **ENTER**.
- Press **RETURN** and return to [Connection] with **◀**. Press **RETURN** multiple times to return to the television picture.

External units


For all connections described:

Before you connect cables, make sure that all units are switched off. Switch on the units after you have connected the cables.

Connecting an analogue amplifier or an analogue system component


In order to enjoy stereo or Dolby Pro Logic, connect a corresponding amplifier or an analogue audio component.


- Connect the AUDIO OUT (L/R) output e.g. with a Dolby Pro Logic amplifier.
- Connect the audio cable according to the colours and markings on the connection sockets (white/L, red/R).

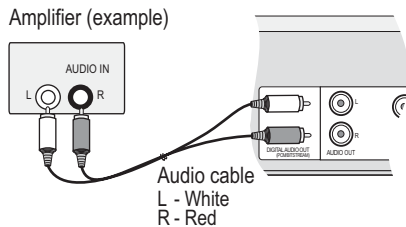

Connecting a digital amplifier or a digital system component

If an amplifier equipped with Dolby Digital, DTS or an MPEG-decoder is connected, a DVD-Video-Disc with multi-channel surround sound can be played back.

- Connect an amplifier with a Dolby Digital, DTS or an MPEG decoder.
- Use an Optical digital audio cable.
- Change the [Digital Audio Output] setting in the Setup menu Audio according  49 to your connected digital amplifier.
- Select audio channel (M1) or (M2) on the external unit.
You cannot use DTS Digital Surround decoders that are not suitable for DVD.

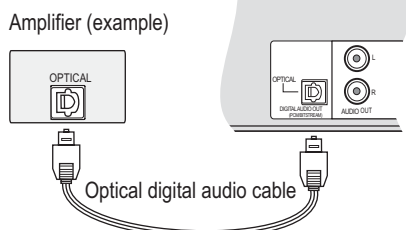


Push the jack all the way into the socket with this side facing up.



Connect this unit to a device with a DTS decoder in order to be able to play DVDs with this symbol.




This device can playback stereo sound in Dolby Digital (2 channels). Connect an amplifier with built-in Dolby Digital decoder in order to be able to enjoy Surround Sound.

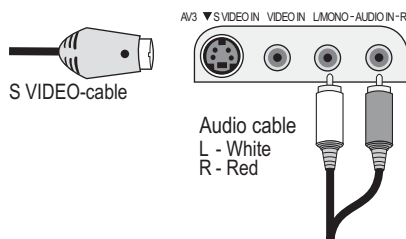

Connection to AV3 (e.g. camcorder)

If the audio output of the other unit is mono, connect it to the L/MONO socket. Both the left and the right channel will be recorded.

- Select one of the two connection options.
The connection with S VIDEO cable and audio cable (L/R) delivers the best quality.

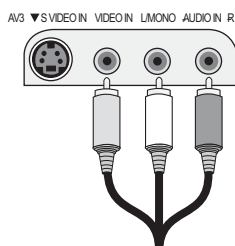

Connection to DV IN

DV means digital video and is a video standard.

You can connect a DV-compatible camcorder to the DVD Recorder. The DV IN connection is available for this purpose.

Digital satellite tuners and digital VHS video recorders are not compatible with this unit. The DVD Recorder cannot be controlled via an external unit that is connected to the DV IN socket.

Before you connect the DV cable, make sure that all units are switched off. After you have connected the cable, switch on the units.


- Connect the DV output of the DV unit (e.g. digital camcorder) with the DV input socket of the DVD Recorder. Use a DV cable.
- After you have connected the cable, switch on both units.



It is not possible to copy to a VHS cassette via DV IN..

The DV input of this unit is only intended for DV units. For example, a computer cannot be connected. Some DV units do not allow for proper input of the picture and sound signal.

COMPONENT VIDEO OUT

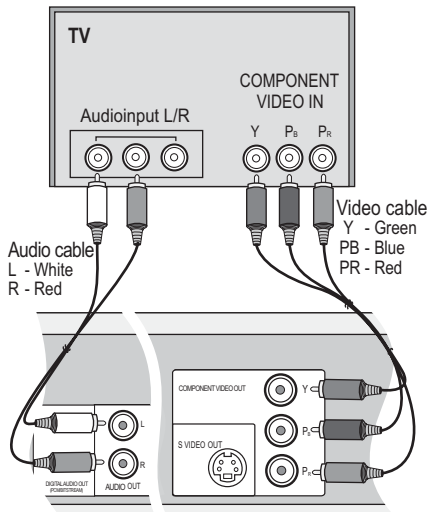

COMPONENT VIDEO OUT socket

The sockets can be used for INTERLACE or PROGRESSIVE output and deliver a clearer picture than the S VIDEO OUT socket. Connections via these sockets output the colour difference signals (P_B/P_R) and the brightness signal (Y) separately. Colours can be reproduced true to the original colour. The properties of the COMPONENT VIDEO input socket are dependent on the TV or screen.

- Connect the COMPONENT VIDEO OUT sockets of the unit with the COMPONENT VIDEO IN of the TV unit. Use a Video cable.
- Always connect sockets with the same colour.
- Connect the audio cables to the corresponding audio input sockets on the TV.

Connecting a TV with COMPONENT VIDEO input sockets

If your TV with LCD or plasma screen supports the progressive process, connect it to the COMPONENT VIDEO OUT sockets. If you want to enjoy full progressive video, set Progressive to [On].

- Press **FUNCTIONS**.
- Select [To Others] with ▲▼ and confirm with **ENTER**.
- Select [Setup] with ▲▼ and confirm with **ENTER**.
- Select [Connection] with ▲▼, [Progressive] with ►, ▲▼ and confirm with **ENTER**.
- Select the option [On] with ▲▼ and confirm with **ENTER**.
- Press **RETURN** multiple times to return to the television picture.

Setup	TV Aspect	4:3
Tuning	Progressive	On
Disc	TV System	PAL
Picture	AV1 Output	Video
Sound	AV2 Settings	
Display		
Connection		
VHS		
Others		

SELECT TAB
ENTER RETURN

If the AV1 Output setting in the Setup menu is set to [RGB 1/2 (without component)], there is no output to the COMPONENT VIDEO OUT sockets.

Set this option to [Video (with component)].

50

If the unit is connected to the TV via the S VIDEO OUT or the AV1 socket, output is Interlace regardless of the settings.


Progressive television picture

The progressive picture aspect ratio (height to width) is set to 16:9. DVD-Video with a picture aspect ratio of 16:9 is properly displayed. However, video material with an image page ratio of 4:3 is shown stretched from right to left. If it is possible to adjust the picture aspect ratio on your television, select the setting [Progressive - On].


With a normal television, the progressive output can cause the picture to flicker, even if the television is progressive-compatible. Select the setting [Progressive - Off].

50


Progressive-compatible televisions (PAL)

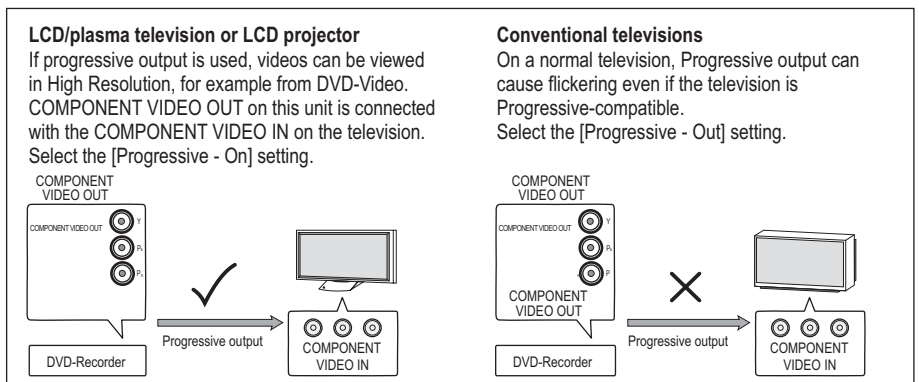



STATUS displays

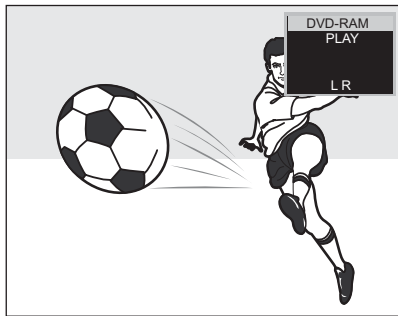

Status displays

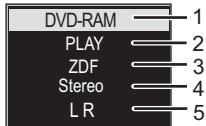

Status displays for other drive.

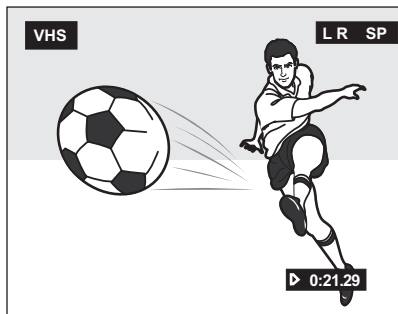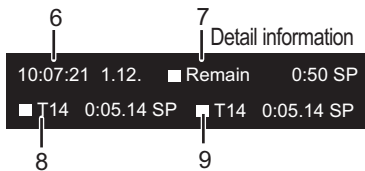

STATUS

Screen information

- Press **STATUS**.
- Press **STATUS** again. Depending on the function, e.g. PLAY, REC or REC PLAY, the display changes each time the button is pressed.
- Also press **STATUS** to exit the display.

You can switch off the status displays in the Setup menu.



- 1: Current medium
- 2: Current recording, playback mode and remaining time
- 3: Current station
- 4: Sound type: Stereo = a stereo transmission is currently being received.
M1/M2 = a 2-channel transmission is currently being received.
M1 = a single-channel NICAM transmission is being received.
- 5: Sound mode: LR, L, R: the soundtrack can be changed with the **AUDIO** button.

REC Record	▶▶ Fast forward (5 stages)	◀◀ Rewind (5 stages)
PAUSE Pause	⏪ Slow motion (5 stages)	⏩ Slow-motion rewind (5 stages)
PLAY Playback	PLAY/x1.3 Quick View	⏸ Pause playback

- 6: Current date and time
- 7: Available recording time and recording mode: e.g. 0:50 SP shows 50 minutes in SP mode.
- 8: Title number: shows the recording mode and the elapsed play time of the title.
- VHS**: Current tape counter.
- 9: Title number: shows the recording mode and the recording time of the title.

STATUS

VHS screen information

- Press **STATUS** during playback. Each time the button is pressed, the display switches between tape counter and remaining tape time

VHS	Current medium	
LR SP	LR, L, R: The soundtrack can be changed with the AUDIO button. SP: Selected recording mode.	
REMAIN: 0:24	Remaining tape time: The display depends on the correct setting of the tape length.	
▶ 0:21.29	Tape counter: It is automatically set to 0:00.00 when a video cassette is inserted. Use * / RESET to reset the counter to 0:00.00.	
R▶ 0:21.29	Repeat	

Symbols

	The title is being recorded.
	Shows a Timer programming.
	A daily or weekly Timer recording was stopped. The icon disappears when next Timer recording starts.
	The title overlaps other recordings.
	The disc was full so the programme failed to record.
	The programme cannot be played due to damaged data or could not be recorded for another reason.
	The title is write-protected.
	The programme was copy-protected; the title was not recorded.
	Title that can only be copied once.
	The title has been selected.
	The title or the playlist was recorded with a TV system other than the one currently selected. Title and playback lists with these markings cannot be played back. To playback this title/playlist, switch your TV system.

Playback and recording discs

DVD-RAM: DVD Video Recording format		
	DVD-RAM	RAM
	4.7 GB 12 cm	
	9.4 GB 12 cm	
	2.8 GB 8 cm	
	rewritable	

DVD-RAM

The DVD-RAM can be compared with the hard disk and can be written to 100,000 times on average. The disc can only be played on DVD-RAM-compatible players. The recording occurs in DVD Video Recording format (VR). Movies and parts of movies can be edited and deleted. The deletion of movies frees previously used storage space. The creation of playlists does not require any additional storage space. Dual-channel sound and 16:9 format are supported in addition to the TIME SLIP function. A DVD-RAM with Cartridge is write-protected and is CPRM-compatible.


DVD Video Recording format (VR)

This format enables recording and playback. Digital programmes limited to "one-time recording" can be recorded to a CPRM-compatible disc. You can record to a CPRM-compatible DVD-RAM. Playback is only possible with a compatible DVD player. Use a DVD-RAM to record in DVD Video Recording format.

DVD-R: DVD-Video format		
+R : +VR format		
	DVD-R	-R
	4.7 GB 12 cm	
	1.4 GB 8 cm	
	writable	
--	+R	+R
	4.7 GB 12 cm	
	writable	

DVD-R/+R (Recordable)


The DVD-R/+R can only be recorded once. Movies or parts of them can be deleted during processing, but storage space is still taken up and cannot be used for other movies. Through finalisation, the DVD-R/+R becomes DVD-V that can be played on other units.

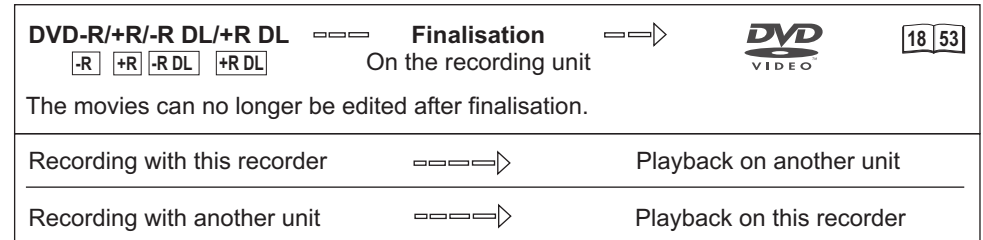

DVD-RW : DVD-Video format		
+RW : +VR format		
	DVD-RW	-RW
	4.7 GB, 12 cm	
	1.4 GB, 8 cm	
	rewritable	
--	+RW	+RW
	4.7 GB, 12 cm	
	1.4 GB, 8 cm	
	rewritable	

DVD-RW/+RW (Rewritable)


DVD-RW/+RW is rewritable and erasable. You must delete it completely to be able to rewrite it again. Through finalisation, the DVD-RW becomes a DVD-V that can be played on other units. A finalised DVD-RW can be reformatted and rewritten. Formatting deletes all data! A DVD+RW becomes a DVD-V by creating a Top Menu.

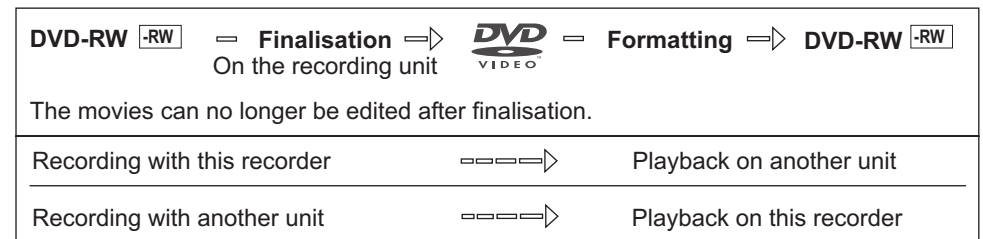

DVD-R DL: DVD-Video format		
+R DL : +VR format		
	DVD-R DL	-R DL
	8.5 GB 12 cm, writable	
--	+R DL	+R DL
	8.5 GB 12 cm, writable	

DVD-R DL/+R DL (Double Layer DVD/Dual Layer DVD)

The data are saved on two parallel layers. They have more space available. If the laser changes layers during playback, brief interruptions to the image and sound may occur. You cannot switch layers during a recording. The recording stops when the storage space on the first Layer is full. You must close the first Layer to be able to record on the second Layer.

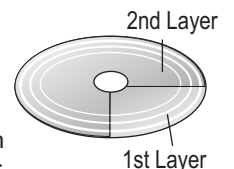

DVD-Video format (V)

This recording format is the standard DVD-Video. Digital programmes that are limited to "one-time recording" cannot be recorded. Not for recording and playback of still pictures.

+VR format

Digital programmes limited to "one-time recording" can not be recorded. Not for recording and playback of still pictures.

	DVD-RW (DVD-VR format) 12 cm/ 8 cm, playable only	-RW(VR)
	DVD-Video 12 cm/ 8 cm, playable only	DVD-V
	DVD-Audio 12 cm/ 8 cm, playable only	DVD-A
	CD CD-R/RW 12 cm/ 8 cm, playable only	CD
	Video CD CD-R/RW 12 cm/ 8 cm, playable only	VCD

Regional codes



DVD-Videos with the regional code 2 or ALL can be played with this unit. The code is listed on the backside of the unit. England and Continental Europe: 2.



Only play round discs.




Do not touch the disc recording surface.

Cartridge discs


RAM

With active write protection, you can neither record to the disc nor edit or delete content.

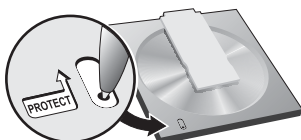

Cartridge write protection

 Remove the 8-cm disc from the cartridge before using it with this unit.

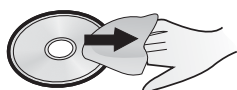

Playback discs

A DVD-RW that was recorded on another DVD recorder is played back in DVD-VR format on this unit. Programmes limited on "one-time recording" can be played back if recorded to a CPRM-compatible disc. If you format the disc, you can record and play it in DVD-Video format with this unit.

High-quality video and music discs.

Digital-quality music discs. Playback in dual-channel sound.

Music and audio recordings, music in MP3 format, pictures in JPEG and TIFF format.

Music and video recordings.
SVCD in compliance with IEC62107.

DivX **MP3** **JPEG** You can play DivX, MP3 and JPEG/TIFF data from a finalised CD-R, CD-RW or DVD-R. Depending on the recording conditions, playback may nonetheless be faulty.

Some DVD-Audio discs with multi-channel sound are designed by the manufacturer to prevent inter-mixing on the entire disc or at certain places. Depending on the disc type, the regional code and the recording conditions, it may not be possible to play the discs in some cases.

See the jewel case for more information.

Non playable discs

- 2.6 GB and 5.2 GB DVD-RAM, 12 cm.
- 3.95 GB and 4.7 GB DVD-R for Authoring.
- DVD-R that was recorded in DVD Video Recording format (VR).
- DVD-R (V), DVD-R DL, DVD-RW (V), +R, +R DL that was recorded on another unit and not finalised.
- Blu-ray, DVD-ROM, +R (8 cm), CD-ROM, CDV, CD-G, photo CD, CVD, SACD, MV disc, PD, "Chaoji VCD" that can be purchased in stores, including CVD, DVCD and SVCD that are not IEC62107-compliant, etc.

Handling discs

If the surface of a disc, which has no Cartridge or was removed from one, is scratched, dirty, dusty or has finger prints, playback or processing can be impaired. Such impairments can also occur when the disc is placed back in the Cartridge.

Note: Only write on the label side of the disc. Use a soft, oil-based felt-tip pen. Do not use a ball-point pen or any other hard writing instrument. Do not affix stickers or labels to the disc. When not in use, put the disc in its case or Cartridge.

Cleaning the DVD-RAM

Clean the disc with a special DVD-RAM cleaner (optional) and read the cleaner instructions thoroughly before use. Bad scratches and stubborn dirt may not be able to be removed so that recording, editing or playback is still compromised even after cleaning. The disc should then no longer be used.

Do not use benzine, alcohol, water, cleaning sprays, household cleaners or other solvents.

DVD lens cleaner (RP-CL720E)


Compatible models: Only for Panasonic's DVD recorders.

Do NOT use this cleaner with any other Panasonic DVD products or with the DVD products of any other companies since doing so may damage the products.


Cleaning DVD-Videos, Video-CDs and CDs

Wipe with a moist and then with a dry cloth.

Insert with label facing upwards. In the case of double-sided discs, the label of the side that you want to play should be facing upwards.

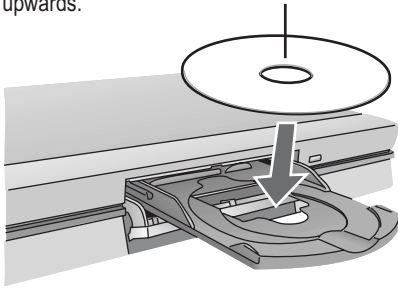

Insert a Cartridge disc in the direction of the arrow, label facing upwards.

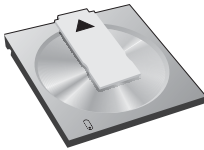

Direct input via the number buttons

5: 0 5 15: 1 5
 5: 0 0 5 15: 0 1 5
 5: 0 0 0 5 15: 0 0 1 5

Preparation

- Switch on your television and select the appropriate AV channel.
- Switch on the DVD Recorder.

- Press **OPEN/CLOSE** \blacktriangle on the unit to open the disc tray.
- Insert a disc in the disc tray and close it.
It may take some time to read the disc!

PLAY Playback

- Press **PLAY** \blacktriangleright to start playback.
Playback begins with the last title recorded.
[RAM] [-R] [-R DL] [-RW(V)] [+R] [+R DL] [+RW] Disc playback stops when a Timer recording starts.

Playback of a selected title

- During playback, use the number buttons to select the desired title, chapter or piece and confirm with **ENTER**.
[DVD-A] When the screen saver is shown, you can enter a group number. On some discs, this function is only available when playback stops.

Playback starts automatically

[DVD-A] [DVD-V] [VCD] [CD] [-R(MP3)]


Playback always starts at the beginning of the disc. If the disc has its own disc menu, then this is displayed. The operation of the disc menu depends on the inserted disc.

Due to the programme structure determined by the manufacturer, all described functions may not be available.

- In the case of VCD, use the number buttons to select the number of the title.
- In the case of DVD-A/DVD-V, use \blacktriangle \blacktriangleleft or the number buttons to select a title and confirm with **ENTER**.

Use the following buttons to launch the disc menu again:
 DVD-V: **SUB MENU**, DVD-A: **DIRECT NAVIGATOR**, VCD: **RETURN**


If \odot appears on the television unit, the procedure is interrupted by the unit or the disc.

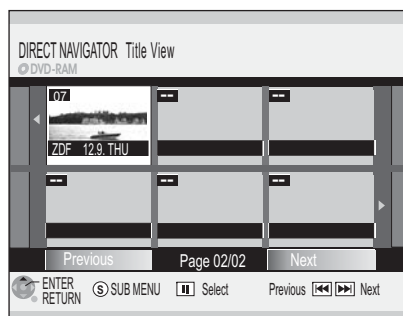

Selecting programmes/titles for playback

Use the **DIRECT NAVIGATOR** button to launch the menu during playback, recording and in **STOP** mode.

- Press **DIRECT NAVIGATOR**.
- Select the desired title with \blacktriangle \blacktriangleleft and confirm with **ENTER**. Playback starts.
- Press **RETURN** to exit the menu.
You can select other pages with **SKIP** $\blacktriangleleft\blacktriangleleft$ Previous or $\blacktriangleright\blacktriangleright$ Next.

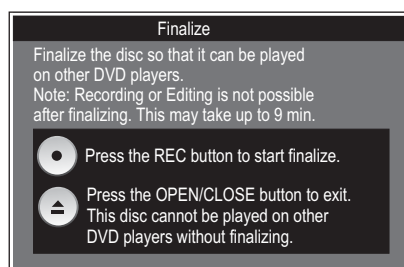

Finalising

[-R] [-RW(V)] [+R] [-R DL] [+R DL]

Auto finalisation is always offered before an unfinalised disc is ejected. You can only play an unfinalised disc on this DVD Recorder.

- Press **OPEN/CLOSE** \blacktriangle on the unit.
- Press **REC** on the unit to start the finalisation.
- After successful finalisation, the disc is ejected automatically.
It can now be played on any DVD unit.
- If you do not want to finalise the disc, press **OPEN/CLOSE** \blacktriangle on the unit again.



Pausing playback

- Press **PAUSE** to pause playback.
- Press **PAUSE** again to resume playback.



Stopping playback

- Press **STOP** .
- Playback stops and the television picture appears.
- During playback of DVD-A, DVD-V, VCD and CD press **STOP** twice to return to the television picture.

Saving the playback position

- Press **STOP** during playback. The unit saves the position.
- Press **PLAY** to resume playback from the saved position.
- To cancel the function, press **STOP** several times.
This function is not available if playback was started from DIRECT NAVIGATOR or from Playlists.

SLOW/SEARCH



Slow-motion playback

Not

- Press **SLOW/SEARCH** in **PAUSE** mode.
The speed can be controlled in 5 levels. With some disc formats, the **PAUSE** function is switched on after 5 minutes.
- Press **PLAY** to resume normal playback.

Forwards only.

Moving pictures only.

SLOW/SEARCH



Fast forward

- Press **SLOW/SEARCH** during playback.
Each time the button is pushed, the fast forward speed increases by one level up to a maximum of five levels.
- Press **PLAY** to resume playback.
The sound is only output at the first fast-forward speed.
With DVD-Audio (except for moving pictures), CDs and MP3s, the sound is output at all fast-forward speeds.

CREATE CHAPTER



Dividing a recording into chapters

- Press **CREATE CHAPTER** during playback.
During playback, press **SKIP** or **SKIP** to skip a chapter.



Skipping

- Press **SKIP** during playback or **PAUSE** mode to skip chapters, titles or pictures.
With DVD-Rs and CDs (DivX), you can only skip backwards.

MANUAL SKIP



MANUAL SKIP

Not

- Press **MANUAL SKIP** during playback.
Playback jumps forward approx. 30 seconds.




Frame playback

Not

- Press **Frame playback** in **PAUSE** mode.
Each time the button is pressed, the next or the previous frame is displayed.
- Press **PLAY** to resume playback.

Forwards only.

Moving pictures only.

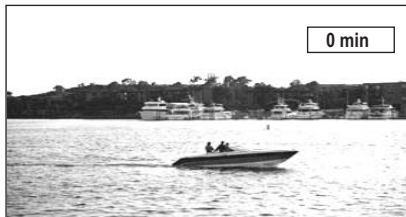

TIME SLIP/◀◀ JET REW

TIME SLIP

Not

- Press **TIME SLIP** during playback.
- Use **▲▼** to select the time span by which playback is to jump forward or backward. Each time the button is pressed, the time span increases or decreases in minute increments.
For recordings that are longer than 10 minutes, the time span increases or decreases in 10-minute increments when the button is held down longer.
- Press **ENTER** to confirm the selected time.

Delayed playback

Playback can be started while the unit is still recording. You can watch the recording without stopping the current recording.

- Press **STOP** to end playback.
- After 2 seconds, press **STOP** again to stop the recording.

If a Timer recording is to be stopped, use **◀** to select [Stop Recording] and confirm with **ENTER**.




Quick View (PLAY/x1.3)

You can increase the playback speed without negative effects on the sound.

- Press and hold **PLAY** during playback.
- Press **PLAY** again to return to normal speed.

With a digital connection, playback is in PCM.

Quick View is paused if you press **PAUSE** or the playback of a programme begins, which was not recorded with Dolby Digital. Quick View does not function during simultaneous recording and playback in XP or FR mode.

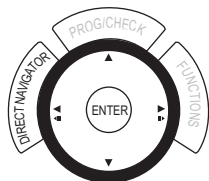

Simultaneous recording and playback

You can play a different title during the current recording.

Recording to DVD-RAM - Playback from DVD-RAM

- Press **DIRECT NAVIGATOR** during the recording or Timer recording. The title view appears.
- Select a title with **▲▼◀▶** and confirm with **ENTER**.
Playback of the selected title begins.
- Use **STOP** to end playback.
Playback during recording standby does not affect Timer recordings. Recording begins at the programmed time.

Recording to DVD - Playback from VHS

- Select the VHS drive with **DRIVE SELECT**.
- Select **PLAY** to start playback.
- Select **STOP** to end playback.

Recording to VHS - Playback from DVD

- Select the DVD drive with **DRIVE SELECT**.
- Select **DIRECT NAVIGATOR**.
- Select a title with **▲▼◀▶** and confirm with **ENTER**.
Playback of the selected title starts.
- Select **STOP** to end playback.

Changing the audio channel

AUDIO

For disc formats RAM, -RW(VR), -R(DivX), CD(DivX), VCD


- Press **AUDIO** during playback.

DISPLAY

For disc formats DVD-A, DVD-V

- Press **DISPLAY** during playback.

- Depending on the disc, select the audio channel or the sound track. LR ⇒ L ⇒ R

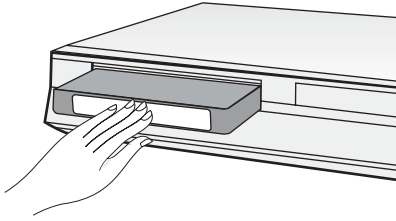

The tape automatically rewinds when the end is reached. This function is not available during a timer recording.

Preparation

- Switch on the DVD Recorder and use **DRIVE SELECT** to select the VHS drive.
- Enter a recorded video cassette.



Playing a video cassette

- Press **PLAY ▶** to start playback.
Playback starts automatically if a video cassette was inserted and its write-protection strip was removed.

Repeat playback

The video recorder repeats the recording until the end is reached.

- Press **PLAY ▶** for more than 5 seconds. **R ▶** and the tape play time or remaining tape play time appears on the screen.



Stopping playback

- Press **STOP ■**.



Pausing playback

- Press **PAUSE ||** during playback.
Press **PAUSE ||** again to resume playback.

Slow-motion playback during playback

- Press **PAUSE ||** for more than 2 seconds.
- Press **PLAY ▶** to resume playback.
Slow-motion playback is automatically cancelled after 10 minutes.

Frame playback during playback

- Press **PAUSE ||**.
- Press **PLAY ▶** to resume playback.
Frame playback is automatically cancelled after 5 minutes.

SLOW/SEARCH



Forwards ▶▶ or backwards ◀◀ search

- Press ▶▶ or ◀◀ during playback.
Press the button twice (JET SEARCH) to increase the search speed. If you press and hold the button, the search starts for the length that the button is pressed.
- Press **PLAY ▶** to resume playback.
The forwards/backwards search is cancelled after 10 minutes.

FF ▶▶ Fast forward / REW ◀◀ Jet rewind

- In **STOP** mode, press ▶▶ or ◀◀.
- Press **STOP ■** to end the forward/rewind function.

◀◀ JET REW

To quickly rewind to the beginning of the cassette.

Approx. 50 seconds for a E180 cassette.

Depending on the video cassette or the operating condition, the rewind speed may vary.

If the tape rewinds to the beginning, the counter is reset to 0:00.00.



VHS Index Search System (VISS)

This unit records special index signals to the cassette tape for each recording. The index search function uses these signals to quickly find the beginning of the desired recording. Up to 20 index signals can be used.

- Press **INDEX** during playback or in **STOP** mode.
▶▶ tape forwards/◀◀ tape rewinds. If an index signal was found, the unit automatically begins playback. With each push of the button, the number of jumps is increased.
- Press **STOP ■** to end the search.
If the index signals are too close together, the feature may fail. The recordings should be at least 5 minutes long.


S-VHS Quasi Playback (SQPB)

It is possible to play cassettes that were recorded on an S-VHS unit. The picture quality is the same as a VHS recording. Depending on the video tape used, slight picture distortions may occur.

An S-VHS recording is not possible with this unit.

Manual tracking

The unit sets tracking automatically. If a cassette was recorded on another unit, it may be necessary to set tracking manually.

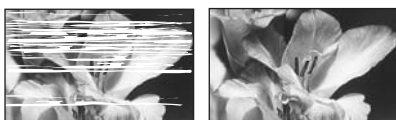

The picture shows interference or is blurred during playback.

- During normal playback or in slow motion, press **TRACKING/V-LOCK +/-** until the blurriness disappears.
If freeze frames are blurry, first switch the unit to slow motion and then adjust the tracking.
Tracking cannot be controlled on some video cassettes. This does not indicate functional problems.

Automatic tracking

- Press **TRACKING/V-LOCK +** and **-** at the same time to return to automatic tracking.
On some TVs, the picture can move up or down when special playback functions are used.
This does not indicate functional problems.

Handling video cassettes

If the video cassette is not in use, remove it from the unit and store it in its jacket. Avoid recording on the same tape section multiple times in order to avoid wearing out the video tape prematurely.

Carefully insert the cassette into the video recorder to avoid damage.

Do not expose the video cassette to high humidity, temperature or dust particles.


Do not store the video cassette near magnetic waves, such as television sets.

Do not use defective cassettes and do not try to repair them.

Do not open the housing or the protective flap on the front side of the cassette and do not touch the tape.

Use high-quality name-brand cassettes, such as those made by Panasonic.

When playing cassettes recorded on another VHS-Recorder, there may be a slight decrease in picture quality.

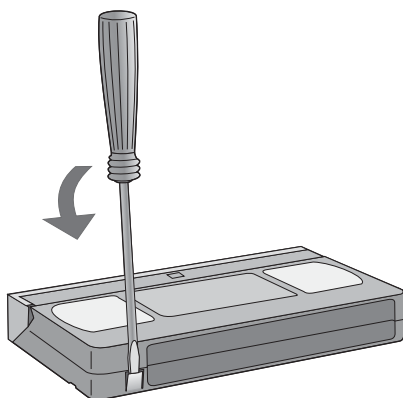

Write-protecting cassettes

Remove the write-protection tab to protect cassettes from accidentally being erased. If you want to record to a protected cassette, cover the gap with adhesive tape.

Cleaning video heads

Use a cleaning tape to clean the video heads.

Maximum number of recordable titles	
RAM -R -RW(V) -R DL	+R +RW +R DL
99	49

Programmes in 16:9 format are recorded in 4:3 format.
16:9 format is used to record to RAM.

Titles in PAL or NTSC format can be displayed on the following TV sets:

TV type	Disc	Yes/No
Multi system TV	PAL	Yes
	NTSC	Yes
NTSC-TV	PAL	No
	NTSC	Yes
PAL-TV	PAL	Yes
	NTSC	Yes (PAL60)

Before recording

You can record to DVD-RAM, DVD-R, DVD-RW, -R DL, +R DL, +R or +RW with this unit. DVD-R/-RW is the most common medium. DVD-Video format is used to record to discs. The format is compatible with most DVD-Video players and DVD-ROM drives in computers.

Disc Protection

Protect your recordings from accidental deletion or overwriting.

Title: Recordings: The entire disc:

If you activated write-protection, remove it before processing.

Conventional DVD-Vs are usually equipped with copy protection and cannot be copied.

CPRM (Content Protection for Recordable Media)

This unit is compatible with the CPRM copy-protection system for recordable media. When using a CPRM-compatible disc, a digital programme can be recorded once. Programmes broadcast with this copy-protection system cannot be recorded to DVD-R or 2.8 GB DVD-RAM.

Formatting

If using an unformatted disc, you must format it before the first recording. Formatting prepares the media, such as a recordable DVD-RAM, for recording. All data is irreversibly erased.

For recording

The recording is saved to free areas on the disc. If there is no more space left on the disc, you must delete recordings or use a new disc. Continuous recording or playback of both sides of a double-sided disc is not possible. After the end of the recording, the unit needs approx. 30 seconds to record data for recording management.


Discs suitable for recording

Rewritable			Writable			
RAM	-RW	+RW	-R	+R	-R DL	+R DL
x2	x1	x2.4	x1	x2.4	x4	x2.4
x3	x2	x4	x4	x4		
x5	x4	x8*	x8	x8		
	x6		x16	x16		


* Playback only

Under certain circumstances, digital sound signals may not be recorded in their original format. Digital programmes limited to "one-time recording" can only be recorded to 12-cm DVD-RAM.

Recording a 90-minute title to a disc with 4.7 GB of storage space.

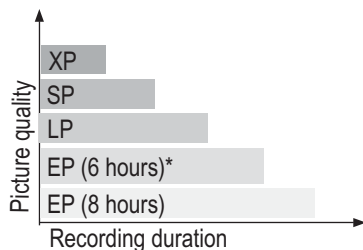

* Only if Recording time in EP mode is set to [EP (6 Hours)] in the Setup menu.

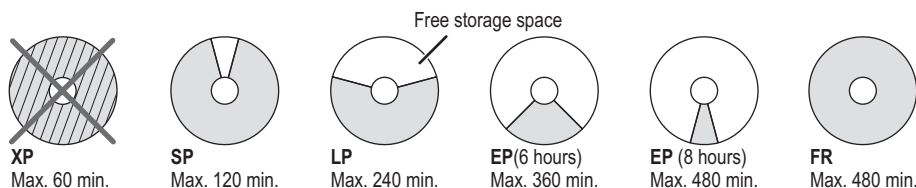

It is not possible to record a 90-minute title in XP mode. The available storage space is used optimally in FR mode. The title is recorded in the best possible quality.

You cannot record to DVD and VHS at the same time.

DVD: Insert a disc.

If you activated write protection, cancel it.

RAM

VHS: Insert a video cassette with an intact write-protection tab.

- Press **FUNCTIONS**.
- In the Setup menu, select the appropriate tape length under VHS.
- Confirm with **ENTER**.
- Press **RETURN** multiple times to return to the television picture.
- Select the DVD or VHS drive with **DRIVE SELECT**.

51

REC

Record

- Press **REC** to start a recording.
After the recording is complete, it takes some time for the unit to process the unit control information.

PAUSE

Pause the recording

- Press **PAUSE** to pause the recording.
- Press **PAUSE** again or **REC** to resume recording.
The title is not divided.

VHS: If the recording is paused for more than 5 minutes, the unit switches to **STOP** mode.

Approx. recording times in hours

	DVD-RAM		-R, -RW +R, +RW
	4.7 GB	9.4 GB	4.7 GB
XP	1	2	1
SP	2	4	2
LP	4	8	4
EP: 6 h	6	12	6
EP: 8 h	8	16	8

Approx. recording times in hours

	-R DL +R DL 8.5 GB		
	Total	1st Layer	2nd Layer
XP	1:45	0:55	0:50
SP	3:30	1:50	1:40
LP	7:00	3:40	3:20
EP: 6h	10:45	5:30	5:15
EP: 8h	14:15	7:25	6:50

It is not possible to record continuously from the first layer to the second layer.

Recording time for E-240 cassettes

- SP**-Normal mode: approx. 4 hrs.
- LP**-Long-play mode: approx. 8 hrs.
- EP**-Extra long-play mode: approx. 12 hrs.

Use SP if you value a high-quality picture.

DVD recording of TV programmes

- Select the station with **CH** or the number buttons.
 - Select the recording mode with **REC MODE**.
Switch between SP, LP, EP and XP with each push of the button.
 - Press **REC** to start the recording.
 - Select **STOP** to stop the recording.
If you resume recording, a new title will be created.
 - Press **REC** again to resume recording.
You can play VHS cassettes while recording. The recording to DVD is not impaired.
- RAM** With **AUDIO**, you can switch the incoming audio channel during the recording. It has no effect on the recorded audio channel.

REC MODE

Changing the recording mode

- Press **REC MODE** in **PAUSE** or **STOP** mode.
Switch between SP, LP, EP and XP (XP only with DVD) each time the button is pressed. The material is recorded as a separate title with each switch.

RAM With the [EP mode (8Hours)] setting, playback on DVD-RAM-compatible DVD players may not be possible.

Select [EP mode (6Hours)].

47

VHS recording of TV programmes

- Select the station with **CH** or the number buttons.
- Select the tape speed with **REC MODE**.
Switch between SP, LP and EP each time the button is pressed.
- Press **REC** to start the recording.
- Select **STOP** to stop the recording.
- Press **REC** again to resume recording.
You can playback discs while recording. The recording to VHS are not impaired.
When using an S-VHS cassette, the recording is in conventional VHS.

Specifying a time as the recording duration

This function is not available for Timer Recordings.

- Press **● REC** on the unit during recording.
The recording time changes each time the button is pressed on the unit display:
OFF → 0:30 → 1:00 → 1:30 → 2:00 → 3:00 → 4:00 → OFF
- Press **■ STOP**. The recording is paused and the time setting is deleted.
The unit switches itself off at the end of the recording if no functions are being executed on another drive. This function is not possible during a Timer- or Ext Link recording.

DVD: This function is not possible with Flexible Rec. If the channel or recording mode (XP, SP, LP, EP) is changed while recording is paused, the time is deleted.

VHS: If the tape speed is changed during the recording, a slight picture distortion will occur at that point.

DVD playback during recording



During the recording, you can the playback from the beginning of the programme.

- Press **▶ PLAY** during recording or Timer Recording
At least 2 second must have elapsed since the beginning of the recording.

DIRECT TV REC




Direct TV recording

If your TV is equipped with Q Link, you can record a TV programme that you are currently watching. Other settings are not necessary. The recorder automatically switches to the appropriate station.

It works to the selected drive when the button is pressed.

- Press **DIRECT TV REC** for 3 seconds. Recording begins.
- Press **■ STOP** to stop the recording.

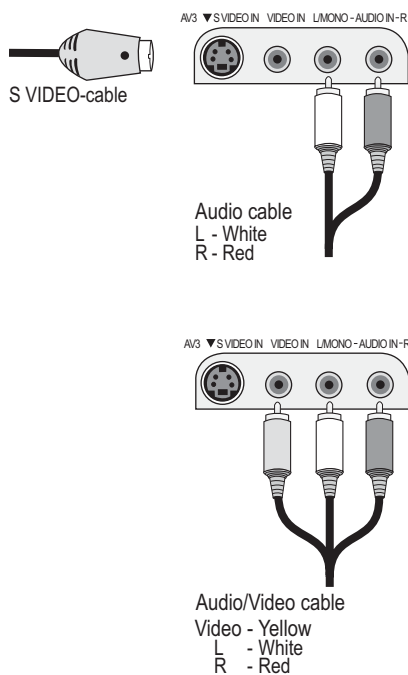

Recording from an external unit, e.g. a camera

- Connect the external unit to the AV3 input sockets on the front side of the unit.
- Select one of the two connection options.
The S VIDEO-cable and audio cable (L/R) connection delivers the best quality.
You cannot receive signals from PCs with this unit.

Recording to VHS: Insert a video cassette with an intact write-protection tab.

- Select the VHS drive with **DRIVE SELECT**.
- Select the recording mode with **REC MODE**.
- In **STOP** mode, use **INPUT SELECT** to select input channel AV3.
- Press **▶ PLAY**.
- At the point where you wish to start recording press **⏸ PAUSE**.
- Press **● REC**.
- Start playback on the external unit.
- Then press **⏸ PAUSE** to start the recording.
- Use **■ STOP** to stop the recording.

Recording to DVD: Insert a recordable disc.

If you activated the write protection, cancel it.



- Select the DVD drive with **DRIVE SELECT**.
- Select recording mode with **REC MODE**.
- In **STOP**-mode use **INPUT SELECT** to select input channel AV3.
- Start playback on the external unit.
- Press **● REC** at the point where you want to start the recording.
- Use **■ STOP** to stop the recording.

Selecting the sound track to record for programmes with dual-channel sound Not 

- Before recording, select Sound setting Bilingual Audio Selection [M1] or [M2] in the Setup menu.
Select [M1] or [M2] on an external unit before recording.
- If the output signal of the external unit is an NTSC signal, set the TV System to [NTSC] in the Setup menu.



 49

 50

Recording in dual-channel audio

On DVD-RAM, both channels of a programme in dual-channel sound are recorded.

Use **AUDIO** to switch between the two recorded sound tracks.

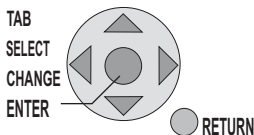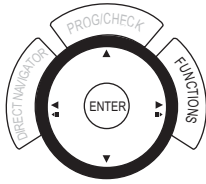

TAB: Select submenu with **▲▼◀▶**.

SELECT: Select setting or option.

CHANGE: Change the option



ENTER: Select or save a setting.

RETURN: Back to the previous screen.
Exit a menu.

You can access the main functions via **FUNCTIONS**. The illustrations show DVD-RAM menus. The menu entries may differ depending on the disc or the medium.

- Press **FUNCTIONS**. During Recording or Timer Recording, some menus have a grey background and cannot be selected.
- Select a menu with **▲▼** and confirm with **ENTER**.
- Select the following page with **▲▼** [To Others] and confirm with **ENTER**. Press **RETURN** to return to the first page.
- Press **FUNCTIONS** to exit the selection menu.

Playback	DIRECT NAVIGATOR menu	
Recording	Timer programming in the Timer Recording menu	
Delete	DELETE Navigator	
Copy	Copy menu	
ShowView Record	ShowView Record menu	
Playlists	Playlists menu	
Flexible Rec	Record in FR-Modus	
DV Auto Rec	Record the DV signal	
Setup	Change the unit setup	
DVD Management	Format and finalise discs, write-protection	

The **FUNCTIONS** menu cannot be launched during playback. Stop playback with **STOP** ■.

Notes on the menus

Selecting a title or chapter

- Select a title or chapter with **▲▼◀▶** or **0-9**.

Selecting other pages

- Select [Previous] or [Next] with **▲▼◀▶** and confirm with **ENTER**.

Cancelling a function

- Depending on the specific entry, select [No] or [Cancel] with **▲▼◀▶** and confirm with **ENTER**.

You can also cancel a function with **RETURN**.

Starting playback

- Start playback of the selected title or chapter with **ENTER**.

For faster processing

In addition to fast forward, slow motion playback and frame playback, there are other function available for faster processing.

Jump to the beginning/end of a title/chapter with **PAUSE II** and **SKIP** **◀◀▶▶**.

Find the position for a marking with **SKIP** **◀◀▶▶**, **SLOW/SEARCH** **◀▶▶**, **TIME SLIP**, **MANUAL SKIP** or **◀▶**.

You can jump between set markers with **SKIP** **◀◀▶▶**.

Editing several elements

You can process several chapter or titles at the same time.

Functions such as Copy, Set up Protection or Delete are marked with the symbol .

- Select the desired title with **▲▼◀▶** and press **PAUSE II**.
A check appears. Repeat this process to select other titles.
- Press **PAUSE II** again to clear the selection.



Entering text

You can give titles to your programmes or discs in the different menus and while setting up the Timer Recording.


Entering a title or disc name using the menu

- Select the desired character with **▲▼◀▶** and confirm with **ENTER**.
By inserting spaces, hyphen or dashes, you can enter the title you want. Select **PAUSE II** to delete a letter.
- Press **STOP ■** to apply the name/title.

Use buttons **A** and **B** to switch between [Standard Characters] and [Other Characters].

Enter a title using the number buttons, e.g.: the letter "R"

- Press [7] to switch to the 7th line.
- Press [7] twice to select "R" and confirm with **ENTER**.

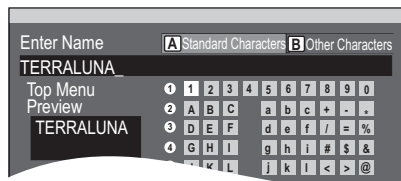

Top Menu Preview

-R **-RW(V)** **+R** **-R DL** **+R DL** **+RW**

Select the setting Enter Name from DIRECT NAVIGATOR, the Top Menu Preview appears additionally. The later representation of the title is displayed. Insert, if necessary spaces, hyphens or dashes in order to display the title according to your desire.

Working with List Names

In the case of recurring programmes, save time entering the title by saving it in the title list.

Save a disc name or title in List Names

- After entering a title, press **SKIP ►►**.
- In the next screen, select [Add] with **◀** and confirm with **ENTER**.

Using a disc name or title from List Names

- Open List Names with **◀◀ SKIP**.
- Select the disc names or title with **▲▼◀▶** and press **ENTER**.
- Press **STOP ■** to apply the name/title.

Deleting a disc name or title from the List Names

- Open List Names with **◀◀ SKIP**.
- Select the title or name with **▲▼◀▶** and press **SUB MENU**.
- Confirm [Delete Name] with **ENTER**.
- In the next screen, select [Delete] with **◀** and confirm with **ENTER**.








Overview of DIRECT NAVIGATOR

You can archive, edit or start playback after selecting a title in DIRECT NAVIGATOR.

The DIRECT NAVIGATOR cannot be called if the VHS drive is selected.

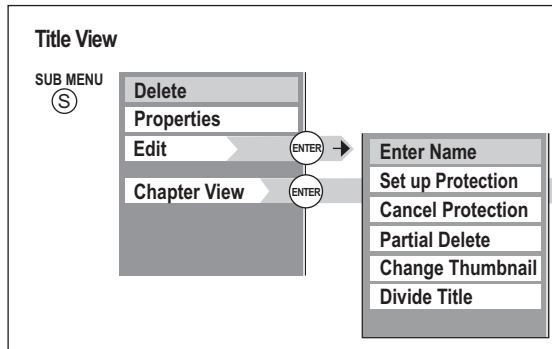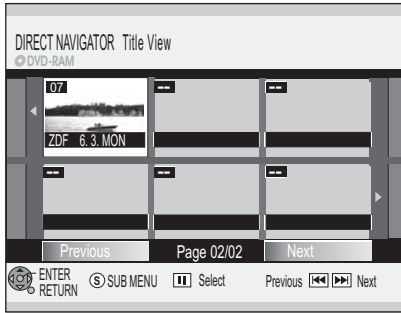

Editing is not possible during recording.

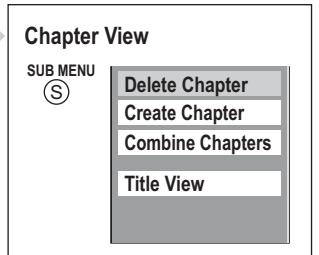

Launching the DIRECT NAVIGATOR menu



- Press **FUNCTIONS**.
- Confirm [Playback] with **ENTER**.
The DIRECT NAVIGATOR menu appears.

Playback

- Select a title with **▲▼◀▶** and start playback with **ENTER**.

Edit

- Press **SUB MENU** to edit a title.
- Select the desired option with **▲▼** and confirm with **ENTER**.

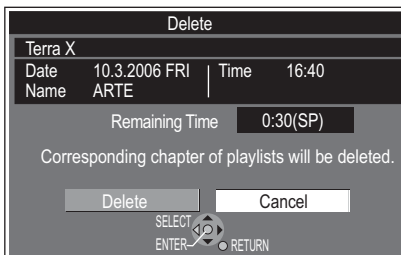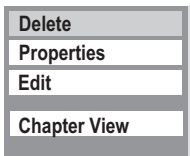

Delete

Not **[RW(VR)]**

When you execute this process, the title will be deleted and cannot be restored.

- Confirm [Delete] with **ENTER**.
- Select [Delete] with **◀** and confirm with **ENTER**.

The available recording time may remain the same after deleting a short title.

In the case of a DVD-RAM, the storage space of a deleted title becomes available for a new recording. With other discs, the storage space is not released by deleting titles.



Properties

Information on the title, such as name, date and time, is displayed.

- Select [Properties] with **▲▼** and confirm with **ENTER**.

Editing several elements

Select the desired title with **▲▼◀▶** and press **PAUSE II**.

A check appears. Repeat this process to select other titles.

Press **PAUSE II** again to clear the selection.



Delete	Enter Name
Properties	Set up Protection
Edit	Cancel Protection
Chapter View	Partial Delete
	Change Thumbnail
	Divide Title

Editing titles in the SUB MENU

- Select [Edit] with **▲▼** and confirm with **ENTER**.
- In the submenu, select the desired option with **▲▼** confirm with **ENTER**.

Enter Name

 Not **[RW(VR)]** **[27]**

Enter or change the title of the programmes.
The full name is displayed in the Properties submenu.

Set up Protection

[RAM] **[+R DL]** **[+R]** **[+RW]**

- Select [Yes] with **◀** and confirm with **ENTER**. is displayed.

Cancel Protection

[RAM] **[+R DL]** **[+R]** **[+RW]**

- Select [Yes] with **◀** and confirm with **ENTER**. disappears.

Partial Delete




[RAM]

Make sure that you really want to delete parts of the recording.

- At the desired start point, confirm [Start] with **ENTER**.
- At the desired end point, confirm [End] with **ENTER**.
- If you want carry out the deletion, select [Exit] with **▲▼** and confirm with **ENTER**.
- In the next screen, select [Delete] with **◀** and confirm with **ENTER**.
You exit the menu after the deletion.

- To delete other parts, confirm [Next] with **ENTER**.
- Select [Delete] with **◀** and confirm with **ENTER**.
After each deletion, you can select the next start and end point.
- To exit the menu, select [Exit] with **▲▼** and press **ENTER**.

You may not be able to identify a start and end point if they less than 3 seconds apart or if recorded image is a still picture. The unit switches to **PAUSE** mode at the end of the title. The available recording time on the disc may remain the same after deletion.

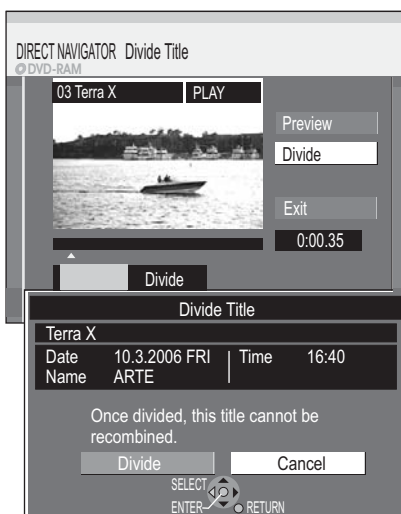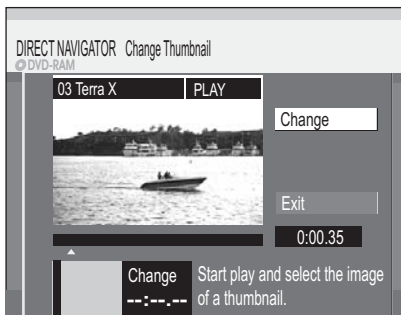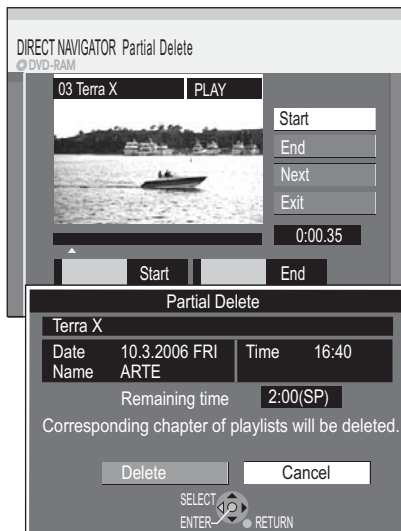

Change Thumbnail

 Not **[RW(VR)]**

You can select any position in a title as the thumbnail for the title view.

- Press **PLAY ▶** to start playback.
- At the position which is to be displayed as the new thumbnail, confirm [Change] with **ENTER**. The select thumbnail is displayed.
- Confirm [Exit] with **ENTER**. The selected thumbnail is displayed in the title view.

Divide Title

[RAM]

You can divide a selected title. A divided title cannot be put joined together again.

- At the position where the title is to be divided, confirm [Divide] with **ENTER**.
- Confirm [Preview] with **ENTER**. A section will be played back from 10 seconds before to 10 seconds after the dividing point.
- Confirm [Exit] with **ENTER**.
- In the next screen, select [Divide] with **◀** and confirm with **ENTER**.
A short section of the recording right before the dividing point may be lost. The divided titles retain the name of the original title.

You cannot use this function if the resulting sections are extremely short or if you have saved more than 99 titles to DVD-RAM.

You can jump to the beginning/end of a title/chapter with **PAUSE II** and **SKIP I◀◀▶▶**. Find the position for a marker with **SKIP I◀◀▶▶**, **SLOW/SEARCH ◀▶▶**, **TIME SLIP**, **MANUAL SKIP** or **◀▶**. You can jump between set markers with **SKIP I◀◀▶▶**.

Editing several elements

Select the desired title with **▲▼◀▶** and press **PAUSE II**. A check appears. Repeat this process to select other titles. Press **PAUSE II** again to clear the selection.




FUNCTIONS



Playback



DIRECT NAVIGATOR

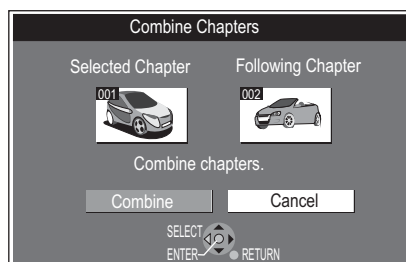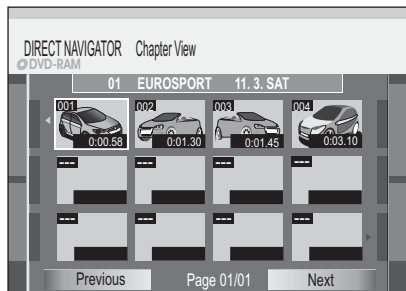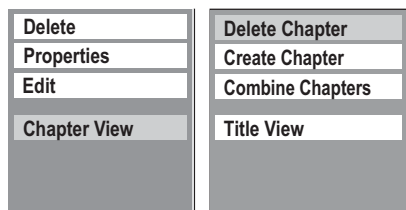

Editing chapters in the SUB MENU

- Press **FUNCTIONS**.
- Confirm [Playback] with **ENTER**.
- Select the desired title with **▲▼◀▶** in the Title View menu.
- Press **SUB MENU**.
- Select [Chapter View] with **▲▼** and confirm with **ENTER**.
- Select the desired chapter with **▲▼◀▶**.
- Press **SUB MENU**.
- Select the desired option with **▲▼** in the submenu and confirm with **ENTER**.

Delete Chapter

- Select [Delete] with **◀** and confirm with **ENTER**.

RAM

Create Chapter

Divide the title into chapters. Determine the points where a new chapter needs to begin. The chapters can be selected later during playback with **SKIP ◀◀▶▶**.

- Press **ENTER** at the position where you want to create the chapter.
- Repeat this step to create additional chapters.
- Select [Exit] with **▼** and confirm with **ENTER**.

A short section right before the dividing point may be lost.

RAM

Combine Chapters

- Select [Combine] with **◀** and confirm with **ENTER**.
The selected chapter is combined with the following chapter.

RAM



Title View Return to Title View

RAM

You can jump to the beginning/end of a title/chapter with **PAUSE II** and **SKIP ◀◀▶▶**. Find the position for a marker with **SKIP ◀◀▶▶**, **SLOW/SEARCH ◀▶▶**, **TIME SLIP**, **MANUAL SKIP** or **◀▶**. You can jump between set markers with **SKIP ◀◀▶▶**.

Editing several elements

Select the desired title with **▲▼◀▶** and press **PAUSE II**. A check appears. Repeat this process to select other titles. Press **PAUSE II** again to clear the selection.

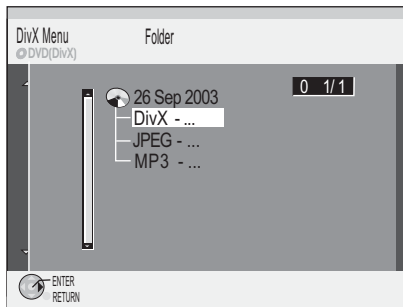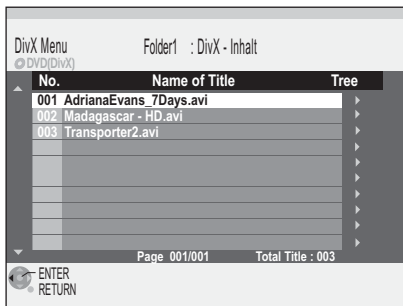

If you do not want to play DivX data, change the presetting in the FUNCTIONS menu to the desired format.

32

DivX Format

Playable discs: DVD-R, CD-R/RW

Maximum number DivX files: 200

DivX file format: ".DIVX", ".divx", ".AVI", ".avi"

DivX version: 3.11, 4.x, 5.x

Maximum number of files: 4000

(MP3, JPEG, DivX and other file types)

Maximum number of folders: 300

(Including master folder)

Video

Number of streams: up to 1

Codec: DIV3, DIV4, DIVX, DV50

Picture size: from 32 x 32 to 720 x 576

Pictures per second: up to 30 fps

Audio

Number of streams: up to 8

Format: MP3, MPEG, Dolby Digital

Multi-channel: Dolby Digital is possible.

MPEG multi is converted to 2 ch

The sequence of files shown by this unit can differ from that on other units or computers. GMC (Global Motion Compensation) is not supported.

DivX playback

-R CD

DivX (Direct-Video-eXpress) is a format for saving compressed audio and video data and is developed by DivXNetworks. It is based on MPEG-4, but saves in a much more compact manner to approx. one-tenth the size of the uncompressed file format with satisfactory quality. Thus, the content of a DVD (approx. 8 GB) can be saved to a conventional CD-ROM (650 MB) in DivX format.

DivX files must always be played with the version with which they were compressed, since newer DivX versions are not compatible with older versions.

Starting playback

The disc only contains DivX data:

- Press **PLAY** ►.
- Select a title with ▲▼ and confirm with **ENTER**. Playback begins.

Selecting a Folder

- Press ► to switch to [Tree].
- Select the desired Folder with ▲▼◀▶ and confirm with **ENTER**. The contents of the selected Folder are displayed.

In addition to DivX data, the disc also contains MP3- and/or JPEG data:

- Confirm the message regarding the preset play mode with **ENTER**.
- Press **PLAY** ►.
- Select a title with ▲▼ and confirm with **ENTER**. Playback begins.

Repeat playback of DivX titles is not possible. During playback, you cannot launch titles using the number buttons.

A warning message appears if a Timer recording is programmed.

CD-R/CD-RW/DVD-R with DivX-, JPEG-, MP3 data can only be read. A disc that only contains DivX-, JPEG-, MP3 files from a PC can be played. If the disc contains titles in DVD Video Recording format (VR) and PC data, only the titles in VR format can be played back.

Playing DivX with limited playback options

-R CD

DivX Video On Demand is encrypted for copyright reasons. Register the unit in order to be able to play encrypted titles. Follow the online instructions during registration. You will need the registration code of the unit.

51

After you have played an encrypted title for the first time, a new registration code appears in the DivX Registration menu. Do not use this new registration code to purchase other encrypted titles. If you obtain and play titles with this second code, the registration for the first code will expire. The titles obtained with it can no longer be played.

If you acquire a registration code which does not belong to this unit, you cannot play the contents.

- Press **PLAY** ►.
- Select a title with ▲▼ and confirm with **ENTER**. The number of playback options for this title is displayed. It ends with 0.
- Select [Yes] with ◀▶ and confirm with **ENTER**. Playback begins. It is not possible to save a playback position.

Do not press the following buttons during playback:

⏪ DVD/VHS, STOP ■, SKIP ◀▶▶, SLOW/SEARCH ◀▶▶


The number of playback options is reduced by 1 each time.



Official DivX Certified™ product.

Plays DivX@5, DivX@4, DivX@3, and DivX@ VOD video content (in compliance with DivX Certified™ technical requirements).

DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

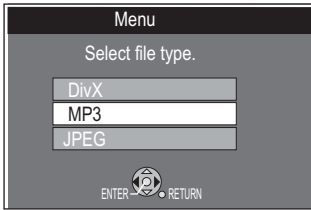


MP3 playback

-R CD

This unit can play MP3 that were recorded with a computer. Files are captured as tracks and folders as groups. "TOTAL" includes all pieces in all groups on the disc.

In addition to MP3 data, the disc also contains JPEG and/or JPEG data: After a disc is inserted, a message appears regarding the preset playback mode.

- Confirm the message with **ENTER**.
- Press **FUNCTIONS** and confirm [Menu] with **ENTER**.
- Select the desired file type with **▲▼** and confirm with **ENTER**.

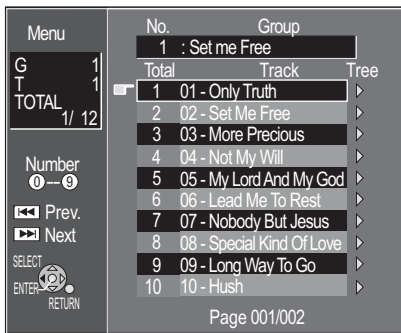


Starting playback

- Press **DIRECT NAVIGATOR** to launch the Menu screen.
- Select the desired track with **▲▼** or **[0]-[9]** and confirm with **ENTER**. Playback takes place up to the last track in the selected group.
- Press **STOP** to end playback. Use **DIRECT NAVIGATOR** or **RETURN** to exit the screen.

Browse through the pages with **SKIP**. The lists of groups follow one after the other.

- ☰ Shows the track currently being played
- TOTAL:** Selected track number/ Total number of tracks numbers
- G:** Group number
- No.:** Selected group number
- T:** Track number in the group
- Group:** Selected group name

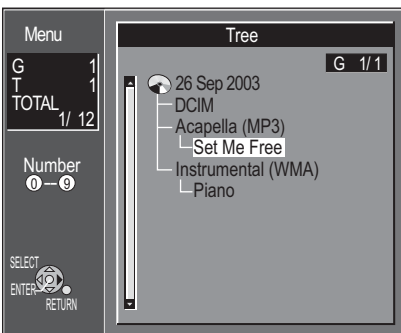

Selecting a group

- Press **▶** to switch to the Tree menu.
- Select the desired group with **▲▼◀▶** and confirm with **ENTER**. The contents of the selected group are displayed.

Root

- 001 (Folder=Group)
 - 001 track.mp3 (File=Track)
 - 002 track.mp3
 - 003 track.mp3
- 002 Group
 - 001 track.mp3
 - 002 track.mp3
 - 003 track.mp3

▶ Playback sequence

The unit can process maximum 4000 files/tracks (MP3, JPEG, DivX and other file types) and 300 folders/groups (including master directory) from DVD-R and CD-R/RW.

MP3 folder structure **-R CD**

The files must have the suffix ".mp3" or ".Mp3". During the recording, give the folders and file names 3-digit prefix numbers to stipulate the preferred playback sequence. Latin letters and Arabic characters are displayed correctly. Under certain circumstances, it is possible that other characters are not displayed correctly. ID3 tags or packet writing are not supported.

Playable discs: DVD-R, CD-R/RW

Maximum number of MP3 files: 3000

MP3 format: the discs must correspond to ISO9660 Level 1 or 2 formats apart from extended formats and Joliet.

Compatible compression rate: between 32 kbps and 320 kbps

Compatible scanning rate: 16 kHz, 22,05 kHz, 24 kHz, 32 kHz, 44,1 kHz and 48 kHz

Root

- P0000001.jpg
- P0000002.jpg
- 002 Folder
 - P0000003.jpg
 - P0000004.jpg
 - P0000005.jpg
- 003 Folder
 - P0000006.jpg
 - P0000007.jpg
 - P0000008.jpg

▶ Playback sequence

JPEG folder structure **-R CD**

The files must have the suffix ".jpg", ".JPG", ".tif" or ".TIF". A folder with all numbers "0" (e.g. DCIM000), cannot be shown. Depending on the recording status, it may not be possible to play the disc. Package Writing or MOTION JPEG are not supported.

JPEG format: the discs must correspond to the ISO9660 Level 1 or 2 formats apart from extended formats and Joliet.






Playable discs: DVD-R, CD-R/RW

Maximum number of JPEG files: 3000

File format: JPEG, TIFF (uncompressed RGB Chunky Format).

Number of pixels: 34x34 to 6144x4096 (sub-scanning 4:2:2 or 4:2:0).

If TIFF still pictures are played back or if there are a lot of files, sessions and/or folders, it can take a relatively long time to display the data.

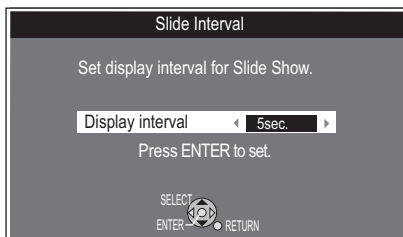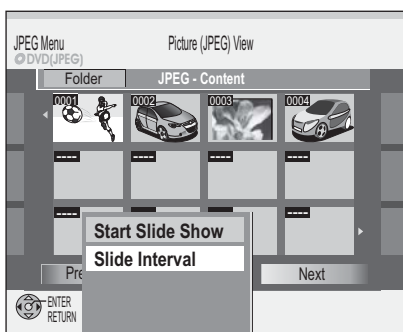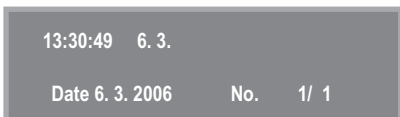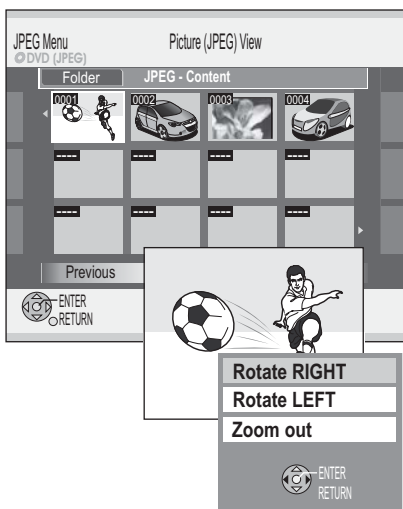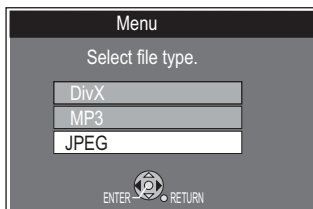 

JPEG/TIFF playback

JPEG (Joint Photographic Experts Group), a system for compressing/decoding colour still pictures. Despite strong compression, there is only a slight loss of picture quality.

TIFF (Tag Image File Format), a system for compressing/decoding colour still pictures. It enables digital cameras and other units to save high-quality pictures.

If your disc contains other formats such as MP3 or DivX in addition to JPEG, a message regarding the preset play mode will appear after the disc has been inserted.

- Confirm the message with **ENTER**.
- Press **FUNCTIONS** and confirm [Menu] with **ENTER**.
- Select the desired file type with **▲▼** and confirm with **ENTER**.

Picture playback

- Press **DIRECT NAVIGATOR**.
- Select the desired picture with **▲▼◀▶** or **0-9** and start playback with **ENTER**.
- End playback with **STOP ■** or **DIRECT NAVIGATOR**.

Rotate pictures

- Press **SUB MENU** during playback.
- Select the desired setting with **▲▼** and confirm with **ENTER**.

Zoom in/Zoom out (Only available for pictures smaller than 640 x 480 pixels.)

- Press **SUB MENU** during playback.
- Select [Zoom in] with **▲▼** and confirm with **ENTER**.
- To switch back to the original size, confirm [Zoom out] with **ENTER**.
The rotation and zooming of pictures is not saved.

Display picture properties

- During playback, press **STATUS** twice to launch the display.
- Press **STATUS** again to exit the display.

Select folder

- Select [Folder] with **▲** and confirm with **ENTER**.
- In the next menu, select the desired folder with **▲▼** and confirm with **ENTER**.

Start Slide Show

The pictures in the selected folder are automatically played back one after the other. The slide show ends after the last picture. The pictures in the folder are played in the selected display interval.

- Select [Folder] with **▲**.
- Press **SUB MENU**.
- Select the desired option with **▲▼** and confirm with **ENTER**.



Slide Interval

The display duration for each picture is determined with Display interval.

- Select the display interval for the individual pictures with **◀▶**.
- Confirm with **ENTER**.



Recording

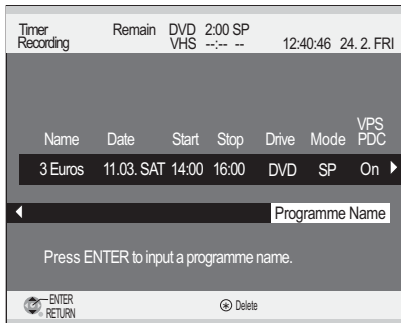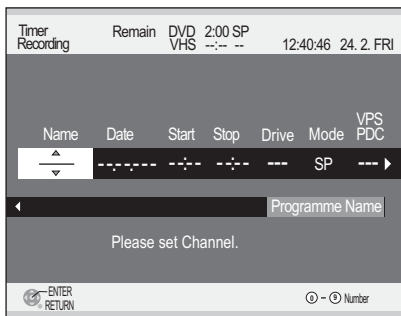

The remaining time of a VHS cassette will only be displayed after using a function like playback, fast forward or such.

If you did not insert a cassette or disc, the following message appears:



Manual programming

Make sure that there is a recordable disc or cassette in the selected drive. Otherwise, the timer recording will not run.

- Press **FUNCTIONS**.
- Select [Recording] with **▲▼** and confirm with **ENTER**. The Timer Recording screen appears.
- Confirm [New Timer Programme] with **ENTER**.
- Switch to the next entry with **◀▶** and change the setting with **▲▼**.
 - Name : Select the programme position/name of the TV station with **▲▼**.
 - Date : One-time, daily or weekly programming.
 - Start/Stop : Start time/end of recording. If you press and hold the **▲▼** buttons, the time increases/decreases in 30-minute intervals. You can also use the number buttons for these entries.
 - Drive : Select the drive.
 - Mode : Recording mode DVD: XP, LP, EP, SP, FR. If you selected VPS/PDC [On], recording mode FR is not possible.
 - : Recording mode VHS: SP, LP, EP, AUTO
 - VPS/PDC : [On] [Off/-]: If you selected [On], timer programmings will only be deleted from the list two days after recording.
- To enter the title of the recording, select [Programme Name] with **◀▶** and confirm with **ENTER**.
- Enter the desired name in the Programme Name menu.
- Press **STOP** **■** to apply the name.
- After you have made your changes, save the programming with **ENTER**.
- To enter other programmes, select [New Timer Programme].

27

The unit automatically switches to timer mode at the start time.

REC flashes in the unit's display one minute before the recording is set to start.

A timer recording does not start while a disc is being formatted, deleted or finalised. The recording begins afterwards.

RAM If you programmed the timer programmes one after the other in sequential order, the first few seconds of the second timer recording are not recorded. With other types of discs, it is approx. 30 seconds.

If you receive your TV programme via a Set Top Box (DVB-T) or a satellite receiver (digital/analogue):

On the external unit, select the station with the programme that you want to record. The station must not be changed during the recording. It is always the programme on this set station which is recorded.

Name : Select AV2 as the name of the TV station with **▲▼**.
VPS/PDC : This feature cannot be used.

VPS/PDC feature

If the broadcaster sends VPS/PDC signals, the beginning and end of a recording are synchronised with the current broadcast time. The programme start time must be correctly set to the VPS/PDC start time listed in the magazine.

Automatic SP/LP switching during a VHS recording

AUTO: If there is insufficient recoding time left on a video cassette, the SP/LP function switches the video recording speed to LP; NTSC to EP. This ensures that the programme is recorded in full. Should the remaining recording time on the video cassette still not be sufficient even in LP mode, then the programme will not be recorded in full. Automatic switching to EP mode is not possible.

Drive space

OK: There is sufficient storage space available for the programmed recording.

— : Storage space will not be calculated.

➔ **(Date)**: The existing storage space is displayed for daily or weekly recordings.

! : The disc was not inserted, it is write-protected or there is insufficient storage space available.


Checking or changing timer recordings

Check the settings and correct them if necessary.

- Press **PROG/CHECK**.

Checking or changing

- Select the desired timer programming with **▲▼** and press **ENTER**.
- Select the position that you want to change with **▲▼◀▶** and confirm with **ENTER**.
Programmes that are currently being recorded cannot be changed.

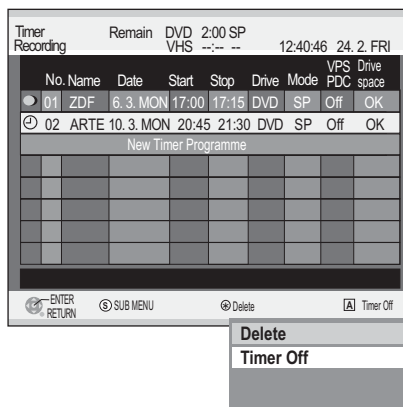

Timer Off/On

If you have regular e.g. weekly timer programmings, you can suspend the recording if you wish to record another programme at the same time, for example.

Your timer programming is retained. You do not need to delete and re-enter it later. The recording is suspended just once.

- Select the desired timer programming with **▲▼**.
- Press **SUB MENU**.
- Select [Timer Off] and confirm with **ENTER**.

- To switch the timer back on, press **SUB MENU**.
- Select [Timer On] and press **ENTER**.

You can also press the **A** button to interrupt or switch on a timer programming.

 
If you want to interrupt a weekly timer programming for a longer period, delete it using *****.

Delete

- Select the desired timer programming with **▲▼**.
- Press **SUB MENU**.
- Select [Delete] and confirm with **ENTER**.

Programmes that are currently being recorded cannot be deleted. First stop the recording.

You can also delete a timer programming using *****.

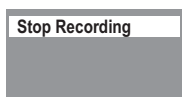

Stop Recording

You can stop a current timer recording.


- Select the current timer recording with **▲▼**.
- Press **SUB MENU**.
- Select [Stop Recording] and confirm with **ENTER**.

The timer recording ends and is thereby deleted.

If you stop a regular timer programming (e.g. a weekly recording), it is marked as stopped and not deleted.

The programming is retained for the following recordings.

Description of the symbols on page 15.

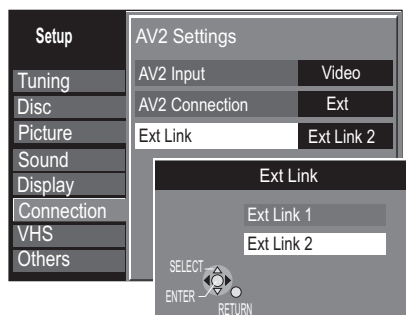

Timer recording via external units

Setting for external units (EXT LINK)

You control the recording function via an external unit (e.g. a receiver) with **EXT LINK**. Connect the unit to the AV2 socket with a 21-pin Scart cable.

- Press **FUNCTIONS**, select [To Others] with **▲▼** and press **ENTER**.
- Select [Setup] with **▲▼** and press **ENTER**.
- Select [Connection] with **▲▼** and [AV2 Settings] with **▶**, **▲▼** and press **ENTER**.
- Select [Ext Link] with **▲▼** and confirm with **ENTER**.
- Select [Ext Link 1] or [Ext Link 2] with **▲▼** and confirm with **ENTER**.
- Press **RETURN** multiple times to return to the television picture.

Ext Link 1: For digital receivers that send a special recording control signal, e.g. the F.U.N. receiver (TU-DSF41).

Ext Link 2: External recording control for satellite or digital receivers (video signal). The Ext Link 2 setting cannot be used if the input signal is in NTSC format.

The beginning of the recording may not be recorded correctly.

Recording programming on an external unit

The programming for a timer recording takes place on an external unit. Read the operating instructions for your external unit.

Switching the DVD Recorder to recording standby mode



- Select recording drive DVD or VHS with **DRIVE SELECT**.
- Press **EXT LINK**.
Recording standby mode for **EXT LINK**-controlled recordings is activated. The selected drive and EXT-L appear on the display.
The recording begins if an appropriate signal is received from a connected unit. As long as this signal is transmitted by the external unit, the selected drive will record it.

Switching off recording standby mode

- Press **EXT LINK** to switch off recording standby mode.
EXT-L disappears from the display.

Prematurely cancelling recording

- Stop the transfer of the recording signal on the external unit.
- Press **EXT LINK** to switch off recording standby mode.
EXT-L disappears from the display.

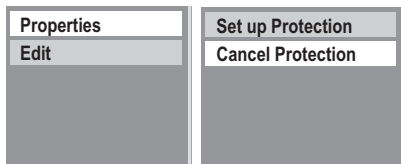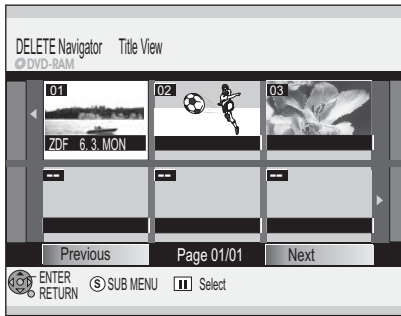

Deleting titles and pictures

You can delete titles or write-protect recordings so that they are not accidentally deleted or overwritten.

- Press **FUNCTIONS**.
- Select [Delete] with **▲▼** and confirm with **ENTER**.
- Select the title that you want to delete with **▲▼◀▶** and confirm with **ENTER**.
- Select [Delete] with **◀** and confirm with **ENTER**.
Deleted titles cannot be restored later on.
- Press **SUB MENU** to edit a title.

Properties

Information on a title is displayed, such as name, date and time.


- Confirm [Properties] with **ENTER**.

Set up Protection/Cancel Protection

- Select [Edit] with **▲▼** and confirm with **ENTER**.
- Select the desired option with **▲▼** and confirm with **ENTER**.
- Select [Yes] with **◀** and confirm with **ENTER**.

Editing several elements

Select the desired title with **▲▼◀▶** and press **PAUSE II**.
A check appears. Repeat this process to select other titles.
Press **PAUSE II** again to clear the selection..

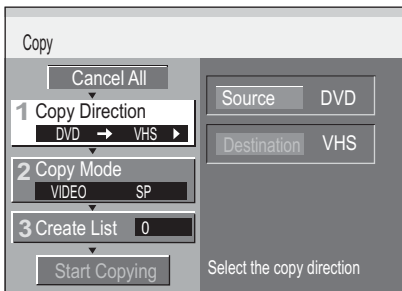

Copying with a copy list

- Press **FUNCTIONS**.
- Select [Copy] with **▲▼** and confirm with **ENTER**.
- Select the desired option with **▲▼**.

Cancel All

All created settings are cancelled!



- Select [Yes] with **◀** and confirm with **ENTER**.



Press **ENTER** to change the setting.



Press **ENTER** to change the setting.

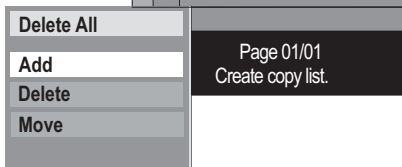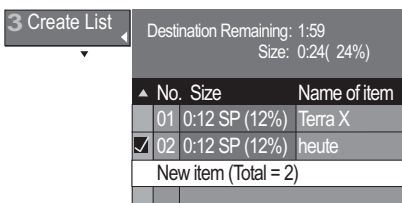

1 Copy Direction

- Select [Source] with **▶** and confirm with **ENTER**.
- Select DVD with **▲▼** and confirm with **ENTER**. The destination drive is detected automatically.
- Return to [Copy Direction] with **◀** and select [Copy Mode] with **▼**.

2 Copy Mode

- Select [Recording Mode] with **▶** and confirm with **ENTER**.
- Select the desired recording mode [SP, LP, EP; NTSC: SP, EP] with **▲▼** and confirm with **ENTER**. The format is detected automatically.
- Return to [Copy Mode] with **◀** and select [Create List] with **▼**.

3 Create List

You can create a copy list from existing titles/playlists.

- Select [New Item] with **▶** and confirm with **ENTER**.
- In the Create List screen, select the desired title with **▲▼◀▶** and confirm with **ENTER**. The title is saved in the copy list.
- Press **SUB MENU** to edit the select element of the copy list.

Deleting all elements

You can delete all elements of the copy list.

- Confirm [Delete All] with **ENTER**.
- In the next screen, select **◀** with [Yes] and confirm with **ENTER**.


Editing individual elements

- Select the desired option with **▲▼** and confirm with **ENTER**.
Add: Select the desired title with **▲▼◀▶** and confirm with **ENTER**.
Delete: Select [Yes] with **◀** and confirm with **ENTER**.
Move: Select a new position with **▲▼** and confirm with **ENTER**.

- Return to [Create List] with **◀** and select [Start Copying] with **▼**.

Start Copying

- Press **ENTER** to start copying.
- Select [Yes] with **◀** and confirm with **ENTER**.
- Press **RETURN** for 3 seconds to stop copying.

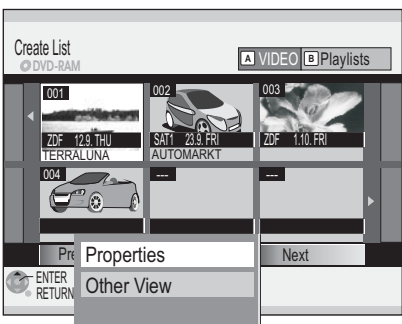

You can display the recording properties in the Create List screen or switch between VIDEO and Playlists.

- Press **SUB MENU**.

Display properties

- Confirm [Properties] with **ENTER**.

Other View






- Select [Other View] with **▲▼** and confirm with **ENTER**.
- Confirm Playlists or VIDEO with **ENTER**.

You can also switch between VIDEO and Playlists with the **A** and **B** buttons.


Editing several elements
 Select the desired title with **▲▼◀▶** and press **PAUSE II**.
 A check appears. Repeat this process to select other titles.
 Press **PAUSE II** again to clear the selection.



Copy

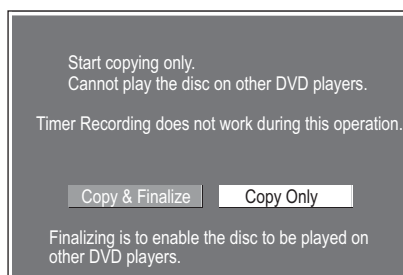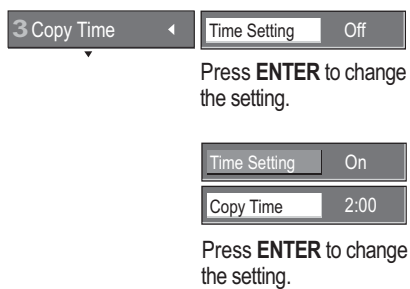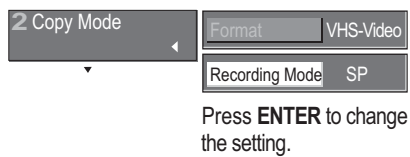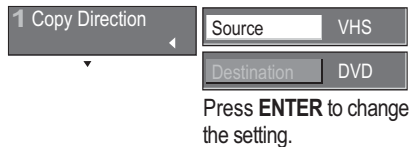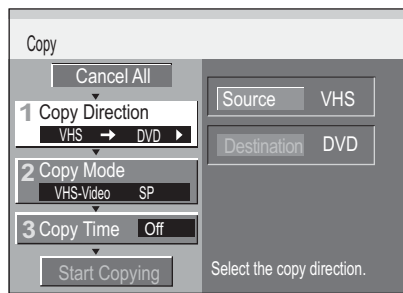

Time-triggered copying

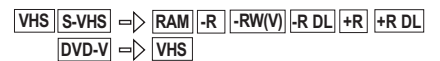 

- Press **FUNCTIONS**.
- Select [Copy] with **▲▼** and confirm with **ENTER**.
- Select the desired option with **▲▼**.

Cancel All

All created settings are cancelled!

- Select [Yes] with **◀** and confirm with **ENTER**.

1 Copy Direction

- Select [Source] with **▶** and confirm with **ENTER**.
- Select VHS or DVD with **▲▼** and confirm with **ENTER**. The destination drive is detected automatically.
- Return to [Copy Direction] with **◀** and select [Copy Mode] with **▼**.

2 Copy Mode

- Select [Recording Mode] with **▶** and confirm with **ENTER**.
- Select the desired recording mode [XP, SP, LP, EP or FR] with **▲▼** and confirm with **ENTER**. The format is detected automatically.
- Return to [Copy Mode] with **◀** and select [Copy Time] with **▼**.

3 Copy Time

- Select [Time Setting] with **▶** and confirm with **ENTER**.
- Select [On] or [Off] with **▲▼** and confirm with **ENTER**.
[On]: Select [Copy Time] with **▼** and confirm with **ENTER**.
Change the time setting with **▲▼◀▶** and confirm with **ENTER**.
[Off]: When the copy time is switched off, the entire disc is copied if there is sufficient space on the destination drive.
- Return to [Copy Time] with **◀** and select [Start Copying] with **▼**.

Recording mode FR and time setting [Off]

Copying starts after the tape rewinds to the beginning. Titles are automatically created for each index signal.

Start Copying

- Press **ENTER** to start copying.
- Select [Yes] with **◀** and confirm with **ENTER**.

Finalising




Before copying starts, you can select whether you want to finalise the disc after copying.

- Confirm [Copy Only] with **ENTER** if the disc just needs to be copied.
- Select [Copy&Finalize] with **◀** and confirm with **ENTER** if the disc needs to be finalised after copying.
Finalisation cannot be cancelled.

- Press **RETURN** for 3 seconds to end copying.

The screen displays are also recorded during copying. In the case of a DVD-Video, the original picture and sound quality may not be fully achieved.

On the front of the unit

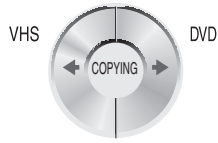

COPYING

You can copy the contents of a cassette to disc or the contents of a disc to cassette at the push of a button.

COPYING of a disc starts with the first title and copies till the end of the disc.

COPYING VHS to DVD starts at the selected position and copies till the end of the cassette.

If you start **COPYING** from DVD to VHS during playback, the current title and all subsequent titles up to the end of the disc are copied.

Copying from VHS to DVD

VHS S-VHS => RAM -R -RW(V) +R -R DL +R DL +RW

Insert a video cassette and a recordable disc.

- Select the VHS drive with **DRIVE SELECT**.
- Find the desired start position on the VHS cassette.
- Select the DVD drive with **DRIVE SELECT**.
- Select the recording mode (XP, SP, LP, EP) for DVD with **REC MODE**.

[RAM] [-RW(V)] Select the desired audio channel for dual channel sound with **AUDIO**.

- Press **COPYING DVD** for the desired copy direction.
START flashes on the unit's display.
- Press **COPYING DVD** for approx. 3 seconds.
START disappears from the display and copying begins.
- To cancel **COPYING**, press **STOP** ■ or **RETURN** for 3 seconds.

Finalising

[-R] [-RW(V)] +R [-R DL] +R DL

Before copying starts, you can select whether you want to automatically finalise the disc after copying.

- Press **PLAY** if the disc only needs to be copied.
- Press **REC** if the disc needs to be finalised after copying.
Finalisation cannot be cancelled.
- Press **STOP** to stop copying.

Copying from DVD to VHS


[RAM] [-R] [-RW(V)] +R [-RW(VR)] -R DL +R DL +RW => VHS


Insert a disc and a recordable video cassette.

- Select the VHS drive with **DRIVE SELECT**.
- Find the desired start position on the VHS cassette.
- Select the recording mode (SP, LP, EP; NTSC: SP, EP) for VHS with **REC MODE**.
- Select the DVD drive with **DRIVE SELECT**.

[RAM] [-RW(V)] Select the desired audio channel for dual channel sound with **AUDIO**.

- Press **COPYING VHS** for the desired copy direction.
START flashes on the unit's display.
- Press **COPYING VHS** for approx. 3 seconds.
START disappears and copying starts.
- To stop **COPYING**, press **STOP** ■ or **RETURN** for 3 seconds.

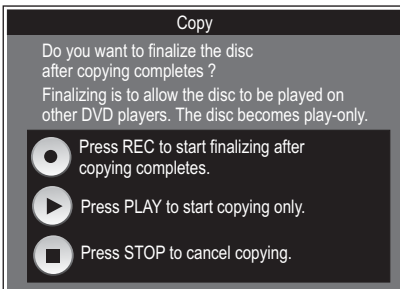

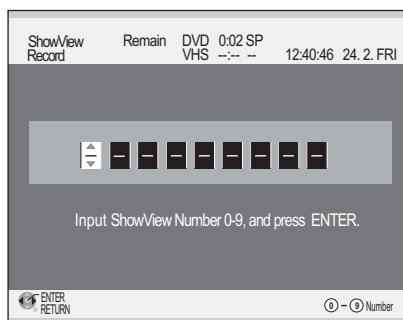


ShowView Record

Entering a ShowView number causes the data for programmes provided by broadcasters to be saved. The appropriate codes can be found in newspapers and TV guides.

You can programme up to 16 programmes per month in advance.

- Press **FUNCTIONS**.
- Select [To Others] with ▲▼ and confirm with **ENTER**.
- Confirm [ShowView Record] with **ENTER**.
- Enter the ShowView number with the number buttons.
Delete a number with ◀.
- Confirm the ShowView number with **ENTER**.

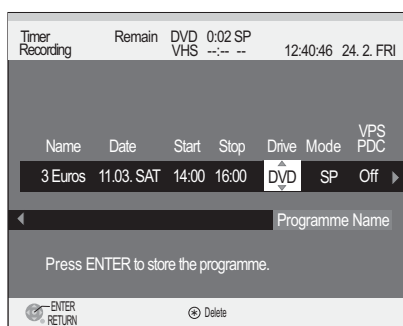

The Timer Recording screen appears with the transferred data. Missing or incorrectly transferred data can be corrected as described on page 34.



- Press **ENTER** to save the programme.

SHOWVIEW™ is a trademark of Gemstar Development Corporation.

The SHOWVIEW system is manufactured under licence from Gemstar Development Corporation.



Use this function to edit your movies/recordings made by a recorder or camcorder. You can remove unwanted scenes (e.g. commercials) or change the sequence. You can also divide your recordings (titles) into chapters. You can create a playlist with your favourite chapters and edit this later.

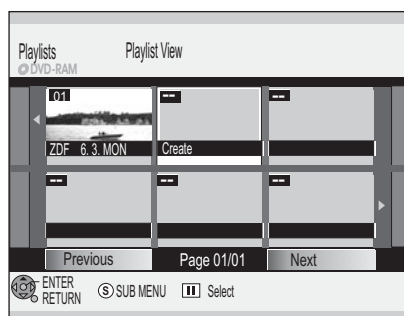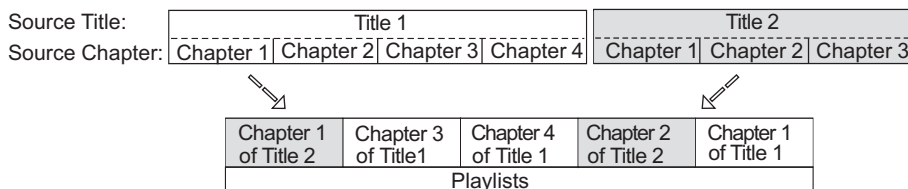

Insert a recorded disc. If you activated write-protection, deactivate it.

RAM


- Press **FUNCTIONS**.
- Select [To Others] with **▲▼** and confirm with **ENTER**.
- Select [Playlists] with **▲▼** and confirm with **ENTER**.

Creating a playlist

RAM

You can create a playlist from both source titles and source chapters.


- Select the free field [Create] with **▲▼◀▶** and confirm with **ENTER**.

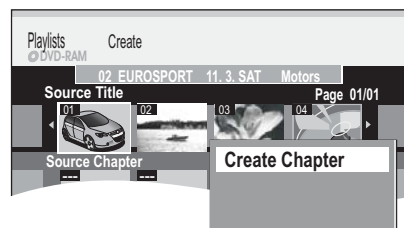

1 Selecting a Source Title

- Select the desired source title with **◀▶** and press **SUB MENU**.
- Confirm [Create Chapter] with **ENTER**.

A complete source title can be inserted directly into Chapters in Playlists with **ENTER**.

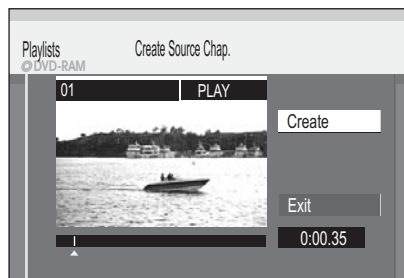

2 Creating a Source Chapter

- Select the chapter section with **ENTER**. The length of the chapter sections is displayed as a time entry.
- Stop playback with **PAUSE II**.
- Locate the position for an exact chapter marker with **◀▶▶▶**.
- Select [Exit] with **▼** and confirm with **ENTER**.


3 Inserting a chapter into the playlist

- Switch from Source Title to Source Chapter with **▼**.
- Select a source chapter that you want to add to the playlist with **◀▶** and confirm with **ENTER**.
- Select the position where the source chapter should be inserted into the Chapters in Playlists with **◀▶** and confirm with **ENTER**. You cannot select a position when inserting the first chapter. Repeat step 3 to add another chapter.
- Return to the Playlist View with **RETURN**.

You can also insert a Source Title as a chapter into the playlist.

- Select a Source Title with **▲▼◀▶** and confirm with **ENTER**.
- Select the position where the Source Title should be inserted in Chapters in Playlists with **◀▶** and confirm with **ENTER**.

Jump to the beginning/end of a title/chapter with **PAUSE II** and **SKIP ◀▶▶▶**. Locate the position for a marker with **SKIP ◀▶▶▶**, **SLOW/SEARCH ◀▶▶▶**, **TIME SLIP**, **MANUAL SKIP** or **◀▶**. You can jump between set markers with **SKIP ◀▶▶▶**.

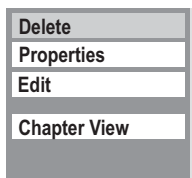

Launching the Playlists menu

- Press **FUNCTIONS**.
- Select [To Others] with **▲▼** and confirm with **ENTER**.
- Select [Playlists] with **▲▼** and confirm with **ENTER**.

Playback


- Select a playlist with **▲▼◀▶** and start playback with **ENTER**.

RAM -RW(VR)

Edit

- Select a playlist with **▲▼◀▶**.
- Press **SUB MENU**.

RAM

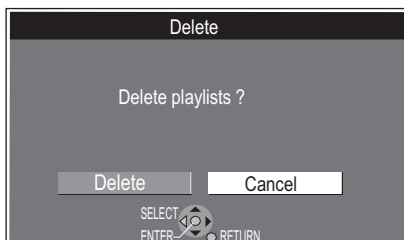

Delete

This procedure deletes the playlist and it cannot be restored. The source titles are retained.

- Confirm [Delete] with **ENTER**.
- Select [Delete] with **◀** and confirm with **ENTER**.




Properties

Information on the playlist, such as chapter, date and time, is displayed.

- Select [Properties] with **▲▼** and confirm with **ENTER**.

RAM -RW(VR)

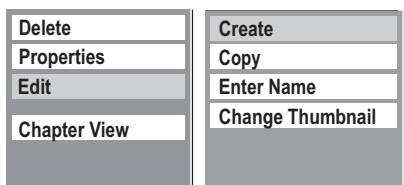

Editing playlists in the SUB MENU.

- Select [Edit] with **▲▼** and confirm with **ENTER**.
- Select the desired option in the sub menu.

RAM

Create

Please read Creating a playlist.

Copy

- Select [Copy] with **◀** and confirm with **ENTER**.

Enter Name


Change or enter the title of the programme. If you enter a long name, it is only partially displayed.

27

Change Thumbnail

You can select any position in a title as the thumbnail for the Playlist View.


- Press **PLAY ▶** to start playback.
- At the position to be displayed as the new thumbnail, confirm [Change] with **ENTER**. The selected thumbnail is displayed.
- Confirm [Exit] with **ENTER**. The selected thumbnail is added to the Playlist View.

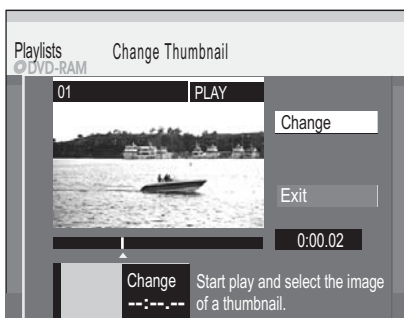

Jump to the beginning/end of a title/chapter with **PAUSE ||** and **SKIP ◀◀▶▶**. Locate the position for a marker with **SKIP ◀◀▶▶**, **SLOW/SEARCH ◀▶▶**, **TIME SLIP**, **MANUAL SKIP** or **◀▶**. You can jump between set markers with **SKIP ◀◀▶▶**.

Editing several elements
 Select the desired title with **▲▼◀▶** and press **PAUSE ||**. A check appears. Repeat this process to select other titles. Press **PAUSE ||** again to clear the selection.


FUNCTIONS => To Others => Playlists

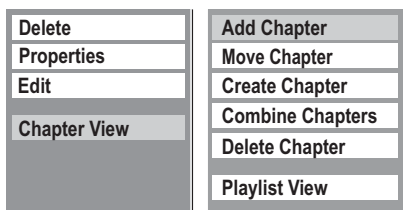


Editing chapters in the SUB MENU

RAM

- Press **FUNCTIONS**.
- Use [To Others] with **▲▼** and confirm with **ENTER**.
- Select [Playlists] with **▲▼** and confirm with **ENTER**.
- Select a playlist in the Playlist View with **▲▼◀▶**.
- Press **SUB MENU**.
- Select [Chapter View] with **▲▼** and confirm with **ENTER**.

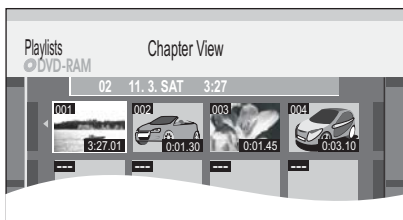

- Select the desired chapter with **▲▼◀▶** and press **SUB MENU** again.
- Select the desired option in the sub menu with **▲▼** confirm with **ENTER**.

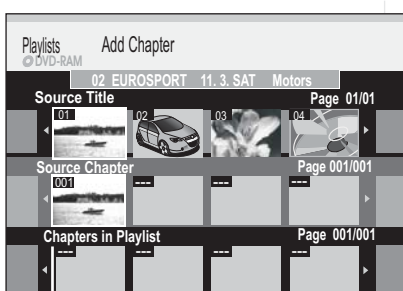


Add Chapter

You can create a new chapter from the Source Title.

- Select a Source Title with **▲▼◀▶** and press **▼**.
- Select a Source Chapter with **◀▶** and confirm with **ENTER**.
Cancel the process with **▲**.
- Select the position where the chapter is to be inserted with **◀▶** and confirm with **ENTER**.
- Repeat the steps to add another chapter.
You can select other source titles with **▲**.
- Exit the menu with **RETURN**.

Move Chapter


- Select the position where the chapter is to be moved to with **▲▼◀▶** and confirm with **ENTER**.

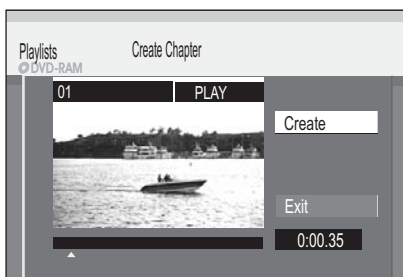

Create Chapter

Divide the title into chapters. Identify the points where a new chapter is to start. The chapters can be selected later during playback with **SKIP ◀▶▶▶**.

- Press **ENTER** at the position where you want to create the chapter. Repeat this step to create a chapter at another location.
- Select [Exit] with **▼** and confirm with **ENTER**.
A short section of the recording right before the separation point may be lost.

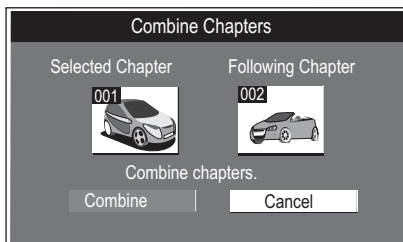

Combine Chapters

- Select [Combine] with **◀** and confirm with **ENTER**.
The selected chapter is combined with the next chapter.


Delete Chapter

- Select [Delete] with **◀** and confirm with **ENTER**.
The original title is not deleted when the chapter is deleted.

Playlist View: Return to Playlist View.

Jump to the beginning/end of a title/chapter with **PAUSE ||** and **SKIP ◀▶▶▶**.
Locate the position for a marker with **SKIP ◀▶▶▶**, **SLOW/SEARCH ◀▶▶▶**, **TIME SLIP**, **MANUAL SKIP** or **◀▶**.
You can jump between set markers with **SKIP ◀▶▶▶**.

Editing several elements
Select the desired title with **▲▼◀▶** and press **PAUSE ||**.
A check appears. Repeat this process to select other titles.
Press **PAUSE ||** again to clear the selection.

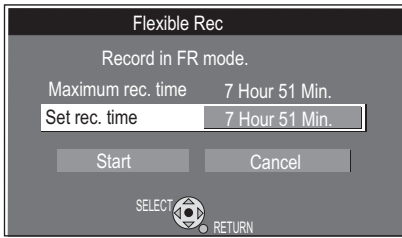

When a timer recording starts, recording in FR mode is cancelled.


Flexible recording mode (FR)

The unit calculates the best possible recording quality between XP and EP. It is adjusted for the space available on the disc. This function is not available during an EXT LINK recording.

- Select the station with **CH** ◊ or the number buttons.
- Press **FUNCTIONS**.
- Select [To Others] with ▲▼ and confirm with **ENTER**.
- Select [Flexible Rec] with ▲▼ and confirm with **ENTER**.
- Select [Hour] or [Min.] with ◀▶ and change the recording time with ▲▼.
- Go back to [Set rec. time] with ◀▶.
- Select [Start] with ▲▼, ◀ and confirm with **ENTER**. Recording begins.
- Press **STOP** ■ to cancel the recording before it has ended.
- The channel and recording mode cannot be changed in **PAUSE** mode.



Displaying the available recording time

- Press **STATUS** multiple times.

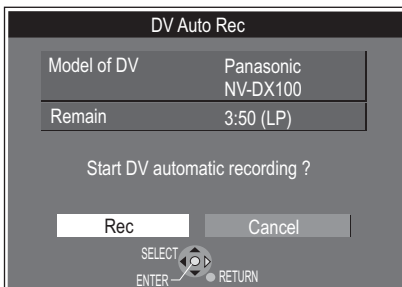

With a DVD-RAM, the DV Auto Rec. screen appears after connecting the unit.

- Select [Rec to DVD] with ◀▶ and confirm with **ENTER**.
- Confirm [Recording] with **ENTER**. Recording begins.

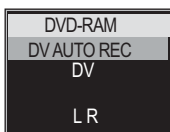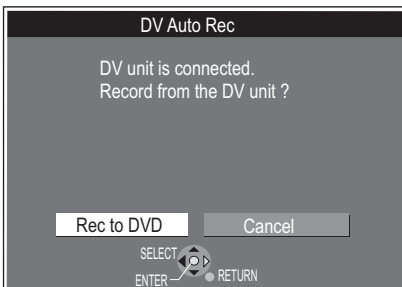

Recording via DV input

RAM -R -RW(V) +R +RW

It is not possible to copy from DV IN to VHS cassette. The programmes (e.g. via a digital video unit) are recorded as one title.

RAM Each time the picture is interrupted, a chapter is created and a playlist is automatically created.

Switch off this unit and the DV unit (e.g. digital camcorder) before you connect it to the DV socket.

If the VHS drive is selected, change to the DVD drive with **DRIVE SELECT**.

- In the Setup menu under Audio Mode for DV Input, select [Stereo 1/2] or [Mix].
- Set the DV unit to Pause at the desired start position.
- Press **REC MODE** to select the recording mode SP, LP, EP, XP.
- Press **FUNCTIONS**.
- Select [To Others] with ▲▼ and confirm with **ENTER**.
- Select [DV Auto Rec] with ▲▼ and confirm with **ENTER**.
- Confirm [Rec] with **ENTER**. Recording begins.
- Confirm the message at the end of the recording with **ENTER**.
- To prematurely stop the recording, press **STOP** ■. Confirm the message to prematurely stop the recording with **ENTER** or **RETURN**.

49


Manual recording via DV input

RAM -R -RW(V) +R -R DL +R DL +RW

- Start playback on your external DV unit.
- Press Pause at the desired start position.
- Select the DV channel with **INPUT SELECT**.
- Select the recording mode with **REC MODE**.
- Press ● **REC** on the DVD Recorder.
- Start playback on the external DV unit.
- End the recording on the DVD Recorder with **STOP** ■.
- End playback on the DV unit.


Recording cannot be cancelled with **PAUSE** II .

This unit cannot be controlled from a connected DV unit. The DV input of this unit is only designed for DV units. (A computer etc. cannot be displayed.) The name of the DV unit may not be displayed correctly. Some DV units do not enable proper input of the picture and sound signal. The date and time information on the tape in the DV unit is not recorded. Simultaneous recording and playback is not possible.

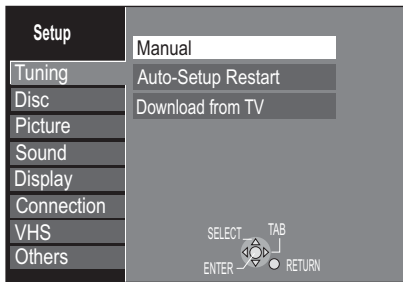


Setup menu overview

- Press **FUNCTIONS**.
- Select [To Others] with ▲▼ and confirm with **ENTER**.
- Select [Setup] with ▲▼ and confirm with **ENTER**.
- Select the desired sub menu with ▲▼ and switch to setup with ►.
- Select the desired setting with ▲▼ and confirm with **ENTER**.
- Select the desired option with ▲▼ and confirm with **ENTER**. Follow the menu guide. The unit saves your settings.
- Press **RETURN** multiple times to exit the menus.

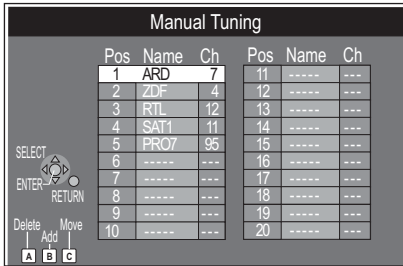


Entering a new television station

- Select a free station location with ▲▼◀▶ and confirm with **ENTER**.
- Enter the channel with ▲▼ or [0] – [9].
- The channel tuning starts. Wait a moment until the desired station is set and confirm the setting with **ENTER**. Interference to the picture may be minimised with Fine Tuning.

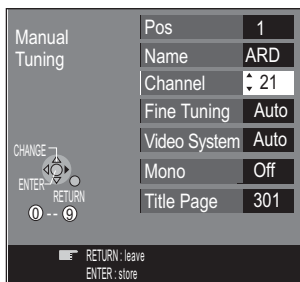

Options available for tuning the channels			
Pos	◀▶	▲ [1-99] ▼	ENTER Station position in the station table.
Name	▶	▲ [A-Z, 0-9, -, +, *] ▼	ENTER Set the station name.
Channel	◀▶	▲ [1-99] ▼	ENTER Set the channel.
Fine Tuning	◀▶	▲ [Auto] [Man.] ▼ [Man.]	ENTER Fine tune picture interference.
Video System	◀▶	▲ [Auto] [PAL] [SECAM]	ENTER Set the television system.
Mono	◀▶	▲ [On] [Off] ▼	ENTER Switch from stereo to mono
Title Page	◀▶	▲ [100-899] ▼	ENTER Select the video text page which supplies the station information.

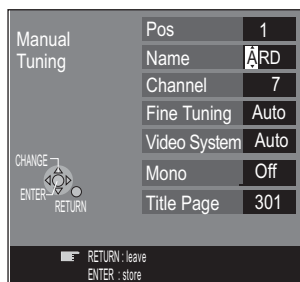

Changing the name of the television station

- Select the name of the television station with ▲▼◀▶ and confirm with **ENTER**.
- Select [Name] with ▲▼ and the name field with ►. The cursor jumps to the first letter **A**RD.
- Change the letter with ▲▼.
- Select the next letter with ►, **ARD**.
- Press **ENTER**. The new name is saved in the station table.

Deleting television stations

- Select the station that you want to delete with ▲▼◀▶.
- Press the **A** button to delete the station. The station position settings are deleted.


Inserting a new station position

- If the station table was not created with Q Link or a similar feature.
- Select the station position before which the new station position is to be inserted with ▲▼◀▶.
 - Press the **B** button. A new station position is inserted.

Moving television stations



- If the station table was not created with Q Link or a similar feature.
- Select the station that you want to move with ▲▼◀▶.
 - Press the **C** button.
 - Select a new position with ▲▼ and confirm with **ENTER**.

FUNCTIONS => To Others => Setup

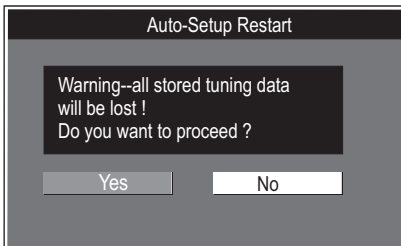


Auto-Setup Restart

 - Select [Yes] with ◀ and confirm with **ENTER**. The station search begins.
- To cancel the process, select [No] with ▶ and confirm with **ENTER** or press **RETURN**.
- Press **RETURN** to prematurely end the station search.

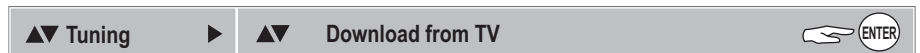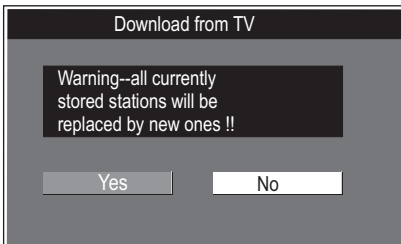

Download from TV (with Q Link or similar functions)

- Select [Yes] with ◀ and confirm with **ENTER**. Data transfer begins.
- To cancel the procedure, use to select [No] and confirm with **ENTER** or press **RETURN**.
- To prematurely end the data transfer, press **RETURN**.

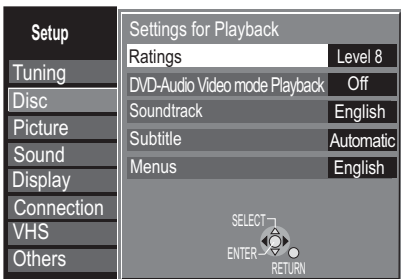

Ratings [8] [1-7] [0]

You can restrict the playback of DVD-Video after entering a password.

8 Allows all titles.
1-7 Prevents the playback of DVD-Video with the registered security levels.
0 Blocks all titles.

Changing the security level

- Unlock Recorder** Return to level 8
- Change Password** Change the password
- Change Level** Change the authorisation level
- Temporary Unlock** You can temporarily authorise a disc for playback.


The security level is retained if you switch to standby or open the disc tray.

DVD-Audio Video mode Playback [On] [Off]

On: You want to play DVD-Video content from a DVD-Audio. If you change the disc or switch off the unit, the setting is reset to [Off].

Soundtrack Subtitle Menus [DVD-V]

Select the language for audio, subtitles and disc menus.
Under [Other], enter the language code for another language.

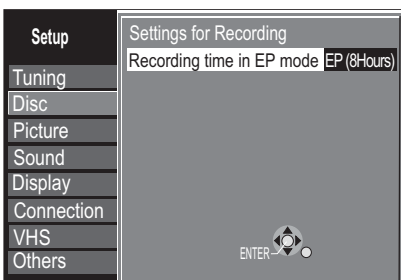

Recording time in EP mode [EP (6Hours)] [EP (8Hours)]

Select the maximum number of hours for recording in EP mode.

EP (6 Hours): Recording time on a 4.7 GB disc.
EP (8 Hours): Recording time on a 4.7 GB disc. The sound quality is lower.

List of language codes													
Abkhazian	6566	Burmese	7789	Frisian	7089	Javanese	7487	Marathi	7782	Scots Gaelic	7168	Thai	8472
Afar	6565	Byelorussian	6669	Galician	7176	Kannada	7578	Moldavian	7779	Serbian	8382	Tibetan	6679
Afrikaans	6570	Cambodian	7577	Georgian	7565	Kashmiri	7583	Mongolian	7778	Serbo-Croat.	8372	Tigrinya	8473
Albanian	8381	Catalan	6765	German	6869	Kazakh	7575	Nauru	7865	Shona	8378	Tonga	8479
Ameharic	6577	Chinese	9072	Greek	6976	Kirghiz	7589	Nepali	7869	Sindhi	8368	Turkish	8482
Arabic	6582	Corsican	6779	Greenlandic	7576	Korean	7579	Norwegian	7879	Singhalese	8373	Turkmen	8475
Armenian	7289	Croatian	7282	Guarani	7178	Kurdish	7585	Oriya	7982	Slovak	8375	Twi	8487
Assamese	6583	Czech	6783	Gujarati	7185	Laotian	7679	Pashto	8083	Slovenian	8376	Ukrainian	8575
Aymara	6589	Danish	6865	Hausa	7265	Latin	7665	Persian	7065	Somali	8379	Urdu	8582
Azerbaijani	6590	Dutch	7876	Hebrew	7387	Latvian	7686	Polish	8076	Spanish	6983	Uzbek	8590
Bashkir	6665	English	6978	Hindi	7273	Lingala	7678	Portuguese	8084	Sundanese	8385	Vietnamese	8673
Basque	6985	Esperanto	6979	Hungarian	7285	Lithuanian	7684	Punjabi	8065	Swahili	8387	Volapük	8679
Bengali	6678	Estonia	6984	Icelandic	7383	Macedonian	7775	Quechua	8185	Swedish	8386	Welsh	6789
Bhutani	6890	Faroese	7079	Indonesian	7378	Malagasy	7771	Rhaeto-Rom.	8277	Tagalog	8476	Wolof	8779
Bihari	6672	Fiji	7074	Irish	7365	Malay	7783	Romanian	8279	Tajik	8471	Xhosa	8872
Breton	6682	Finnish	7073	Interlingua	7165	Malayalam	7776	Russian	8285	Tamil	8465	Yiddish	7473
Bulgarian	6671	French	7082	Italian	7384	Maltese	7784	Samoan	8377	Tatar	8484	Yoruba	8979
				Japanese	7465	Maori	7773	Sanskrit	8365	Telugo	8469	Zulu	9085

FUNCTIONS => To Others => Setup

Setup	Comb Filter	On
Tuning	Still Mode	Automatic
Disc		
Picture		
Sound		
Display		
Connection		
VHS		
Others		

TAB SELECT
RETURN

▲▼ Picture	▶	▲▼ Setting	ENTER	▲▼ Option	ENTER
------------	---	------------	-------	-----------	-------

Comb Filter | [On] [Off]

On: The picture is clear and contour-rich. The setting is always set to [On] if you selected [TV System - NTSC].
Off: If the picture to be recorded is distorted.

Still Mode | [Automatic] [Field] [Frame]

Select how the still picture should be displayed.
Field: Select this function if the picture is distorted with the setting [Automatic].
Frame: Select this function if small text or line structures are not displayed clearly with the setting [Automatic].

A full picture is made up of 2 half pictures. The picture can appear blurry, but the overall quality is very good.
 A half picture only contains half the information of a full picture and the picture quality is poorer.

FUNCTIONS



FUNCTIONS => To Others => Setup

Setup	Dynamic Range Compression	Off
Tuning	Bilingual Audio Selection	M 1
Disc	Digital Audio Output	
Picture	Audio Mode for DV Input	Stereo 1
Sound		
Display		
Connection		
VHS		
Others		

Setup	Digital Audio Output	
Tuning	PCM Down Conversion	Off
Disc	Dolby Digital	Bitstream
Picture	DTS	Bitstream
Sound	MPEG	PCM
Display		
Connection		
VHS		
Others		

Dolby Digital	
Bitstream	
PCM	

▲▼ Sound	▶	▲▼ Setting	ENTER	▲▼ Option	ENTER
Dynamic Range Compression			DVD-V	[On] [Off] (Dolby Digital Only)	
<p>On: The level of quieter passages increases and the level of louder passages decreases. The audio can be clearly understood even when the volume is lowered.</p>					
Bilingual Audio Selection			-R -R DL -RW(V) +R +R DL +RW	[M 1] [M 2]	
<p>If you want to record programmes that are broadcast in dual-channel sound, you can select between the original language [M1] or another available language [M2]. If you are copying from an external source or from a tape position, select the sound track on the other unit.</p>					
Digital Audio Output				[PCM Down Conversion] [Dolby Digital] [DTS] [MPEG]	
<p>Select the appropriate setting if you have connected an external unit to the DIGITAL AUDIO OUT of the DVD Recorder.</p>					
PCM Down Conversion				[On] [Off]	
<p>Select the audio output mode for a scan frequency of 96 kHz or 88.2 kHz. Despite this setting, signals are converted to 48 kHz or 44.1 kHz if they have a scan frequency over 96 kHz or 88.2 kHz or if the disc is copy-protected.</p> <p>On: The connected unit cannot process signals with a scan frequency of 96 kHz or 88.2 kHz. Signals are converted with 48 kHz or 44.1 kHz.</p> <p>Off: The connected unit can process signals with a scan frequency of 96 kHz or 88.2 kHz. Signals are output as 96 kHz or 88.2 kHz.</p>					
Dolby Digital, DTS, MPEG				[Bitstream] [PCM]	
<p>Bitstream: The connected unit can decode the corresponding signal.</p> <p>PCM: If the connected unit cannot decode the corresponding signal, the setting must be changed to [PCM]. Otherwise, the loud noise can lead to damage to your hearing or loudspeakers. Make the necessary changes depending on your audio system.</p>					
Audio Mode for DV Input			-R -R DL -RW(V) +R +R DL +RW	[Stereo 1] [Stereo 2] [Mix]	
<p>Select the audio type when copying from the DV input.</p> <p>Stereo 1: Original sound; Stereo 2: Voice-over, Mix: Original sound + voice-over</p>					

Setup	Language	English
Tuning	On-Screen Messages	Automatic
Disc	Grey Background	On
Picture	FL Display	Bright
Sound		
Display		
Connection		
VHS		
Others		

▲▼ Display	▶	▲▼ Setting	ENTER	▲▼ Option	ENTER
Language				[English]	
<p>Select the menu language.</p>					
On-Screen Messages				[Automatic] [Off]	
<p>Automatic: The on-screen displays are displayed on the screen.</p>					
Grey Background				[On] [Off]	
<p>On: The grey background is displayed when there is no television reception.</p>					
FL Display				[Bright] [Dim] [Automatic]	
<p>Dim: Changes the brightness of the display on the unit.</p> <p>Automatic: The display goes dark during playback. It lights up again when a button is pushed. If the unit is switched off, the display turns off.</p>					

FUNCTIONS => To Others => Setup

Setup	TV Aspect	4:3
Tuning	Progressive	Off
Disc	TV System	PAL
Picture	AV1 Output	Video
Sound	AV2 Settings	
Display		
Connection		
VHS		
Others		

▲▼ Connection ▶	▲▼ Setting	ENTER	▲▼ Option	ENTER
TV Aspect		[16:9] [4:3] [Letterbox]		
<p>Select the TV screen format of your television. Programmes in 16:9 format are recorded in 4:3 format. 16:9 format is used to record to RAM. Letterbox: Black bars appear on the upper and lower edges of the screen.</p>				
Progressive		[On] [Off]		
<p>On: The signal is displayed in full-picture quality using COMPONENT VIDEO OUT.</p>				
TV System		[PAL] [NTSC]		
<p>PAL: You connect the unit to a PAL- or multi-system television. Programmes that were recorded with NTSC are played as PAL60. NTSC: You connect the unit to an NTSC television. Programmes that were recorded with NTSC are played as NTSC.</p>				
AV1 Output		[Video (with component)] [RGB 1 (without component)] [RGB 2 (without component)]		
<p>Video (with component): Factory-default settings RGB 1 (without component): RGB output is available all the time while this unit is on. RGB 2 (without component): RGB output is available only during on-screen display. If RGB 1 or 2 is set, there is no signal available on COMPONENT VIDEO OUT.</p>				

AV-Link function

Switching between television reception and the signal from the DVD Recorder. This function is only possible if the AV1 Output is set to [Video (with component)] or [RGB 2 (without component)].
 DVD recorder signal: Press **ENTER + 0**.
 DVD appears on the display.
 Television reception: Press the buttons again.
 TV appears on the display.

Setup	AV2 Settings	
Tuning	AV2 Input	Video
Disc	AV2 Connection	Ext
Picture	Ext Link	Ext Link 2
Sound		
Display		
Connection		
VHS		
Others		

AV2 Input	
Video	S Video

AV2 Settings	AV2 Input	Perform the settings in the following submenus for the connected unit.
	AV2 Connection	
	Ext Link	
AV2 Input		[Video] [S Video]
<p>Video, S Video: The input is switched to the selected signal.</p>		
AV2 Connection		[Decoder] [Ext]
<p>Decoder: When a decoder is connected. Ext: When a satellite receiver is connected etc.</p>		
Ext Link		[Ext Link 1] [Ext Link 2]
<p>Ext Link 1: For digital receivers that send a special recording control signal, for example, the F.U.N. receiver (TU-DSF41) Ext Link 2: External recording control for satellite or digital receivers (video signal).</p>		

FUNCTIONS


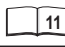



FUNCTIONS => To Others => Setup


Setup	Tape Length	Auto (E-240)
Tuning	Playback Colour System	Automatic
Disc	SQPB	Automatic
Picture		
Sound		
Display		
Connection		
VHS		
Others		

▲▼ VHS ▶	▲▼ Setting	ENTER	Option	ENTER
Tape Length		[Auto (E-240)] [E-195] [E-260] [E-300]		
Setting for the tape length of the cassette in use.				
Playback Colour System		[Automatic] [PAL] [MESECAM]		
Automatic: Differentiates between PAL and MESECAM. PAL: If the PAL system is used. MESECAM: If the MESECAM system is used.				
SQPB		[Automatic] [On] [Off]		
Automatic: The unit detects the recording type. On: Playback of an S-VHS cassette in quasi S-VHS format. Off: Playback of recordings in VHS format.				

Setup	Remote Control	DVD 1
Tuning	Clock	
Disc	Power Save	Off
Picture	Quick Start	On
Sound	DivX Registration	
Display	Initialize	
Connection		
VHS		
Others		

▲▼ Others ▶	▲▼ Setting	ENTER	▲▼ Option	ENTER
Remote Control		[DVD 1] [DVD 2] [DVD 3]		
Change the code of the remote control so that you can simultaneously operate another Panasonic DVD unit. 				
Clock				
Set the date and time. 				
Power Save		[On] [Off]		
On: Power-save feature in Standby mode. The brightness of the display field in power-save mode cannot be changed. The Quick Start setting is set to [Off]. If you want to connect an external unit via the AV2 Scart socket, the DVD Recorder must be switched back on from Standby mode. Off: The brightness of the display field can be changed.				
Quick Start		[On] [Off]		
On: The unit switches on from Standby mode in approx. 1 second. In Standby mode, more power is used and Power Save is set to [Off].				
DivX Registration				
In order play purchased or borrowed DivX files on this unit, you need the individual registration code for the unit. The code is displayed here. Please write it down.				
Initialize		[Shipping Condition] [Default Settings]		
Shipping Condition: All settings, except for the security levels with the associated password and the time settings are reset to the factory-default settings. Default Settings: All settings, except for the programmed channels, time, country, language and disc-language settings, the security levels including password and the remote control code are reset to the factory-default settings.				

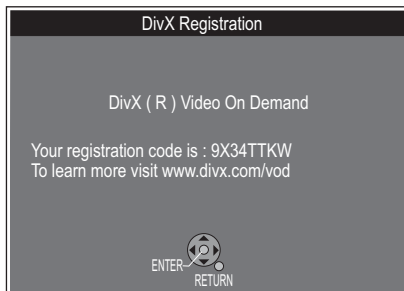

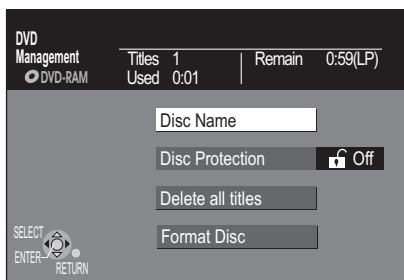

If you activated write-protection, deactivate it.

RAM

- Press **FUNCTIONS**.
- Select [To Others] with **▲▼** and confirm with **ENTER**.
- Select [DVD Management] with **▲▼** and confirm with **ENTER**.
- Select the desired menu with **▲▼** and confirm with **ENTER**.
- Return to the FUNCTIONS menu with **FUNCTIONS**.

Disc Name

27


- Enter the name. The name is displayed in the DVD Management.
- You cannot name a disc after it has been finalised.

Disc Protection

RAM

This procedure makes it possible to activate or deactivate write-protection.


- Select [Yes] with **◀** and confirm with **ENTER**.
Disc Protection On: The padlock is closed.
- To deactivate write-protection, select [Yes] with **◀** and confirm with **ENTER**.
Disc Protection Off: The padlock is opened.

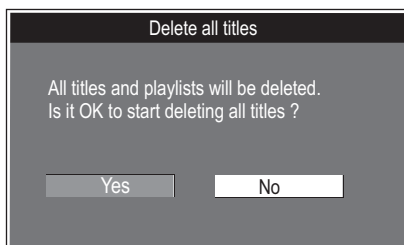

Delete all Titles

RAM

- Confirm [Delete all Titles] with **ENTER**.
- In the next screen, select [Yes] with **◀** and confirm with **ENTER**.
- In the security question, select [Start] with **◀** and confirm with **ENTER**.
All titles and playlists are deleted and cannot be restored. Protected discs or titles cannot be deleted.

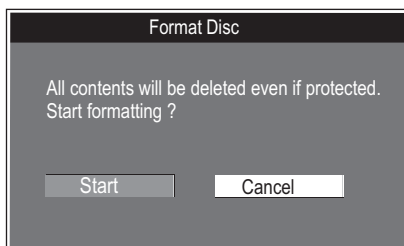

Format Disc


RAM -RW(V) +RW -RW(VR) +R +R DL Only for new discs

Some discs are not formatted. They must be formatted before they can be used in this unit. The formatting process deletes all data from the disc. The estimated duration of the formatting process is displayed in the menu.

- Select [Yes] with **◀** and confirm with **ENTER**.
- Select [Start] with **◀** and confirm with **ENTER**. The formatting process begins.
A message appears upon completion.
- Press **ENTER**.
- Press **RETURN** to stop the formatting process.

Do not unplug the unit while the disc is being formatted or finalised.

Formatting can be cancelled and restarted. The formatting process deletes all data, including the recordings created with this unit.

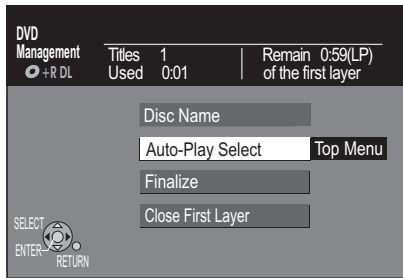


Auto-Play Select

-R -RW(V) +R -R DL +R DL +RW

Before finalisation, you can select whether playback should start from the beginning of the disc or whether it should be launched from a disc menu.

- Select [Top Menu] or [Title 1] with **▲▼** and confirm with **ENTER**.
If [Top Menu] is selected, the disc menu appears first.
If [Title 1] is selected, playback begins at the beginning of the disc.

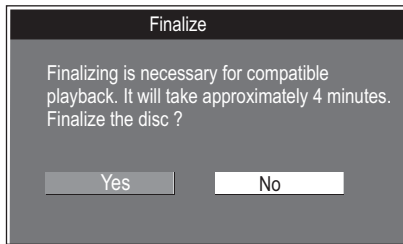


Finalize

-R -RW(V) +R -R DL +R DL

The discs become DVD-Videos in DVD-Video format through finalisation. They can be played on all DVD Players that record DVD-Video format.

- Select [Yes] with **◀** and confirm with **ENTER**.
- Select [Start] with **◀** and press **ENTER**. The finalisation process begins. A message is displayed upon completion.
- Press **ENTER**.

You can only finalise DVDs that were recorded on this unit. You can no longer record to DVDs that have already been finalised. A finalised DVD-RW can be recorded again after it is reformatted.

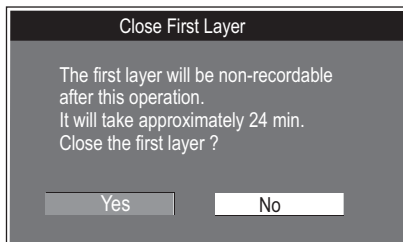


Close First Layer

-R DL +R DL

The second Layer can only be recorded after the first Layer has been written and finalised.

- To close the first Layer, select [Yes] with **◀** and confirm with **ENTER**.
- Select [Start] **◀** and confirm with **ENTER**.

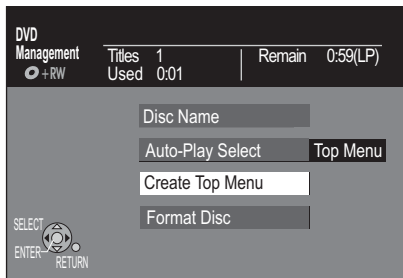

Create Top Menu

+RW

With a DVD+RW, you have the option of creating a Top Menu. The Top Menu created can be used for playback on another DVD-Player.


- Select [Create Top Menu] with **▲▼** and confirm with **ENTER**.
- In the following menu, select [Yes] with **◀** and confirm with **ENTER**.
- Select [Start] with **◀** and confirm with **ENTER**. The Top Menu is created. The procedure concludes with the message: Top Menu was created. Return to DVD Management with **ENTER**.

Picture and sound settings



DISPLAY menus contain information on the disc or the unit. With DVD-Videos, you can use the repeat function, change subtitles and the angle, change the picture and sound settings for DVD playback. Depending on the status of the unit (playback, STOP), there are some entries that cannot be selected or changed.

- Press **DISPLAY** to launch the menu.
- Press **DISPLAY** again to exist the menu.

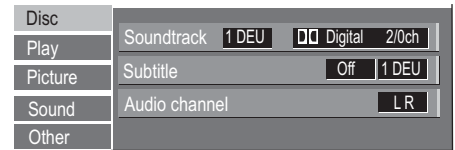

Subtitles, sound track and recording angle can only be selected if they were recorded on the disc. For some discs, they can only be changed via the disc menus. When bilingual recordings are played back, "1+1 ch" is displayed.

▲▼ Disc ▶	▲▼ Option ▶	▲▼ Setting
	Soundtrack	<p>Soundtrack lang. <input type="button" value="DVD-A"/> <input type="button" value="DVD-V"/> Select the sound and the language.</p> <p>Sound properties <input type="button" value="RAM"/> <input type="button" value="-R"/> <input type="button" value="-R DL"/> <input type="button" value="-RW(V)"/> <input type="button" value="+R"/> <input type="button" value="+R DL"/> <input type="button" value="+RW"/> <input type="button" value="-RW(VR)"/> The disc sound properties are displayed. LPCM/PPCM/Dolby Digital, DTS and MPEG: signal type, ch (channel): number of channels, k (kHz): scan frequency, b (bit): number of bits</p> <p><input type="button" value="VCD"/> <input type="button" value="DivX"/> Select the audio channel.</p>
	Subtitle	<p>[On] [Off] <input type="button" value="DVD-A"/> <input type="button" value="DVD-V"/> Switch subtitles on or off, select the language.</p> <p><input type="button" value="RAM"/> <input type="button" value="-R"/> <input type="button" value="-R DL"/> <input type="button" value="-RW(V)"/> <input type="button" value="+R"/> <input type="button" value="+R DL"/> <input type="button" value="+RW"/> <input type="button" value="-RW(VR)"/> Only for discs with the Subtitle On/Off setting. The Subtitle On/Off setting cannot be recorded with this unit.</p> <p><input type="button" value="VCD"/> Switch subtitles on or off, select the number of the subtitle.</p>
	Language	<p>ENG: English DAN: Danish THA : Thai FRA : French POR: Portuguese POL : Polish DEU : German RUS: Russian CES : Czech ITA : Italian JPN : Japanese SLK : Slovak ESP : Spanish CHI : Chinese HUN: Hungarian NLD : Dutch KOR: Korean FIN : Finnish SVE : Swedish MAL: Malay * : Others NOR: Norwegian VIE : Vietnamese</p> <p>* Others: Enter the appropriate language code. <input type="button" value="47"/></p>
	Audio Channel	<p>L+R / L / R <input type="button" value="RAM"/> <input type="button" value="-RW(VR)"/> <input type="button" value="VCD"/> <input type="button" value="DivX"/> Change audio during playback.</p>
	Source select	<p><input type="button" value="DivX"/> The unit detects whether the DivX content was recorded as full or half picture. [Automatic] The picture may look blurry, but the overall quality is very good. [Progressive] Contains only half the information of a full picture (Interlace) and the picture quality is poorer. [Interlace]</p>
	Angle	<p><input type="button" value="DVD-A"/> <input type="button" value="DVD-V"/> Select another recording angle.</p>
	Still Picture	<p><input type="button" value="DVD-A"/> Select the still image playback type. [Slide Show] Disc playback in the original sequence. [Page] Select the still image number and playback. RANDOM: Playback in random order. Return to the standard page: Select [Return] and press ENTER.</p>
	PBC	<p><input type="button" value="VCD"/> <input type="button" value="DivX"/> PBC shows whether the menu playback control is on/off.</p>

▲▼ Play ▶	▲▼ Option ▶	▲▼ Setting
	Repeat Play	<p>[On] [Off]</p> <p>The function is only available if the elapsed time is displayed.</p> <p> <input type="checkbox"/> CD <input type="checkbox"/> VCD ▶ Track ↔ All ↔ Off ◀ </p> <p> <input type="checkbox"/> RAM <input type="checkbox"/> -R <input type="checkbox"/> -R DL <input type="checkbox"/> -RW(V) <input type="checkbox"/> +R <input type="checkbox"/> +R DL <input type="checkbox"/> +RW <input type="checkbox"/> DVD-V <input type="checkbox"/> -RW(VR) ▶ Title ↔ Chapter ↔ Off ◀ </p> <p> <input type="checkbox"/> DVD-A <input type="checkbox"/> MP3 ▶ Track ↔ Group ↔ Off ◀ </p> <p>During playback of a playlist <input type="checkbox"/> RAM <input type="checkbox"/> -RW(VR)</p> <p>▶ PL (Playlists) ↔ Off ◀</p> <p>If the Video-CD has playback control, select a track in STOP mode with the number buttons.</p>

▲▼ Picture ▶	▲▼ Option ▶	▲▼ Setting
	Playback NR	[On] [Off] Reduces screen interference.
	Progressive	[On] [Off] Select [On] to activate full picture output.
	Transfer.	<p>[Progressive - On] Select the appropriate conversion method for full-picture output.</p> <p>PAL output signal</p> <p>[Auto] Film and video content is detected and converted appropriately.</p> <p>[Video] If problems occur with the [Auto] setting.</p> <p>[Film] Select Video or Film if the video content is is not displayed correct with the Auto setting.</p> <p>NTSC output signal</p> <p>[Auto 1] Film and video content is detected and converted appropriately.</p> <p>[Auto 2] Movies with different picture frequencies are converted</p> <p>[Video] If content does not display correct with the [Auto 1] or [Auto 2] settings.</p>
	Copy NR	<p>[Automatic]</p> <p>[On]</p> <p>[Off]</p> <p>Reduces noise during tape recording. Only for AV1, AV2, AV3 or DV.</p> <p>Only with picture input from a video cassette.</p> <p>Noise reduction is activated for video input.</p> <p>The input signal can be recorded unchanged.</p>

▲▼ Sound ▶	▲▼ Option ▶	▲▼ Setting
	V.S.S.	<p> <input type="checkbox"/> RAM <input type="checkbox"/> -R <input type="checkbox"/> -R DL <input type="checkbox"/> -RW(V) <input type="checkbox"/> +R <input type="checkbox"/> +R DL <input type="checkbox"/> +RW <input type="checkbox"/> DVD-A <input type="checkbox"/> DVD-V <input type="checkbox"/> -RW(VR) </p> <p>[Natural]</p> <p>[Emphasis]</p> <p>[Off]</p> <p>Surround sound effect with 2 front speakers. Only with Dolby Digital with 2 or more channels. Switch off V.S.S. if this causes problems. V.S.S. does not work with recordings in dual-channel sound.</p>
	Dialog Enhancer	<p> <input type="checkbox"/> RAM <input type="checkbox"/> -R <input type="checkbox"/> -R DL <input type="checkbox"/> -RW(V) <input type="checkbox"/> +R <input type="checkbox"/> +R DL <input type="checkbox"/> +RW <input type="checkbox"/> DVD-A <input type="checkbox"/> DVD-V <input type="checkbox"/> -RW(VR) <input type="checkbox"/> DivX </p> <p>[On] [Off]</p> <p>Dolby Digital, only with 3 or more channels, including a center channel. The volume is increased so that dialogue is easier to understand.</p>

▲▼ Other ▶	▲▼ Option ▶	▲▼ Setting
	Position	[1 - 5] Position of the OSD displays on the screen.

If you need help

CUSTOMER SERVICE

Should problems occur, please try to resolve them by referring to the error sources described here. If this does not help, you should contact your dealer or customer service.

Normal disc revolution sounds, atmospheric interference during reception, picture interference while fast-forwarding and limited reception of the satellite programs are not signs of a defective unit.

If the disc cannot be played due to poor quality, try it again with a disc from Panasonic.

Page

ERROR MESSAGES		
	<ul style="list-style-type: none"> › The unit is malfunctioning. 	
<p>The error code H □□, U □□ or F□□ appears.</p>	<ul style="list-style-type: none"> › The numbers following H, U or F indicate the status of the unit. • Switch the unit to Standby mode with \odot/I . If the unit does not switch to Standby mode, press \odot/I for approx. 10 seconds or unplug it for a minute and then plug it back in. • Press \odot/I to switch on the unit. If this does not solve the problem, contact customer service with the displayed error code. 	
<p>Error code U59</p>	<ul style="list-style-type: none"> › The unit is hot and switches to Standby mode for safety reasons. › Wait approx. 30 minutes until the message disappears. Place the unit in a well ventilated location. Do not block the vents at the back of the unit. 	
<p>Error code U88</p>	<ul style="list-style-type: none"> › A problem occurred during recording or playback of a disc. The unit is not defective, but is performing a restore procedure. Wait until the error message disappears from the display. 	
<p>HARD ERR</p>	<ul style="list-style-type: none"> › The unit is not functioning properly. • Switch the unit off and back on again. If this does not solve the problem, contact customer service. 	
<p>The unit automatically switches to Standby mode.</p>	<ul style="list-style-type: none"> › One of the unit's safety devices may have been activated. • Press \odot/I to switch on the unit. 	
<h3>FUNCTION</h3>		
<p>Unit not functioning.</p>	<ul style="list-style-type: none"> › Check the connection to the power supply. › The unit is in Standby mode for a Timer programming via external units. EXT-L appears in the display. • Press EXT LINK to switch off recording standby mode. • To cancel a recording prematurely, stop the transfer of the recording signal on the external unit. • Press EXT LINK to switch off recording standby mode. 	36
<p>The disc cannot be ejected.</p>	<ul style="list-style-type: none"> › The unit is currently recording. • With the unit switched off, press STOP ■ and CH ^ on the unit at the same time and hold for about 5 seconds. Contact your dealer. › The above procedure cannot be executed if child protection is activated. • Switch off child protection. 	6

If you need help

		Page
PICTURE		
No picture.	‣ Check the connection to the TV, e.g. AV1.	10
	‣ The PROGRESSIVE output is activated, but the connected TV is not progressive-capable.	14
There is picture interference.	• Press and hold STOP ■ and PLAY ► on the unit at the same time for more than 5 seconds. The function is switched to half-picture (INTERLACE).	14
	‣ The [TV System] setting does not match that on the disc. • In STOP mode, press and hold STOP ■ and OPEN/CLOSE ▲ on the unit for more than 5 seconds. This switches the unit from PAL to NTSC or vice versa.	50
Television reception worsens when the unit is connected.	‣ Check the antenna connection and the alignment of your antenna. You may need to use a signal amplifier.	
The TV picture format is not set correctly.	‣ Check the [TV Aspect] setting in the Connection Setup menu.	50
The picture flickers.	‣ Adjust the picture. Read the operating instructions for the TV.	
No on-screen messages.	‣ Change the [On-Screen Messages] setting in the Display Setup menu.	49
SOUND		
No sound. Distorted sound. Volume set to quiet.	‣ Check the connections.	13
	‣ If you connected an amplifier, check the input mode. ‣ Switch off the V.S.S. function if it causes problems.	55
It is not possible to hear the desired sound type.	• Press AUDIO to select the desired sound type. • Change the appropriate setting in the Sound Setup menu.	49
	‣ The sound cannot be switched on some discs.	
The sound cannot be set for stereo or NICAM broadcasts.	‣ Connect external devices with audio cables even if you use a digital connection. ‣ You can change the sound type when using DVD-RAM.	13
REMOTE CONTROL		
No functions.	‣ An incorrect remote control code was selected.	6
	‣ Check the batteries.	5
	‣ Point the remote control at the sensor on the unit.	6
	‣ Child protection has been activated.	6
The TV cannot be operated.	‣ An incorrect remote control code was selected.	6
DISPLAY		
The display light is weak.	‣ Change the [FL Display] setting in the Display Setup menu.	49
"0:00" blinks on the unit display.	‣ No time. Set the time in the Others [Clock] Setup menu.	11

If you need help

	Page
PLAYBACK	
Playback does not start.	16
DVD-Video will not play.	47
No reaction when PLAY ► is pressed.	18 6
A title or chapter is not played back after being selected.	47
Soundtrack/subtitles cannot be selected or do not match the language selected in the Setup menu.	47 54 18
The angle cannot be changed.	54
You forgot your security password.	54
RECORDING	
Cannot record.	22 52 52 23
Some or all recorded programmes were lost.	52
Timer Recording is not functioning.	35 51
Timer Recording cannot be cancelled.	36
EXTERNAL INPUT	
Video or audio is not recorded from an external unit.	12 13

Specifications

Power supply:	AC 220V-240V 50 Hz	Dimensions:	approx. 430 mm (W) x 84 mm (H) x 351 mm (D)
Power consumption:	26 W (approx. 2 W in power save mode)	Weight:	approx. 5.4 kg
		Operating temperature:	5°C - 40°C
		Operating humidity:	35% - 80% RH (no condensation)
Recording format	DVD DVD-RAM: DVD Video Recording format DVD-R: DVD-Video format, MP3, JPEG, DivX DVD-R DL: DVD-Video format DVD-RW: DVD-Video format, DVD Video Recording format +R, +RW, +R DL	Recording format	VHS VHS video cassette system standard with FM audio (PAL, MESECAM, NTSC,)
Recording discs	DVD-RAM: Ver.2.0, Ver.2.1 /3X Rev.1.0, Ver.2.2 /5X Rev.2.0	Video and sound heads	4 rotating video heads, 2 rotating Hi-Fi heads 1 fixed head for normal audio
Playback discs	DVD-R: for General Ver.2.0, Ver.2.0 /4X Rev.1.0, Ver.2.x /8X Rev.3.0, Ver.2.x/16X Rev.6.0 DVD-R DL: Ver.3.0, DL Ver.3.x/4X Rev.1.0 DVD-RW: Ver.1.1, Ver.1.x /2X Rev.1.0, Ver.1.x /4X Rev.2.0, Ver.1.x/6X Rev.3.0 DVD+R: Ver.1.0, Ver.1.1, Ver.1.2, Ver.1.3 DVD+R DL: Ver.1.0 DVD+RW: Ver.1.1, Ver.1.2/4X	Recording mode	PAL/MESECAM: SP: 23.39 mm/s 240 min. LP: 11.7 mm/s 480 min. EP: 7.8 mm/s 720 min.
Playback discs	DVD-Video, DVD-Audio, CD-Audio (CD-DA), Video-CD, CD-R/RW (CD-DA, Video CD, SVCD, MP3/JPEG/DivX formatted discs), SVCD that are IEC62107-compliant	Recording time	NTSC: SP: 33.35 mm/s 168 min. EP: 11.12 mm/s 505 min. (for E-240 cassettes)
LASER specification	LASER product of class 1 Wave length: 662 nm for DVD, 780 nm for CD Laser output: No dangerous radiation due to the safety device.	Video Data	Horizontal Resolution SP: more than 240 lines Signal to Noise Ratio SP: more than 43 dB, LP: more than 40 dB, EP: more than 38 dB
Norsk:	Bølgelengde: 662 nm (DVD), 780 nm (CD) Laserstyrke: Ingen farlig stråling sendes ut.	Frequency Response	SP, LP: 0 ±2 dB at 2 MHz (0 dB at 0.1 MHz), EP: 0 ±3 dB at 2 MHz (0 dB at 0.1 MHz)
Optical pick-up:	System with 1 lens, 2 integration units	Audio Data	Dynamic Range HiFi: more than 90 dB (Cinch) Frequency Response HiFi: 20 Hz-20 kHz (0 ±3 dB) Normal: SP: 80 Hz-8 kHz (-1 ±5 dB) LP: 80 Hz-5 kHz (0 ±5 dB) EP: 80 Hz-3 kHz (0 ±5 dB)
Other	Regional code: 2	Signal-to-noise ratio	HiFi: more than 65 dB Normal: SP: more than 43 dB, LP, EP: more than 41 dB
DV input	IEEE 1394 Standard (4-pin)	Cross talk	more than 50 dB at 1 kHz (HiFi)
TV system	PAL: 625/50 / SECAM (input only) NTSC: 525/60	Wow and Flutter	HiFi: Less than 0.005 Wrms Normal: SP: 0.2% max. LP, EP: 0.4% max.
Video interface		TV system	PAL/SECAM: 625/50 NTSC: 525/60
Input	Input impedance: 75 Ohm.		
AV1 SCART	Video: 1 Vp-p		
AV2 SCART	Video: 1 Vp-p, Y: 1 Vp-p C: 0.3 Vp-p (PAL-Burst),		
AV3 VIDEO	Video: 1 Vp-p		
AV3 S VIDEO	Y: 1 Vp-p, C: 0,3 Vp-p (PAL-Burst)		
Output	For 75 Ohm termination.		
AV1 SCART	Video: 1 Vp-p; RGB: 0,7 Vp-p (625/50) only DVD		
AV2 SCART	Video: 1 Vp-p		
VIDEO	Video: 1 Vp-p		
S VIDEO	Y: 1 Vp-p, C: 0,3 Vp-p (PAL-Burst)		
COMPONENT VIDEO OUT	Y: 1 Vp-p, P _B : 0,7 Vp-p, P _R : 0,7 Vp-p (PAL: 625i/625p, NTSC: 525i/525p)		
Audio interface			
Recording System:	Dolby Digital 2ch		
Input	Input impedance: more than 10 kOhm.		
AV1 SCART	Standard: 0.5 Vrms, full scale: 2 Vrms at 1 kHz		
AV2 SCART	Standard: 0.5 Vrms, full scale: 2 Vrms at 1 kHz		
AV3 AUDIO	Standard: 0.5 Vrms, full scale: 2 Vrms at 1 kHz		
Output	The output impedance of each output socket is less than 1 kOhm.		
AV1 SCART	Standard: 0.5 Vrms, full scale: 2 Vrms at 1 kHz		
AV2 SCART	Standard: 0.5 Vrms, full scale: 2 Vrms at 1 kHz		
AUDIO	Standard: 0.5 Vrms, full scale: 2 Vrms ar 1 kHz		
OPTICAL	Optical connection (PCM, Dolby Digital, DTS, MPEG)		
Tuner	An integrated tuner (for both DVD and VCR)		
Tuner system	PAL-BGH, SECAM-BG		
Channel area	VHF: CH E2-E12 A-H2 (Italy), UHF: CH 21-69 CATV: S01-S05 (S1-S3), S1-S20 (M1-U10), S21-S41		
Quick Start for Recording (Quick Start: [On])			
1 sec Quick Start for Recording on DVD-RAM (when connecting to TV using SCART, Component Video, Video or S-Video terminals) From power off mode, recording on DVD-RAM starts about 1 sec after first pressing Standby/On and then sequentially pressing REC .			

Note:The values given for weight and dimension are approximate values. Specifications can change without notice.

Index

	Page		Page		Page
AC IN	9,10,11	DTS	4,13,49	Q Link	10,46,47
Angle	54	Dual-channel sound	25	Quick Start	51
Audio Channel	20,54	DV IN	13,45	Quick View	20
Audio Mode for DV Input	49	DVD Video Recording format (VR)	16	Ratings (Temporary Unlock)	47
Auto Finalise	18	DVD-Audio Video mode Playback	47	Ratings (Change Level)	47
Auto-Play	53	DVD-Video format (V)	16	Ratings (Change Password)	47
Auto-Setup Restart	47	Dynamic Range Compression	49	Ratings (Unlock Recorder)	47
AV1 Output	9,50	Ext Link	36,50	Recording discs	16,23
AV2 Connection	50	Field	48	Recording mode	24
AV2 Input	50	Finalising	16,39,40,53	Recording time	23,24
AV-in NR	55	Fine Tuning	46	Recording time in EP mode	23,47
AV-Link	50	FL Display	49	Regional codes	17
Bilingual Audio Selection	49	Flexible Rec mode	45	Repeat Play	55
Bitstream	49	Folder	32,33	RGB	50
Camcorder	13,45	Formatted	16,23,52	S VIDEO	9,11
Cartridge Discs	17	Frame	48	S Video	50
Changing batteries	5	Grey Background	49	Satellite receiver	12,50
Chapter (DIRECT NAVIGATOR)	30	Interlace	14	Set Top Box	12
Chapter (Playlists)	44	Initialize	51	Shipping Condition	51
Child protection	6	JET REW	21	ShowView	41
Code of remote control	6,51	JET SEARCH	21	Slide Show	54
Comb Filter	48	JPEG	33	Sound properties	54
COMPONENT VIDEO OUT	9,14,50	Language	49	Soundtrack	47,54
Copy Direction	38,39	Language codes	47	Soundtrack language	54
Copy Mode	38,39	LASER	3	Source Chapter	42
Copy Time	39	Layer	16,53	Source select	54
COPYING	4,40	Letterbox	11,50	Source Title	42
Country	11	LPCM	54	SP/LP switching	34
CPRM	23	Menus	47	SQPB	22,51
Create List	38	MESECAM	51	Still Mode	48
Date	11,51	Mono	46	STILL P	54
Decoder	12,50	MP3	4,32	Subtitle	47,54
Default Settings	51	MPEG	4,49,54	Subtitle language	54
Delete (cassette)	22	NTSC	23,25,50	Tape Length	51
Delete (chapter)	30,44	On-Screen Messages	49	TIFF	33
Delete (partial)	29	OPTICAL	9,13	Time	11,51
Delete (Playlists)	43	Optical digital audio cable	13	TIME SLIP	20
Delete (Timer)	35	PAL	23,50,51	Title Page	46
Delete (title)	28,37,52	PBC	54	Top Menu	53
Delete (TV stations)	46	PCM Down Conversion	49	Tracking	22
Dialog Enhancer	55	Playback Colour System	51	TRACKING/V-LOCK	22
Digital Audio Output	49	Playback discs	17	Tranfer.	55
Disc Name	27,52	Playback NR	55	TV Aspect	11,50
Disc Protection (Cartridge)	17	Position	55	TV Codes	6
Disc Protection (Disc)	52	Power Save	11,51	TV System	50
Disc Protection (Recording)	29,37	Programme Name	27	V.S.S.	55
Disc Protection (VHS)	22	Progressive	14,50,55	VHS Index Search System (VISS)	21
DivX	4,31			Video	50
DivX Registration	51			Video System	46
DivX Video On Demand	31,51			VPS/PDC	34
Dolby Digital	4,13,49,55				
Double-Layer-DVD/Dual Layer DVD	16				
Download from TV	11,47				