 
 
 


Panasonic

Additional Digital Cordless Handset

Installation Manual

 
 
 
 
Model No. **KX-TGA711E**

 
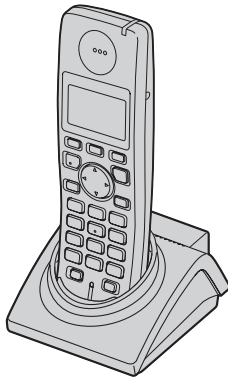 


This unit is an additional handset for use with the Panasonic KX-TG7100/KX-TG7120 Digital Cordless Phone. You must register this unit with your KX-TG7100/KX-TG7120 base unit before it can be used. Please refer to the KX-TG7100/KX-TG7120 operating instructions for further details.

Charge the batteries for about 7 hours before initial use.

Please read this installation manual before using the unit and save it for future reference.





Preparation

Thank you for purchasing a new Panasonic digital cordless phone.

 
 
Sales and support information

Customer Care Centre

- For customers within the UK: 08700 100 076
- For customers within the Republic of Ireland: 01289 8333
- Visit our website for product information: www.panasonic.co.uk
- E-mail: customer.care@panasonic.co.uk

Direct Sales at Panasonic UK

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Care Centre Monday - Thursday 9:00am - 5:30pm, Friday 9:30am - 5:30pm (Excluding public holidays).
- Or go on line through our Internet Accessory ordering application at www.panasonic.co.uk
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK Ltd.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details.






Additional/replacement accessories

Model No.	Description
P03P	2 rechargeable nickel metal hydride (Ni-MH) batteries of capacity up to 750 mAh, AAA (R03) size

Note:

   
- This equipment is designed for use in the UK and Republic of Ireland.
- In the event of problems, you should contact your equipment supplier in the first instance.



Preparation

Included accessories

 
Charger
Part No. PQLV30045Z
AC adaptor
Part No. PQLV209EZ (PQLV209E)



Rechargeable batteries
AAA (R03) size
Part No. HHR-55AAAB or
HHR-4EPT



 Handset cover
Part No.
PQYNTG8100E



Important information

General

- Use only the AC adaptor included with this product.
- Do not connect the AC adaptor to any AC outlet other than a standard 220-240 V AC outlet.
- This product is unable to make calls when:
 - the portable handset battery(ies) need recharging or have failed.
 - there is a power failure.
- Do not open the charger or handset other than to replace the battery(ies).
- This product should not be used near emergency/intensive care medical equipment and should not be used by people with pacemakers.
- Care should be taken that objects do not fall onto, and liquids are not spilled into, the unit. Do not subject this product to excessive smoke, dust, mechanical vibration or shock.

Environment

- Do not use this product near water.

Preparation

 
 
- This product should be kept away from heat sources such as radiators, cookers, etc. It should also not be placed in rooms where the temperature is less than 5 °C or greater than 40 °C.
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the unit and is easily accessible.

Warning:

- To prevent the risk of electrical shock, do not expose this product to rain or any other type of moisture.
- Unplug this unit from power outlets if it emits smoke, an abnormal smell or makes unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped and contact an authorised service centre.

Battery caution

- We recommend using the battery(ies) noted on page 3. **Use only rechargeable battery(ies).**
- Do not mix old and new batteries.
- Do not dispose of the battery(ies) in a fire, as they may explode. Check local waste management codes for special disposal instructions.
- Do not open or mutilate the battery(ies). Released electrolyte from the battery(ies) is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care when handling the battery(ies). Do not allow conductive materials such as rings, bracelets or keys to touch the battery(ies), otherwise a short circuit may cause the battery(ies) and/or the conductive material to overheat and cause burns.
- Charge the battery(ies) in accordance with the information provided in this installation manual.
- Only use the included base unit (or charger) to charge the battery(ies). Do not tamper with the base unit (or charger). Failure to follow these instructions may cause the battery(ies) to swell or explode.



Preparation

Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to

your local retailer upon the purchase of an equivalent new product. Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

 
 
 
 
For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.



Preparation

Connection

The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)

Location

 
- For maximum distance and noise-free operation, place your base unit:
 - away from electrical appliances such as TVs, radios, personal computers or other phones.
 - in a convenient, high and central location.

Battery installation/replacement

Important:


- Use only the included rechargeable batteries noted on page 3, 4.
- When replacing batteries, we recommend using the Panasonic rechargeable batteries noted on page 2, 4.

- 1 Press the notch on the handset cover firmly and slide it in the direction of the arrow.
 - When replacing batteries, remove the old batteries positive (⊕) terminal first.

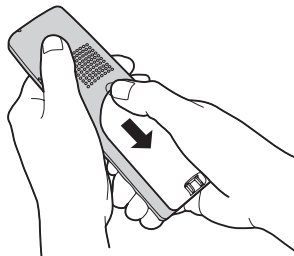

Preparation

 2 Insert the batteries negative (⊖) terminal first. Close the handset cover.

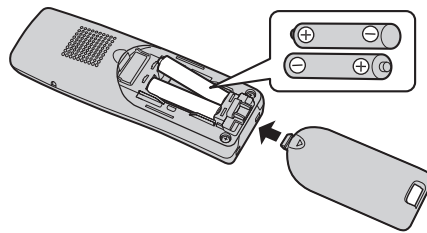

Battery charge

Place the handset on the charger for about 7 hours before initial use.

- The charge indicator lights up when the handset is placed on the charger.

 


Note:

- The handset display may show "Please Wait..." when the handset is placed on the charger if it is not registered to a base unit.


Preparation

Wall-mounting

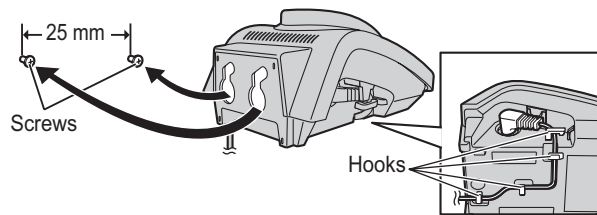

Note:

 - Make sure the screws are securely fastened to the wall.
- Use the following wall template to position the screws before drilling.



Preparation

 
 
Registering the handset to the KX-TG7100/KX-TG7120 base unit

Ensure that the handset is switched on. If it is not on, press and hold **[*0]** for few seconds to turn the handset on.

- 1 Lift the handset and press **[*0]** to put the handset in standby mode.
- 2 Press and hold **[*]]** on the base unit for about 3 seconds, until the registration tone sounds.
- 3 Place the handset on the base unit. The registration tone continues to sound. With the handset still on the base unit, wait until a confirmation tone sounds and **Y** stops flashing.

Note:

- If an error tone sounds, or if **Y** is still flashing, register the handset manually. (See manual registration in the KX-TG7100/KX-TG7120 operating instructions.)
- If all registered handsets start ringing in step 2, press **[*]]** to stop. Start again from step 1.
- Charge the batteries for about 7 hours before initial use.
- The KX-TG7100 does not feature an answering system.
- Answering system features are available only when this handset is registered to the KX-TG7120.

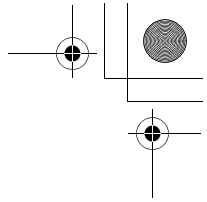






Declaration of Conformity:








• Panasonic Communications Co., Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC.



Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:
<http://www.doc.panasonic.de>

Contact:

              Panasonic Services Europe
a Division of Panasonic Marketing Europe GmbH
Panasonic Testing Centre
Winsbergring 15, 22525 Hamburg, Germany

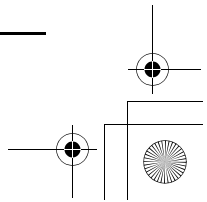

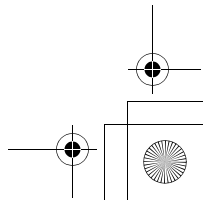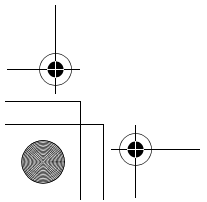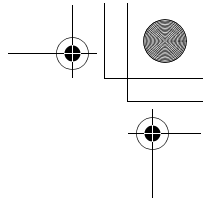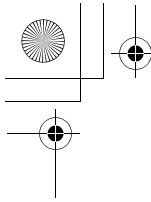

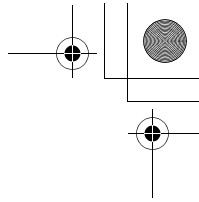

CE0436

1999/5/EC

Sales Department:

Panasonic Business Systems U.K.

Panasonic House, Willoughby Road, Bracknell, Berkshire, RG12 8FP

Panasonic Communications Zhuhai Co., Ltd.

3 Ping Xi 8 Lu, Nanping Keji Gongye Yuan, Zhuhai, Guangdong, China
519060

Copyright:

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2006 Panasonic Communications Co., Ltd. All Rights Reserved.



TGA711 E

PQQX15074ZA DC0306DH0

