

Panasonic[®]

TX-50AX802B

TX-58AX802B

TX-65AX802B

*e***HELP**

my Home Screen

my Home Screen

• Information	12
• How to use	13
• Settings	14
• OSD Colour	16

APPS List

• Information	16
• How to use	17
• Settings	18

Watching

Basic

• Satellite connection	19
• Basic connection	20
• Selecting channel	23
• Information banner	25
• Option Menu	27
• Subtitle	29
• Last view	30
• Off Timer	30
• Energy saving functions	31
• Adjusting time	33
• Language	33

4K resolution

• 4K compatible equipment	35
• PC	35
• HDMI4 HDCP Setting	36
• DisplayPort Settings	36
• Valid 4K format	37

External equipment

• External connection	38
• Watching external input	41

• Operating with TV's remote control	44
• HDMI features	46
• Terminal information	48
• Valid input signals	49
For best picture	
• Viewing Mode	51
• Ambient Sensor	52
• Aspect	53
• Aspect Control Signal	54
• Basic settings	56
• Noise reduction settings	58
• Advanced Settings	59
• Option Settings	63
• Screen Settings	65
• Lock Settings	67
• Copy Adjustment	67
For best audio	
• Sound mode	68
• Basic settings	69
• Volume settings	71
• Voice Guidance Settings	72
• Audio Description	73
• Advanced settings	74
TV Guide	
• Using TV Guide	77
• Timer Programming	80
• Guide link programming	81
Teletext	
• Digital text service	82
• Viewing Teletext	83
• Teletext mode	85
• Teletext Character Set	86

3D	
• Note	87
• 3D Eyewear - Functions	88
• 3D Eyewear - Registration	90
• 3D Eyewear - Replacing battery	91
• Viewing 3D	92
• 3D Mode Selection	93
• 3D Settings	94
• Source image format	96

Tuning and editing channels

• Setting menu	98
• Favourites Edit	98
• Channel List	101
• Regional Channel Edit	102
• Auto Setup	103
• Channel Sorting by Region	105
• Manual Tuning	105
• Update Channel List	106
• New Channel Message	106
• Signal Condition	107
• Add New Channels	107

Recording

USB HDD setup

• Preparations	108
• Setting for USB HDD	109

Recording current programme

• One Touch Recording	111
• Rewind LIVE TV	112

Timer Programming

• Setting Timer Programming	114
• Editing Timer Programming	116
• Remote recording	117

• Note	118
--------	-----

Technical information

• USB HDD	119
-----------	-----

Media Player

Using Media Player

• Information	120
• Selecting device / mode	122
• Network device	124
• Sharing file	125

Photo mode

• Selecting file	126
• Viewing photo	127
• Sorting photos	127
• Multi Shot 3D	128
• Using Slideshow	129

Video mode

• Selecting file	132
• Watching video	133
• Video Setup	134
• Audio output settings	135

Recorded TV mode

• Selecting content	137
• Watching recorded TV	138
• Grouping contents	139
• Deleting content	139
• Changing device	140
• Chapter List	140
• Audio output settings	141

Music mode

• Selecting file	142
• Playing music	142
• Music Setup	143

Technical information

• Device handling caution	144
• SD Card	144
• USB devices	145
• Photo format	146
• Video format	147
• Music format	150

Network

Internet content

• Information	151
• Selecting internet content	152
• Note	153

DLNA

• Information	154
• Using DLNA	157

Network connections

• Internet connection	159
• DLNA connection	160
• Note	162

Network settings

• Network Connection	163
• Custom - Wireless	164
• Custom - Wired	167
• Custom - Wireless Access Point	168
• Network Status	169
• my Home Cloud Settings	169
• VIERA Name	170
• TV Remote App Settings	170
• Network Link Settings	172
• TV Anywhere Settings	173
• File Sharing Settings	173
• Software Update	174

• New Software Message	174
Photos	
• Selecting file	175
• Viewing photo	176
• Using Slideshow	176
Videos	
• Selecting file	178
• Watching video	179
• Video Setup	180
• Audio output settings	181
Music	
• Selecting file	183
• Playing music	184
• Music Setup	185
DIGA Recorder	
• Controlling DIGA Recorder	186
Technical information	
• Photo format	187
• Video format	187
• Music format	190
Functions	
User profile	
• Information	192
• Settings	192
• my Stream	194
Info Bar	
• Information	195
• Settings	196
• Human activity sensor	197
Built-in Camera	
• Using built-in Camera	198

Voice Control	
• Preparations	199
• How to use	200
Touch Pad Controller	
• Information	201
• My button	201
• Settings	202
Multi Window	
• Information	203
• How to use	204
• Note	206
VIERA Link “HDAVI Control™”	
• Summary of VIERA Link	207
• Preparations	211
• Easy playback	212
• Power on Link	212
• Power off Link	212
• Standby Power Save	212
• Intelligent Auto Standby	212
• VIERA Link Control	213
• Speaker Selection	214
• Note	215
Child Lock	
• Using Child Lock	216
• PIN number	217
• Parental Rating	217
Common Interface	
• Caution	218
• Using Common Interface	219
Shipping Condition	
• Shipping Condition	220
Updating the TV Software	
• Information	221

• Auto update	221
• Manual update	222
Setting characters	
• Using Numeric buttons	223
Bluetooth devices	
• Bluetooth Setup	224
Keyboard	
• Keyboard	225

Settings

Setting menu	
• How to use	226
Picture	
• Viewing Mode	228
• Basic settings	228
• Ambient Sensor	230
• Noise reduction settings	231
• Advanced Settings	231
• Option Settings	231
• Screen Settings	234
• 3D Settings	235
• Lock Settings	236
• Copy Adjustment	236
• Reset to Defaults	236
Sound	
• Mode	237
• Basic settings	237
• Volume settings	238
• Voice Guidance Settings	239
• Audio Description	240
• Advanced settings	241
• Reset to Defaults	242

Network

• Network Connection	243
• Network Status	243
• my Home Cloud Settings	243
• VIERA Name	243
• TV Remote App Settings	243
• Network Link Settings	243
• TV Anywhere Settings	243
• File Sharing Settings	244
• Other settings	244

Timer

• Off Timer	245
• Timer Programming	245
• Time Zone	245
• Auto Standby	245
• No signal Power off	245

Setup

• Eco Navigation	246
• Voice Control Settings	246
• User Settings	246
• Info Bar Settings	246
• TV Guide Settings	246
• USB Device Setup	246
• Recording Setup	246
• VIERA Touch Pad Controller	247
• Bluetooth Setup	247
• Child Lock	247
• Tuning Menu	247
• Language	249
• Display Settings	250
• HDMI4 HDCP Setting	252
• DisplayPort Settings	252
• VIERA Link Settings	252
• System Menu	253

• Other Settings	254
------------------	-----

Support

FAQs

• Picture	255
• Digital TV	257
• Analogue TV	258
• Sound	259
• 3D	260
• HDMI	261
• Network	262
• Other	263

Maintenance

• Care and Cleaning	265
---------------------	-----

Information

• Using Help menu	266
-------------------	-----

Optional accessories

• 3D Eyewear	267
• Wall-hanging bracket	267

Licence

• Licence	268
-----------	-----



Letters enclosed in a box indicate remote control buttons.



Letters in cyan indicate on-screen display items.



References in this eHELP

- The images shown in this eHELP are for illustrative purposes only.


my Home Screen

my Home Screen

Information

“my Home Screen” is a gateway to the TV, applications, and more.

It provides easy access to special features such as Media Player, videos, games, communication tools, etc. as shown below (example).

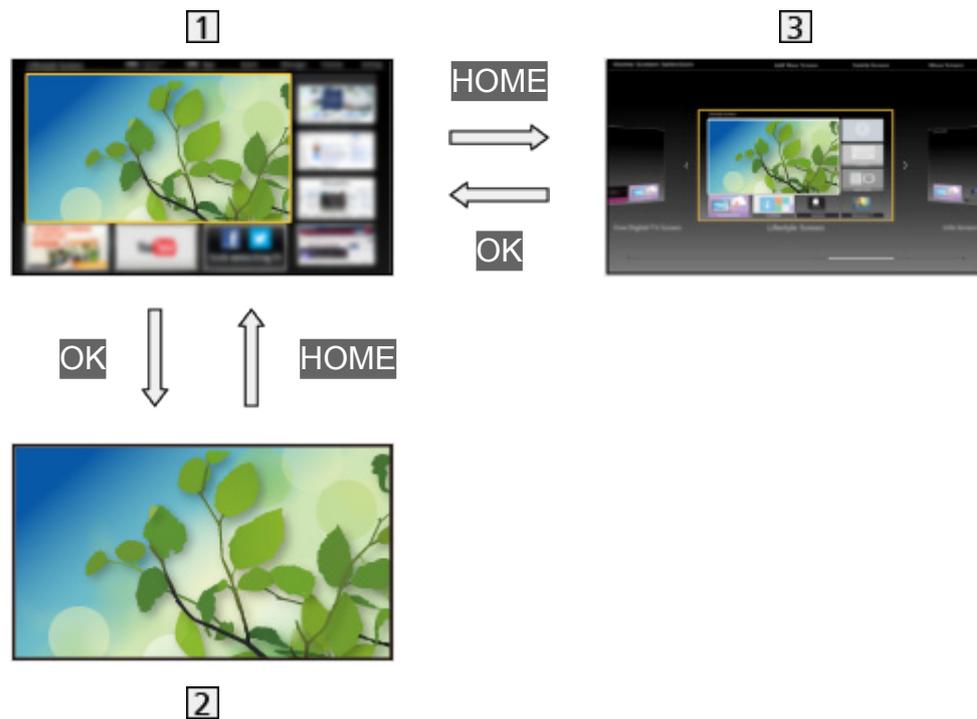

1 Home Screen

2 Selected content screen (TV, application, etc.)

3 Home Screen Selection

- Your preferred Home Screen can be selected.

How to use

Home Screen provides access to special features such as Media Player, TV, internet content, data services, communication tools, etc.

1. Display Home Screen with **HOME**.

(Example)



- The last viewed Home Screen is displayed when the TV is turned on.
- Press again to select or add your preferred Home Screen layout.

 → my Home Screen > my Home Screen > Settings

2. Select a feature with \triangle / ∇ / \triangleleft / \triangleright and press **OK** to access.

- To watch full-screen TV

- 1) Select the TV viewer with \triangle / ∇ / \triangleleft / \triangleright .

(Example)



- 2) Press **OK** to watch.

(Example)



- Also refer to [Tutorial](#) from the tool guide.

Settings

Select the setup menu from the tool guide on the top of the screen.

(Example)



■ Home Screen Selection

1. Display [Home Screen Selection](#) with **HOME**.

(Example)



2. Select the screen with \triangleleft / \triangleright and press **OK** to set.

[Full Screen TV:](#)

Displays full-screen TV.

[Free Digital TV Screen:](#)

Displays the TV and Digital TV streaming services (if available). (UK only)

[TV Home Screen:](#)

To make your TV experience more convenient and comfortable

[Lifestyle Screen:](#)

Displays the TV with useful information and services for everyday life.

[Info Screen:](#)

Enjoy internet content while watching TV.

■ Face Recognition / Voice Print Recognition

By using the built-in Camera and Voice Control function, this TV recognises your face / voice and displays the registered Home Screen.

- Say “my Home Screen” into the microphone of the Touch Pad Controller to use this function.
- To use this function, you need to set up a user profile and register face / voice data, preferred Home Screen, etc.

 → [Functions](#) > [User profile](#) > [Settings](#)

- For details of the built-in Camera

 → [Functions](#) > [Built-in Camera](#) > [Using built-in Camera](#)

- For details of Voice Control function

 → [Functions](#) > [Voice Control](#)

■ Settings

You can customise any Home Screen. (For example, changing the wallpaper, renaming freely, editing applications, setting the screen launched when the TV is turned on, etc.)

1. Select [Settings](#) from the tool guide.
2. Follow the on-screen instructions.

■ Search

You can search the content from various features.

1. Select [Search](#) from the tool guide.
2. Follow the on-screen instructions.

= Note =

- To change the colour type of on-screen displays, set [OSD Colour](#).

 → [my Home Screen](#) > [my Home Screen](#) > [OSD Colour](#)

- To use this function fully, you need a broadband network environment. Ensure the network connections and network settings are completed.

 → [Network](#) > [Network connections](#)

 → [Network](#) > [Network settings](#)

- Be sure to update the software when a software update notice is displayed on the TV screen. If the software is not updated, you may not be able to use my Home Screen. You can update the software later manually.

 → [Network](#) > [Network settings](#) > [Software Update](#)

OSD Colour

1. Display the menu with **MENU**.
 2. Select **Setup > Display Settings > OSD Colour** with Δ / ∇ and press **OK** to access.
 3. Set with Δ / ∇ and press **OK** to store.
-

OSD Colour

(Jet black / Pale grey / Organic brown / Sand beige)

Selects the preferred colour type of on-screen displays.

- This function is available for the information banner, menu screen, Home Screen, etc.

APPS List

Information

Various applications (internet contents, network contents, Media Player, etc.) can be accessed easily from APPS List.

■ APPS List

(Example)



= Note =

- APPS List is subject to change without notice.

How to use

You can access special features such as internet contents, network contents, Media Player, etc. from APPS List.

1. Display APPS List with **APPS**.

(Example)



- To exit APPS List

EXIT

2. Select an icon of the features with \triangle / ∇ / \triangleleft / \triangleright and press **OK** to access.

Internet contents

 → Network > Internet content

my Stream

- Provides recommended contents (TV programme, internet content, etc.).
- You need a broadband network environment to use this function fully.
- Follow the on-screen instructions to operate the application.

 → Functions > User profile > my Stream

Media Player

 → Media Player > Using Media Player > Selecting device / mode

Recorded TV

 → Media Player > Recorded TV mode

Media Server

 → Network > DLNA > Using DLNA

VIERA Link

 → Functions > VIERA Link "HDAVI Control™"

Multi Window

 → Functions > Multi Window

Settings

You can customise APPS List (screen settings, etc.).

1. Display APPS List with **APPS**.
2. Select the icon for settings on APPS List with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to access.



3. Follow the on-screen instructions.

= Note =

- Setup menu items may be changed without notice.

Watching

Basic


Satellite connection

Please ensure that the unit is disconnected from the mains socket before attaching or disconnecting any cables.

- For Freesat, Other Sat. / Satellite

■ Dual Tuner

Connect the both of satellite IN 1 / IN 2 terminals to the satellite dish, and you can watch or record 2 satellite programmes simultaneously, etc.

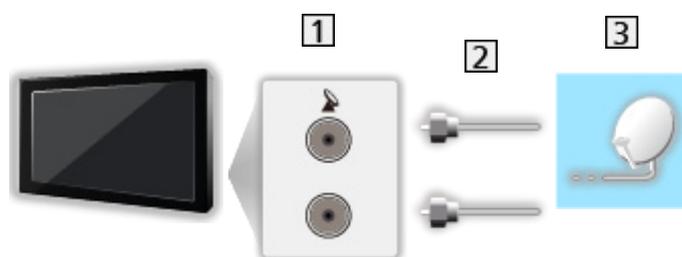

- 1 Satellite IN 1 / IN 2 terminals
- 2 Satellite cables
- 3 Satellite dish

■ Single Tuner

Connect the satellite IN 1 terminal to the satellite dish.

- Watching or recording 2 satellite programmes simultaneously, etc. are not available.



- 1 Satellite IN 1 terminal
- 2 Satellite cable
- 3 Satellite dish


= Note =

- To ensure your satellite dish is correctly installed, please consult your local dealer. Also consult the received satellite broadcasting companies for details.
- The Freesat channel uses Astra2 at 28.2° East and Eurobird1 at 28.5° East satellites. To ensure your satellite dish is correctly installed, consult your Freesat registered dealer. (UK only)
- External equipment and cables shown are not supplied with this TV.
- Keep the TV away from electronic equipment (video equipment, etc.) or equipment with an infrared sensor, otherwise distortion of image / sound may occur or operation of other equipment may be affected.
- Check the terminal type and cable plugs are correct when connecting.

Basic connection

Please ensure that the unit is disconnected from the mains socket before attaching or disconnecting any cables.

■ Aerial

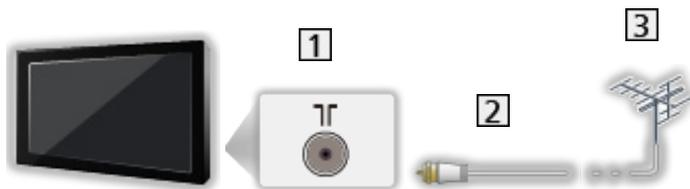


1 Terrestrial terminal

2 RF cable

3 Terrestrial aerial

- For DVB, Analogue

■ DVD Recorder / VCR

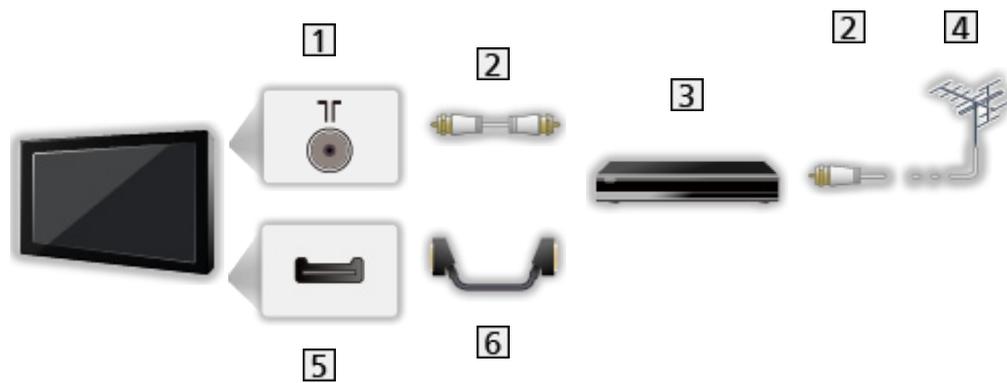

1 Terrestrial terminal

2 RF cable

3 DVD Recorder / VCR


4 Terrestrial aerial

5 AV1 (SCART) terminal

6 SCART cable

- AV1 (SCART) adaptor (supplied) is necessary when connecting to the TV.

■ DVD Recorder (VCR) / Cable TV box

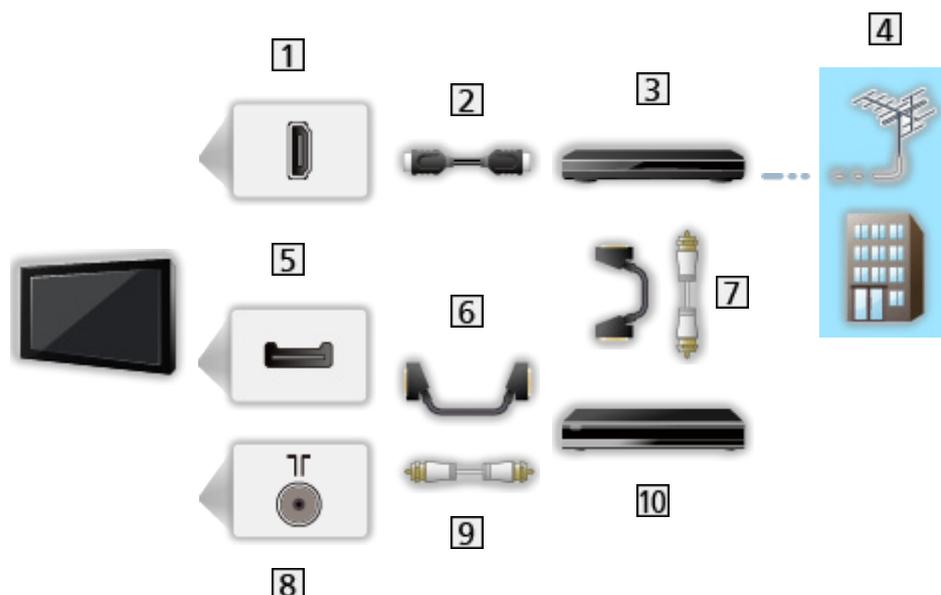

1 HDMI terminal

2 HDMI cable

3 Cable TV box

4 Terrestrial aerial / Cable

5 AV1 (SCART) terminal

6 SCART cable

– AV1 (SCART) adaptor (supplied) is necessary when connecting to the TV.

7 RF cable / SCART cable

8 Terrestrial terminal

9 RF cable

10 DVD Recorder / VCR

= Note =

- For VIERA Link connections

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- External equipment and cables shown are not supplied with this TV.
- Please also read the manual of the equipment being connected.
- Keep the TV away from electronic equipment (video equipment, etc.) or equipment with an infrared sensor, otherwise distortion of image / sound may occur or operation of other equipment may be affected.
- Use a fully wired HDMI compliant cable.

- Use a fully wired SCART cable.
- Check the terminal type and cable plugs are correct when connecting.

Selecting channel

1. Display **TV Selection** with **TV**.

2. Select the mode with Δ / ∇ and press **OK** to set.

Freesat (UK only) / **DVB** / **Analogue** / **Other Sat.** (UK only) / **Satellite** (Ireland only)

- **Other Sat.** is displayed if **Auto Setup** is completed for Other Sat. channels.

 → **Watching > Tuning and editing channels > Auto Setup**

- The selectable modes vary depending on the channels stored.
- You can also select the mode pressing **TV** repeatedly.
- If **TV Selection** is not displayed, press **TV** to switch the mode.

3. Select a channel with **Channel Up / Down** or **Numeric buttons**.



- Freesat channel position numbers are in the 100 - 999 and 0100 - 0999 ranges. DVB and Other Sat. / Satellite channel position begin from number 1 upward. Analogue channel position numbers are in the 0 - 99 range.

■ To select a channel using information banner

1. Display information banner with **i** if it is not displayed.

2. Select a channel with Δ / ∇ and press **OK** to watch while the banner is displayed.

 → **Watching > Basic > Information banner**

■ To select a channel using TV Guide

1. Display **TV Guide** with **GUIDE**.

2. Select the current programme with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.

- The current programme is displayed on the top left of the screen.

3. Select **View** with Δ / ∇ and press **OK** to watch. (DVB)

 → **Watching > TV Guide > Using TV Guide**

■ To select the type of channel list

Automatically selects all channels or favourites list in the information banner when the TV is turned on.

1. Display the menu with **MENU**.
2. Select **Setup** > **Other Settings** > **Power on Channel List** with Δ / ∇ and press **OK** to access.
3. Select **All Channel List** / **Last** with Δ / ∇ and press **OK** to set.

■ To watch pay-TV

- For information of the encrypted channels

 → **Functions** > **Common Interface** > **Using Common Interface**


- Consult the operator / broadcaster or CI module manufacturer for more information and conditions of the services.

Information banner

Display information banner with .

- Also appears when changing a channel.

(Example)

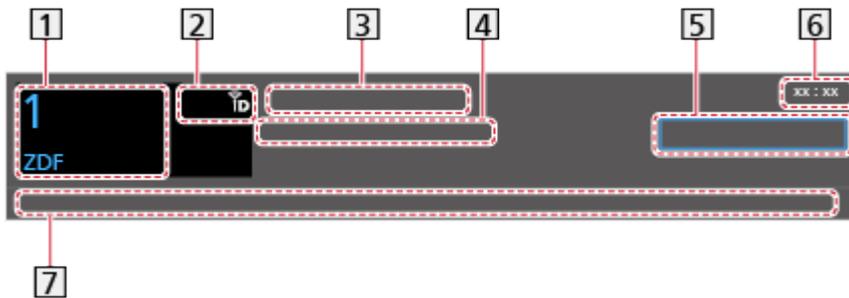

- 1 Channel position and name
- 2 Channel type (Radio, HDTV, etc.) / Encrypted channel () / TV mode ()
- 3 Programme
- 4 Start time / End time (except Analogue)
Channel position, etc. (Analogue)
Progress time indicator of the selected programme (except Analogue)
- 5 [All DVB Channels](#) / [All Freesat Channels](#) / [All Other Sat. Channels](#) / [All Satellite Channels](#) / [All Analogue Channels](#) / [Favourites](#)
 - Press  (blue) to switch. (DVB / Other Sat. / Satellite)
 - To list favourite channels, set [Favourites Edit](#).
- 6 Current time
- 7 Features available / message meanings

Bad signal:

Poor quality TV signal

Dolby D+, Dolby D, HE-AAC:

Dolby Digital Plus, Dolby Digital or HE-AAC audio track

AD:

Audio Description service available

- This function can aid visually-impaired viewers by adding an additional audio track to describe events on screen.

 → [Watching > For best audio > Audio Description](#)

Also in :

Same programme available as HD broadcast

- To display the extra information for details



- UK only

STTL:

Subtitle service available

TEXT:

Text service available

Multi Audio:

Multiple audio available

Stereo, Mono, NICAM:

Audio mode

1 – 90:

Off Timer remaining time



- To confirm another tuned channel



- To watch the channel listed in the banner



- Information on the next programme (DVB)



- Extra information (DVB)



– Press again to hide the banner.

- To hide the banner



- To adjust banner timeout, set [Banner Display Timeout](#).

1) Display the menu with .

2) Select [Setup](#) > [Display Settings](#) > [Banner Display Timeout](#) with  and press  to access.

3) Set with  and press  to store.

- To change the colour type of on-screen displays, set [OSD Colour](#).
 → [my Home Screen](#) > [my Home Screen](#) > [OSD Colour](#)
- To display the introduction banner for the internet service
 - 1) Display the menu with **MENU**.
 - 2) Select [Setup](#) > [Display Settings](#) > [Smart Banner](#) with Δ / ∇ and press **OK** to access.
 - 3) Select [On / Off](#) with Δ / ∇ and press **OK** to set.
- To change the type of channel banner
 - 1) Display the menu with **MENU**.
 - 2) Select [Setup](#) > [Display Settings](#) > [Banner & TV Guide Selection](#) with Δ / ∇ and press **OK** to access.
 - 3) Select [Freetime / Panasonic](#) with Δ / ∇ and press **OK** to set.
 - For DVB / Freesat (UK only)
- [AD](#), [STTL](#), [TEXT](#), [Multi Audio](#) indications are displayed as available on particular programmes, but may not be available for all individual programmes being broadcast. Display the extra information to confirm availability of these functions.

Option Menu

Confirm or change the current status.

1. Display the option menu with **OPTION**.
 2. Select one of the following items with Δ / ∇ and press **OK** to access.
[Voice Guidance Settings](#) / [Audio Type](#) / [Multi Audio](#) / [Monaural Audio](#) / [Sub Channel](#) / [Subtitle Language](#) / [Teletext Character Set](#) / [Teletext Language](#) / [NICAM](#) / [Volume Correction](#)
 - The function items vary depending on the TV mode and country you select.
 3. Set with Δ / ∇ / \triangleleft / \triangleright and press **OK** to store.
-

Voice Guidance Settings

Guidance settings for visually impaired users

 → [Watching](#) > [For best audio](#) > [Voice Guidance Settings](#)

Audio Type

Set to [Audio Description](#) if the programme has Audio Description service, then you will hear an additional audio track to describe events on screen (if available).

- For DVB
 - To adjust the volume for Audio Description
 -  → [Watching > For best audio > Audio Description](#)
 - Not valid on the sub screen in multi window mode
-

Multi Audio

Selects between alternative language or Audio Description for sound tracks (if available).

- This setting is not memorised and it will return to the default setting once you exit the current programme.
 - For DVB
 - [Multi Audio / AD](#) is displayed instead of [Multi Audio](#). (Ireland only)
-

Monaural Audio

Selects stereo / monaural (if available).

- This setting is not memorised and it will return to the default setting once you exit the current programme.
 - Not valid in Analogue
-

Sub Channel

Selects the multifeed programme - sub channel (if available).

- For Other Sat. (UK only)
 - For Satellite (Ireland only)
-

Subtitle Language

Selects the language in which subtitles should appear (if available).

- This setting is not memorised and it will return to the default setting once you exit the current programme.
 - Not valid in Analogue
 - Not valid on the sub screen in multi window mode
-

Teletext Character Set

Sets the teletext language font.

 → Watching > Teletext > Teletext Character Set

- Ireland only
-

Teletext Language

Selects between alternative languages for teletext (if available).

- For DVB / Satellite (Ireland only)
-

NICAM

Switches NICAM sound (if available).

 → Watching > For best audio > Advanced settings

- For Analogue
-

Volume Correction

Adjusts the volume of each individual channel or input mode.

Subtitle

■ Freesat, DVB or Other Sat. / Satellite

Display / hide subtitles (if available) with **STTL**.

- To select the preferred subtitle type
 - 1) Display the menu with **MENU**.
 - 2) Select **Setup > Display Settings > Preferred Subtitle Type** with Δ / ∇ and press **OK** to access.
 - 3) Select **Standard / Hard of Hearing** with Δ / ∇ and press **OK** to set.
 - **Hard of Hearing** provides aids in understanding and enjoyment with digital channel subtitles (depending on the broadcaster).
 - Ireland only
- **Preferred Subtitles 1 / 2** in Language are given priority.

 → Watching > Basic > Language

- Ireland only

■ Analogue

Display subtitles with **STTL**.

- Hide subtitles with **EXIT**.

= Note =

- Subtitles may not be displayed properly in 3D images.
- If you press **STTL** in Analogue, the TV switches to teletext service and calls up a favourite page. Press **EXIT** to return to TV mode.
- This is the same as switching to analogue teletext service and selecting “P888” (subtitle service).

 → Watching > Teletext > Viewing Teletext

- Not valid on the sub screen in multi window mode

Last view

Switch to a previously viewed channel or input mode easily with last view button.



- Press again to return to the current view.

= Note =

- Switching channel may not be available depending on the condition.
- Watching less than 10 seconds is not reflected in the previously viewed channel or input mode.

Off Timer

Turn the TV Standby mode automatically after a fixed period.

1. Display the menu with **MENU**.
2. Select **Timer > Off Timer** with Δ / ∇ and press **OK** to access.
3. Select the time in 15-minute increments with Δ / ∇ and press **OK** to set.

90 / 75 / 60 / 45 / 30 / 15 / Off (minutes)

- To cancel, set to **Off** or turn the TV off.
- The remaining time displays on the information banner.

 → Watching > Basic > Information banner

- When the remaining time is less than 3 minutes, the remaining time will flash on the screen.

Energy saving functions

The TV can be eco-friendly using energy-saving functions.

The TV will automatically go into Standby mode in the following conditions:

- **Eco Navigation** is set to **Set to Eco**.
- **Off Timer** is active.
 → **Watching > Basic > Off Timer**
- No operation is performed for 4 hours while **Auto Standby** is set to **On**.
- No signal is received and no operation is performed for 10 minutes while **No signal Power off** is set to **On**.

= Note =

- This function does not affect the recording.

■ Auto Standby

1. Display the menu with **MENU**.
 2. Select **Timer > Auto Standby** with **△ / ▽** and press **OK** to access.
 3. Select **On / Off** with **△ / ▽** and press **OK** to set.
-

Auto Standby

(On / Off)

Automatically turns the TV to Standby mode for energy saving when no operation is performed for 4 hours.

- Automatic input switching with the connected equipment affects this function and time-count will be reset.
- The notification message will appear 3 minutes before going into Standby mode.

■ No signal Power off

1. Display the menu with **MENU**.
 2. Select **Timer > No signal Power off** with Δ / ∇ and press **OK** to access.
 3. Select **On / Off** with Δ / ∇ and press **OK** to set.
-

No signal Power off

(On / Off)

Automatically turns the TV to Standby mode to prevent unnecessary power consumption when no signal is received and no operation is performed for 10 minutes.

- The notification message will appear 3 minutes before going into Standby mode.

■ Eco Navigation

Automatically sets the TV to the most suitable energy-saving mode.

The concerned items and their current settings are displayed. Select **Set to Eco** to set them to the energy-saving settings at once.

1. Display the menu with **MENU**.
 2. Select **Setup > Eco Navigation** with Δ / ∇ and press **OK** to access.
 3. Select **Set to Eco** with $\triangleleft / \triangleright$ and press **OK** to set.
- **Auto Standby** and **No signal Power off** are active when **Eco Navigation** is set to **Set to Eco**.

■ Radio Mode

Sets the timer for turning off the screen automatically when a radio channel is selected.

1. Display the menu with **MENU**.
 2. Select **Setup > Display Settings > Radio Mode** with Δ / ∇ and press **OK** to access.
 3. Select the time with Δ / ∇ and press **OK** to set.
20 / 15 / 10 / 5 / Off (seconds)
- The sound is active even if the screen turns off. This function is effective in reducing power consumption when listening to a radio channel.
 - Press any buttons except Standby On / Off switch, **Volume Up / Down** and **MUTE** to turn the screen on.
 - Not valid in Analogue

Adjusting time

Adjusts the time data.

1. Display the menu with **MENU**.
2. Select **Timer > Time Zone** with Δ / ∇ and press **OK** to access.
3. Set with Δ / ∇ and press **OK** to store.
 - The time data will be corrected based on GMT.
 - Ireland only

Language

1. Display the menu with **MENU**.
 2. Select **Setup > Language** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
 - [Preferred Multi Audio](#) / [Preferred Audio 1 / 2](#) / [Preferred Subtitles 1 / 2](#) / [Preferred Subtitles](#) / [Preferred Teletext](#)
 4. Set with Δ / ∇ and press **OK** to store.
-

Preferred Multi Audio

([English](#) / [Welsh](#) / [Gaelic](#) / [Irish](#))

Selects the preferred language for digital channel multi audio (depending on the broadcaster).

- UK only
-

Preferred Audio 1 / 2

Selects the first and second preferred language for digital channel multi audio (depending on the broadcaster).

- Ireland only
-

Preferred Subtitles 1 / 2

Selects the first and second preferred language for digital channel subtitles (depending on the broadcaster).

- Ireland only
- To display subtitles

 → [Watching > Basic > Subtitle](#)

Preferred Subtitles

(English / Welsh / Gaelic / Irish)

Selects the preferred language for digital channel subtitles (depending on the broadcaster).

- To display subtitles

 → Watching > Basic > Subtitle

- provides aids in understanding and enjoyment with subtitles (depending on the broadcaster).
 - UK only
-

Preferred Teletext

Selects the preferred language for digital channel teletext service (depending on the broadcaster).

- Ireland only

4K resolution

4K compatible equipment

You can watch the contents of 4K format that have twice the horizontal and vertical resolution of the 1080p signal.

- For valid 4K format

 → [Watching > 4K resolution > Valid 4K format](#)

- Connect the 4K compatible equipment to HDMI4 using a 4K compatible cable and you can watch contents of 4K format.

■ 4K compatible equipment



1 HDMI4 terminal


2 HDMI cable

3 4K compatible equipment

- Check the terminal type and cable plugs are correct when connecting.
- Use a fully wired HDMI compliant cable.

PC

■ PC

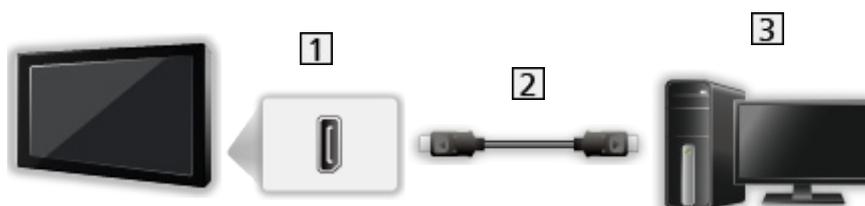

1 DisplayPort™

2 DisplayPort cable

3 PC

- Please use DisplayPort 1.2 compliant cable. In some case using DisplayPort 1.2 NON-compliant cable or mini DisplayPort connector adaptor, there will be malfunctions that TV couldn't display higher resolution (e.g. 4K).
- Check the terminal type and cable plugs are correct when connecting.

- To select the signal stream, set [DisplayPort Settings](#).

 → [Watching](#) > [4K resolution](#) > [DisplayPort Settings](#)

HDMI4 HDCP Setting

1. Display the menu with **MENU**.
 2. Select [Setup](#) > [HDMI4 HDCP Setting](#) with Δ / ∇ and press **OK** to access.
 3. Set with Δ / ∇ and press **OK** to store.
-

HDMI4 HDCP Setting

([2.2](#) / [1.4](#))

Select a version of HDCP according to the content you watch.

- HDCP is a technology of copy protection for digital audio / video contents.
- For HDMI4 terminal

DisplayPort Settings

1. Display the menu with **MENU**.
 2. Select [Setup](#) > [DisplayPort Settings](#) > [Stream Setting](#) with Δ / ∇ and press **OK** to access.
 3. Set with Δ / ∇ and press **OK** to store.
-

Stream Setting

([Auto](#) / [Single Stream](#))

Selects DisplayPort signal stream.

[Auto](#):

Automatically selects the signal stream for multi stream.

[Single Stream](#):

For single stream

- For DisplayPort input

Valid 4K format

■ Valid 4K format (HDMI4 / DisplayPort)

- 4K UHD

3 840 × 2 160 (60p, 50p, 30p, 25p, 24p)

- Aspect is fixed to **16:9**.
-

- DCI 4K

4 096 × 2 160 (60p, 50p, 30p, 25p, 24p)

- Actual resolution is 3 840 × 2 160p.
 - Selectable aspect is **16:9**, **H Full** or **V Full**.
-

= Note =

- The above signals are reformatted for optimal viewing on your display.
- 3D content of 4K format is not supported.
- The broadcast of 4K format is not supported.
- For details of aspect

 → **Watching > For best picture > Aspect**

External equipment

External connection

These diagrams show our recommendations for connection of your TV to various pieces of equipment. For other connections, consult the instructions for each piece of equipment.

- For basic connection


 → [Watching > Basic > Basic connection](#)

- To use the specific devices supporting Bluetooth wireless technology

 → [Functions > Bluetooth devices](#)

- Check the terminal type and cable plugs are correct when connecting.

■ HDMI equipment

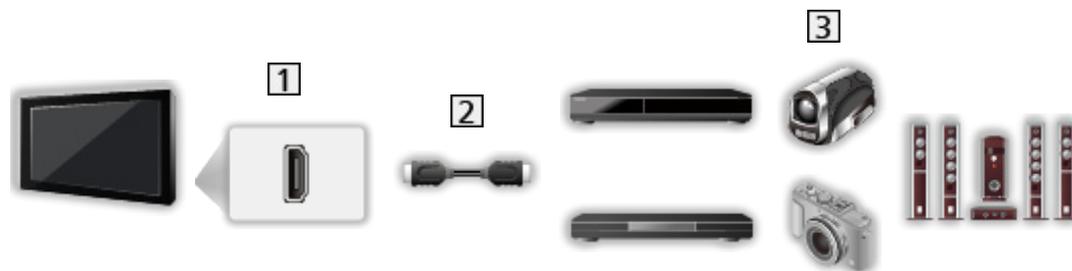

1 HDMI terminal

2 HDMI cable

3 Recorder / Player / 3D compatible player / Cable TV box / Camcorder / Amplifier with speaker system

= Note =


- Use a fully wired HDMI compliant cable.
- For VIERA Link connections

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Use HDMI2 or HDMI4 for connecting an amplifier and match the output setting in [ARC Output](#) in the Sound menu. This connection is applicable when using an amplifier that has ARC (Audio Return Channel) function.

 → [Watching > For best audio > Advanced settings](#)

■ AV devices

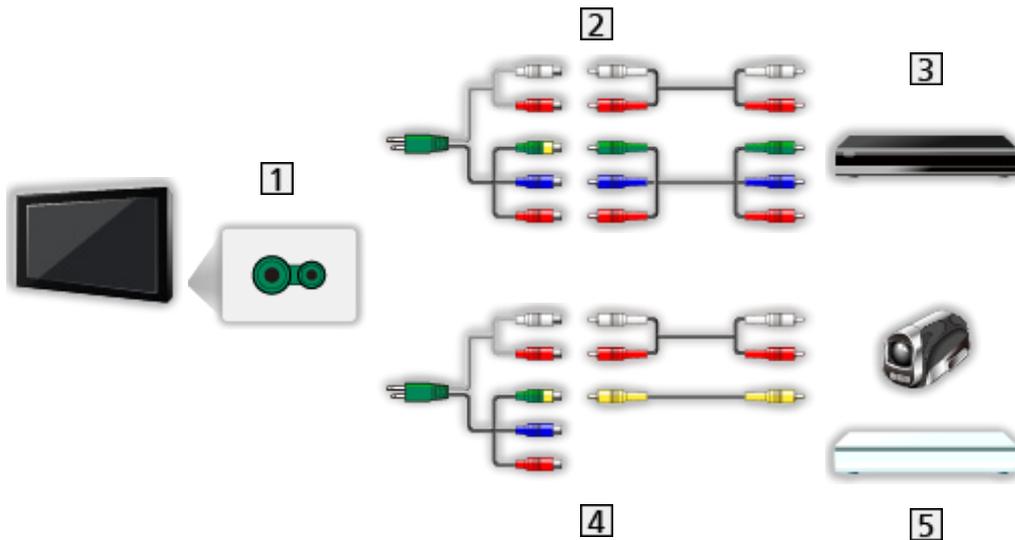

1 AV2 (COMPONENT) terminals

2 Component cables

- AV2 (COMPONENT / VIDEO) adaptor (supplied) is necessary when connecting to the TV.

3 DVD Player

4 Composite cables

- AV2 (COMPONENT / VIDEO) adaptor (supplied) is necessary when connecting to the TV.

5 Camcorder / Game equipment

■ USB devices



1 USB port

2 USB cable


3 USB HDD

= Note =

- It is recommended to connect the device to the TV's USB port directly.
- You cannot use two or more of the same kind of USB devices simultaneously except USB Flash Memory or USB HDD.
- Use USB 3 port for connecting the USB HDD.
- Some USB devices or USB HUB may not be used with this TV.

- You cannot connect any devices by using USB card reader.
- Additional information for the devices may be on the following website.
<http://panasonic.net/viera/support> (English only)

■ PC

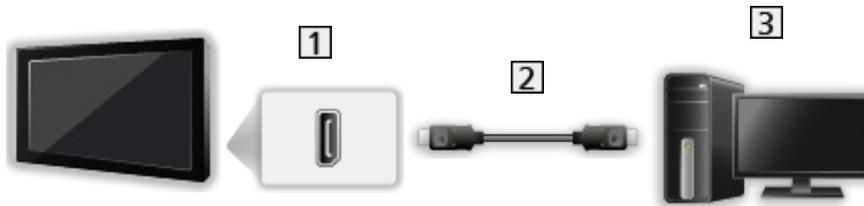

1 DisplayPort™

2 DisplayPort cable

3 PC

- Please use DisplayPort 1.2 compliant cable. In some case using DisplayPort 1.2 NON-compliant cable or mini DisplayPort connector adaptor, there will be malfunctions that TV couldn't display higher resolution (e.g. 4K).

- To select the signal stream, set [DisplayPort Settings](#).

 → [Watching > 4K resolution > DisplayPort Settings](#)

■ To listen with speakers



1 DIGITAL AUDIO

2 Optical digital audio cable


3 Amplifier with speaker system

- To enjoy multi-channel sound from external equipment (e.g. Dolby Digital 5.1ch), connect the equipment to the amplifier. For the connections, read the manuals of the equipment and amplifier.

- To select the sound output to adjust volume, set [Speaker Setting](#).

 → [Watching > For best audio > Volume settings](#)

■ Headphones

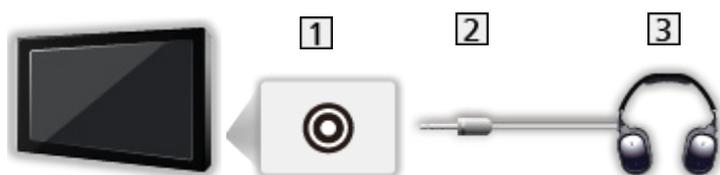

1 Headphone jack

2 M3 stereo mini plug

3 Headphones

- To adjust volume, set [Headphone Volume](#).

→ [Watching](#) > [For best audio](#) > [Advanced settings](#)

- To select the sound output to adjust volume, set [Speaker Setting](#).

→ [Watching](#) > [For best audio](#) > [Volume settings](#)

Watching external input

Connect the external equipment (VCR, DVD, etc.) and you can watch through the input.

1. Display the input selection menu with **AV**.
 2. Select the input mode connected to the equipment with Δ / ∇ and press **OK** to watch. (The selected mode is displayed on the top left of the screen.)
- TV receives input signals automatically connecting with SCART when playback starts.
 - Input signals are automatically identified by the SCART (pin 8) terminal.
 - This function is also available for HDMI connections when [VIERA Link](#) is set to [On](#).

→ [Functions](#) > [VIERA Link "HDAVI Control™"](#) > [Easy playback](#)

- When input mode is not switched automatically, perform as above or check the setup of the equipment.

- You can also select the input pressing **AV**. Press repeatedly until the desired input is selected.
- To switch between [COMPONENT](#) and [VIDEO](#) in [AV2](#), select with \triangleleft / \triangleright .
- You can label or skip each input mode. Skipped inputs will not be displayed when **AV** is pressed. ([Input Labels](#))
- The remote control is capable of operating the contents or external equipment.

→ [Watching](#) > [External equipment](#) > [Operating with TV's remote control](#)

- To return to TV mode



= Note =

- If the external equipment has an aspect adjustment function, set it to [16:9](#).
- For details, read the manual of the equipment or ask your local dealer.

■ Input Labels

Accesses the input labels list to select the label of each input mode or set to skip unconnected one for easier identification and selection in [Input Selection](#) or banner.

→ [Watching](#) > [Basic](#) > [Information banner](#)

1. Display the menu with **MENU**.
2. Select [Setup](#) > [Display Settings](#) > [Input Labels](#) with Δ / ∇ and press **OK** to access.
3. Set with Δ / ∇ / \triangleleft / \triangleright and press **OK** to set.
 - To name each input mode freely, select [User input](#) and set characters (maximum 10 characters).
 - To skip the input mode, select [Skip](#).

■ Playing Time Display

Set to [On](#) to display a time period of continuous use in Game mode on the top right of the screen every 30 minutes.

1. Display the menu with **MENU**.
2. Select [Setup](#) > [Display Settings](#) > [Playing Time Display](#) with Δ / ∇ and press **OK** to access.
3. Select [On](#) / [Off](#) with Δ / ∇ and press **OK** to set.
 - This function is available when [Game Mode](#) is set to [On](#).

■ Screen display

- Manual input (default setting in [Input Labels](#))

AV1: AV1, AV1-RGB

AV2: COMPONENT, VIDEO

HDMI1: HDMI1

HDMI2: HDMI2

HDMI3: HDMI3

HDMI4: HDMI4

DisplayPort: DisplayPort

- Auto input (EC mode or VIERA Link)

AV1: EC/AV1, EC/AV1-RGB

AV2: --

HDMI1: HDMI1

HDMI2: HDMI2

HDMI3: HDMI3

HDMI4: HDMI4

DisplayPort: DisplayPort

Operating with TV's remote control

You can operate the contents in Media Player / media server, recording functions or the connected equipment with the below buttons of this TV's remote control.



Playback (VCR / DVD / video content)



Stop the operations



Rewind, view the picture rapidly in reverse (VCR)

Skip to the previous track, title or chapter (DVD / video content)



Rewind, view the picture rapidly in reverse (VCR)

Search backward (DVD / video content)



Fast-forward, view the picture rapidly forward (VCR)

Skip to the next track, title or chapter (DVD / video content)



Fast-forward, view the picture rapidly forward (VCR)

Search forward (DVD / video content)



Pause / Resume

Press and hold to play at slow speed (DVD)



[One Touch Recording](#)

 → [Recording > Recording current programme > One Touch Recording](#)

■ How to change the code

Each Panasonic product has its own remote control code. Change the code according to the product for operation.

1. Press and hold Standby On / Off switch during the following operations.



2. Enter the appropriate code as follows with **Numeric buttons**.



- Codes for each product and features

70: DVD Recorder, DVD Player, Blu-ray Disc Player

71: Player theatre, Blu-ray Disc theatre

72: VCR

73 (default):

Using in USB HDD recording, Media Player, DLNA features or VIERA Link

3. Press  to change.

= Note =

- Confirm if the remote control works correctly after changing the code.
- The codes may be reset to defaults if batteries are replaced.
- Some operations may not be available depending on the equipment.

HDMI features

HDMI (high-definition multimedia interface) is the world's first complete digital consumer AV interface complying with a non-compression standard.

HDMI allows you to enjoy high-definition digital images and high-quality sound by connecting the TV and the equipment.

HDMI-compatible equipment* with an HDMI or DVI output terminal, such as a DVD player, a set top box or game equipment, can be connected to the HDMI terminal using a fully wired HDMI compliant cable.

 → [Watching > External equipment > External connection](#)

*: The HDMI logo is displayed on HDMI-compliant equipment.

■ Applicable HDMI features

- Input audio signal:

2ch Linear PCM (sampling frequencies - 48 kHz, 44.1 kHz, 32 kHz)

- Input video signal:

Matches the output setting of the digital equipment.

 → [Watching > External equipment > Valid input signals](#)

- VIERA Link (HDAVI Control 5)

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Content Type

- Deep Colour

- Audio Return Channel

– Audio Return Channel (ARC) is a function to send digital sound signals via an HDMI cable.

– For HDMI2 / HDMI4 terminals

– Match the output setting in [ARC Output](#) in the Sound menu.

 → [Watching > For best audio > Advanced settings](#)

- 3D

- x.v.Colour™

■ DVI connection

If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adaptor cable. When using the DVI to HDMI adaptor cable, connect the audio cable to the audio input terminal (use AV2 audio terminals).


- AV2 (COMPONENT / VIDEO) adaptor (supplied) is necessary when connecting to the AV2 audio terminals.
- Enquire HDMI adaptor cable at your local digital equipment retailer shop.

= Note =

- Audio settings can be made on [HDMI Input](#) in the Sound Menu.
 → [Watching > For best audio > Advanced settings](#)
- If the connected equipment has an aspect adjustment function, set the aspect ratio to “16:9”.
- These HDMI connectors are “type A”.
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- Equipment having no digital output terminal may be connected to the input terminal of component or video to receive analogue signals.
- This TV incorporates HDMI™ technology.


Terminal information

■ AV1 (SCART) terminal (RGB, VIDEO)

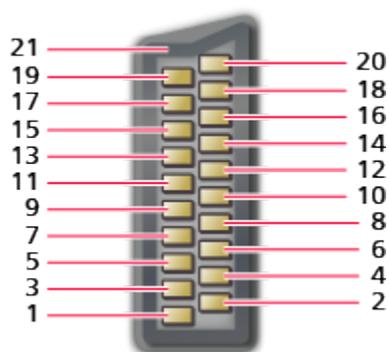

1 : Audio out (R)	12: --
2 : Audio in (R)	13: Red earth
3 : Audio out (L)	14: Earth
4 : Audio earth	15: Red in
5 : Blue earth	16: Status RGB
6 : Audio in (L)	17: CVBS earth
7 : Blue in	18: RGB status earth
8 : Status CVBS	19: CVBS out (video)
9 : Green earth	20: CVBS in (video)
10: --	21: Socket Earth
11: Green in	

■ HDMI terminal

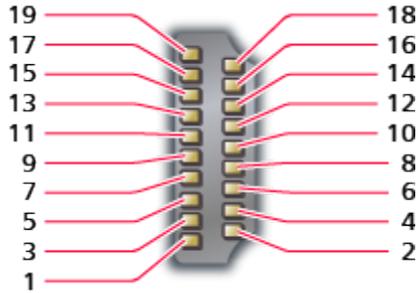

1 : TMDS Data2+	11 : TMDS Clock Shield
2 : TMDS Data2 Shield	12: TMDS Clock-
3 : TMDS Data2-	13: CEC
4 : TMDS Data1+	14: Utility
5 : TMDS Data1 Shield	15: SCL
6 : TMDS Data1-	16: SDA
7 : TMDS Data0+	17: DDC/CEC Ground
8 : TMDS Data0 Shield	18: +5V Power
9 : TMDS Data0-	19: Hot Plug Detect
10: TMDS Clock+	

Valid input signals

■ COMPONENT, HDMI

Signal name	COMPONENT	HDMI
525 (480) / 60i, 60p	○	○
625 (576) / 50i, 50p	○	○
750 (720) / 60p, 50p	○	○
1 125 (1 080) / 60i, 50i	○	○
1 125 (1 080) / 60p, 50p, 24p		○
3 840 × 2 160 / 60p, 50p, 30p, 25p, 24p		○*
4 096 × 2 160 / 60p, 50p, 30p, 25p, 24p		○*

*: For HDMI4 only

○: Applicable input signal

■ DisplayPort

Signal name	DisplayPort
750 (720) / 60p, 50p	○
1 125 (1 080) / 60p, 50p, 30p, 25p, 24p	○
3 840 × 2 160 / 60p, 50p, 30p, 25p, 24p	○
4 096 × 2 160 / 60p, 50p, 30p, 25p, 24p	○
640 × 480	○
800 × 600	○
1 024 × 768	○
1 280 × 768	○
1 360 × 768	○
1 366 × 768	○
1 280 × 1 024	○
2 560 × 1 440	○

○: Applicable input signal

= Note =

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.

For best picture

Viewing Mode

1. Display the menu with **MENU**.
 2. Select **Picture > Viewing Mode** with Δ / ∇ and press **OK** to access.
 3. Select the mode with Δ / ∇ and press **OK** to set.
-

Viewing Mode

(**Dynamic** / **Normal** / **Cinema** / **THX Cinema** / **THX Bright Room** / **True Cinema** / **Monitor** / **Custom** / **Professional1** / **Professional2**)

Selects your favourite picture mode for each input.

Dynamic:

Improves contrast and sharpness for viewing in a bright room.

Normal:

Normal use for viewing in a normal lighting condition.

Cinema:

Improves the performance of contrast, black and colour reproduction for watching movies in a darkened room.

THX Cinema*:

Reproduces the original image quality precisely in a darkened room.

- Not valid in 3D mode

THX Bright Room*:

Reproduces the original image quality precisely in a bright room.

- Not valid in 3D mode

True Cinema:

Reproduces the original image quality precisely without any revision.

Monitor:

Reproduces the original image quality of graphic contents.

- For HDMI and DisplayPort input

Custom:

Adjusts each menu item manually to suit your favourite picture quality.

Professional1 / 2:

Allows you to set and lock the professional picture settings.

 → Watching > For best picture > Advanced Settings

- If a certified professional dealer sets these modes, **Professional1** and **Professional2** may be displayed as **isf Day** and **isf Night**.

In each Viewing Mode, **Backlight**, **Contrast**, **Brightness**, **Colour**, **Tint**, **Sharpness**, **Colour Temperature**, **Vivid Colour**, **Adaptive Backlight Control**, **Letterbox**, **Ambient Sensor**, **Noise Reduction**, **MPEG Remaster**, **Resolution Remaster**, **Caption Smoother**, **Brilliance Enhancer**, **Intelligent Frame Creation** and **24p Smooth Film** can be adjusted and stored.

When in **Cinema**, **True Cinema**, **Monitor**, **Custom** or **Professional1 / 2**, **Advanced Settings** can be adjusted additionally. The settings in **True Cinema**, **Monitor**, **Custom** or **Professional1 / 2** can be stored for each input.

- You can set **Viewing Mode** in 2D and 3D mode for each.

*: THX modes are used to mirror the picture settings used by professional filmmakers, faithfully reproducing the image quality of THX Certified movies. THX Certified movies have the THX logo on the disc. THX modes are not available for photo contents or internet services.

Ambient Sensor

1. Display the menu with **MENU**.
 2. Select **Picture** > **Ambient Sensor** with **△** / **▽** and press **OK** to access.
 3. Select **On** / **Off** with **△** / **▽** and press **OK** to set.
-

Ambient Sensor

(On / Off)

- Automatic Brightness Control function

Adjusts picture settings automatically depending on ambient lighting conditions.

Aspect

Change the aspect ratio (image size) with **ASPECT**.

■ To change the aspect ratio manually

1. Display **Aspect Selection** with **ASPECT**.
2. Select the mode with Δ / ∇ and press **OK** to set.
 - You can also change the mode pressing **ASPECT**.
(Press repeatedly until you reach the desired mode.)

Auto:

The best ratio is selected automatically according to the “Aspect Control Signal”.

 → Watching > For best picture > Aspect Control Signal

16:9:

Directly displays the image at 16:9 without distortion (anamorphic).

14:9:

Displays the image at the standard 14:9 without distortion.

Just:

Displays a 4:3 image full-screen. Stretching is only noticeable at the left and right edges.

4:3:

Displays the image at the standard 4:3 without distortion.

Zoom:

Displays a 16:9 letterbox or 4:3 image without distortion.

4:3 Full:

Displays a 4:3 image enlarged horizontally to fit the screen.

- For HD (High definition) signals

Sidecut Just:

Displays a 16:9 letterbox (anamorphic) image full-screen. Stretching is only noticeable at the left and right edges.

- For HD (High definition) signals

Sidecut Zoom:

Displays a 16:9 letterbox (anamorphic) image full-screen without distortion.

- For HD (High definition) signals

H Full:

Displays the image enlarged horizontally to fit the screen without distortion.

- For DCI 4K format

V Full:

Displays the image enlarged vertically to fit the screen without distortion.

- For DCI 4K format

= Note =

- Display the image (TV, external input, etc.) full-screen to use this function completely.
- Aspect mode can be memorised separately for SD (Standard definition) and HD (High definition) signals.
- Aspect cannot be changed in teletext service and 3D format signals.
- Aspect is fixed to 16:9 when watching the content of 4K format except DCI 4K.
- Only 16:9 and 4:3 are available for PC signal from DisplayPort input.

Aspect Control Signal

Programmes usually contain an “Aspect Control Signal”. (Widescreen signal, Control signal through SCART / HDMI terminal)

In **Auto** mode, aspect mode will appear in the top left of the screen if a Widescreen signal (WSS) or a Control signal through SCART (pin8) / HDMI terminal is found. The aspect will switch to the appropriate ratio.

 → Watching > For best picture > Aspect

■ Available conditions

- Terrestrial terminal (WSS only)

Valid input signal format:

DVB

PAL I

Invalid input signal format:

PAL 525/60 6.0 MHz

M.NTSC 6.0 MHz

- Satellite terminal (WSS only)

Valid input signal format:

Freesat, Other Sat. / Satellite

- AV1 (SCART) / AV2 (VIDEO) terminals

Valid input signal format:

PAL

PAL 525/60 *

M.NTSC *

NTSC *

* : Control signal through SCART (pin 8) / HDMI terminal only

- AV2 (COMPONENT) terminals (WSS only)

Valid input signal format:

625 (576) / 50i, 50p

Invalid input signal format:

525 (480) / 60i, 60p

750 (720) / 60p, 50p

1 125 (1 080) / 60i, 50i

- HDMI / DisplayPort terminals

Valid input signal format:

525 (480) / 60i, 60p*¹

625 (576) / 50i, 50p*¹

750 (720) / 60p, 50p

1 125 (1 080) / 60i, 50i*¹

1 125 (1 080) / 60p, 50p, 24p

3 840 × 2 160 / 60p, 50p, 30p, 25p, 24p*²

4 096 × 2 160 / 60p, 50p, 30p, 25p, 24p*²

*¹ : For HDMI terminal only

*² : For HDMI4 / DisplayPort terminals only

- HDMI / DisplayPort terminals do not receive WSS signal.
-

= Note =

- If the screen size looks unusual when a widescreen-recorded programme is played back on a VCR, adjust the tracking of the VCR. Read the manual of the VCR.

Basic settings

1. Display the menu with **MENU**.
 2. Select **Picture** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
Backlight / **Contrast** / **Brightness** / **Colour** / **Tint** / **Sharpness** / **Colour Temperature** / **Vivid Colour** / **Colour Remaster** / **Reversal Film Effect** / **Adaptive Backlight Control** / **Letterbox** / **Resolution Remaster** / **Caption Smoother** / **Brilliance Enhancer** / **Intelligent Frame Creation** / **24p Smooth Film**
 4. Set with Δ / ∇ / \triangleleft / \triangleright and press **OK** to store.
-

Backlight, **Contrast**, **Brightness**, **Colour**, **Tint**, **Sharpness**

Adjusts the levels of these options according to your personal preference.

- **Sharpness** is not available when **1080p Pixel by 4pixels** is set to **On**.
-

Colour Temperature

Sets the overall colour tone of the picture (bluer - redder).

Vivid Colour

(**On** / **Off**)

Automatically adjusts colours to vivid ones.

Colour Remaster

(**Max** / **Min** / **Off**)

Displays the vivid images with the expanded colour gamut.

- For HDMI input or video contents of Media Player
 - Not valid when **Viewing Mode** is THX modes
-

Reversal Film Effect

(Max / Min / Off)

Provides the picture effect such as the reversal film for photo contents.

- For HDMI input or photo contents of Media Player
 - Not valid when [Viewing Mode](#) is THX modes
-

Adaptive Backlight Control

Automatically controls the level of backlight according to the images.

- Not valid in multi window mode
-

Letterbox

(Dimmer / Normal)

Adjusts the black level of the letterbox (anamorphic) area for watching movies, etc.

Resolution Remaster

(Auto / Max / Mid / Min / Off)

Enhances picture resolution to make the image sharper.

- Not valid when [1080p Pixel by 4pixels](#) is set to [On](#)
-

Caption Smoother

(Auto / Max / Mid / Min / Off)

Makes caption contours smooth. Specially effective for low resolution contents.

- Not valid in 3D mode or when [1080p Pixel by 4pixels](#) is set to [On](#)
-

Brilliance Enhancer

(Max / Mid / Min / Off)

Enhances picture contrast locally to increase picture brilliance.

- Not valid in 3D mode or when [1080p Pixel by 4pixels](#) is set to [On](#)
-

Intelligent Frame Creation

(Max / Mid / Min / Off)

Automatically compensates the picture frame rate and removes juddering movements to make the images smooth.

- Depending on the contents, images may be noisy. To prevent the noise, change the setting.
 - Not valid in multi window mode, photo contents of Media Player / Network services, when **Game Mode** is set to **On** or when aspect is set to **H Full**
-

24p Smooth Film

(Max / Mid / Min / Off)

Automatically compensates the picture frame rate to make the 24p source movie images smooth.

- This function is available only for 24p signal input and displayed instead of **Intelligent Frame Creation**.
- Not valid in multi window mode, photo contents of Media Player / Network services, when **Game Mode** is set to **On** or when aspect is set to **H Full**

Noise reduction settings

1. Display the menu with **MENU**.
 2. Select **Picture** > **Noise Reduction** / **MPEG Remaster** with Δ / ∇ and press **OK** to access.
 3. Set with Δ / ∇ and press **OK** to store.
-

Noise Reduction

(Auto / Max / Mid / Min / Off)

Reduces unwanted picture noise.

MPEG Remaster

(Auto / Max / Mid / Min / Off)

Reduces flicker noise in contoured parts of a picture and block noise.

Advanced Settings

You can adjust and set up the detailed picture settings when **Viewing Mode** is set to **Cinema**, **True Cinema**, **Monitor**, **Custom** or **Professional1 / 2**. The settings in **True Cinema**, **Monitor**, **Custom** or **Professional1 / 2** can be stored for each input.

 → **Watching > For best picture > Viewing Mode**

1. Select the input mode with **AV** or **TV**.
2. Display the menu with **MENU**.
3. Select **Picture > Viewing Mode** with Δ / ∇ and press **OK** to access.
4. Select the mode with Δ / ∇ and press **OK** to set.

Cinema / True Cinema / Monitor / Custom / Professional1 / Professional2

■ Adjust the detailed picture settings

1. Display the menu with **MENU**.
2. Select **Picture > Advanced Settings** with Δ / ∇ and press **OK** to access.
3. Select one of the following items with Δ / ∇ and press **OK** to access.

Contrast Control / Colour Gamut / White Balance / Colour Management / Gamma / Reset to Defaults

4. Set with Δ / ∇ / \triangleleft / \triangleright and press **OK** to store.

■ Contrast Control

Contrast Control

(Auto / Custom / Off)

Automatically adjusts the detailed contrast settings. Select **Custom** to set **Contrast Control Setting** manually.

Contrast Control Setting

Adaptive Gamma Control:

Adjusts the gamma curve to make the image brighter.

Black Expander:

Gradually adjusts the shades of black.

Clear White Effect:

Makes the white area clearer.

Reset to Defaults:

Resets items of **Contrast Control Setting**.

■ Colour Gamut

Colour Gamut

([Native](#) / [Rec. 709](#) / [SMPTE-C](#) / [EBU](#))

Reproduces image colour precisely according to the colour gamut standards.

[Native](#):

Displays deep colours by expanding the colour gamut to its maximum.

[Rec. 709](#):

Standard for HD (High definition)

[SMPTE-C](#):

Standard for NTSC

[EBU](#):

Standard for PAL

- For HDMI input or video contents of Media Player (when [Colour Remaster](#) and [Reversal Film Effect](#) are set to [Off](#))

■ White Balance

[R-Gain](#) / [G-Gain](#) / [B-Gain](#)

Adjusts the white balance of bright red / green / blue areas.

[R-Cutoff](#) / [G-Cutoff](#) / [B-Cutoff](#)

Adjusts the white balance of dark red / green / blue areas.

[More Detailed Adjustment](#)

Adjusts more detailed items of [White Balance](#).

[Input Signal Level](#):

Adjusts the input signal level.

[R-Gain](#) / [G-Gain](#) / [B-Gain](#):

Adjusts the detailed white balance of bright red / green / blue areas.

[Reset to Defaults](#):

Resets items of [More Detailed Adjustment](#).

[Reset to Defaults](#)

Resets [White Balance](#) to the default settings.

■ Colour Management

[R-Hue / R-Saturation / R-Luminance](#)

Adjusts the picture hue / saturation / luminance of red areas.

[G-Hue / G-Saturation / G-Luminance](#)

Adjusts the picture hue / saturation / luminance of green areas.

[B-Hue / B-Saturation / B-Luminance](#)

Adjusts the picture hue / saturation / luminance of blue areas.

[More Detailed Adjustment](#)

Adjusts more detailed items of [Colour Management](#).

[Y-Hue / C-Hue / M-Hue:](#)

Adjusts the picture hue of yellow / cyan / magenta areas.

[Y-Saturation / C-Saturation / M-Saturation:](#)

Adjusts the saturation of yellow / cyan / magenta areas.

[Y-Luminance / C-Luminance / M-Luminance:](#)

Adjusts the luminance of yellow / cyan / magenta areas.

[Reset to Defaults:](#)

Resets items of [More Detailed Adjustment](#).

[Reset to Defaults](#)

Resets [Colour Management](#) to the default settings.

■ Gamma

Gamma

Switches the gamma curve.

- Please note the numerical values are reference for the adjustment.
-

More Detailed Adjustment

Adjusts more detailed items of [Gamma](#).

Input Signal Level:

Adjusts the input signal level.

Gain:

Adjusts the gain of gamma for selected signal level.

Reset to Defaults:

Resets items of [More Detailed Adjustment](#).

Reset to Defaults

Resets [Gamma](#) to the default settings.

■ Reset to Defaults

Reset to Defaults

Resets [Advanced Settings](#) to the default settings.

Option Settings

1. Display the menu with **MENU**.
 2. Select **Picture** > **Option Settings** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
Game Mode / **Film Cadence Mode** / **1080p Pure Direct** / **4K Pure Direct** / **1080p Pixel by 4pixels** / **HDMI Content Type** / **DisplayPort Content Type** / **HDMI RGB Range** / **DisplayPort RGB Range** / **3D-COMB**
 4. Set with Δ / ∇ and press **OK** to store.
-

Game Mode

(On / Off)

Provides suitable images for fast response signals when playing games.

- Not valid in TV or multi window mode
 - To display a continuous record of time spent using Game mode, set **Playing Time Display**.
-

Film Cadence Mode

(On / Off)

Improves vertical resolution for movie images.

- This function is available for interlaced signals (except in the mode of multi window, Network services or when **Game Mode** is set to **On**).
-

1080p Pure Direct

(On / Off)

Reproduces the original image quality in detail for 1080p (HDMI / DisplayPort) input signal.

- Not valid in 3D mode, multi window mode or when **1080p Pixel by 4pixels** is set to **On**
-

4K Pure Direct

(On / Off)

Reproduces the original image quality in detail for 4K (HDMI / DisplayPort) input signal.

- Not valid in 3D or multi window mode
-

1080p Pixel by 4pixels

(On / Off)

Displays like pixel by pixel to make the image sharper for 1080p signal.

- For HDMI and DisplayPort input
 - Not all image may be displayed as pixel by pixel precisely.
 - Not valid in 3D or multi window mode
-

HDMI Content Type

(Graphics / Photos / Auto / Off)

Adjusts the picture settings of each HDMI input according to the selected content type.

Auto:

Automatically adjusts the picture settings according to the received HDMI content if the connected equipment supports HDMI Content Type.

- To set the availability of each content type for Auto mode, select [Auto Detail Setting](#).
 - For HDMI input
-

DisplayPort Content Type

(Graphics / Photos / Off)

Adjusts the picture settings of DisplayPort input according to the selected content type.

- For DisplayPort input
-

HDMI RGB Range

(Auto / Full / Normal)

Adjusts the black level of the image for each HDMI input.

- When the black level is not suitable, select [Full](#).
 - For HDMI input
-

DisplayPort RGB Range

(Auto / Full / Normal)

Adjusts the black level of the image for DisplayPort input.

- When the black level is not suitable, select **Full**.
 - For DisplayPort input
-

3D-COMB

(On / Off)

Makes still or slow moving pictures more vivid.

- Occasionally, while viewing still or slow moving pictures, colour patterning may be seen. Set to **On** to display sharper and more accurate colours.
- For PAL / NTSC signal reception in TV mode or from composite connection

Screen Settings

1. Display the menu with **MENU**.
 2. Select **Picture** > **Screen Settings** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
16:9 Overscan / **H-Size** / **Zoom Adjustments** / **Multi Window** / **Screen Display**
 4. Set with Δ / ∇ and press **OK** to store.
-

16:9 Overscan

(On / Off)

Selects the screen area displaying the image for 16:9 aspect.

On:

Enlarges the image to hide the edge of the image.

Off:

Displays the image in the original size.

- Set to **On** if noise occurs on the edge of the screen.
 - This function can be memorised for SD (Standard definition) and HD (High definition) signals respectively.
 - Not valid for 4K contents, Network services or when **1080p Pixel by 4pixels** is set to **On**
-

H-Size

(H-Size1 / H-Size2)

Switches the horizontal display range to reduce noise on the side edge of the image.

- For TV mode, AV, HDMI, DisplayPort input
 - Not valid for 4K contents, 3D mode or when [1080p Pixel by 4pixels](#) is set to [On](#)
-

Zoom Adjustments

Adjusts the vertical position and size when aspect is set to [Just](#), [Sidecut Just](#), [Zoom](#) or [Sidecut Zoom](#).

- Not valid for 4K contents
-

Multi Window

Displays two windows at once.

 → [Functions > Multi Window > How to use](#)

Screen Display

([On](#) / [Off](#))

Turns the screen off when you select [Off](#).

- This function is effective in reducing power consumption when listening to the sound without watching the TV screen.
- Press any buttons (except Standby On / Off switch) to turn the screen on.

Lock Settings

Locks the settings of [Professional1 / 2](#) for each input.

1. Display the menu with **MENU**.
2. Select [Picture](#) > [Lock Settings](#) with Δ / ∇ and press **OK** to access.
3. Enter the PIN number (4 digits) with **Numeric buttons**.



- Enter the PIN number twice at first setting.
 - Make a note of the PIN number in case you forget it.
4. Select [Adjustment Lock](#) with Δ / ∇ and press **OK** to access.
 5. Select [On](#) with Δ / ∇ and press **OK** to set.
 - [Backlight](#), [Contrast](#), [Brightness](#), [Colour](#), [Tint](#), [Sharpness](#), [Colour Temperature](#), [Vivid Colour](#), [Adaptive Backlight Control](#), [Resolution Remaster](#), [Caption Smoother](#), [Brilliance Enhancer](#), [Advanced Settings](#) and [Reset to Defaults](#) in the Picture Menu can be locked.

■ To change the PIN number

1. Select [Change PIN](#) with Δ / ∇ and press **OK** to access.
2. Enter a new PIN number twice with **Numeric buttons**.



Copy Adjustment

Copies the picture settings of [True Cinema](#), [Monitor](#), [Custom](#), [Professional1](#) or [Professional2](#) to those of another input or another Viewing Mode.

1. Display the menu with **MENU**.
2. Select [Picture](#) > [Copy Adjustment](#) > [Destination Viewing Mode](#) / [Destination Input](#) with Δ / ∇ and press **OK** to access.
3. Select the destination to copy to with Δ / ∇ and press **OK** to set.
4. Select [Copy Start](#) with Δ / ∇ and press **OK** to copy.
5. When the confirmation screen is displayed, select [Yes](#) with \triangleleft / \triangleright and press **OK** to set.

= Note =

- [Option Settings](#), [Screen Settings](#) and [3D Settings](#) will not be copied.
- You cannot copy to the locked mode.

For best audio

Sound mode

1. Display the menu with **MENU**.
 2. Select **Sound** > **Mode** with Δ / ∇ and press **OK** to access.
 3. Select the mode with Δ / ∇ and press **OK** to set.
-

Mode

(**Standard** / **Music** / **Ambience** / **User**)

Selects your favourite sound mode for each input.

Standard:

Provides the suitable sound quality for all types of scenes.

Music:

Improves sound quality for watching music videos, etc.

Ambience:

Improves spatial effects and provides clear sounds.

User:

Adjusts the sounds manually using the equaliser to suit your favourite sound quality.

- In each mode, **Bass**, **Treble**, **Surround**, **Bass Boost** and **Digital Remaster** can be adjusted and stored.
- For the User mode, **Equaliser** will be available in the Sound Menu instead of **Bass** and **Treble**. Select **Equaliser** and adjust the frequency.

 → **Watching** > **For best audio** > **Basic settings**

- This function is effective only for the sound from TV speakers.

Basic settings

1. Display the menu with **MENU**.
 2. Select **Sound** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
Bass / Treble / Equaliser / Balance / Surround / Bass Boost / Digital Remaster
 4. Set with Δ / ∇ / \triangleleft / \triangleright and press **OK** to store.
-

Bass

Adjusts level to enhance or minimise lower, deeper sound output.

Treble

Adjusts level to enhance or minimise sharper, higher sound output.

Equaliser

Adjusts the frequency level to suit your favourite sound quality.

- This function is available when **Mode** is set to **User**.
 - Select the frequency and change the frequency level using Δ / ∇ .
 - To enhance the bass sound, raise the level of the lower frequency. To enhance the treble sound, raise the level of the higher frequency.
 - To reset the levels of each frequency to the default settings, select **Reset to Defaults** with \triangleleft / \triangleright and press **OK**.
 - This function is effective only for the sound from TV speakers.
-

Balance

Adjusts volume level of right and left speakers.

Surround

(Stadium / Hall / Natural / Off)

Selects surround sound settings.

Stadium:

Provides the sound effect such as a stadium.

Hall:

Provides the sound effect such as a concert hall.

Natural:

Controls the reverberation to make the voice sound clearer.

- This function is effective only for the sound from TV speakers.
-

Bass Boost

(On / Off)

Enhances the effect of bass sounds.

- This function is effective only for the sound from TV speakers.
-

Digital Remaster

(On / Off)

Compensates a compressed audio signal to reproduce the original sound quality.

- This function is effective only for the sound from TV speakers.

Volume settings

1. Display the menu with **MENU**.
 2. Select **Sound** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
Speaker Setting / **Headphone Volume** / **Auto Gain Control** / **Volume Correction** / **Speaker Distance to Wall**
 4. Set with Δ / ∇ / \triangleleft / \triangleright and press **OK** to store.
-

Speaker Setting

(**TV Speaker** / **Headphones** / **Off**)

Selects the sound output to adjust volume. Set to **Off** when using the external speakers.

- Sound from TV speaker turns off when **Headphone** or **Off** is selected.
-

Headphone Volume

Adjusts the volume of headphones.

Auto Gain Control

(**On** / **Off**)

Automatically regulates large sound level differences between channels and inputs.

Volume Correction

Adjusts the volume of each individual channel or input mode.

Speaker Distance to Wall

(**Up to 30cm** / **Over 30cm**)

Compensates for the low frequency sound due to the distance between the speakers and the wall.

- If the back space between the TV and wall is within 30 cm, **Up to 30cm** is recommended.
- If the back space between the TV and wall is over 30 cm, **Over 30cm** is recommended.
- This function is effective only for the sound from TV speakers.

Voice Guidance Settings

1. Display the menu with **MENU**.
 2. Select **Sound** > **Voice Guidance Settings** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
Voice Guidance / **Speed** / **Volume** / **User Level** / **Web Browser**
 4. Set with Δ / ∇ and press **OK** to store.
-

Voice Guidance

(On / Off)

Set to **On** to enable voice guidance of the basic features (on-screen messages, etc.) for visually impaired users.

Speed

(Fast / Normal / Slow)

Selects the readout speed for the voice guidance.

Volume

(Max / Mid / Min)

Selects the volume for the voice guidance.

User Level

(Beginner / Expert)

Selects the level of verbosity for the voice guidance.

Web Browser

(On / Off)

Set to **On** to enable voice guidance of the network contents in web browser function.

Audio Description

1. Display the menu with **MENU**.
 2. Select **Sound** > **Audio Description** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
Preferred Audio Type / **Volume** / **Speakers** / **Headphones**
 4. Set with Δ / ∇ / \triangleleft / \triangleright and press **OK** to store.
-

Preferred Audio Type

(**Standard** / **Audio Description**)

Narration settings for visually impaired users

Set to **Audio Description** to activate the narration sound track when available on the broadcast.

- The availability of audio description sound track is indicated by **AD** in the information banner.
 - For DVB
 - Not valid on the sub screen in multi window mode
-

Volume

Adjusts the volume for Audio Description.

- For DVB
-

Speakers

(**Mix** / **Standard**)

Set to **Mix** to activate the description sound track from TV speakers.

- For DVB
-

Headphones

(**Mix** / **Standard**)

Set to **Mix** to activate the description sound track from headphones.

- For DVB

Advanced settings

1. Display the menu with **MENU**.
 2. Select **Sound** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
NICAM / Audio Preference / SPDIF Selection / SPDIF Delay / HDMI Input / DisplayPort Input / ARC Output
 4. Set with Δ / ∇ and press **OK** to store.
-

NICAM

(On / Off)

Near Instantaneous Companded Audio Multiplex

Reproduces NICAM stereo sound.

- Set to **Off** if reception is poor. (FM monaural sound)
 - For Analogue
-

Audio Preference

(Multichannel / Stereo / MPEG)

Selects the initial setting for audio tracks.

Multichannel:

The priority is given to multi-channel audio track.

Stereo:

The priority is given to stereo (2ch) audio track.

MPEG:

The priority is given to MPEG.

- MPEG is an audio compression method that compresses audio to the smaller size without any considerable loss of audio quality.
 - For digital
 - Ireland only
-

SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO and HDMI2 / HDMI4 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS for video contents of Media Player / Network services.

PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.
- For digital or video contents of Media Player / Network services

 → Media Player > Video mode > Audio output settings

 → Network > Videos > Audio output settings

SPDIF Delay

Adjusts the delay time of the sound output from DIGITAL AUDIO and HDMI2 / HDMI4 (ARC function) terminals if the sound does not synchronise the image.

- For digital
 - Ireland only
-

HDMI Input

(Digital / Analogue)

Selects to fit the input signal.

 → Watching > External equipment > HDMI features

Digital:

When sound is carried via the HDMI cable connection

Analogue:

When sound is not carried via the HDMI-DVI adaptor cable connection

- For HDMI input
-

DisplayPort Input

(Digital / Analogue)

Selects to fit the input signal.

Digital:

When sound is carried via the DisplayPort cable connection

Analogue:

When sound is not carried via the DisplayPort cable connection

- For DisplayPort input
-

ARC Output

(HDMI2 / HDMI4)

Selects ARC output terminal settings.

- To use 4K compatible amplifier, connect an amplifier to HDMI4 and select **HDMI4**.

TV Guide

Using TV Guide

TV Guide - Electronic Programme Guide (EPG) provides an on-screen listing of the programmes currently broadcast and the forthcoming broadcasts over the next seven days (depending on the broadcasters).

1. Display **TV Selection** with **TV**.
2. Select the mode with Δ / ∇ and press **OK** to set.

Freesat (UK only) / **DVB** / **Analogue**

3. Display **TV Guide** with **GUIDE**.

- To change the layout of **TV Guide**, set **TV Guide View**.

- 1) Display the menu with **MENU**.
- 2) Select **Setup > TV Guide Settings > TV Guide View** with Δ / ∇ and press **OK** to access.
- 3) Select **Normal / Full / Info** with Δ / ∇ and press **OK** to set.

Normal:

Default TV Guide screen

Full:


Displays channels and programmes full-screen without the operation guide

Info:

Displays details of the selected programme at the bottom without the operation guide

- To change the type of TV Guide
 - 1) Display the menu with **MENU**.
 - 2) Select **Setup > Display Settings > Banner & TV Guide Selection** with Δ / ∇ and press **OK** to access.
 - 3) Select **Freetime / Panasonic** with Δ / ∇ and press **OK** to set.
 - For DVB / Freesat (UK only)

(Example)

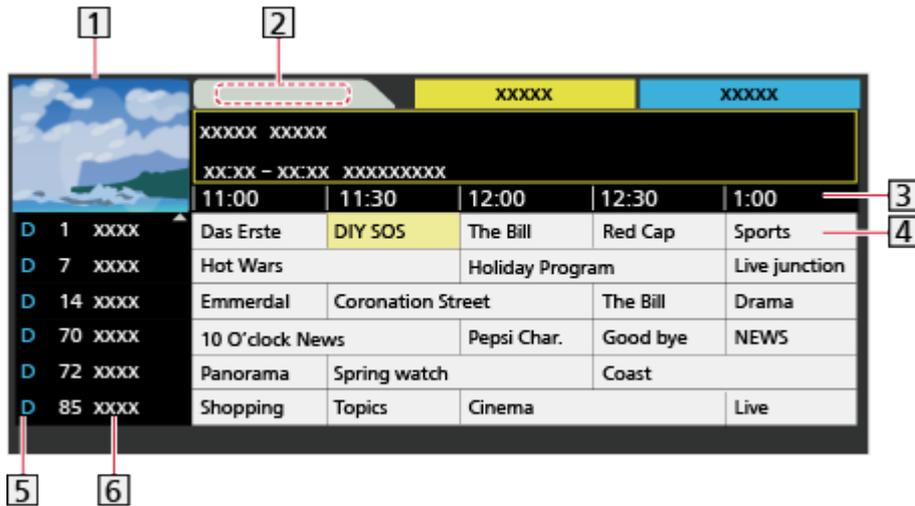

1 TV screen

2 Date

3 Time

4 Programme

HD : Some programmes may also be broadcast in HD.

- UK only
- You can select HD or SD broadcast.

5 D (DVB) / A (Analogue)

– No images are displayed in Freesat. (UK only)

6 Channel position and name

- To watch the programme

1) Select the current programme with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.

– The current programme is displayed on the top left of the screen.

2) Select **View** with Δ / ∇ and press **OK** to watch. (DVB)

– To use **Timer Programming**

 \rightarrow **Watching > TV Guide > Timer Programming**

– If a programme exists in both HD and SD broadcasts, **View Options** will be displayed. Select HD or SD broadcast (except Analogue). (UK only)

- To the previous day (DVB)

 (red)

- To the next day (DVB)

 (green)

- To search programme titles and view a list of the searched programmes (except Analogue) (if available)
 - 1) Display the search list with  (yellow).
 - 2) Select **Search** with \triangle / ∇ and press **OK** to access.
 - 3) Enter characters with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to set.
 - You can set characters using **Numeric buttons**.
 → **Functions > Setting characters > Using Numeric buttons**
 - 4) Press  (green) to start searching.
 - All the programme titles including the word you set will be listed.
 - Searching without any characters will list all programmes including current programmes.
- To view a channel list of the selected category (genre)
 - 1) Display the category list with  (blue).
 - 2) Select the category with \triangle / ∇ and press **OK** to view.
 - To list favourite channels, set **Favourites Edit**.
 → **Watching > Tuning and editing channels > Favourites Edit**
- To view more details of the programme (except Analogue)
 - 1) Select the programme with $\triangle / \nabla / \triangleleft / \triangleright$.
 - 2) Press **i** to view.
 - Press again to return to **TV Guide**.
- To exit **TV Guide**
EXIT

= Note =

- When this TV is turned on for the first time, or the TV is switched off for more than a week, it may take some time before TV Guide is completely shown.
- DVB and Analogue channels are displayed on the same TV Guide screen. **D** means DVB channel and **A** means Analogue channel. There will be no programme listings for Analogue channels.
- In Other Sat. / Satellite, the channel list will appear when pressing **GUIDE**.

Timer Programming

This function allows you to select programmes that you want to be reminded to watch or record to the USB HDD.

1. Select the forthcoming programme with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.

2. Select **USB HDD Rec. / Reminder** with Δ / ∇ and press **OK** to set.

- To check / change / cancel a timer event

 → Recording > Timer Programming > Editing Timer Programming

- LED will turn to orange in Standby mode if **Timer Programming** is set.

- To return to **TV Guide**

BACK/RETURN

- If you select the current programme, a confirmation screen asking whether you want to watch or record the programme appears. Select **Timer Programming** with Δ / ∇ and press **OK** to set **USB HDD Rec.** to record from the time you finish the timer event setting.
-  is displayed on the TV Guide screen if **Timer Programming** is set from **TV Guide**.
- If a programme exists in both HD and SD broadcast, **Timer Options** will be displayed. Select HD or SD broadcast with Δ / ∇ and press **OK** to set.  will be displayed if HD broadcast is set.

= Note =

- For Freesat and DVB
- **Timer Programming** only works reliably if correct time information is received via the signal from the broadcaster or service provider.
- Depending on the progress of recording, analogue channel may not be selected.
- When recording programmes to the USB HDD, be sure to format the USB HDD and enable it to record in **USB Device Setup**.

 → Recording > USB HDD setup

- To set timer programming events of this TV on the network equipment (smartphone, etc.) from outside the home network

 → Recording > Timer Programming > Remote recording

Guide link programming

Guide link programming is [Timer Programming](#) which is controlled by information from the TV Guide; if programme start and end times are changed by the broadcaster, the timer event will follow the change.

A Split Programme programming is a Guide link programming which is interrupted by one or more other programmes. Note that Guide link programming (including Split Programme programming) only works reliably if correct information is received from broadcasters.

- UK only
-  is displayed on the timer event if the timer is set from the TV Guide. (Guide link programming)
-  is displayed on the timer event if the timer is set from the TV Guide and the programme is a Split Programme.
-  /  is displayed on the TV Guide screen if [Timer Programming](#) is set from the TV Guide.
- For Freesat and DVB

= Note =

- If you edit the start time or end time of a Guide link programming event by more than 10 minutes, it will no longer follow the broadcaster's changes to the start or end time. The start and end times will become fixed.
- The Split Programme programming event for [Reminder](#) will be cleared by pressing  once to view.
- The Split Programme programming event for [Reminder](#) will switch to the programmed channel by pressing  even if it is between the interrupted programmes.
- The Split Programme programming does not work if the separated parts are broadcast on different channels.

Teletext

Digital text service

Digital text services (MHEG) differ greatly from analogue teletext.

When you switch to a digital text service, the images you see can contain graphics and text, laid out and controlled in a manner decided by the broadcaster.

1. Display **TV Selection** with **TV**.
2. Select **Freesat** (UK only) / **DVB** with **△** / **▽** and press **OK** to set.
 - Freesat and DVB programmes may have digital text services (MHEG).
3. Switch to a digital text service with **TEXT**.

■ How to operate services

In all cases, it is possible to navigate the pages using buttons on the remote control, but because the commands available must apply to all manufacturers of digital equipment, some on-screen commands may not correspond exactly to the remote control buttons.

- To exit a digital text service

TEXT

= Note =

- As soon as you switch to a digital channel with links to a digital text service, software is downloaded in the background over air to enable the teletext function. This means that when switching to a digital channel, you should wait for approximately 5 seconds before pressing **TEXT** - this will allow the software to be downloaded. If you press **TEXT** before download is complete, it will be ignored and you will have to press **TEXT** again when the download is complete.

Viewing Teletext

1. Switch to teletext with **TEXT**.
 - Displays the index page (content varies depending on the broadcasters).
 - Current / sub page numbers are displayed on the top left of the screen.
 - Time / date is displayed on the top right of the screen.
 - Colour bar is displayed on the bottom of the screen.
2. Select the page with **Numeric buttons**, \triangle / ∇ or     (coloured buttons).



- To adjust contrast
 - 1) Press **MENU** twice to display **Contrast**.
 - 2) Adjust with \triangleleft / \triangleright and press **OK** to set.
- To exit teletext
EXIT

■ Reveal hidden data

1. Press **MENU**.
2. Reveal with  (red).
 - Press again to rehide.

■ To view a favourite page stored

Press **STTL** to view a favourite page.

- Call up the page stored on  (blue). (List mode)
- Factory setting is "P888" (subtitle service) on  (blue). (List mode)

■ FULL / TOP / BOTTOM

1. Press **MENU**.
2. Press  (green) to change the layout.

■ Watch TV and teletext in two windows at once

1. Press **TEXT** to view in multi window.
 - Operations can be made only in teletext screen.
2. Press **TEXT** repeatedly to return to TV or teletext.

■ Store frequently viewed pages in the colour bar (List mode)

1. Press     (coloured buttons) while the page is displayed.
2. Press and hold **OK**.

- The stored page number changes to white.
- If you use subtitles, do not change number on  (blue).
- To change stored pages
 - 1) Press     (coloured buttons) to change.
 - 2) Enter a new page number with **Numeric buttons**.



- 3) Press and hold **OK**.

■ View sub page

The number of sub pages is displayed on the top of the screen. Press  /  to view sub page. (Only when teletext has more than one page.)

- The number of sub pages varies depending on the broadcasters (up to 79 pages).
- Searching may take time while you are watching TV.
- To view a specific sub page
 - 1) Press **MENU**.
 - 2) Press  (blue).
 - 3) Enter the 4-digit number (e.g. P6, press    ).

Teletext mode

Teletext services are the text information provided by the broadcasters.

- The features may vary depending on the broadcasters.
 - The availability of teletext services for a programme is indicated by **TEXT** in the information banner.
1. Display the menu with **MENU**.
 2. Select **Setup > Display Settings > Teletext** with Δ / ∇ and press **OK** to access.
 3. Select **FASTEXT / List** with Δ / ∇ and press **OK** to set.

■ FASTEXT mode

In FASTEXT mode, four differently coloured subjects are situated on the bottom of the screen.

To access more information about one of these subjects, press the appropriate coloured button.

This facility enables fast access to information on the subjects shown.

■ List mode

In List mode, four differently coloured page numbers are situated on the bottom of the screen. Each of these numbers can be changed and stored in the TV's memory.

 → **Watching > Teletext > Viewing Teletext**

Teletext Character Set

Selects teletext language font.

1. Display the menu with **MENU**.
 2. Select **Setup** > **Display Settings** > **Teletext Character Set** with Δ / ∇ and press **OK** to access.
 3. Select the font with Δ / ∇ and press **OK** to set.
-

West:

English, French, German, Greek, Italian, Spanish, Swedish, Turkish, etc.

East1:

Czech, English, Estonian, Lettish, Rumanian, Russian, Ukrainian, etc.

East2:

Czech, Hungarian, Lettish, Polish, Rumanian, etc.

- Ireland only

3D

Note

- Display the image (TV, external input, etc.) full-screen for viewing 3D.
- If light appears to flicker under fluorescents or dimmers when using the 3D Eyewear, change the setting of [3D Refresh Rate](#).

 → [Watching > 3D > 3D Settings](#)

- Do not exert pressure on or scratch the lens of the 3D Eyewear.
- 3D content will not be correctly visible if the 3D Eyewear is worn upside down or back-to-front.
- When viewing 3D images, make sure your eyes are at an approximately horizontal level and keep a position where you do not see double images.
- Do not wear the 3D Eyewear when watching something other than 3D images. Liquid crystal displays (such as computer screens, digital clocks or calculators, etc.) may be difficult to see while wearing the 3D Eyewear.
- Do not use the 3D Eyewear as sunglasses.
- 3D effects may be perceived differently depending on the person.

3D Eyewear - Functions

■ Part names and functions



1 Power button / Mode change / Indicator lamp

- Power button
 - Press and hold for approx. 1 second to turn the 3D Eyewear on. (The indicator lamp lights for 2 seconds.)
 - Press and hold for 3 seconds or more to turn the 3D Eyewear off. (The indicator lamp lights 3 times.)
- Mode change
 - Press and hold for approx. 1 second to change the mode between 3D and 2D (view a 3D image in 2D).
 - When power is off, press and hold for approx. 5 seconds to change to registration mode.
 -  → [Watching > 3D > 3D Eyewear - Registration](#)
- Indicator lamp
 - Lights or flashes during use to show the status (see below).

2 Protection film

- Peel off the protection film on both side of the lens.

3 Insulating sheet

- When using for the first time, remove the insulating sheet. Pull the insulating sheet.

4 Battery cover

- To replace the battery

 → [Watching > 3D > 3D Eyewear - Replacing battery](#)

■ Indicator lamp status

- Lights red for 2 seconds when turned on:
Sufficient battery level
- Flashes 5 times when turned on:
Low battery level
- Flashes red:
Under registering
- Flashes red once every 1 second:
Under reconnecting to the TV
- Flashes red 3 times:
Power off (Press and hold for more than 3 seconds when in use,
or automatically power off when registering / reconnecting fails, or
connection is lost.)
- Flashes red once every 2 seconds when in use:
3D mode is selected.
- Flashes red twice every 4 seconds when in use:
2D mode is selected.

■ Storing and cleaning the 3D Eyewear

- Store the 3D Eyewear in a cool, dry place.
- Clean using a soft, dry cloth.
 - Wiping the 3D Eyewear with a cloth that is covered in dust or dirt may scratch the eyewear. Shake off any dust from the cloth before use.
 - The lens of the 3D Eyewear is easily broken. Be careful when cleaning the lens.
- Do not use benzene, thinner or wax on the 3D Eyewear, otherwise this may cause peeling of the paint.
- Do not dunk the 3D Eyewear in liquid such as water.

3D Eyewear - Registration

■ First registration

Perform the first registration when the 3D Eyewear is used for the first time.

1. Turn the TV on.
2. Press Power button for about 1 second to turn the 3D Eyewear on.
 - The lamp lights for about 2 seconds and then flashes.
 - The 3D Eyewear will be turned on and the registration will start.
 - Place the 3D Eyewear within 50 cm from the TV while registration is in progress.
3. After the registration is successfully completed, the 3D Eyewear will reconnect with TV automatically when the 3D Eyewear is turned on near the TV in 3D mode.

■ Registration again

When connection with the registered TV fails, or when using with another TV, re-register the 3D Eyewear.

1. Turn the TV on.
2. Within 50 cm from the TV, press Power button until lamp lights, then release it to start registration.
3. After the registration is successfully completed, the 3D Eyewear will reconnect with TV automatically when the 3D Eyewear is turned on near the TV in 3D mode.

= Note =

- If the registration failed, the 3D Eyewear will be turned off. In this case, turn the TV off and perform from step 1.

3D Eyewear - Replacing battery


When the battery is running low, the indicator lamp flashes 5 times on turning the 3D Eyewear on. In this case, early battery replacement is recommended.

- Dispose of the old batteries as non-burnable rubbish, or in line with the waste disposal regulations in your local area.

1. Remove the battery cover using pen tip or screwdriver (minus -), etc.



2. Replace the battery (coin-shaped lithium battery CR2025).

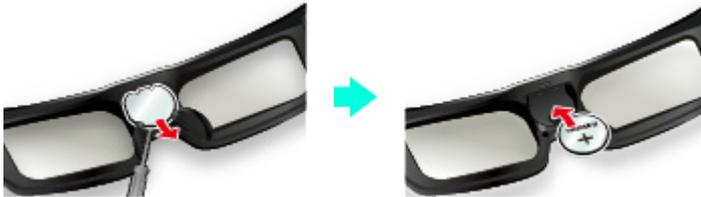

- If difficulty, remove it with the tip of the driver.
- Note the correct polarity (+ or -).

3. Attach the battery cover.



Viewing 3D

You can enjoy viewing 3D images with contents or programmes corresponding to the 3D effect by wearing the 3D Eyewear.

- This TV supports Frame Sequential, Side by Side and Top and Bottom 3D formats.
 - Frame Sequential is the 3D format that the images for the left and right eyes are recorded with the high definition quality and alternately played back.
- 3D content of 4K format is not supported.
- The 3D Eyewear must be worn to view 3D images. Perform the First Registration when the 3D Eyewear is used for the first time.

 → [Watching > 3D > 3D Eyewear - Registration](#)

1. Turn the 3D Eyewear on and put it on.
 - Connection status and battery status are displayed on the bottom right of the screen.
2. View the 3D images.
 - Safety precautions will be displayed when you first watch the 3D image. Select **Yes** or **No** to continue to view 3D images.
If you select **Yes**, this message will be displayed again in the same condition after Mains Power On / Off switch is next turned on. Select **No** if you do not want to display this message again.
 - Turn off the 3D Eyewear after using it.

■ Playing back 3D-compatible Blu-ray disc (Frame Sequential)

- Connect the 3D-compatible player via a fully wired HDMI compliant cable. (If you use the non 3D-compatible player, the images will be displayed in 2D mode.)
- If the input mode is not switched automatically, select the input mode connected to the player.

 → [Watching > External equipment > Watching external input](#)

■ 3D-supported broadcast

- Please consult the suppliers of contents or programmes for availability of this service.

■ 3D photos and 3D videos taken by 3D-compatible Panasonic products

- Available in Media Player and Network services

 → Media Player

 → Network

■ 2D images converted to 3D

- Set to 2D→3D mode in 3D Mode Selection.

 → Watching > 3D > 3D Mode Selection

- Contents of 4K format cannot be changed to 3D mode.

3D Mode Selection

You can easily change the viewing mode between 2D and 3D with **3D**.

1. Display 3D Mode Selection with **3D**.
2. Select the mode with \triangle / ∇ and press **OK** to set.
 - Items of 3D Mode Selection vary depending on the condition.

3D / 2D:

Displays the appropriate image as you desire without selecting 3D format.

- This mode may not work properly depending on the source image format. In this case, select the appropriate 3D format manually.

■ To change 3D format manually

When the image is not changed properly using 3D / 2D mode, use this manual setting.

1. Display 3D Mode Selection (Manual) with  (red) during above operation.
2. Select the mode with \triangle / ∇ and press **OK** to set.

Original:

Displays the source image as it is.

- Use to identify the format type of the source image.

 → Watching > 3D > Source image format

Side by Side - 3D / Side by Side - 2D / Top and Bottom - 3D / Top and Bottom - 2D:

Displays the mode you select.

- Not valid in Analogue and AV mode

2D→3D:

Converts 2D images into 3D.

- Please note the 3D images appear slightly different from the originals.
- Using this function for profit-making purposes, or publically showing images converted from 2D to 3D in places such as shops or hotels, etc. may infringe on the rights of the copyright holder protected under copyright law.

3D Settings

1. Display the menu with **MENU**.
 2. Select **Picture > 3D Settings** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
3D Detection / **3D Signal Message** / **3D Refresh Rate** / **2D→3D Depth** / **3D Adjustment** / **L/R Picture Swap** / **Edge Smoother** / **Safety Precautions**
 4. Set with Δ / ∇ and press **OK** to store.
 - To exit the menu screen
EXIT
-

3D Detection

(**On (Advance)** / **On** / **Off**)

Selects whether to switch to the 3D mode automatically or not.

On (Advance):

Detects all the 3D format signals and displays the 3D image automatically.

On:

Detects the particular 3D format signals (Frame Sequential, etc.) and displays the 3D image automatically.

- To view 3D images without any notifications and operations, set to **On (Advance)**.
-

3D Signal Message

(**On** / **Off**)

Selects whether to give a notification message when a signal of 3D format is found or not.

- Not valid when **3D Detection** is set to **On (Advance)**
 - For DVB, Component, HDMI and DisplayPort input
-

3D Refresh Rate

(Auto / 100Hz / 120Hz)

Reduces juddering and flicker noises of the 3D images when using the 3D Eyewear.

100Hz:

If light appears to flicker under fluorescents (or dimmers) of 50 Hz.

120Hz:

If light appears to flicker under fluorescents (or dimmers) of 60 Hz.

2D→3D Depth

(Max / Mid / Min)

Selects a level of 3D-image depth for viewing converted 2D images.

3D Adjustment

(On / Off)

Adjustment of the 3D effect (except in 2D→3D mode)

Set to On to enable Effect setting.

- When setting to On, a safety precaution message will appear. Read it carefully and press **BACK/RETURN** to go to Effect setting.
- When adjusting, take into account that the vision of 3D images varies among different individuals.

Effect:

Adjusts the 3D depth according to the contents or to your preference. (This setting will not be memorised when changing the input mode or channel.)

L/R Picture Swap

(L/R (Normal) / R/L (Reversed))

Swaps pictures for left eye and right eye (except in 2D→3D mode).

Select R/L (Reversed) if you feel that the sense of depth is unusual.

- This setting will not be memorised when changing the input mode or channel.
-

Edge Smoother

(On / Off)

Set to **On** if you feel the contoured parts of an image are not smooth enough (except in **2D→3D** mode).

Safety Precautions

Displays the precautions for viewing 3D images.

= Note =

- Display the image (TV, external input, etc.) full-screen to use this function completely.

Source image format

If the picture appears to be abnormal, refer to the table of images that can be seen for each **3D Mode Selection (Manual)** and the source image format, and select the correct 3D mode.

- 3D images are displayed correctly with appropriate 3D format as following yellow boxes.

1	5			
	6	7	8	9
2				
3				
4				

1 Source image format

2 Side by Side

3 Top and Bottom

4 Normal format (2D)

5 3D Mode Selection

6 Original

7 Side by Side - 3D

8 Top and Bottom - 3D

9 2D→3D

*: When selecting **Side by Side - 2D** or **Top and Bottom - 2D**, the images will be displayed without 3D effect.

- Depending on the player or broadcasts, the image may be different from the above illustrations.

Tuning and editing channels

Setting menu

You can retune channels, create your favourite channel lists, skip unwanted channels, etc.

1. Display **TV Selection** with **TV**.
2. Select the mode with \triangle / ∇ and press **OK** to set.
Freesat (UK only) / **DVB** / **Analogue** / **Other Sat. (UK only)** / **Satellite (Ireland only)**
3. Display the menu with **MENU**.
4. Select **Setup > Tuning Menu** with \triangle / ∇ and press **OK** to access.
Freesat Tuning Menu (UK only) / **DVB Tuning Menu** / **Analogue Tuning Menu** / **Other Sat. Tuning Menu (UK only)** / **Satellite Tuning Menu (Ireland only)**
 - The menu name varies depending on the TV mode.
5. Select one of the functions with \triangle / ∇ and press **OK** to access.
Favourites Edit / **Channel List** / **Regional Channel Edit** / **Auto Setup** / **Channel Sorting by Region** / **Manual Tuning** / **Update Channel List** / **New Channel Message** / **Signal Condition** / **Add New Channels**
 - The function items vary depending on the TV mode and country you select.

Favourites Edit

■ List favourite Freesat channels

Create your favourite channel list from various broadcasters.

The Freesat favourites list is available for switching from **Channel Genre** in the TV Guide screen.

 → **Watching > TV Guide > Using TV Guide**

1. Select **Favourites Edit** with \triangle / ∇ and press **OK** to access.
2. Select a channel to list from all Freesat channels with \triangle / ∇ .
 -  appears when the channel is encrypted.
 - To add all channels to the list, press  (yellow).
 - To delete a channel
 - 1) Select the channel with \triangle / ∇ .
 - 2) Press **OK** to delete.
 - Press  (yellow) to delete all channels

■ List favourite Other Sat. / Satellite channels

Create your favourite channel lists from various broadcasters (up to 4: [Favourites 1 to 4](#)).

The Other Sat. / Satellite favourites lists are available for switching in the information banner.

 → [Watching > Basic > Information banner](#)

- To change the category, press  (blue).
- To add consecutive channels to the list at once
 - 1) Press  (yellow).
 - 2) Make the channel block with  /  and press  to add.

■ List favourite DVB channels

Create your favourite channel lists from various broadcasters (up to 4: [Favourites 1 to 4](#)).

The DVB favourites lists are available for switching in the information banner and from [Category](#) in the TV Guide screen.

 → [Watching > Basic > Information banner](#)

 → [Watching > TV Guide > Using TV Guide](#)

1. Select [Favourites Edit](#) with  /  and press  to access.
2. Select a channel to list from all DVB channels with  / .
 -  appears when the channel is encrypted.
 - To display other favourites
 -  (green)
3. Press  to add it to favourites list.
 - To add all channels to the list
 - 1) Press  (yellow).
 - 2) Press  (green) to add all.
4. Press  and  to store.

■ Edit DVB favourites list

You can edit the favourites list while the cursor is on the channel in the favourites list.

- To move the channel
 - 1) Select the channel with \triangle / ∇ .
 - 2) Press  (green).
 - 3) Select the new position with \triangle / ∇ or select the turn with **Numeric buttons**.



- 4) Press  (green) to store.
- To delete the channel
 - 1) Select the channel with \triangle / ∇ .
 - 2) Press **OK** to delete.
 - Press  (yellow) to delete all channels.
 - To name the favourites
 - 1) Press  (red).
 - 2) Enter characters (maximum 10 characters) with \triangle / ∇ / \triangleleft / \triangleright or **Numeric buttons**, and press **OK** to set.



- 3) Press **BACK/RETURN** to store.

= Note =

- Channel position numbers (known as logical channel numbers) can be swapped in [Channel List](#).

 → [Watching > Tuning and editing channels > Channel List](#)

Channel List

■ Skip unwanted Freesat / DVB / Analogue channels

You can hide (skip) unwanted channels. The hidden channels cannot be displayed except in this function.

1. Select **Channel List** with Δ / ∇ and press **OK** to access.
2. Select a channel with Δ / ∇ .
3. Press **OK** to set **Reveal** / **Hide** (skip).

: **Reveal**

: **Hide** (skip)

- To reveal all channels (DVB / Analogue)

 (yellow)

■ Edit DVB / Analogue Channels

- To swap the channel position number (logical channel number)

1) Press  (green) to edit.

2) Enter the new position number with **Numeric buttons**, and press  (green) to store.



- To retune each channel (**Manual Tuning**)

 (red)

- Only for the revealed channels

- To rename the channel name (Analogue)

1) Press  (blue) to edit.

2) Enter characters (maximum 5 characters) with Δ / ∇ / \triangleleft / \triangleright or **Numeric buttons**, and press **OK** to set.



3) Press **BACK/RETURN** to store.

= Note =

- If a VCR is connected only with the RF cable in Analogue, edit **VCR**.

■ Create the channel list for Other Sat. / Satellite

Create your channel list of Other Sat. / Satellite for viewing from all the found channels to exclude the duplicated channels or to reduce the number of channels. And then you can select your desired channels easily.

1. Select a channel to list from [Channels Found](#) with \triangle / ∇ .
 - To change the category
 (red)
2. Press **OK** to add it to [Channels for Viewing](#).
 - To add consecutive channels to the list at once
 - 1) Press  (yellow).
 - 2) Make the channel block with \triangle / ∇ and press **OK** to add.
 - To delete the selected channel from the list of [Channels Found](#)
 (green)
 - To exclude the selected channel from the list of [Channels for Viewing](#)
OK
 - To move the selected channel in the list of [Channels for Viewing](#)
 - 1) Press  (green).
 - 2) Select the new position with \triangle / ∇ or select the turn with **Numeric buttons**.

1	2	3
4	5	6
7	8	9
0		
 - 3) Press  (green) to store.

Regional Channel Edit

You can replace some regional channels with the available channels from another region channel (if available).

1. Select a channel to replace from [Freesat Regional Channels](#) with \triangle / ∇ to set.
2. Select a channel to be replaced from [Alternative Regional Channels](#) with \triangle / ∇ to set.

Auto Setup

Automatically retunes the channels received in the area.

- This function is available if channel tuning is already performed.
- Only the selected mode is retuned. All the previous tuning settings are erased.
- If Child Lock PIN number has been set, the PIN number is required.

 → Functions > Child Lock > PIN number

- If tuning has not been done completely, set [Manual Tuning](#).

 → Watching > Tuning and editing channels > Manual Tuning

– For DVB / Analogue / Other Sat. / Satellite

■ Freesat (UK only)

- To use dual tuner function, set [Dual Tuner Mode](#) to [On](#).
1. Select [Auto Setup](#) with \triangle / ∇ and press **OK** to access.
 2. The confirmation screen is displayed and press **OK** to start [Auto Setup](#). (Settings are made automatically.)
 3. Enter your postcode with \triangle / ∇ / \triangleleft / \triangleright or **Numeric buttons**, and press **OK** to set.



- When the operation is completed, the channel at the lowest position will be displayed.

■ DVB, Analogue

1. Select [Auto Setup](#) with \triangle / ∇ and press **OK** to access.
2. The confirmation screen is displayed and press **OK** to start [Auto Setup](#). (Settings are made automatically.)
 - When the operation is completed, the channel at the lowest position will be displayed.

■ Other Sat. / Satellite

- To use dual tuner function, set [Dual Tuner Mode](#) to [On](#).
1. Select [Auto Setup](#) with \triangle / ∇ and press **OK** to access.
 2. Select the satellite with \triangleleft / \triangleright .
 - Select [IN 1](#) / [IN 2](#) in [Signal Input](#) with \triangleleft / \triangleright to set for each tuner.
 - Selectable satellites are [Astra2/Eurobird](#), [Astra1](#) and [Hotbird](#).
 - Check the dish alignment for the satellite to select.
 - The Freesat channel uses [Astra2](#) at 28.2° East and [Eurobird1](#) at 28.5° East satellites. To ensure your satellite dish is correctly installed, consult your Freesat registered dealer. (UK only)
 - For [Astra1](#) and [Hotbird](#), please consult the received satellite broadcasting companies.
 - If you want to tune from all available satellites, select [Any Satellite](#).
 3. Select [Start](#) with \triangle / ∇ and press **OK** to access.
 4. The signal condition is displayed and press **OK** to access.
 - If you select [Any Satellite](#), this step is skipped.
 - It takes a while to check the connection for your selected satellite.
 - Ensure that the [Signal Lock](#) status is shown as [Locked](#). If it is not locked, the search cannot be executed.
 - If the status is shown as [Not locked](#) and [Signal Quality](#) / [Signal Strength](#) have no indications, please check the dish alignment. If the status is shown as [Not locked](#) but there are some levels of [Signal Quality](#) / [Signal Strength](#) indicated, select [Any Satellite](#) in step 2 and try again.
 5. The confirmation screen is displayed and press **OK** to access.
 6. Select the search mode with \triangleleft / \triangleright and press **OK** to start [Auto Setup](#). (Settings are made automatically.)
 - If you select [Astra2/Eurobird](#) or [Any Satellite](#), Freesat channels will also be searched.
 - When the operation is completed, the channel at the lowest position will be displayed.

■ Auto Setup using the buttons on the TV

1. Press and hold INPUT/OK/HOLD for MENU button for 3 seconds to display the menu.
2. Set [Auto Setup](#) with following control panel buttons.
 - Move the cursor / select from a range of options / select the menu item (up and down only)



- Access the menu / store settings after adjustments have been made or options have been set with INPUT/OK/HOLD for MENU button

Channel Sorting by Region

You can sort DVB channels so that those with the best signal quality, or those for your preferred region, appear nearer the top of your channel list. (UK only)

1. Select the region with \triangle / ∇ and press **OK** to access.
2. Select repeatedly until you reach the available region.
 - Normally, you should select [Best signal quality \(All Regions\)](#).
 - If you choose to select your preferred region, you could find channels with a weaker signal appear nearer the top of your channel list. If you have any image or sound problems, select [Best signal quality \(All Regions\)](#) instead.

Manual Tuning

- Normally use [Auto Setup](#) or [Update Channel List](#) to retune DVB channels.
- If tuning has not been done completely or for adjusting the direction of the aerial, use this function. (DVB)
- All DVB channels found will be added to [Channel List](#).

■ DVB (UK)

1. Select [Frequency](#) with \triangle / ∇ .
2. Press **OK** to search.
 - All channels found will be added to [Channel List](#).

■ DVB (Ireland)

1. Select a channel with \triangle / ∇ and adjust frequency with \triangleleft / \triangleright for each channel.
 - Set where the level of [Signal Quality](#) becomes the maximum.
2. Press **OK** to search.

■ Analogue

Set Analogue channel manually after [Auto Setup](#).

1. Select the channel position with **Numeric buttons**.



2. Select the channel with **Channel Up / Down**.



3. Search with ◀ / ▶.

4. Select [Store](#) with ▲ / ▼ and press **OK** to set.

- Use [Fine Tuning](#) to make small adjustments to the tuning of an individual programme (affected by weather conditions, etc.).
 - Ireland only
- If a VCR is connected only with the RF cable, select channel position **0**.

■ Other Sat. / Satellite

Set tuning parameters for the required satellite, details can usually be found in a satellite TV magazine.

- Normally use [Auto Setup](#) or [Add New Channels](#) to retune Other Sat. / Satellite channels.
- Please consult the received satellite broadcasting companies for the setting.

Update Channel List

By updating the DVB channel list, you can add new channels, delete removed channels or change channel names and positions automatically.

- The channel list is updated while keeping your settings in [Favourites Edit](#), [Channel List](#), [Child Lock](#), etc.
- Depending on the signal condition, the update may not work properly.

New Channel Message

Selects whether to give a notification message when a new DVB channel is found or not.

- When a notification message appears, you can perform [Update Channel List](#) pressing **OK**.

Signal Condition

Selects a channel and checks the signal condition with indicators.

- A good Signal Strength is not an indication of suitable signal for Freesat / DVB reception.
- Vertical lines show the maximum signal value of the selected channel.
- To change the channel



- For Freesat and DVB

Add New Channels

You can add any new channels found automatically to channel list.

1. The signal condition is displayed and press **OK** to access.
 - If you select [Any Satellite](#) in [Auto Setup](#), this step is skipped.
 - It takes a while to check the connection for your selected satellite.
 - Ensure that the [Signal Lock](#) status is shown as [Locked](#). If it is not locked, the search cannot be executed.
 - If the status is shown as [Not locked](#) and [Signal Quality](#) / [Signal Strength](#) have no indications, please check the dish alignment.
2. Select the search mode with **◀ / ▶** and press **OK** to start [Add New Channels](#).
 - New channels can only be added to the existing channel list from the same satellite.

Recording

USB HDD setup

Preparations

You can record the digital TV programmes to the connected USB HDD and enjoy playing back in various ways.

- Prepare the USB HDD for the exclusive use of recording with this TV.
- Connect the USB HDD to the USB 3 port with the USB cable.
- Be sure to connect the USB HDD to the socket outlet.
- To remove the USB HDD safely from the TV, perform [Safely remove USB](#) in [USB Device Setup](#).

 → [Recording > USB HDD setup > Setting for USB HDD](#)

- Check the terminal type and cable plugs are correct when connecting.



- 1 USB port
- 2 USB cable
- 3 USB HDD
- 4 Socket outlet

= Caution =

- All data in the USB HDD will be erased in the following cases:
 - When formatting the USB HDD with this TV
 -  → [Recording > USB HDD setup > Setting for USB HDD](#)
 - When formatting the USB HDD to use on PC, etc.
- When the TV is repaired due to a malfunction, you may have to format the USB HDD again with this TV to use it. (All data will be erased after formatting.)
- To use the USB HDD with your PC after recording with this TV, format it again on your PC. (Special operations or tools may be necessary to format on your PC. For details, read the manual of the USB HDD.)

- The data recorded on the USB HDD with this TV can only be played back on this TV. You cannot play back its contents with another TV (including the TV of the same model number) or any equipment.
- Do not turn the TV off, pull out the mains plug or remove the USB HDD during operation (formatting, recording, etc.). Doing so may cause malfunction of the device or damage the recorded data. (An electric outage may also be a cause of malfunction.)

= Note =

- Analogue TV programme cannot be recorded on the USB HDD.
- The data broadcasting (MHEG, etc.), radio broadcasting will not be recorded, and also the recording function will not work during the period without any signal.
- Not all the programmes can be recorded depending on the broadcaster and service provider.
- You cannot copy the recorded TV programmes of the USB HDD.
- The recorded content may not be played back properly depending on the progress of recording.
- For more information of the USB HDD

 → [Recording > Technical information > USB HDD](#)

Setting for USB HDD

Format and set up the USB HDD with this TV in order to use it for recording.

All the USB devices recognised as a mass storage device will be listed.

- Please note that USB HDD will be formatted and all data in it will be erased after this setup.
- Before setting, connect the USB HDD and be sure to turn on the USB HDD.

 → [Recording > USB HDD setup > Preparations](#)

1. Display the menu with **MENU**.
2. Select **Setup > USB Device Setup** with \triangle / ∇ and press **OK** to access.
3. Select the USB HDD for recording with \triangle / ∇ and press **OK** to start setup.
 - Some USB HDD may not be displayed.
 - To display information of the highlighted device



4. When the caution and confirmation screen for using USB HDD is displayed, select **Yes** with $\triangleleft / \triangleright$ and press **OK** to proceed.

5. When the confirmation screen of USB HDD name is displayed, select **Yes** with  /  and press **OK** to set.

- The name for the USB HDD is created automatically. If you want to edit the name, select **Yes**.

1) Enter characters with  /  /  /  or **Numeric buttons**, and press **OK** to set.



2) Press **BACK/RETURN** to store.

6. When the confirmation screen to enable USB HDD for recording is displayed, select **Yes** with  /  and press **OK** to set.

- If another formatted USB HDD for recording already exists, this confirmation screen will be displayed to switch to enable this USB HDD for recording.

- Mode of the USB HDD

 : The USB HDD is available for recording / playing back.

Only one USB HDD on the list is available for recording.

 : The USB HDD is available for playing back.

- To change the mode

OK

- To edit USB HDD name

 (green)

- To format

 (red)

- To remove the USB HDD safely from the TV

 (yellow)

= Note =

- You can only select one USB HDD for recording at a time.
- You cannot change the settings for the USB HDD while recording is in progress.
- Ensure that **Dual Tuner Mode** is set to **On** in **Auto Setup** to record 2 programmes simultaneously in Freesat or Other Sat. / Satellite.

 → **Watching > Tuning and editing channels > Auto Setup**

Recording current programme

One Touch Recording

Records the current programme to the USB HDD immediately.

- Confirm the remote control code is “73”.

 → Watching > External equipment > Operating with TV's remote control

1. Display the menu with **MENU**.
2. Select **Setup** > **Recording Setup** > **One Touch Recording** with Δ / ∇ and press **OK** to access.
3. Select the maximum recording time **30 / 60 / 90 / 120 / 180 (minutes)** with Δ / ∇ and press **OK** to set.

■ To start One Touch Recording

Press  to start.

■ To stop recording in progress

Press  to stop.

■ To play back or delete the recorded contents

Recorded TV programmes can be played back in Media Player.

1. Display icons of the feature with **APPS**.
2. Select **Recorded TV** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.

 → Media Player > Recorded TV mode

- Even if **One Touch Recording** is in progress, you can play back all the contents. (Depending on the USB HDD, playback may not be possible or the recording may not work properly during playback.)

Rewind LIVE TV

Records the current programme to the USB HDD constantly within the maximum recordable time.

- Confirm the remote control code is “73”.

 → Watching > External equipment > Operating with TV's remote control

1. Display the menu with **MENU**.
2. Select **Setup** > **Recording Setup** > **Rewind LIVE TV** with Δ / ∇ and press **OK** to access.
3. Select **Auto** with Δ / ∇ to start **Rewind LIVE TV**.
 - When you select **Auto**, recording will start automatically.
 - This recording may not start if another recording is in progress, TV signal condition is bad or there are no images displayed.

■ To operate Rewind LIVE TV

- To pause



- To search backward (up to 90 minutes)



- After pausing or searching backward, the following buttons are available for operation.

\triangleleft : Search backward

\triangleright : Search forward

∇ : Return to the current programme

OK : Playback / Pause

  : Search backward / Search forward

 : Pause / Resume

■ To stop Rewind LIVE TV

1. Display the menu with **MENU**.
2. Select **Setup** > **Recording Setup** > **Rewind LIVE TV** with Δ / ∇ and press **OK** to access.
3. Select **Off** with Δ / ∇ to stop **Rewind LIVE TV**.
 - If you stop **Rewind LIVE TV**, the recorded content for **Rewind LIVE TV** will be deleted.
 - **Rewind LIVE TV** will be stopped and the recorded content will be deleted automatically in the following conditions: (Even if **Rewind LIVE TV** stops for the following conditions, as long as the setting is **Auto**, a new recording will start automatically in a condition that makes the recording available.)
 - Other channels selected
 - Locked channel selected
 - Invalid channel selected
 - No TV signal
 - External input selected
 - When the full-screen application (TV Guide, Media Player, eHELP, etc.) is launched
 - When the TV enters Standby or is turned off

Timer Programming

Setting Timer Programming

This function allows you to select programmes that you want to be reminded to watch or record to the USB HDD.

- Not valid in Analogue

1. Display **TV Selection** with **TV**.
2. Select the mode with Δ / ∇ and press **OK** to set.
Freesat (UK only) / **DVB** / **Other Sat.** (UK only) / **Satellite** (Ireland only)
3. Display the menu with **MENU**.
4. Select **Timer** > **Timer Programming** with Δ / ∇ and press **OK** to access.

■ Set timer event details

1. Press **OK** to start making the settings.
2. Select **USB HDD Rec.** / **Reminder** with Δ / ∇ .

USB HDD Rec.:

Records the programme to the USB HDD.

When the start time comes, the channel may be switched automatically and the video and audio signals may be output. 2 minutes before the start time, a reminder message may appear if you are watching TV.

Reminder:

Reminds you to watch the programme.

When you are watching TV, a reminder message appears 2 minutes before the start time. Press **OK** to switch to the programmed channel.

3. Select the item (channel, date, start time, end time) with \triangleleft / \triangleright and set **4** / **6** / **7** with Δ / ∇ .
 - **4** and **7** can also be entered with **Numeric buttons**.



(Example)

1	2	3	4	5	6	7
			1 ZDF		--/--	--:-- --:-- (-- xxx)
					--/--	--:-- --:-- (-- xxx)
					--/--	--:-- --:-- (-- xxx)

1 !: Overlapped timer events

2 Function

(USB HDD Rec. / Reminder)

3 TV mode

: DVB-C

: DVB-T

• For UK

: Freesat

: DVB

: Other Sat.

• For Ireland

: DVB

: Satellite

– You cannot change the mode within the menu.

4 Channel position, channel name, etc.

5 STTL: Displays subtitles (if available)

– Press (yellow) to indicate subtitles and press again to remove them.

– For [Reminder](#)

6 Date (You can set one day ahead with Δ , select daily or weekly with ∇ .)

– [Daily Sun-Sat](#): Sunday to Saturday

– [Daily Mon-Sat](#): Monday to Saturday

– [Daily Mon-Fri](#): Monday to Friday

– [Weekly Sat / Fri / Thu / Wed / Tue / Mon / Sun](#): Same time on the same day every week

7 Start time / End time / Duration (automatic display)

4. Store with .

■ Guide link programming

 : Guide link programming - Programmes according to the TV Guide signal

 : Split Programme

 → Watching > TV Guide > Guide link programming

- UK only
- Guide link programming is **Timer Programming** which is controlled by information from the TV Guide; if programme start and end times are changed by the broadcaster, the timer event will follow the change.

A Split Programme programming is a Guide link programming which is interrupted by one or more other programmes. Note that Guide link programming (including Split Programme programming) only works reliably if correct information is received from broadcasters.

Editing Timer Programming

1. Display the menu with **MENU**.
2. Select **Timer > Timer Programming** with Δ / ∇ and press **OK** to access.
3. Select the event with Δ / ∇ .

- To change a timer event

OK

- Correct as necessary.

 → Recording > Timer Programming > Setting Timer Programming

- To delete a timer event

1) Press  (red).

2) Press **OK** to delete.

- To display subtitles (if available)

 (yellow)

- Press again to remove subtitles.

– For **Reminder**

- To cancel a timer event temporarily

 (blue)

- Press again to stop cancelling.

■ To stop recording

1. Press .
2. Select the programme with Δ / ∇ and press **OK** to access (when 2 recordings are in progress).
3. Select **Yes** with \triangleleft / \triangleright and press **OK** to stop.

■ To play back or delete the recorded contents

Recorded TV programmes can be played back in Media Player.

1. Display icons of the feature with **APPS**.
2. Select **Recorded TV** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.

 → **Media Player > Recorded TV mode**

- The recorded content may not be played back properly depending on the progress of recording.

Remote recording

You can set timer programming events of this TV on the network equipment (smartphone, etc.) from outside the home network.

- Ensure the network connections and network settings are completed.

 → **Network > Network connections**

 → **Network > Network settings**

- Set **TV Anywhere** to **On**.

 → **Network > Network settings > TV Anywhere Settings**

- Additional information for the services may be found on the following website.

<http://panasonic.net/viera/support> (English only)

= Note =

- This function is not available when the TV is turned off with Mains Power On / Off switch.
- Depending on the network condition, this function may not be available.

Note

- [TV Guide](#) may also be used to set timer event.
 → [Watching > TV Guide > Timer Programming](#)
- [Timer Programming](#) can store up to 15 events.
- [Timer Programming](#) only works reliably if correct time information is received via the signal from the broadcaster or service provider.
- For recording using [Timer Programming](#), the TV must be either on or in Standby. For reminders to be displayed, the TV must be on.
- Depending on the progress of recording, analogue channel may not be selected.
- Recording an encrypted (copy-protected) programme may not be possible.
- 2 minutes before the start time, a reminder message may appear if you are watching TV.
 - To remove the message and start the programming, press **OK**.
 - To cancel the programming, press **EXIT**.
- LED will turn to orange in Standby mode if [Timer Programming](#) is set.
- Reminder messages will remain displayed until one of the following occurs:
 - You press **OK** to view the programme or **EXIT** to cancel the reminder.
 - The timer event that the reminder is set for ends.
- “!” identifies that three or more timer events are overlapped. [USB HDD Rec.](#) is given priority over [Reminder](#). As for the overlapped recording events, the first event starts and finishes as programmed. The next event can then start.
- The recording of [Timer Programming](#) may automatically change the channel to the programmed channel a few seconds before the start time.
- The recording of [Timer Programming](#) will be performed even if the TV is in [Rewind LIVE TV](#) recording. In this case, [Rewind LIVE TV](#) recording will be cancelled.
 → [Recording > Recording current programme > Rewind LIVE TV](#)
- For more information of the USB HDD
 → [Recording > Technical information](#)

Technical information

USB HDD

■ USB HDD

(for recording the digital TV programmes with this TV)

- The capacity of USB HDD that works with this TV is from 160 GB to 3 TB.
- Connect the USB HDD to the socket outlet to record and play back properly with this TV.
- Use the USB HDD formatted with this TV.

 → Recording > USB HDD setup > Setting for USB HDD

- Regarding performance, not all USB HDDs are guaranteed. Check the USB HDDs that have been tested for compatibility with this TV at the following website.

<http://panasonic.net/viera/support> (English only)

= Note =

- Data modified with a PC may not be displayed.
- Do not remove the device while the TV is accessing data. Otherwise this can damage the device or TV.
- Do not touch the pins on the device.
- Do not subject the device to a high pressure or impact.
- Insert the device in the correct direction. Otherwise this can damage the device or TV.
- Electrical interference, static electricity, or erroneous operation may damage the data or device.

Media Player

Using Media Player

Information

Media Player allows you to enjoy photo, video or music recorded on the SD Card / USB Flash Memory / USB HDD / network device, and contents recorded with this TV to the formatted USB HDD.

(Example)



Photo mode:

Still pictures recorded with digital cameras will be displayed.

Video mode:

Moving pictures recorded with digital video cameras and digital video data will be played back.

Recorded TV mode:

(For exclusive USB HDD) TV programmes recorded on the USB HDD with this TV will be played back.

Music mode:

Digital music data will be played back.

- During the operation, audio signal is output from DIGITAL AUDIO and HDMI2 / HDMI4 (ARC function) terminals. But no video signals are output. To use HDMI2 / HDMI4 with ARC function, connect an amplifier that has ARC function, set to use theatre speakers and match the output setting in [ARC Output](#) in the Sound menu.


 → [Functions > VIERA Link "HDAVI Control™"](#)

- [Date](#) shows the date on which the recording was made by the recording equipment. For a file without a valid record date “* *” is shown.
- Pictures may not appear correctly on this TV depending on the recording equipment used.
- Displaying may take some time when there are many files and folders.
- Partially degraded files may be displayed with reduced resolution.

- Picture setting may not work depending on the conditions.
- Folder and file names may be different from those on the digital camera or digital video camera used.

■ To insert or remove the SD Card

Gently insert the SD Card with the label surface facing front. Push the centre of the card until a click is heard. (To remove, push it again.)

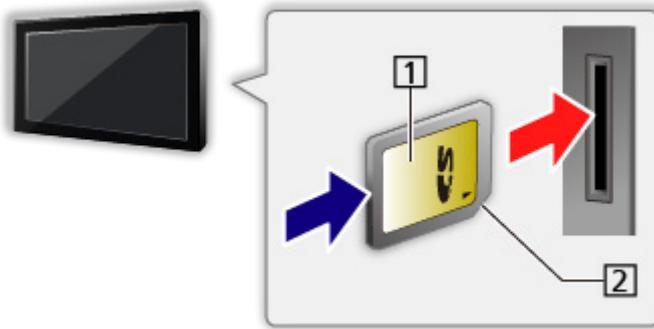


1 Label surface

2 Cutout

■ To insert or remove the USB Flash Memory

Ensure alignment is straight and complete when inserting or removing.

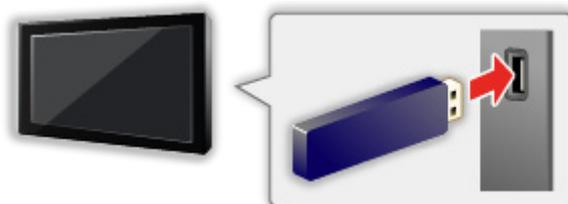

- To remove the USB Flash Memory safely from the TV, perform [Safely remove USB](#) in [USB Device Setup](#).
 - 1) Display the menu with **MENU**.
 - 2) Select [Setup](#) > [USB Device Setup](#) with Δ / ∇ and press **OK** to access.
 - 3) Select the device with Δ / ∇ and press **YELLOW** (yellow) to set.
- Connect the USB Flash Memory to the USB 1, 2 or 3 port.

= Note =

- To connect the USB HDD
 - [Recording](#) > [USB HDD setup](#)
- Check the terminal type and devices are correct when connecting.
- For the information of the devices
 - [Media Player](#) > [Technical information](#)

- For supported file formats

 → [Media Player > Technical information](#)

Selecting device / mode

1. Insert the SD Card or USB Flash Memory to the TV.

- When you insert the SD Card, Media Player will start automatically.

 → [Media Player > Using Media Player > Information](#)

- To play back contents in the USB HDD, ensure the connection and settings are completed.

 → [Recording > USB HDD setup](#)

- To play back contents in the network device, ensure the connection and settings are completed.

 → [Media Player > Using Media Player > Network device](#)

2. Display APPS List with **APPS**.

3. Select **Media Player** with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to access.

4. Select the device with $\triangleleft / \triangleright$ and press **OK** to access.

- If only one device is connected, this step will be skipped.
- The network device already connected to the TV is also displayed.

 : Enter **User / Password** to access.

 : **User / Password** are already entered.

5. Select **Photo / Video / Music / Recorded TV** with $\triangleleft / \triangleright$ and press **OK** to access.

Photo

 → [Media Player > Photo mode](#)

Video

 → [Media Player > Video mode](#)

Music

 → [Media Player > Music mode](#)

Recorded TV

 → [Media Player > Recorded TV mode](#)

6. The thumbnail view will be displayed.

(Example)



- To display / hide information of the highlighted content



= Note =

- You may also access each mode directly from APPS List.
 → [my Home Screen > APPS List > How to use](#)
- **Recorded TV** is available for contents recorded on the USB HDD with this TV.
- Select the appropriate device and content for playing back each file.
- You can use the following buttons during playback. Confirm the remote control code is “73”.



-  → [Watching > External equipment > Operating with TV's remote control](#)

■ To change the device

You can change the current device to another device directly in the same mode when two or more available devices are connected.

1. Display the device selection screen with  (yellow) while the thumbnail is displayed.
2. Select the device with  /  and press **OK** to access.
 - Not valid in Recorded TV mode
 - To change the device in Recorded TV mode

-  → [Media Player > Recorded TV mode > Changing device](#)

■ To change the mode

You can switch to another mode of Media Player from the thumbnail view.

1. Display the contents selection screen with  (blue) while the thumbnail is displayed.
2. Select the contents with  /  and press **OK** to access.
 - The mode can be switched in the current device.

Network device

You can enjoy photo, video or music stored in the network devices.

- To enable this function, connect this TV to your home network.

 → Network > Network connections

 → Network > Network settings

■ How to set User / Password

1. Display the menu with **MENU**.
2. Select **Network** > **File Sharing Settings** > **Network Device List** with Δ / ∇ and press **OK** to access.
3. Select the network device with Δ / ∇ and press **OK** to access.
4. Enter **User** / **Password** with Δ / ∇ / \triangleleft / \triangleright or **Numeric buttons** and press **OK** to set.



- Press **BACK/RETURN** to store.
 - To register the new network device, set **Server Name** / **Shared Folder**. For details, read the manual of the equipment.
5. Select **Register** with Δ / ∇ and press **OK** to set.
 - To delete the registered device, select **Delete** with Δ / ∇ and press **OK** to set.

= Note =

- Regarding performance, not all servers are guaranteed. PCs with Windows 7 / Windows 8 / Windows 8.1 have been tested for compatibility with this TV (as of December, 2013). Additional information for the servers may be found on the following website.

<http://panasonic.net/viera/support> (English only)

Sharing file

You can share the files between PC and devices connected to this TV.

- To enable this function, connect this TV to your home network.

 → Network > Network connections

 → Network > Network settings

1. Display the menu with **MENU**.
2. Select **Network** > **File Sharing Settings** > **File Sharing Server** with Δ / ∇ and press **OK** to access.
3. Select **On** with Δ / ∇ and press **OK** to set.
4. Operate your PC to share the files.
 - For operations, refer to the support information on the following website.
<http://panasonic.net/viera/support> (English only)
 - This function is not available when the TV is turned off with Mains Power On / Off switch.

= Note =

- Regarding performance, not all PCs are guaranteed. PCs with Windows 7 / Windows 8 / Windows 8.1 have been tested for compatibility with this TV (as of December, 2013). Additional information for the PCs may be found on the following website.
<http://panasonic.net/viera/support> (English only)
- Do not turn the TV off, pull out the mains plug or remove the device during operation (reading, copying, etc.). Doing so may cause malfunction of the device or damage the recorded data.
- All data in the USB HDD will be erased when you format the USB HDD with this TV for recording.
- Picture noise may occur on the screen when playback starts during operation (reading, copying, etc.).
- For the information of the devices

 → Media Player > Technical information

Photo mode

Selecting file

Select the file in the thumbnail view with  /  /  /  and press **OK** to start playback.

 : Error display

- To change the size of photos in the thumbnail view
 - 1) Display the option menu with **OPTION**.
 - 2) Select **Change Size** with  /  and press **OK** to change.
- For supported file formats

 → [Media Player > Technical information > Photo format](#)

■ Thumbnail view

- To display / hide information of the highlighted content



- To display **Slideshow Settings**

 (red)

 → [Media Player > Photo mode > Using Slideshow](#)

- To sort

 (green)

- To change the device

 (yellow)

- To change the contents

 (blue)

Viewing photo

■ Playback

- To operate Single view
 - ◀ : To the previous photo
 - ▶ : To the next photo
 - ▽ : Stop (return to thumbnail)
 - OK : Slideshow
- To display / hide the operation guide
 - 
- To rotate 90°
 -  (blue)
- To return to thumbnail
 - BACK/RETURN

Sorting photos

■ To sort by folder, recorded date or recorded month

1. Display the view selection in the thumbnail view with  (green).
2. Select [Folder view](#) / [Sort by Date](#) / [Sort by Month](#) with ▲ / ▼ and press OK to set.

[Folder view](#):

Displays the thumbnail grouped by folder.

- Files which are in the root folder will be collected to the folder named “/”.

[Sort by Date](#) / [Sort by Month](#):

Displays the thumbnail grouped by the same date or month.

- The group of the photos without recorded dates is shown as [Unknown](#).

- To return to the thumbnail of all photos
 - 1) Display the view selection in the thumbnail view with  (green).
 - 2) Select [All photos](#) with ▲ / ▼ and press OK to set.

Multi Shot 3D

This TV can create a 3D photo using a pair of photos and save it.

- You can only save the image into the SD card.
- This function is available with photos recorded on digital cameras.
- Depending on the photos you select, they may not be suitable for creating 3D photos, or creating 3D photos may not be possible. In this case, it is recommended to take a photo (for L) and then move your camera to the right approx. 5 cm and take another photo (for R).
- To view the created 3D photo with 3D effect, you need the 3D Eyewear.

1. Display the option menu in the thumbnail view with **OPTION**.
2. Select **Multi Shot 3D** with \triangle / ∇ and press **OK** to access.
3. Select two photos for L (left) and R (right) with \triangle / ∇ / \triangleleft / \triangleright and  (red).
 - You can only select photos of the same recorded date and the same pixels.
 - You may not be able to view the created 3D photo properly if you transpose the left and right photos.
4. Create the 3D photo with **OK**.
 - If your selected photos are not suitable for the 3D photo, the error message will be displayed and you will return to the photo selection screen (step 3).
 - To save the 3D photo in the SD Card, press **OK** and follow the on-screen instructions.
 - After the photo is saved, the photo selection screen will be displayed (step 3). Select photos again to create another 3D photo or exit from **Multi Shot 3D**.

■ To enjoy the saved 3D photos

Saved 3D photos are displayed in the thumbnail view. Wear the 3D Eyewear and enjoy the 3D photos.

Using Slideshow

Slideshow ends when all photos within the current thumbnail are viewed.

1. Select the file from the thumbnail of photos for the first view with \triangle / ∇ / \triangleleft / \triangleright .
2. Start Slideshow with  (red) and **OK**.
 - To display / hide the operation guide

 - To pause (return to Single view)
OK
 - To return to thumbnail
BACK/RETURN
 - You can change the back ground music by setting [Back Ground Music](#) in [Slideshow Settings](#) (see below).

■ Slideshow Settings

Set up the settings for Photo mode.

1. Display the option menu with **OPTION**.
 2. Select [Slideshow Settings](#) with **OK**.
 3. Select one of the following items with \triangle / ∇ and press **OK** to access.
[Colour Effect](#) / [Auto Makeup](#) / [Aspect](#) / [Interval](#) / [Repeat](#) / [Back Ground Music](#)
 4. Set with \triangle / ∇ and press **OK** to store.
-

[Colour Effect](#)

([Off](#) / [Sepia](#) / [Gray scale](#))

Selects the colour effect of photos.

[Auto Makeup](#)

([On](#) / [Off](#))

Automatically detects the face in the photo and improves luminance and contrast.

Aspect

(Original / Zoom)

Selects enlarged or normal viewing.

- Depending on the photo size, the photo may not be fully enlarged to fill the screen (e.g. portrait style picture).
-

Interval

(Long / Normal / Short)

Selects slideshow interval.

Repeat

(On / Off)

Slideshow repeat

Back Ground Music

(Off / Type1 / Type2 / Type3 / Type4 / Type5 / User / Auto)

Selects the background music during Photo mode.

Type1 - 5:

Music files installed on this TV at the factory settings will be played back.

Auto:

Music files stored in the current device will be played back.

- If there is no available music data, no sound will be played back.

User:

Music files in the device registered by yourself will be played back.

- If no music files have been registered or the device which had registered music files is removed, no sound will be played back.

● To register music

1) Select the music file with \triangle / ∇ and press **OK** to access.

- Depending on the condition of the device, select folders until you reach the desired music file.

2) Select **File / Folder** with \triangle / ∇ and press **OK** to set.

File:

The selected music file will be registered.

Folder:

All the music files in the folder which contains the selected music file will be registered.

= Note =

- Picture quality may be degraded depending on the slideshow settings.
- Picture setting may not work depending on the slideshow settings.

Video mode

Selecting file

1. Select the title in the thumbnail view with  /  /  / .

 : Error display

 : The file does not support thumbnail view.

- The preview will start when the title / scene is highlighted in the thumbnail view if it supports a preview. To turn off the preview, set [Video Preview](#) to [Off](#).

 → [Media Player > Video mode > Video Setup](#)

2. Start playback with  (red).

- If you have stopped the last playback halfway, the confirmation screen is displayed to select whether to start from where you stopped last time or from the beginning.
- For supported file formats

 → [Media Player > Technical information > Video format](#)

■ Thumbnail view

- To display / hide information of the highlighted content



- To start playback

 (red)

- To change the device

 (yellow)

- To change the contents

 (blue)

Watching video

■ Playback from the selected scene in the title

Playback of the selected scene will start and continue until the end of the title.

1. Select the title with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to access.
 2. Select the scene with $\triangle / \nabla / \triangleleft / \triangleright$.
 3. Start playback with  (red).
- The structure of titles and scenes may vary depending on the digital video camera used.
 - Playback may not continue depending on the condition.
 - To repeat playback

 → Media Player > Video mode > Video Setup

■ Playback

- To operate playback
 - \triangleleft : Rewind
 - \triangleright : Fast forward
 - ∇ : Stop
 - OK** : Pause (displays the time seek bar) / Playback
- To jump to the specified time point
 - 1) Display the time seek bar with **OK**.
 - 2) While the time seek bar is displayed
 - Press $\triangleleft / \triangleright$:
Search approx. 10 seconds
 - Press and hold $\triangleleft / \triangleright$:
Search rapidly
 - 3) Jump to the specified time point with **OK**.
- To display / hide the operation guide and information banner
 - 
- To the previous title / scene
 -  (red)
- To the next title / scene
 -  (green)

- To change aspect
 - 1) Display [Aspect Selection](#) with **ASPECT**.
 - 2) Select the mode with \triangle / ∇ and press **OK** to set.
 - [Aspect1](#):
Displays the content enlarged without distortion.
 - [Aspect2](#):
Displays the content full-screen.
 - [Original](#):
Displays the content original size.
 - You can also change the mode pressing **ASPECT**. (Press repeatedly until you reach the desired mode.)
 - Aspect cannot be changed depending on the content.
- To return to thumbnail
BACK/RETURN

Video Setup

Set up the settings for Video mode.

1. Display the option menu with **OPTION**.
2. Select [Video Setup](#) with **OK**.
3. Select one of the following items with \triangle / ∇ and press **OK** to access.
[Video Preview](#) / [Multi Audio](#) / [Dual Mono Audio](#) / [Subtitle](#) / [Subtitle Text](#) / [Repeat](#)
 - Menu items and selectable options vary depending on the content.
4. Set with \triangle / ∇ and press **OK** to store.

[Video Preview](#)

([On](#) / [Off](#))

Sets to start the preview of the title or scene in the thumbnail view.

- Images may not be displayed for an instant in the thumbnail view. Set the preview [Off](#) to solve this.
 - This function is available in the thumbnail view.
-

Multi Audio, Dual Mono Audio

Selects for selectable sound tracks (if available).

- It may take several seconds to change the sound.
 - This function is available during playback.
-

Subtitle

Display / hide subtitles (if available).

- This function is available during playback.
-

Subtitle Text

Selects the font type to display subtitles correctly (if available).

- This function is available during playback.
-

Repeat

(On / Off)

Playback repeat within the title or selected file (depending on the content)

Audio output settings

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO or HDMI2 / HDMI4 (ARC function) terminal.

- To confirm or change the current sound status

 → Media Player > Video mode > Video Setup

1. Display the menu with **MENU**.
 2. Select **Sound** > **SPDIF Selection** with Δ / ∇ and press **OK** to access.
 3. Select **Auto** / **PCM** with Δ / ∇ and press **OK** to set.
-

SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO and HDMI2 / HDMI4 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS.

PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.

Recorded TV mode

Selecting content

- For exclusive USB HDD
- To play back contents in the USB HDD, ensure the connection and settings are completed.

 → Recording > USB HDD setup

1. Contents list of the selected device is displayed in Recorded TV mode.
 - Remaining capacity of the selected device is displayed on the top right. (This value may not be accurate depending on the condition.)
 - Contents list is displayed as **All** or **Not Viewed**.

All:

All the recorded TV programmes are listed.

Not Viewed:

Contents not played back yet are listed.

- Icons are displayed.
 -  : Content not played back yet (Once you play back the content, this icon will disappear.)
 -  : Protected content cannot be deleted.
 -  : Content under recording (You can play back this content even if under recording.)
 -  : Two or more contents are grouped.

2. Select the content with  /  and press  to start playback.
 - If you have stopped the last playback halfway, the confirmation screen is displayed to select whether to start from where you stopped last time or from the beginning.
 - If the content has multiple programmes with different parental ratings, the highest restriction is applied to the content. Once you unlock the restriction, all the programmes in the content can be played back.
 - Ireland only
- For supported file formats

 → Media Player > Technical information > Video format

Watching recorded TV

■ Playback

- To operate playback

 : Manual skip

- Press to skip forward approx. 30 seconds.
- Press and hold to skip backward approx. 15 seconds.

 : Rewind

 : Fast forward

 : Stop

 : Pause (displays the time seek bar) / Playback

- To jump to the specified time point

1) Display the time seek bar with .

2) While the time seek bar is displayed

Press  /  :

Search approx. 10 seconds

Press and hold  /  :

Search rapidly

3) Jump to the specified time point with .

- To display / hide the operation guide and information banner



- To repeat between the starting point “A” and finishing point “B”

 (blue)

(Set “A” and “B” in order.)

- The points will be reset by pressing again or by other operations.

- To the previous / next chapter

 (red) /  (green)

- A recorded content is automatically divided into chapters (approx. 5 minutes for each).

- To change aspect



 → Watching > For best picture > Aspect

- To display the subtitle (if available)



- To confirm or change the current status (if available)

 → Watching > Basic > Option Menu

- To return to list

BACK/RETURN

= Note =

- The recorded content may not be played back properly depending on the progress of recording.

Grouping contents

1. Select the content to edit with \triangle / ∇ and press  (blue) to tick in the contents list.
2. Display the option menu with **OPTION**.
3. Select [Create Group](#) / [Release Group](#) / [Exclude from Group](#) / [Change Protect Status](#) with \triangle / ∇ and press **OK** to set.

Create Group:

Two or more contents can be grouped. Select and tick all the desired contents, and then select [Create Group](#).

Release Group:

Select the created group to release, and then select [Release Group](#). (To release several groups at once, tick all the desired groups.)

Exclude from Group:

Select the group and press **OK** to display the grouped contents. To exclude one specific content from the group, tick it and then select [Exclude from Group](#). (To exclude several contents at once, tick all the desired contents.)

Change Protect Status:

Select the content to protect from deletion, and then select [Change Protect Status](#). Perform the same way to cancel the protection. (To change the status of several contents at once, tick all the desired contents.)

Deleting content

1. Select the content to edit with \triangle / ∇ and press  (blue) to tick in the contents list.
2. Delete the content with  (red).
3. When the confirmation screen is displayed, select [Yes](#) with \triangleleft / \triangleright and press **OK** to set.

Changing device

You can change the current device to another device directly in the same mode when two or more available devices are connected.

1. Display the option menu with **OPTION**.
2. Select **Drive Select** with \triangle / ∇ and press **OK** to access.
3. Select the device with $\triangleleft / \triangleright$ and press **OK** to access.
 - If you select the device to play back photos, videos or music, change to the appropriate content.
 - 1) Display the option menu with **OPTION**.
 - 2) Select **Contents Select** with \triangle / ∇ and press **OK** to access.

Chapter List

You can start playback from the chapter list you select.

1. Display the chapter list with  (yellow).
2. Select the chapter with $\triangleleft / \triangleright$ and press **OK** to start playback.

= Note =

- The chapter list is not displayed while the selected content is being recorded.
- Depending on the recorded programmes, some playback operations may not work properly.

Audio output settings

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO or HDMI2 / HDMI4 (ARC function) terminal.

- To confirm or change the current sound status

 → Media Player > Video mode > Video Setup

1. Display the menu with **MENU**.
 2. Select **Sound** > **SPDIF Selection** with Δ / ∇ and press **OK** to access.
 3. Select **Auto** / **PCM** with Δ / ∇ and press **OK** to set.
-

SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO and HDMI2 / HDMI4 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS.

PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.

Music mode

Selecting file

1. Select the folder in the thumbnail view with $\triangle / \nabla / \triangleleft / \triangleright$.
2. Start playback with  (red).

- For supported file formats

 → [Media Player > Technical information > Music format](#)

■ Thumbnail view

- To display / hide information of the highlighted content



- To start playback



- To change the device



- To change the contents



Playing music

■ Playback of the selected file in the folder

1. Select the folder with $\triangle / \nabla / \triangleleft / \triangleright$ and press **OK** to access.
2. Select the file with $\triangle / \nabla / \triangleleft / \triangleright$.
3. Start playback with  (red).

■ Playback

- To operate playback

\triangleleft : Rewind

\triangleright : Fast forward

∇ : Stop

OK : Pause (displays the time seek bar) / Playback

- To jump to the specified time point
 - 1) Display the time seek bar with **OK**.
 - 2) While the time seek bar is displayed
 - Press ◀ / ▶ :
 - Search approx. 10 seconds
 - Press and hold ◀ / ▶ :
 - Search rapidly
 - 3) Jump to the specified time point with **OK**.
- To display / hide the operation guide
 - 
- To the previous track
 -  (red)
- To the next track
 -  (green)
- To return to thumbnail
 - BACK/RETURN**

Music Setup

Set up the setting for Music mode.

- This function is available in the thumbnail view.
1. Display the option menu with **OPTION**.
 2. Select **Music Setup** > **Repeat** with **OK**.
 3. Select **Off** / **Folder** / **One** with ▲ / ▼ and press **OK** to set.

Folder:

Playback repeat within the selected folder

One:

Playback repeat of the selected one file

Technical information


Device handling caution

- Data modified with a PC may not be displayed.
- Do not remove the device while the TV is accessing data. Otherwise this can damage the device or TV.
- Do not touch the pins on the device.
- Do not subject the device to a high pressure or impact.
- Insert the device in the correct direction. Otherwise this can damage the device or TV.
- Electrical interference, static electricity, or erroneous operation may damage the data or device.
- Back up the recorded data at regular intervals to prevent data deterioration, data damage or erratic operation of the TV. Panasonic is not liable for any deterioration or damage of recorded data.

SD Card

■ SD Card

Use an SD Card which meets SD standards. Failure to do so may cause the TV to malfunction.

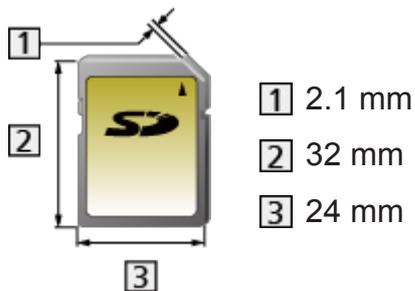

Card format:

SDXC Card - exFAT

SDHC Card / SD Card - FAT16 or FAT32

Compliant card type (maximum capacity):

SDXC Card (64 GB), SDHC Card (32 GB), SD Card (2 GB), miniSD Card (2 GB) (miniSD adaptor required)

- When using a miniSD Card, insert / remove it together with the adaptor.

USB devices

- It is recommended to connect the device to the TV's USB port directly.
- Some USB devices or USB HUB may not be used with this TV.
- You cannot connect any devices using a USB card reader.
- Additional information for the devices may be found on the following website.

<http://panasonic.net/viera/support> (English only)

■ USB Flash Memory

USB Flash Memory format:

FAT16, FAT32 or exFAT

- USB HDDs formatted on a PC are not guaranteed to work in Media Player.

■ USB HDD

- The capacity of USB HDD that works with this TV is from 160 GB to 3 TB.
- Connect the USB HDD to the socket outlet to record and play back properly with this TV.
- Use the USB HDD formatted with this TV.

 → [Recording > USB HDD setup > Setting for USB HDD](#)

- Regarding performance, not all USB HDDs are guaranteed. Check the USB HDDs that have been tested for compatibility with this TV at the following website.

<http://panasonic.net/viera/support> (English only)

Photo format

■ Supported Photo formats

- JPEG (.jpg, .jpeg, .mpo)

Sub-sampling:

4:4:4, 4:2:2, 4:2:0

Image resolution (pixel):

8 × 8 to 30 719 × 17 279

- DCF and EXIF standards
 - Progressive JPEG is not supported.
-

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

Video format

■ Supported Video formats

- SD-Video (.mod)

Video codec:

MPEG1, MPEG2

Audio codec:

Dolby Digital, MPEG Audio

- SD-Video Standard Ver. 1.31 (Entertainment Video Profile)
 - The data may not be available if a folder structure on the device is modified.
-

- AVCHD (.mts)

Video codec:

H.264 BP/MP/HP

Audio codec:

Dolby Digital

- AVCHD Standard Ver. 2.0 (AVCHD 3D, AVCHD Progressive)
 - The data may not be available if a folder structure on the device is modified.
-

- AVI (.avi)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP, VC-1, Windows Media Video Ver. 9

Audio codec:

AAC, ADPCM, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, LPCM, MPEG Audio, MP3, WMA, WMA Pro

- Some subtitles or chapter functions may not be available.
-

- MP4 (.f4v, .m4v, .mp4)

Video codec:

H.264 BP/MP/HP, H.265 (HEVC), MPEG1, MPEG2, MPEG4 SP/ASP

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MPEG Audio, MP3

- This TV supports this container recorded with Panasonic products. For details, read the manual of the products.
-

- MKV (.mkv)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, MPEG Audio, MP3, Vorbis

- Some subtitles or chapter functions may not be available.
-

- ASF (.asf, .wmv)

Video codec:

MPEG4 SP/ASP, VC-1, Windows Media Video Ver. 9

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MP3, WMA, WMA Pro

- Copy-protected files cannot be played back.
-

- FLV (.flv)

Video codec:

H.264 BP/MP/HP

Audio codec:

AAC, MP3

- 3GPP (.3gp, .3g2)

Video codec:

H.264 BP/MP/HP, MPEG4 SP/ASP

Audio codec:

AAC, HE-AAC

- PS (.mod, .mpg, .mpeg, .vob, .vro)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, VC-1

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MPEG Audio, MP3

- TS (.mts, .m2ts, .tp, .trp, .ts, .tts)

Video codec:

H.264 BP/MP/HP, H.265 (HEVC), MPEG1, MPEG2, VC-1

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, MPEG Audio, MP3

■ Supported Subtitles formats

- MicroDVD, SubRip, Tmplayer (.srt, .sub, .txt)

- The video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.
 - If there are more than one subtitles text files inside the same folder, they are displayed in the following order of priority: “.srt”, “.sub”, “.txt”.
-

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.
- Supported formats are different in Media Player and media server.

Music format

■ Supported Music formats

- MP3 (.mp3)

- AAC / Apple Lossless (.m4a)

- Copy-protected files cannot be played back.
-

- FLAC (.flac)

- WMA / WMA Pro (.wma)

- Copy-protected files cannot be played back.
 - WMA Lossless is not supported.
-

- LPCM (.wav)

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

Network

Internet content

Information

You can access some specific websites supported by Panasonic, and enjoy internet contents such as videos, games, communication tools, etc. from APPS List.

(Example)



- To enable this function, you need a broadband network environment. Ensure the network connections and network settings are completed.

 → Network > Network connections

 → Network > Network settings

■ Freesat

Freesat may give you access to the interactive services and features through an internet connection.

- Please contact broadcasters for availability of services.
- UK only

Selecting internet content

1. Display APPS List with **APPS**.

- For details of APPS List

 → my Home Screen > APPS List

- Depending on the usage conditions, it may take a while to read all the data.

2. Select the desired item with \triangle / ∇ / \triangleleft / \triangleright and press **OK** to access.

(Example)



- To return to APPS List

APPS

- To exit APPS List

EXIT

- You may operate the internet contents with the free cursor and Voice Control function of Touch Pad Controller (supplied).

 → Functions > Voice Control

- You can connect a keyboard for character input in the applications. You can also use the keyboard for TV operation as well as for APPS List.

 → Functions > Bluetooth devices

 → Functions > Keyboard

Note

- If you cannot access the internet contents, check the network connections and settings.

 → Network > Network connections

 → Network > Network settings

- APPS List is subject to change without notice.
- Not all the features of the websites are available.
- Be sure to update the software when a software update notice is displayed on the TV screen. If the software is not updated, you may not be able to use APPS List. You can update the software later manually.

 → Network > Network settings > Software Update

- The services through APPS List are operated by their respective service providers and such service may be discontinued either temporarily or permanently without notice. Therefore, Panasonic will make no warranty for the contents or the continuity of the services.
- Some contents may be inappropriate for some viewers.
- Some contents may only be available for specific countries and may be presented in specific languages.
- Depending on the connection environment, the internet connection may be slow or may not be successful.

DLNA

Information

This TV is a DLNA Certified™ product.

DLNA® (Digital Living Network Alliance) is a standard that makes DLNA Certified digital electronics easier and more convenient to use on a home network. To learn more, visit www.dlna.org.

- To enable this function, connect this TV to your home network.


 → Network > Network connections

 → Network > Network settings

■ Playback of sharing contents stored in the media server

Store photos, videos or music contents into the DLNA Certified media server (for example, PC with Windows 7 / Windows 8 installed, DIGA Recorder, etc.) connected to your home network. And then you can enjoy these contents on this TV.

(Example)

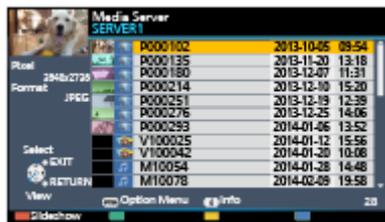

- For watching and operating contents on this TV

 → Network > DLNA > Using DLNA

- For supported file formats

 → Network > Technical information

- To use a PC as a media server

Prepare the PC with Windows 7 / Windows 8 or ensure the server software is installed on the PC. “Windows 7 / Windows 8” and “Twonky 7 (installed on the PC with Windows XP or Mac)” are the server software that has been tested for compatibility with this TV (as of December, 2013). Any other server software has not been tested with this TV, therefore compatibility and performance cannot be assured.

- Windows 7 / Windows 8

The setup for homegroup settings of Windows 7 / Windows 8 is required. For details, refer to the help functions of Windows 7 / Windows 8.

- Twonky

“Twonky” is the product of PacketVideo Corporation.

To obtain the Installation Guides for installing and setting “Twonky”, visit the website of TwonkyMedia.

Additional fees may be charged to obtain server software.

= Note =

- For more information about the server software, please consult each software company.
- When server software for the media server is installed on the PC, the data on the PC may be at risk of being accessed by other people. Please take care of the settings and connections under the network circumstances in office, hotel or even at home when not using a router.

- To use a DLNA compatible DIGA Recorder as a media server

By connecting a DLNA compatible DIGA Recorder to your home network, you can control it as one of the media servers.

- Please read the manual of your DIGA Recorder to check if the recorder is compatible with DLNA.

■ Playback of sharing contents on this TV with the DMC (Digital Media Controller) network equipment

You can enjoy contents stored in the media server by controlling with the DMC network equipment (smartphone, PC with Windows 7 / Windows 8 installed, etc.) connected to your home network.

- To use this function with your smartphone or Windows 7 / Windows 8, set [TV Remote App Settings](#) of this TV.

 → [Network > Network settings > TV Remote App Settings](#)

And you need to install the application for controlling VIERA on your smartphone. For information of the application:

<http://panasonic.net/viera/support> (English only)

For the operations, refer to the support information of the application.

- “Windows 7 / Windows 8” are the OS that have been tested for compatibility of this TV (as of December, 2013). For the operations, refer to the help functions of Windows 7 / Windows 8.

■ Sharing the TV programme or contents of this TV with another piece of network equipment

You can enjoy the current digital TV programme or the contents*¹ of this TV on the other DLNA Certified VIERA, your smartphone, etc. connected to your home network. You can also select the channel and watch TV on your smartphone*².

For example, watching the TV programme on your smartphone in the other room, etc.

*¹ : Available contents:

- Contents that can be played back in Media Player of this TV and another piece of network equipment
- TV programmes recorded on USB HDDs with this TV

*² : To use this function with your smartphone, you need to install the application for controlling VIERA in your smartphone. For information of the application:

<http://panasonic.net/viera/support> (English only)

For the operations, refer to the support information of the application.

- To use this function with another DLNA Certified VIERA, set [Network Link Settings](#) of this TV.

 → [Network > Network settings > Network Link Settings](#)

- Sharing the current programme may not be available when selecting radio channels, encrypted (copy-protected) programmes or when the broadcast prohibits the output of video and audio.

= Note =

- To use this function, turn this TV on.
- This function is available only with 1 piece of other equipment.
- You may be able to control this TV using your smartphone. For details, refer to the support information of the application.
- This function may not be available in the following conditions of this TV:
 - While the recording is in progress
 - When watching the content of 4K format
- Selecting the channel or TV mode on your smartphone may not be available while the recording is in progress.

Using DLNA

To use DLNA® features, ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > Information

 → Network > Network connections


 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select one of the media servers with Δ / ∇ and press **OK** to access.
 - For the operations to access another TV, select the name of another TV from the displayed media server list.
 - To display / hide information of the highlighted media server



4. Select the file with Δ / ∇ and press **OK** to access.

(Example)

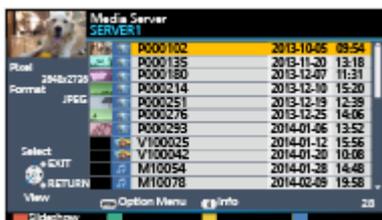

- Depending on the condition of media server, you may need to select the folder before selecting the file.
- To display / hide information of the highlighted file



= Note =

- Non-playable files are also listed but cannot be selected.
- You can use the following buttons during playback. Confirm the remote control code is “73”.



 → [Watching > External equipment > Operating with TV's remote control](#)


Network connections

Internet connection

To use internet service, you need a broadband network environment.

- If you do not have any broadband network services, please consult your retailer for assistance.
- Dial-up internet connections cannot be used.
- Required speed (effective): at least 1.5 Mbps for SD (Standard Definition) and 6 Mbps for HD (High Definition) picture quality, respectively. If the transfer speed is not enough, contents may not be played back properly.

■ Wireless connection

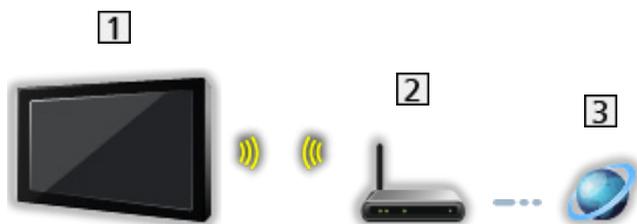

1 Built-in wireless LAN (Rear of the TV)

2 Access point

3 Internet environment

■ Wired connection



1 ETHERNET terminal

2 LAN cable (Shielded)

- Use the Shielded Twist Pair (STP) LAN cable.

3 Internet environment


DLNA connection

To use DLNA features, you need a home network environment and you can operate the features without a broadband network environment.

- To use internet service, you need a broadband network environment.


 → [Network > Network connections > Internet connection](#)

■ Wireless connection (For DLNA and internet service)

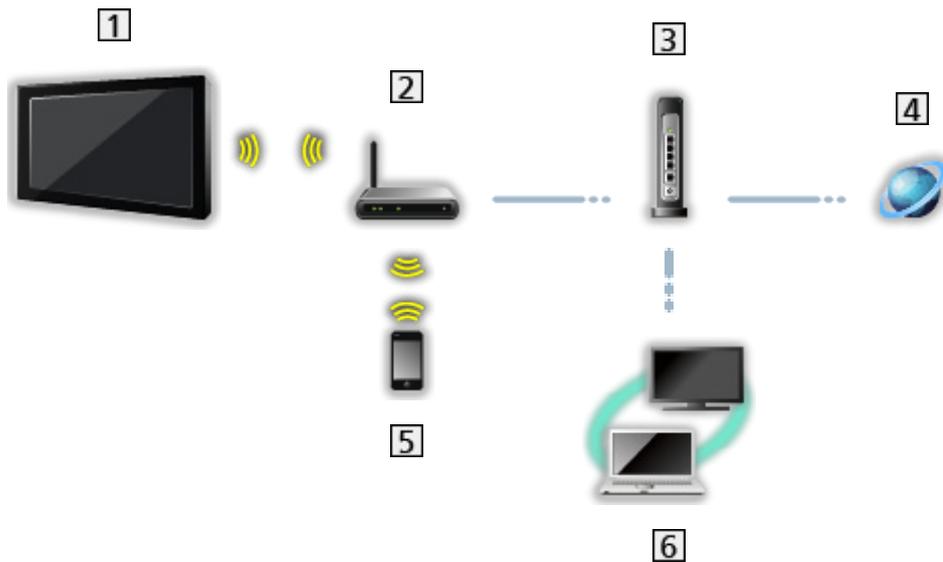

- 1 Built-in wireless LAN (Rear of the TV)
- 2 Access point
- 3 Hub or Router
- 4 Internet environment
- 5 Smartphone
- 6 DLNA Certified media server (PC, etc.)

■ Wired connection (For DLNA and internet service)

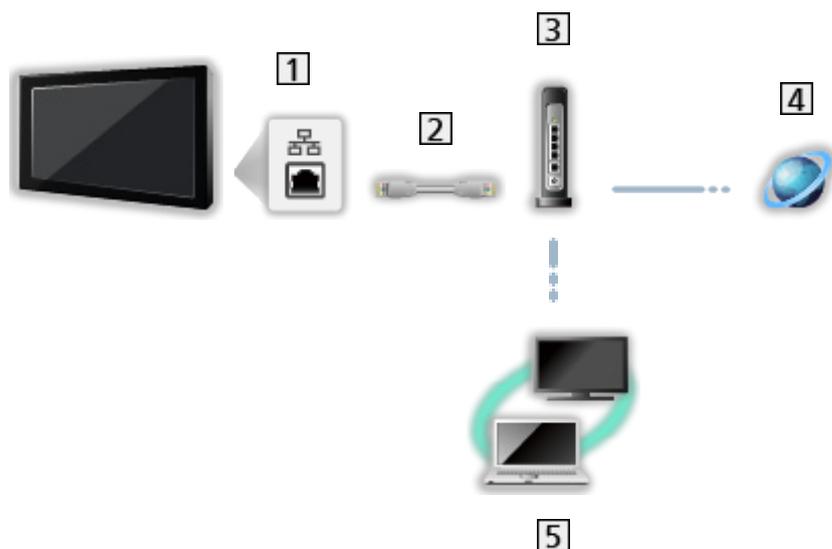

1 ETHERNET terminal

2 LAN cable (Shielded)


- Use the Shielded Twist Pair (STP) LAN cable.

3 Hub or Router

4 Internet environment

5 DLNA Certified media server (PC, etc.)

■ Wireless connection (For DLNA)

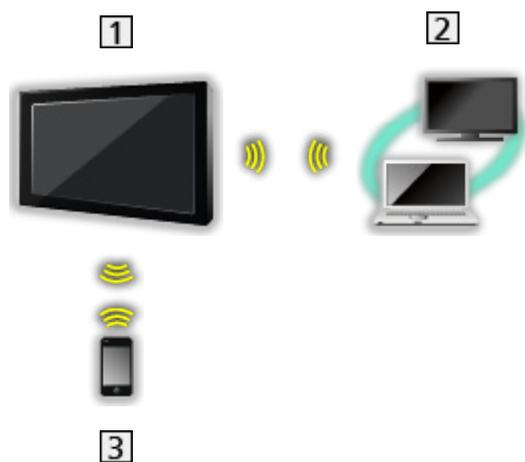

1 TV

- To use the TV as a wireless access point

 → [Network > Network settings > Custom - Wireless Access Point](#)

2 DLNA Certified media server (PC, etc.)

3 Smartphone

Note

- Ensure to use a LAN straight cable.
- Set up and connect equipment required for the network environment. You cannot make such settings on this TV. Read the manual of the equipment.
- If your modem has no broadband router functions, use a broadband router.
- If your modem has broadband router functions but there are no vacant ports, use a hub.
- Ensure that the broadband routers and hubs are compatible with 10BASE-T / 100BASE-TX / 1000BASE-T.
- If you use the equipment compatible only with 100BASE-TX or 1000BASE-T, following LAN cables are required:
 - 100BASE-TX: category 5 or later
 - 1000BASE-T: category 5e or later
- Contact your Internet Service Provider (ISP) or telecommunications company for further assistance regarding the network equipment.
- Confirm the terms and conditions of the contracts with your Internet Service Provider (ISP) or telecommunications company. Depending on the contracts, additional fees may be charged or multiple connections to the internet may be impossible.
- Turn the TV off with Mains Power On / Off switch, and then on again when changing or making the network connection again.
- Depending on the network condition, the content may not be played back properly.

Network settings

Network Connection

Ensure the connections are completed before starting network setup.

 → Network > Network connections

■ Quick setup - Wireless

1. Display the menu with **MENU**.
2. Select **Network** > **Network Connection** with Δ / ∇ and press **OK** to access.
 - Confirm the encryption key, settings and position of your access point before starting setup. For details, read the manual of the access point.
3. Select **Quick setup** with \triangleleft / \triangleright and press **OK** to access.
 - When the LAN cable is connected, wired setup will be done automatically.
4. Select your desired access point with Δ / ∇ and press **OK** to access.
 - Available Wireless Networks are displayed automatically.
 -  : Encrypted access point
 - For WPS(Push button)
 - 1) Select **Easy setup with Push button** with Δ / ∇ and press **OK** to access.
 - 2) Press the WPS button on the access point until the light flashes.
 - 3) Connect the TV with the access point with **OK**.
 - WPS: Wi-Fi Protected Setup™
 - If the connection has failed, check the settings and positions of your access point. And then, follow the on-screen instructions.
 - It is recommended to select the encrypted access point.
5. Enter the encryption key of the access point with Δ / ∇ / \triangleleft / \triangleright and press **OK** to set.
 - You can set characters using **Numeric buttons**.

1	2	3
4	5	6
7	8	9
0		
 - Press **BACK/RETURN** to store.
6. Automatically setup is done and **Network Status** is displayed.

 → Network > Network settings > Network Status

7. Select **Exit** with / and press **OK** to set.

- To set manually

→ Network > Network settings > Custom - Wireless

■ Quick setup - Wired

1. Display the menu with **MENU**.

2. Select **Network** > **Network Connection** with / and press **OK** to access.

3. Select **Quick setup** with / and press **OK** to access.

4. Automatically setup is done and **Network Status** is displayed.

→ Network > Network settings > Network Status

5. Select **Exit** with / and press **OK** to set.

- To set manually

→ Network > Network settings > Custom - Wired

= Note =

- When the network connection type is set to **Wired**, **Wireless** is deactivated.

Custom - Wireless

Ensure the connections are completed before starting network setup.

→ Network > Network connections

1. Display the menu with **MENU**.

2. Select **Network** > **Network Connection** > **Custom** > **Wireless** with / / / and press **OK** to access.

- Confirm the encryption key, settings and position of your access point before starting setup. For details, read the manual of the access point.

3. Select your desired access point with / and press **OK** to access.

- Available Wireless Networks are displayed automatically.

: Encrypted access point

- For **WPS(Push button)**

1) Press (red).

2) Press the WPS button on the access point until the light flashes.

3) Connect the TV with the access point with **OK**.

– WPS: Wi-Fi Protected Setup™

– If the connection has failed, check the settings and positions of your access point. And then, follow the on-screen instructions.

- For **WPS(PIN)**
 - 1) Press  (green).
 - 2) Enter the PIN code to the access point.
 - 3) Connect the TV with the access point with **OK**.
 - For **Manual**
 - 1) Press  (yellow).
 - 2) You can set up SSID, security type, encryption type, and encryption key manually.
 - 3) Follow the on-screen instructions and set manually.
 - When you use 11n (5 GHz) for the wireless system between the built-in wireless LAN and access point, select **AES** for the encryption type.
 - To search access points again
 (blue)
 - To display / hide information of the highlighted access point

 - It is recommended to select the encrypted access point.
4. Enter the encryption key of the access point with \triangle / ∇ / \triangleleft / \triangleright and press **OK** to set.
- You can set characters using **Numeric buttons**.
- | | | |
|---|---|---|
| 1 | 2 | 3 |
| 4 | 5 | 6 |
| 7 | 8 | 9 |
| | 0 | |
- Press **BACK/RETURN** to store.
5. **IP/DNS Settings** is displayed.

Acquire IP Address / Acquire DNS Address

- **Auto** is recommended.
 - Available settings are displayed automatically.
 - To set manually, select and set **IP Address** / **Subnet Mask** / **Default Gateway** / **DNS Address**.
-

Proxy Settings

- It is not required for normal household use.
- Some internet services may not be available depending on the proxy settings.

Proxy:

This is the address of the relay server which is connected between the browser and the target server to send data to the browser.

- 1) Select **Proxy** with \triangle / ∇ and press **OK** to access.
- 2) Enter the address with \triangle / ∇ / \triangleleft / \triangleright or **Numeric buttons**, and press **OK** to set.



- 3) Press **BACK/RETURN** to store.

Proxy Port:

This number is also specified by the provider with the proxy address.

- 1) Select **Proxy Port** with \triangle / ∇ .
- 2) Enter the number with **Numeric buttons**.



- 3) Press **BACK/RETURN** to store.

-
6. Select **Network Status** with \triangle / ∇ and press **OK** to access.

 \rightarrow **Network > Network settings > Network Status**

7. Select **Exit** with \triangleleft / \triangleright and press **OK** to set.

Custom - Wired

Ensure the connections are completed before starting network setup.

 → Network > Network connections

1. Display the menu with **MENU**.
 2. Select **Network** > **Network Connection** > **Custom** > **Wired** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
 3. **IP/DNS Settings** is displayed.
-

Acquire IP Address / Acquire DNS Address

- **Auto** is recommended.
 - Available settings are displayed automatically.
 - To set manually, select and set **IP Address** / **Subnet Mask** / **Default Gateway** / **DNS Address**.
-

Proxy Settings

- It is not required for normal household use.
- Some internet services may not be available depending on the proxy settings.

Proxy:

This is the address of the relay server which is connected between the browser and the target server to send data to the browser.

- 1) Select **Proxy** with Δ / ∇ and press **OK** to access.
- 2) Enter the address with Δ / ∇ / \triangleleft / \triangleright or **Numeric buttons**, and press **OK** to set.



- 3) Press **BACK/RETURN** to store.

Proxy Port:

This number is also specified by the provider with the proxy address.

- 1) Select **Proxy Port** with Δ / ∇ .
- 2) Enter the number with **Numeric buttons**.



- 3) Press **BACK/RETURN** to store.
-

4. Select **Network Status** with Δ / ∇ and press **OK** to access.

 \rightarrow **Network > Network settings > Network Status**

5. Select **Exit** with \triangleleft / \triangleright and press **OK** to set.

= Note =

- When the network connection type is set to **Wired**, **Wireless** is deactivated.

Custom - Wireless Access Point

You can use the TV as a wireless access point and connect the network equipment without an access point.

- Confirm the PIN code, network settings of the equipment before starting setup. For details, read the manual of the equipment.

1. Display the menu with **MENU**.

2. Select **Network > Network Connection > Custom > Wireless Access Point** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.

3. Select **Connect to device in WPS** with Δ / ∇ and press **OK** to access.

- To set manually, select **Change settings** (see below).

4. Select and set **WPS(Push button) / WPS(PIN)** with Δ / ∇ and press **OK** to access.

WPS(Push button):

Set up the equipment for **WPS(Push button)**. For details, read the manual of the equipment.

WPS(PIN):

Enter the PIN code of the equipment.

- If the connection has failed, check the settings and positions of the equipment. And then, follow the on-screen instructions.

■ Change settings

You can set up [Network name\(SSID\)](#), [Encryption key](#), [Wireless type](#) and [Channel setting method](#) manually.

Follow the on-screen instructions and set manually.

- Set [Reset settings](#) to reset the items of [Change settings](#).

= Note =

- You cannot connect the internet service while the TV is set to [Wireless Access Point](#).
- You can connect up to 7 devices. But the transfer rate will vary according to communication environment or the numbers of connected equipment.
- To confirm the current network settings
 → [Network](#) > [Network settings](#) > [Network Status](#)
- Ensure the equipment to connect supports WPS for this setup.
- WPS: Wi-Fi Protected Setup™

Network Status

Displays and checks the network status (MAC Address, current network settings, etc.).

1. Display the menu with **MENU**.
2. Select [Network](#) > [Network Status](#) with Δ / ∇ and press **OK** to access.
3. Automatically testing is done and [Network Status](#) is displayed.

Try Again:

Performs automatic testing of the network connection for the TV and displays the current status again.

Status Details:

Displays the detailed network status (SSID, security type, encryption type, etc.).

- For more information of the network connection, select [Help](#).

my Home Cloud Settings

Displays the terms of service for the cloud services.

1. Display the menu with **MENU**.
2. Select [Network](#) > [my Home Cloud Settings](#) > [Notices](#) with Δ / ∇ and press **OK** to access.
3. Follow the on-screen instructions.
 - To set up an account for the cloud services

 → [Functions](#) > [User profile](#) > [Settings](#)

VIERA Name

Sets your favourite name for this TV.

- This name will be used as the name of this TV on the screen of the other network equipment.
- When you use two or more TVs in your network environment, set the names of the TVs for each.

TV Remote App Settings

Sets to control the TV with the equipment (smartphone, etc.) connected to your network.

1. Display the menu with **MENU**.
2. Select **Network** > **TV Remote App Settings** with Δ / ∇ and press **OK** to access.
3. Select one of the following items with Δ / ∇ and press **OK** to access.

TV Remote

(On / Off)

Enables to control the TV from the network equipment (smartphone, etc.).

Networked Standby

(On / Off)

Enables to turn the TV on via the LAN cable or wireless LAN using a wake-up message sent from the network equipment in the home network.

- Changing the default configuration may increase Standby Power Consumption.
-

Powered On by Apps

(On / Off)

Enables to turn the TV on from the network equipment (smartphone, etc.).

- Depending on the network condition, you may have to turn the TV on with Standby On / Off switch of the TV's remote control.
 - Changing the default configuration may increase Standby Power Consumption.
-

Home Streaming

(Always / Only when powered on)

Enables to share the TV programme and contents of this TV with the network equipment (smartphone, etc.) in the home network.

- Changing the default configuration may increase Standby Power Consumption.
-

Device to upload contents

Selects device to upload contents from the network equipment (smartphone, etc.).

= Note =

- This function is not available when the TV is turned off with Mains Power On / Off switch.
- You need to install the application for controlling VIERA on your smartphone. For information of the application:
<http://panasonic.net/viera/support> (English only)
For the operations, refer to the support information of the application.
- Depending on the network condition, this function may not be available.
- Depending on the area, this function may not be available. For details, consult your local Panasonic dealer.

Network Link Settings

Sets to control the TV with devices connected to the network.

1. Display the menu with **MENU**.
 2. Select **Network** > **Network Link Settings** with Δ / ∇ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
DLNA Server / **Registration Type** / **Remote Device List**
 4. Set with Δ / ∇ and press **OK** to store.
-

DLNA Server

(On / Off)

Enables to share the TV programme and contents of this TV with the network equipment (DLNA Certified VIERA, etc.).

- To use this function with another VIERA, select the name of this TV from the DLNA server list of another VIERA, and then select the content to share. Also read the manual of another VIERA.
 - To use this function with your smartphone, you need to install the application for controlling VIERA on your smartphone. For information of the application:
<http://panasonic.net/viera/support> (English only)
For the operations, refer to the support information of the application.
 - Changing the default configuration may increase Standby Power Consumption.
-

Registration Type

(Auto / Manual)

Selects the type to restrict the access to this TV for each piece of equipment on the home network.

Auto:

All available equipment on the home network is accessible (maximum 16 pieces of equipment).

Manual:

Sets the restrictions for each piece of equipment in [Remote Device List](#).

Remote Device List

Lists the equipment accessible to this TV on the home network.

= Note =

- Depending on the area, this function may not be available. For details, consult your local Panasonic dealer.

TV Anywhere Settings

TV Anywhere

(On / Off)

Enables to watch TV and set timer programming events of this TV on the network equipment (smartphone, etc.) from outside the home network.

- Set **DLNA Server** to **On** to watch TV from outside the home network.
- Additional information for the services may be found on the following website.

<http://panasonic.net/viera/support> (English only)

- Changing the default configuration may increase Standby Power Consumption.

= Note =

- This function is not available when the TV is turned off with Mains Power On / Off switch.
- Depending on the network condition and broadcasts, this function may not be available.

File Sharing Settings

File Sharing Server

(On / Off)

Sets to share the files between PC and devices connected to this TV.

 → [Media Player > Using Media Player > Sharing file](#)

Network Device List

Lists the accessible network devices to play back the contents in Media Player.

 → [Media Player > Using Media Player > Network device](#)

Software Update

Accesses the specific website to update the TV's software if any updates are available.

1. Display the menu with **MENU**.
2. Select **Network** > **Software Update** with Δ / ∇ and press **OK** to access.
3. Follow the on-screen instructions.

New Software Message

Selects whether to give a notification message when new software is found via network or not.

1. Display the menu with **MENU**.
2. Select **Network** > **New Software Message** with Δ / ∇ and press **OK** to access.
3. Select **On** / **Off** with Δ / ∇ and press **OK** to set.

Photos

Selecting file

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > Information

 → Network > Network connections

 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select one of the media servers with Δ / ∇ and press **OK** to access.
 - For the operations to access another TV, select the name of another TV from the displayed media server list.
 - To display / hide information of the highlighted media server
4. Select the file with Δ / ∇ and press **OK** to access.
 - Depending on the condition of media server, you may need to select the folder before selecting the file.
 - To display / hide information of the highlighted file



= Note =

- Non-playable files are also listed but cannot be selected.

Viewing photo

■ Playback

- To operate Single view
 - ◀ : To the previous photo
 - ▶ : To the next photo
 - ▽ : Stop (return to list)
 - OK : Slideshow
- To display / hide the operation guide
 - 
- To rotate 90°
 -  (blue)
- To return to list
 - BACK/RETURN

Using Slideshow

Slideshow ends when all photos within the list are viewed.

1. Select the file from the thumbnail of photos for the first view with ▲ / ▼ / ◀ / ▶.
2. Start Slideshow with  (red) and OK.
 - To display / hide the operation guide
 - 
 - To pause (return to Single view)
 - OK
 - To return to list
 - BACK/RETURN

■ Slideshow Settings

Set up the settings for photo file operations on this TV.

1. Display the option menu with OPTION.
2. Select [Slideshow Settings](#) with ▲ / ▼ and press OK to access.
3. Select one of the following items with ▲ / ▼ and press OK to access.
 - [Auto Makeup](#) / [Interval](#) / [Repeat](#) / [Back Ground Music](#)
4. Set with ▲ / ▼ and press OK to store.

Auto Makeup

(On / Off)

Automatically detects the face in the photo and improves luminance and contrast.

Interval

(Long / Normal / Short)

Selects slideshow interval.

Repeat

(On / Off)

Slideshow repeat

Back Ground Music

(Off / Type1 / Type2 / Type3 / Type4 / Type5)

Selects the background music during Photo mode.

Videos

Selecting file

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > Information

 → Network > Network connections

 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select one of the media servers with Δ / ∇ and press **OK** to access.
 - For the operations to access another TV, select the name of another TV from the displayed media server list.
 - To display / hide information of the highlighted media server
4. Select the file with Δ / ∇ and press **OK** to access.
 - Depending on the condition of media server, you may need to select the folder before selecting the file.
 - To display / hide information of the highlighted file



= Note =

- Contents of 4K format may not be played back properly.
- Non-playable files are also listed but cannot be selected.

Watching video

■ Playback

If you have stopped the last playback halfway, the confirmation screen is displayed to select whether to start from where you stopped last time or from the beginning.

- To operate playback

 : Manual skip (if available)

– Press to skip forward approx. 30 seconds.

 : Rewind

 : Fast forward

 : Stop

 : Pause (displays the time seek bar / slow playback) / Playback

- To jump to the specified time point

1) Display the time seek bar with .

2) While the time seek bar is displayed

Press  /  :

Search approx. 10 seconds

Press and hold  /  :

Search rapidly

3) Jump to the specified time point with .

- To play back slowly

1) Press and hold  for 5 seconds.

Press  /  :

Search slowly

2) Return to the normal playback with .

- To display / hide the operation guide and information banner



- To the previous content

 (red)

- To the next content

 (green)

- To change aspect
 - 1) Display [Aspect Selection](#) with **ASPECT**.
 - 2) Select the mode with \triangle / ∇ and press **OK** to set.
 - [Aspect1](#):
Displays the content enlarged without distortion.
 - [Aspect2](#):
Displays the content full-screen.
 - [Original](#):
Displays the content original size.
 - You can also change the mode pressing **ASPECT**. (Press repeatedly until you reach the desired mode.)
 - Aspect cannot be changed depending on the content.
- To return to list
BACK/RETURN

Video Setup

Set up the settings for video file operations on this TV.

1. Display the option menu with **OPTION**.
 2. Select [Video Setup](#) with \triangle / ∇ and press **OK** to access.
 3. Select one of the following items with \triangle / ∇ and press **OK** to access.
[Video Preview](#) / [Monaural Audio](#) / [Dual Audio](#) / [Dual Mono Audio](#) / [Subtitle](#) / [Subtitle Text](#) / [Subtitle Language](#) / [Repeat](#)
 - Menu items and selectable options vary depending on the content.
 4. Set with \triangle / ∇ and press **OK** to store.
-

[Video Preview](#)

([On](#) / [Off](#))

Sets to start the preview of the title or scene in the thumbnail view.

- Images may not be displayed for an instant in the thumbnail view. Set the preview [Off](#) to solve this.
-

[Multi Audio](#), [Monaural Audio](#), [Dual Mono Audio](#)

Selects for selectable sound tracks (if available).

- It may take several seconds to change the sound.
 - This function is available during playback.
-

Subtitle

Display / hide subtitles (if available).

- This function is available during playback.
-

Subtitle Text

Selects the font type to display subtitles correctly (if available).

- This function is available during playback.
-

Subtitle Language

Selects the language for subtitles (if available).

- This function is available during playback.
-

Repeat

(On / Off)

Playback repeat within the selected file

Audio output settings

You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO or HDMI2 / HDMI4 (ARC function) terminal.

- To confirm or change the current sound status

 → Network > Videos > Video Setup

1. Display the menu with **MENU**.
 2. Select **Sound** > **SPDIF Selection** with Δ / ∇ and press **OK** to access.
 3. Select **Auto** / **PCM** with Δ / ∇ and press **OK** to set.
-

SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO and HDMI2 / HDMI4 (ARC function) terminals.

- SPDIF is a standard audio transfer file format.

Auto:

Dolby Digital Plus, Dolby Digital and HE-AAC multi-channel are output as Dolby Digital Bitstream. MPEG is output as PCM. DTS is output as DTS.

PCM:

Digital output signal is fixed to PCM.

- ARC (Audio Return Channel) is a function of digital audio output using HDMI cable.

= Note =

- During the operation, audio signal is output from DIGITAL AUDIO and HDMI2 / HDMI4 (ARC function) terminals. But no video signals are output. To use HDMI2 / HDMI4 with ARC function, connect an amplifier that has ARC function, set to use theatre speakers and match the output setting in [ARC Output](#) in the Sound menu.

 → [Functions > VIERA Link "HDAVI Control™"](#)

Music

Selecting file

Ensure the preparations of the media server, network connections and network settings are completed.

 → Network > DLNA > Information

 → Network > Network connections

 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select one of the media servers with Δ / ∇ and press **OK** to access.
 - For the operations to access another TV, select the name of another TV from the displayed media server list.
 - To display / hide information of the highlighted media server



4. Select the file with Δ / ∇ and press **OK** to access.
 - Depending on the condition of media server, you may need to select the folder before selecting the file.
 - To display / hide information of the highlighted file



= Note =

- Non-playable files are also listed but cannot be selected.

Playing music

■ Playback

- To operate playback

 : Rewind

 : Fast forward

 : Stop

 : Pause (displays the time seek bar) / Playback

- To jump to the specified time point

1) Display the time seek bar with .

2) While the time seek bar is displayed

Press  /  :

Search approx. 10 seconds

Press and hold  /  :

Search rapidly

3) Jump to the specified time point with .

- To display / hide the operation guide



- To the previous track

 (red)

- To the next track

 (green)

- To return to list



Music Setup

Set up the settings for music file operations on this TV.

1. Display the option menu with **OPTION**.
2. Select **Music Setup** > **Repeat** with **OK**.
3. Select **Off** / **Folder** / **One** with **△** / **▽** and press **OK** to set.

Folder:

Playback repeat within the selected folder

One:

Playback repeat of the selected one file

DIGA Recorder

Controlling DIGA Recorder

Ensure the preparations of the media server, network connections and network settings are completed.


 → Network > DLNA > Information

 → Network > Network connections

 → Network > Network settings

1. Display APPS List with **APPS**.
2. Select **Media Server** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select **DIGA** with Δ / ∇ and press **OK** to access.
4. The screen of the DIGA Recorder will be displayed. You can control the functions of the DIGA Recorder with this TV's remote control according to the operation guide.

(Example)

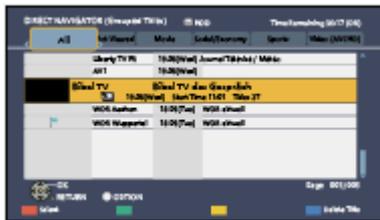

- Before operating, register this TV on the DIGA Recorder.
- For details, read the manual of the DIGA Recorder.

Technical information

Photo format

■ Supported Photo formats

- JPEG (.jpg, .jpeg, .mpo)

Sub-sampling:

4:4:4, 4:2:2, 4:2:0

Image resolution (pixel):

8 × 8 to 30 719 × 17 279

- DCF and EXIF standards
 - Progressive JPEG is not supported.
-

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

Video format

■ Supported Video formats

- SD-Video (.mod)

Video codec:

MPEG1, MPEG2

Audio codec:

Dolby Digital, MPEG Audio

- SD-Video Standard Ver. 1.31 (Entertainment Video Profile)
 - The data may not be available if a folder structure on the device is modified.
-

- AVCHD (.mts)

Video codec:

H.264 BP/MP/HP

Audio codec:

Dolby Digital

- AVCHD Standard Ver. 2.0 (AVCHD 3D, AVCHD Progressive)
 - The data may not be available if a folder structure on the device is modified.
-

- AVI (.avi)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP, VC-1, Windows Media Video Ver. 9

Audio codec:

AAC, ADPCM, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, LPCM, MPEG Audio, MP3, WMA, WMA Pro

- Some subtitles or chapter functions may not be available.
-

- MP4 (.f4v, .m4v, .mp4)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MPEG Audio, MP3

- This TV supports this container recorded with Panasonic products. For details, read the manual of the products.
-

- MKV (.mkv)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2, MPEG4 SP/ASP

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, DTS core, HE-AAC, MPEG Audio, MP3, Vorbis

- Some subtitles or chapter functions may not be available.
-

- ASF (.asf, .wmv)

Video codec:

MPEG4 SP/ASP, VC-1, Windows Media Video Ver. 9

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, LPCM, MP3, WMA, WMA Pro

- Copy-protected files cannot be played back.
-

- FLV (.flv)

Video codec:

H.264 BP/MP/HP

Audio codec:

AAC, MP3

- 3GPP (.3gp, .3g2)

Video codec:

H.264 BP/MP/HP, MPEG4 SP/ASP

Audio codec:

AAC, HE-AAC

- PS (.mod, .mpg, .mpeg, .vob, .vro)

Video codec:

MPEG1, MPEG2

Audio codec:

Dolby Digital, LPCM, MPEG Audio

- TS (.mts, .m2ts, .tp, .trp, .ts, .tts)

Video codec:

H.264 BP/MP/HP, MPEG1, MPEG2

Audio codec:

AAC, Dolby Digital, Dolby Digital Plus, HE-AAC, MPEG Audio

■ Supported Subtitles formats

- MicroDVD, SubRip, TMLPlayer (.srt, .sub, .txt)
 - The video file and subtitles text file are inside the same folder, and the file names are the same except for the file extensions.
 - If there are more than one subtitles text files inside the same folder, they are displayed in the following order of priority: “.srt”, “.sub”, “.txt”.
-

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.
- Supported formats are different in Media Player and media server.

Music format

■ Supported Music formats

- MP3 (.mp3)

- AAC / Apple Lossless (.m4a)
 - Copy-protected files cannot be played back.

- FLAC (.flac)

- WMA / WMA Pro (.wma)
 - Copy-protected files cannot be played back.
 - WMA Lossless is not supported.

- LPCM (.wav)

= Note =

- Some files may not be played back even if they fulfil these conditions.
- Do not use multi-byte characters or other special codes for file names.
- Connected devices may become unusable with this TV if the file or folder names are changed.

Functions

User profile

Information

Setting user profile allows you to enjoy the recommended contents, your favourite Home Screen, Info Bar, cloud services, etc.

- To display Info Bar

 → [Functions > Info Bar](#)

- To use [my Stream](#)

 → [Functions > User profile > my Stream](#)

= Note =

- You need a broadband network environment to use this function fully.

Settings

You can create and edit a user profile.

■ To edit a user profile

1. Display the main menu with **MENU**.
2. Select [Setup > User Settings](#) with Δ / ∇ and press **OK** to access.
3. Select a user with \triangleleft / \triangleright and press **OK** to access.
 - To create a new user, select [Create new user](#).
4. Select one of the following items with Δ / ∇ and press **OK** to access.
([Your icon](#) / [Your name](#) / [Your voice](#) / [Your face](#) / [Main Home Screen](#) / [my Home Cloud account](#))
5. Follow the on-screen instructions.

[Your icon](#)

Sets your favourite user icon.

[Your name](#)

Sets the name of the user.

Your voice

Registers the voice data of the user for Voice Print Recognition.

Your face

Registers the face data of the user for Face Recognition.

Main Home Screen

Selects Home Screen to be displayed when using Voice Control function. To use this function, you need to register your voice data or face data.

my Home Cloud account

Sets up an account for the cloud services.

■ To delete a user profile

1. Display the main menu with **MENU**.
2. Select **Setup > User Settings** with Δ / ∇ and press **OK** to access.
3. Select a user with $\triangleleft / \triangleright$ and press **OK** to access.
4. Select **Remove this user** with Δ / ∇ and press **OK** to access.
5. When the confirmation screen is displayed, select **Yes** with $\triangleleft / \triangleright$ and press **OK** to set.

= Note =

- You need a broadband network environment to use this function fully.

 → Network > Network connections

 → Network > Network settings

my Stream

Automatically provides the recommended contents (TV programmes, internet content, etc.).

1. Display APPS List with **APPS**.
 2. Select **my Stream** with $\Delta / \nabla / \triangleleft / \triangleright$ and press **OK** to access.
 3. Follow the on-screen instructions.
- To register a content as your favourite

 → [Functions > Touch Pad Controller > My button](#)

= Note =

- You need a broadband network environment to use this function fully.

■ Face Recognition / Voice Print Recognition

By using the built-in Camera and Voice Control function, this TV recognises your face / voice and provides the recommended contents.

- Say “my Stream” into the microphone of the Touch Pad Controller to use this function.
- To use this function, you need to set up a user profile and register face / voice data, etc.

 → [Functions > User profile > Settings](#)

- For details of the built-in Camera

 → [Functions > Built-in Camera > Using built-in Camera](#)

- For details of Voice Control function

 → [Functions > Voice Control](#)

Info Bar

Information

Automatically detects human activity and displays some information or messages on the bottom of the screen. Voice operation is also available.

■ Info Bar

(Example)



Information area

- To use this function, set [Info Bar Settings](#).
 → [Functions > Info Bar > Settings](#)
- To set user profile
 → [Functions > User profile](#)
- You need a broadband network environment to use this function fully.
- Built-in Camera and Built-in Microphone are available when [Info Bar](#) is set to [On](#). Voice command is displayed with icon “”.

Settings

This setting allows you to adjust the items for Info Bar function.

1. Display the main menu with **MENU**.
 2. Select **Setup > Info Bar Settings** with $\Delta / \nabla / \triangleleft / \triangleright$ and press **OK** to access.
 3. Select one of the following items with Δ / ∇ and press **OK** to access.
Info Bar / Sensor sensitivity / Sound Effect volume
 4. Set with Δ / ∇ and press **OK** to store.
-

Info Bar

(On / Off)

Enables Info Bar function.

- Changing the default configuration may increase Standby Power Consumption.
-

Sensor sensitivity

(High / Low)

Adjusts the sensitivity of the human activity sensor.

Sound Effect volume

(High / Low / Off)

Adjusts the volume of sound effect for Info Bar function.

= Note =

- You need a broadband network environment to use this function fully.

 → Network > Network connections

 → Network > Network settings

Human activity sensor

■ Available range for the human activity sensor

Range: Within approx. 5 m

Horizontal: Within approx. 35°

Vertical (upward): Within approx. 15°

Vertical (downward): Within approx. 7.5°

- This range is available when [Sensor sensitivity](#) is set to [High](#).

= Note =

- Human activity sensor detects the gap between the room and human body of temperature. The available range may be different depending on the surrounding temperature, clothes, etc. Human activity sensor may mistakenly detect the heat source such as direct sunlight, animals (dog, cat, etc.), warm air from air conditioner, heater, electric pot, etc.
- Sideways or lengthways movement can be detected easily, but back and forth movement or a slight movement may not be detected strictly.
- Human activity sensor may not work properly when there is a reflecting object (mirror, etc.) in the available range or any objects between the human activity sensor and person.

Built-in Camera

Using built-in Camera

You can use the built-in Camera as a communication tool for specific applications such as face recognition, video message, etc.

 → my Home Screen > my Home Screen > Settings

= Note =

- Please note that under certain circumstances, audio / video recording may be prohibited by local laws. This appliance should be used only in compliance with all applicable laws, regulations and statutes.

■ Built-in Camera

Automatically comes out and back in by the operation of a camera application.

- Do not pull or push the camera by hands.

= Note =

- Face recognition may not work properly depending on surrounding environment or condition (for example, darkened room, etc.).
- The applications such as video communication need a broadband network environment. Ensure the network connections and network settings are completed.

 → Network > Network connections

 → Network > Network settings

- This function is subject to change without notice.

Voice Control

Preparations

Voice Control function allows you to operate the TV (e.g. selecting a channel), search the content from various features, etc. with your speech.

- To use this function fully, you need a broadband network environment. Ensure the network connections and network settings are completed.

 → Network > Network connections

 → Network > Network settings

- Ensure the pairing of Touch Pad Controller is completed.

 → Functions > Touch Pad Controller > Settings

■ Voice Control Settings

1. Display the menu with **MENU**.
2. Select **Setup > Voice Control Settings > Speech Detection Level / Terms of Service** with **△ / ▽** and press **OK** to access.
3. Set with **△ / ▽** and press **OK** to store.

Speech Detection Level

(High / Standard)

Adjusts the sensitivity to recognise your speech.

Terms of Service

Displays the terms of service.

= Note =

- To use Voice Control function fully, you need a broadband network environment, because this function accesses the speech recognition server with the internet connection. Even if you have the internet environment, this function may not be available depending on the proxy settings. Please connect the internet without proxy settings. (Proxy settings are not required for normal household use. For details of internet environment, consult your Internet Service Provider (ISP) or telecommunications company.)

How to use

1. Press **⓪** of Touch Pad Controller.
 - When the confirmation screen is displayed, read carefully and start Voice Control function.
2. The operation guide is displayed and follow the on-screen instructions.
 - To display voice command list
OPTION
 - To exit Voice Control function
BACK/RETURN

= Note =

- When you start Voice Control function, sound level of the TV becomes low.
- Voice Control function may not work properly in the following conditions.
 - Not pronounce clearly and correctly
 - Volume level of your voice is too loud or too low.
 - Surrounded by the noise
- Phrases other than Voice Command may not be recognised.
- It is recommended to speak within about 15 cm from the integrated microphone of Touch Pad Controller when using Voice Control function.
- Voice Control function is subject to change without notice.

Touch Pad Controller

Information

Touch Pad Controller is designed for the convenient operations, especially, on Home Screen or internet contents. You can operate the TV intuitively with this controller.

- Touch Pad Controller can be used by registering to this TV with Bluetooth wireless technology.
- After registering, you can operate the TV without pointing this controller at the TV (except Standby On / Off switch).
- To use Standby On / Off switch, point the controller directly at the TV's remote control signal receiver because it works with the infrared. (You can operate the switch without registration.)
- It is recommended to speak within about 15 cm from microphone of Touch Pad Controller when using Voice Control function.

My button

Press  (my button) of Touch Pad Controller on [my Stream](#) or other available contents to register the content as your favourite.

- Your registered favourites are reflected on [my Stream](#).

 → [Functions](#) > [User profile](#) > [my Stream](#)

- To select the user, set [User Settings](#).

 → [Functions](#) > [User profile](#) > [Settings](#)

Settings

1. Display the menu with **MENU**.
 2. Select **Setup > VIERA Touch Pad Controller** with \triangle / ∇ and press **OK** to access.
 3. Select one of the following items with \triangle / ∇ and press **OK** to access.
[Pairing](#) / [Cursor Settings](#) / [Operation Guide](#)
 4. Follow the on-screen instructions.
-

Pairing

Registers Touch Pad Controller (supplied) to this TV.

- Only 1 Touch Pad Controller can be registered.
-

Cursor Settings

Sets for the cursor of Touch Pad Controller.

Operation Guide

Displays the operation guide of Touch Pad Controller.

Multi Window

Information

Displays two windows at once for viewing the TV programmes or external input (AV / COMPONENT / HDMI / DisplayPort) as shown below (example).



Dual view



Pre-view



Dual view



Dual view

- To swap windows
OK
- To exit multi window
EXIT


How to use

You can select a channel while watching another programme or external input.

1. Display the menu with **MENU**.
2. Select **Picture** > **Screen Settings** > **Multi Window** with \triangle / ∇ and press **OK** to access.

■ Dual view


(Example)

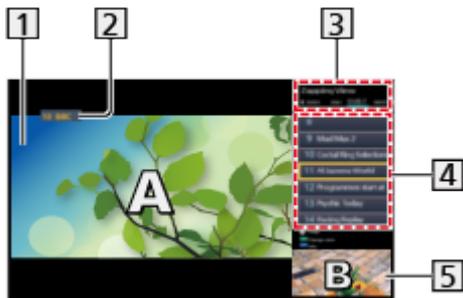

- 1 Main screen
- 2 TV mode / Input mode / Channel position and name (for main screen)
- 3 TV mode / Input mode (for sub screen)
 - You can select the TV mode / input mode of the sub screen with \triangleleft / \triangleright .
- 4 Current programme information (if available) (for sub screen)
 - You can select the programme of the sub screen with \triangle / ∇ .
- 5 Sub screen / information screen
 - Press **■** (blue) to change the screen.
 - The sound comes only from the main screen.

■ Pre-view

(Example)

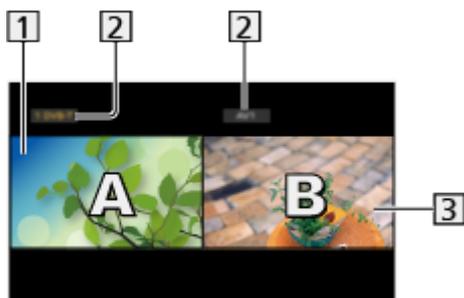

1 Main screen

2 TV mode / Input mode / Channel position and name

3 Sub screen

- Press ◀ / ▶ to select the screen to operate.

-  displays on the screen.

- To select the sound

- 1) Display the option menu with **OPTION**.

- 2) Select **Sound Output** with ▲ / ▼ and press **OK** to access.

- 3) Select **Main / Sub** with ▲ / ▼ and press **OK** to set.

-  displays on the screen.

- To confirm or change the current status

OPTION

- Menu items and selectable options vary between the main screen and sub screen.

 ⇒ **Watching > Basic > Option Menu**

- To display / hide the operation guide



Note

- Ensure that **Dual Tuner Mode** is set to **On** in **Auto Setup** to display Freesat or Other Sat. / Satellite both in two windows.

 → **Watching > Tuning and editing channels > Auto Setup**

- Not valid in Analogue
- Data services are not available in multi window.
- You cannot change the aspect ratio in multi window.
- External input mode can only be displayed either on the main screen or sub screen.
- HDMI and DisplayPort inputs are available for the main screen.
- Some signals are reformatted for suitable viewing on your display.

VIERA Link “HDAVI Control™”

Summary of VIERA Link

Enjoy additional HDMI Inter-Operability with Panasonic products which have “HDAVI Control™” function.

VIERA Link (HDAVI Control) connects the TV and the equipment with VIERA Link function, and enables easy control, playback, energy saving, creating home theatre, etc. without complicated settings. Connections to the equipment (DIGA Recorder, HD Video Camera, Player theatre, Amplifier, etc.) with HDMI and SCART cables allow you to interface them automatically. These features are limited to models incorporating “HDAVI Control” and “VIERA Link”.


- This TV supports “HDAVI Control 5” function.
- Some functions are not available depending on the equipment’s version of HDAVI Control. Confirm the connected equipment’s version of HDAVI Control.
- VIERA Link “HDAVI Control” is a unique function that we have developed and added based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control). As such, its operation with other manufacturers’ product that supports HDMI CEC cannot be guaranteed.
- VIERA Link features may be available even with other manufacturers’ equipment supporting HDMI CEC.
- Please refer to individual manuals for other manufacturers’ product supporting VIERA Link function.
- For information about applicable Panasonic equipment, consult your local Panasonic dealer or refer to the following website.

www.panasonic.co.uk

■ VIERA Link (HDMI connection)

- Use a fully wired HDMI compliant cable.
- Connect the equipment supporting VIERA Link to the TV's HDMI terminal via an HDMI cable.

About HDMI cable for connecting Panasonic HD Video Camera or LUMIX Camera, read the manual of the equipment.

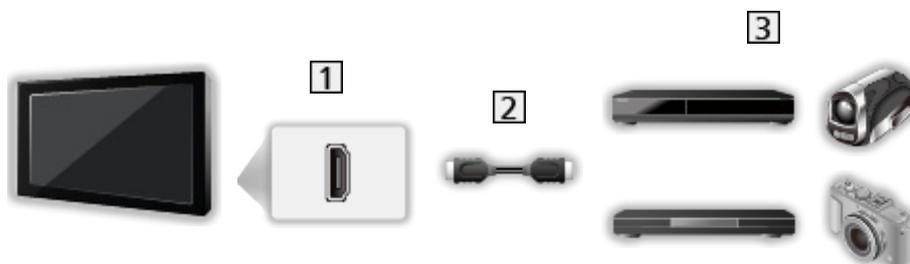

1 HDMI terminal

2 HDMI cable

3 Equipment with VIERA Link function (DIGA Recorder / DVD Player / Blu-ray Disc Player / HD Video Camera / LUMIX Camera)

■ Available features (HDMI connection)

DIGA Recorder / DVD Player / Blu-ray Disc Player

- Easy playback
 - Power on Link
 - Power off Link
 - Standby Power Save*²
 - Intelligent Auto Standby*²
 - VIERA Link Control*¹
-

HD Video Camera / LUMIX Camera


- Easy playback
 - Power on Link
 - Power off Link
 - VIERA Link Control*¹
-

*¹ : For equipment which has "HDAVI Control 2 or later" function.

*² : For equipment which has "HDAVI Control 4 or later" function.

■ VIERA Link (HDMI and Audio out connections)

- Use a fully wired HDMI compliant cable.
- Connect the equipment supporting VIERA Link to the TV's HDMI terminal via an HDMI cable.
- Use a fully wired SCART cable.
- Use the optical digital audio cable or SCART cable for audio output from the TV.

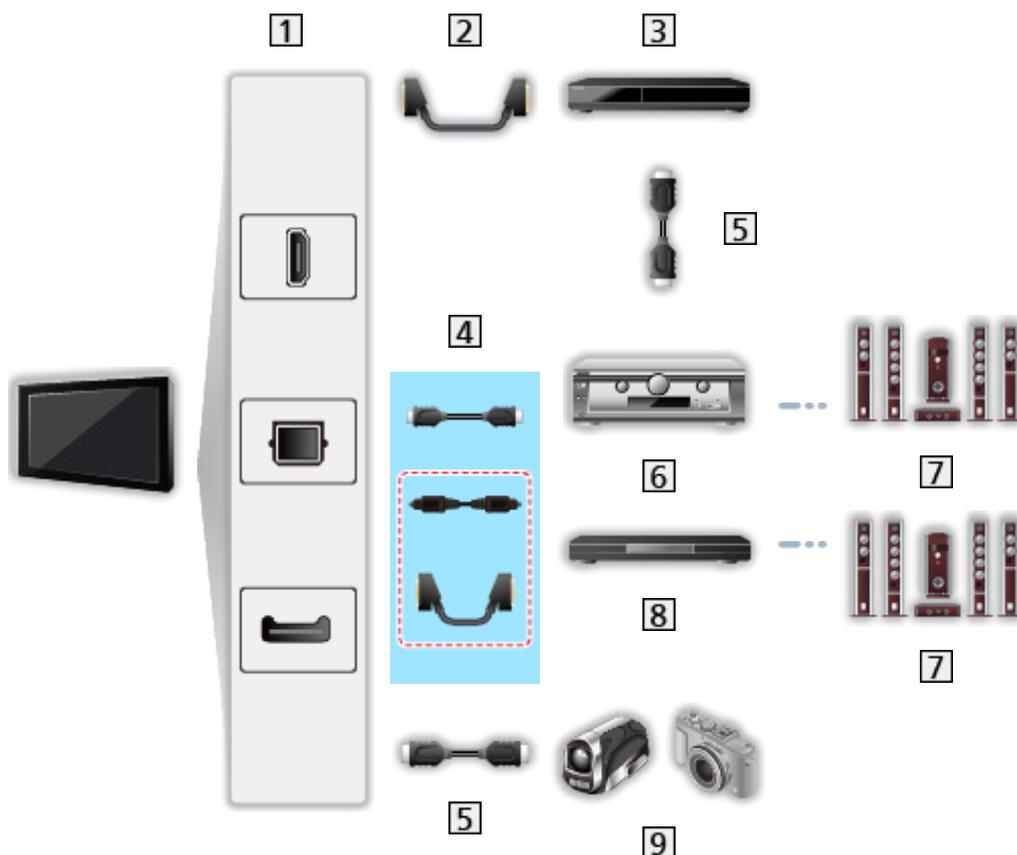

1 HDMI terminal / DIGITAL AUDIO / AV1 (SCART) terminal

2 SCART cable

- AV1 (SCART) adaptor (supplied) is necessary when connecting to the TV.

3 DIGA Recorder with VIERA Link function

4 HDMI cable (Optical digital audio cable* / SCART cable*)

- AV1 (SCART) adaptor (supplied) is necessary when connecting to the TV.

5 HDMI cable

6 Amplifier with VIERA Link function

7 Speaker system

8 Player theatre / Blu-ray Disc theatre with VIERA Link function

9 HD Video Camera / LUMIX Camera with VIERA Link function

*: If the connected equipment has “HDAVI Control 5” function, you do not have to use this audio cable (Optical digital audio cable / SCART cable). In this case, connect the equipment to the TV’s HDMI2 / HDMI4 terminal via an HDMI cable and match the output setting in [ARC Output](#) in the Sound menu.

■ Available features (HDMI and Audio out connections)

Player theatre

- Easy playback*³
 - Power on Link
 - Power off Link
 - Intelligent Auto Standby*^{2*4}
 - VIERA Link Control*¹
 - Speaker Selection
-

Blu-ray Disc theatre

- Easy playback*³
 - Power on Link
 - Power off Link
 - Standby Power Save*²
 - Intelligent Auto Standby*^{2*4}
 - VIERA Link Control*¹
 - Speaker Selection
-

Amplifier

- Power off Link
 - Intelligent Auto Standby*²
 - Speaker Selection
-

*¹ : For equipment which has “HDAVI Control 2 or later” function.

*² : For equipment which has “HDAVI Control 4 or later” function.

*³ : While playing a disc

*⁴ : Except for watching a disc

■ VIERA Link Control of compatible equipment

The following is the maximum number of compatible equipment that can be controlled by VIERA Link Control. This includes connections to equipment already connected to the TV.

For example, DIGA Recorder connected to Amplifier which is connected to the TV via an HDMI cable.

 → [Functions > VIERA Link "HDAVI Control™" > VIERA Link Control](#)

- Recorder:
 - Maximum 3 (DIGA Recorder, etc.)
- Player:
 - Maximum 3 (DVD Player, Blu-ray Disc Player, HD Video Camera, LUMIX Camera, Digital Camera, Player theatre, Blu-ray Disc theatre, etc.)
- Audio system:
 - Maximum 1 (Player theatre, Blu-ray Disc theatre, Amplifier, etc.)
- Tuner:
 - Maximum 4 (Set top box, etc.)

Preparations

- Connect the equipment supporting VIERA Link.
- For VIERA Link connections
 -  → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)
- Use a fully wired HDMI compliant cable.
- Use a fully wired SCART cable.
- Set up the connected equipment. Read the manual of the equipment.
- Set **VIERA Link** to **On** in the Setup Menu.
- Set up the TV. After connection, turn the equipment on and then switch the TV on. Select the HDMI input from **Input Selection** with **AV** and make sure that an image is displayed correctly. (This setup should be done each time the following conditions occur.)
 - First time operation
 - Adding or reconnecting equipment
 - Changing setup

Easy playback

Automatic input switching - When the connected equipment is operating, the input mode is switched automatically.

Power on Link

Set [Power on Link](#) to [On](#) in [VIERA Link Settings](#) to use this function.

When the connected equipment starts playback or direct navigator / function menu for the equipment is activated, the TV is automatically turned on. (Only when the TV is in Standby mode.)

Power off Link

Set [Power off Link](#) to [On](#) in [VIERA Link Settings](#) to use this function.

When the TV is set to Standby mode, the connected equipment is also automatically set to Standby.

- This function will work even if the TV enters Standby mode automatically by auto power standby function.

Standby Power Save

Set [Standby Power Save](#) to [On](#) in [VIERA Link Settings](#) to use this function.

The power consumption of the connected equipment in Standby mode is controlled higher or lower in synchronisation with the TV on / off state to reduce the consumption.

When the TV is set to Standby mode, the connected equipment is automatically set to Standby and the power consumption of the connected equipment is automatically minimised.

When the TV is turned on, the connected equipment is still in Standby mode, but the power consumption is increased to start the connected equipment fast.

- This function is effective if the connected equipment can change the power consumption in Standby mode and is set to higher consumption.
- This function works when [Power off Link](#) is set to [On](#).

Intelligent Auto Standby

Set [Intelligent Auto Standby](#) to [On](#) in [VIERA Link Settings](#) to use this function.

When the TV is on, non-used connected equipment goes into Standby mode automatically to reduce the power consumption. For example, when the input mode is switched from HDMI or when [Speaker Selection](#) is changed to [TV](#) (except for watching a disc).

- This function may not work properly depending on the connected equipment. In this case, set to [Off](#).

VIERA Link Control

You can control some functions of the connected equipment with this TV's remote control by pointing at the TV's signal receiver.

1. Display APPS List with **APPS**.
2. Select **VIERA Link** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select **VIERA Link Control** with Δ / ∇ and press **OK** to access.
4. Select one of the following items with Δ / ∇ and press **OK** to access.

Recorder / Player / Home Cinema / Video Camera / LUMIX / Digital Camera / Other

(The menu of the accessed equipment will be displayed. The input mode will be changed automatically.)

- The displayed item may vary depending on the connected equipment.
 - **Home Cinema** means Player theatre, Blu-ray Disc theatre or Recorder theatre.
 - **Other** means Tuner set top box.
5. Follow the on-screen instructions to operate the menu of the equipment.
 - Confirm the remote control code is "73".
 → Watching > External equipment > Operating with TV's remote control
 - To display the operation guide
OPTION
(If other manufacturers' product is accessed, Setup / Contents Selection menu may be displayed.)
 - Available TV's remote control buttons depend on the connected equipment.

■ If multiple recorders or players are connected

Each recorder / player is numbered. The number is given from the TV's lower number of HDMI terminal connected to the same type of equipment. For example, when two recorders are connected to HDMI2 and HDMI3, the recorder connected to HDMI2 is displayed as **Recorder1**, and the recorder connected to HDMI3 is displayed as **Recorder2**.

■ If you access non-VIERA Link equipment

The type of the connected equipment is displayed. Although you can access the connected equipment, you cannot operate it. Use the remote control of the connected equipment.

= Note =

- If you cannot operate the equipment, check the settings and the equipment.

 → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)

- Some operations may not be available depending on the equipment. In this case, use the remote control of the connected equipment.
- For details of the operations for the connected equipment, read the manual of the equipment.

Speaker Selection

You can control the theatre speaker with this TV's remote control by pointing at the TV's signal receiver.

1. Display APPS List with **APPS**.
2. Select **VIERA Link** with Δ / ∇ / \triangleleft / \triangleright and press **OK** to access.
3. Select **Speaker Selection** with Δ / ∇ and press **OK** to access.
4. Select **Home Cinema / TV** with Δ / ∇ and press **OK** to set.

Home Cinema:

The sound is delivered from theatre speakers. Player theatre, Blu-ray Disc theatre or Amplifier will be automatically turned on if it is in Standby mode.

- The sound of TV speakers is mute. When the equipment is turned off, TV speakers will be activated.
- You can use **Volume Up / Down** and **MUTE**.



TV:

TV speakers are active.

■ Multi-channel sound

If you want to enjoy the multi-channel sound (e.g. Dolby Digital 5.1ch) via an Amplifier, connect it with an HDMI cable and Optical digital audio cable, and then select [Home Cinema](#). If your Amplifier has the “HDAVI Control 5” function, you only need to connect it with an HDMI cable to the TV’s HDMI2 / HDMI4 terminal and match the output setting in [ARC Output](#) in the Sound menu.

To enjoy multi-channel sound from DIGA Recorder, connect an HDMI cable from the DIGA Recorder to the Amplifier.

= Note =

- If you cannot operate the equipment, check the settings and the equipment.

 → [Functions > VIERA Link “HDAVI Control™” > Summary of VIERA Link](#)

Note

- These functions may not work properly depending on the connected equipment.
- Image or sound may not be delivered for the first few seconds when the input mode is switched.
- “HDAVI Control 5” is the newest standard for HDAVI Control compatible equipment. This standard is compatible with conventional HDAVI equipment.
- To confirm the HDAVI Control version of this TV

 → [Support > Information > Using Help menu](#)

Child Lock

Using Child Lock

You can lock specific channels / AV input terminals to restrict access to them. When the locked channel / input is selected, a message appears. Enter the PIN number to watch.

1. Display the menu with **MENU**.
2. Select **Setup** > **Child Lock** with Δ / ∇ and press **OK** to access.
3. Enter the PIN number (4 digits) with **Numeric buttons**.



- Enter the PIN number twice at first setting.
 - Make a note of the PIN number in case you forget it.
4. Select **Child Lock List** with Δ / ∇ and press **OK** to access.
 5. Select the channel / input with Δ / ∇ and press **OK** to lock.
 -  appears when the channel / input is locked.
 - To cancel
 - 1) Select the locked channel / input with Δ / ∇ .
 - 2) Press **OK**.
 - To lock all
 -  (green)
 - To cancel all locks
 -  (yellow)
 - To jump to the head of the next channel / input group
 -  (blue)

■ Adult Channels

Select **Hide** to hide channels of the adult genre in TV Guide and channel list. All the timer events of the adult genre will be cancelled.

= Note =

- For Freesat (UK only)

■ Player PIN Control

Applies access control for some Digital TV streaming services.

= Note =

- For DVB (UK only)

PIN number

You can change the PIN number.

1. Select [Change PIN](#) with \triangle / ∇ and press **OK** to access.
2. Enter a new PIN number twice with **Numeric buttons**.



= Note =

- Setting [Shipping Condition](#) erases the PIN number and all settings.

Parental Rating

To watch the DVB programme that has rating information on the selected age, enter the PIN number (depending on the broadcaster).

1. Select [Parental Rating](#) with \triangle / ∇ and press **OK** to access.
2. Select an age for the restriction of programmes with \triangle / ∇ and press **OK** to set.

= Note =

- Setting [Shipping Condition](#) erases the PIN number and all settings.
- Ireland only


Common Interface

Caution

If the encrypted message is displayed on the screen, the correct Common Interface (CI) Module and smart card that are required for this service are not inserted.

■ How to insert CI module and smart card

- Turn the TV off with Mains Power On / Off switch whenever inserting or removing the CI module.
- If a smart card and a CI module come as a set, first insert the CI module, then insert the smart card into the CI module.
- Insert or remove the CI module completely in the correct direction as shown.

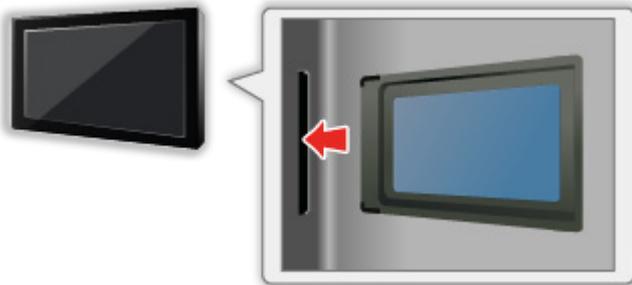

- Remove the CI module from the TV when placing the TV facing upward. This may cause damages to the CI module and CI slot.

= Note =

- There might be some CI modules in the market with older firmware versions that do not work fully interoperable with this new CI+ v1.3 TV. In this case, please contact your content provider.

Using Common Interface

The Common Interface Module menu provides access to software contained in Common Interface (CI) Modules.

- Video and audio signals may not be output depending on broadcasts or services.

■ Insert the CI module (optional)

- Follow the instructions that came with the viewing card to tune in the encrypted channels. If encrypted channels do not appear, perform the below to verify the card is recognised by the TV.
 - For more details, read the manual of the CI module, or check with the content provider.
1. Display **TV Selection** with **TV**.
 2. Select **DVB** with **△ / ▽** and press **OK** to set.
 3. Display the menu with **MENU**.
 4. Select **Setup > System Menu > Common Interface** with **△ / ▽** and press **OK** to access.
 5. Press **OK** and follow the on-screen instructions.
 - On-screen instructions may not correspond to the remote control buttons.

Shipping Condition

Shipping Condition

Resets the TV to its original condition (i.e. no channels tuned in).

All settings other than [USB Device Setup](#) are reset (channels, picture, sound settings, etc.).

1. Display the menu with **MENU**.
2. Select [Setup](#) > [System Menu](#) > [Shipping Condition](#) with \triangle / ∇ and press **OK** to access.
3. When the confirmation screen is displayed, select [Yes](#) with \triangleleft / \triangleright and press **OK** to set.
4. Follow the on-screen instructions.
 - [Auto Setup](#) will automatically start.

= Note =

- To retune TV channels only (e.g. after moving house), set [Auto Setup](#).
 → [Watching](#) > [Tuning and editing channels](#) > [Auto Setup](#)

Updating the TV Software

Information

A new version of software may be released for download to enhance the performance or operations of the TV.

In DVB, a notification banner will appear when one of the BBC channels is turned to if a new available software is found.

- To install new software, select **Standby / Now** with ◀ / ▶ and press **OK** to set.

Standby:

Installs new software in standby condition.

Now:

Installs new software now.

Auto update

You can update new software automatically.

1. Display the menu with **MENU**.
2. Select **Setup > System Menu > System Update > Auto Update Search in Standby** with ▲ / ▼ and press **OK** to access.
3. Select **On** with ▲ / ▼ and press **OK** to set.
 - If any software updates are available, the notification message will appear. To install new software, select **Standby / Now** with ◀ / ▶ and press **OK** to set.

Standby:

Installs new software in standby condition.

Now:

Installs new software now.

- If System Update is performed, the software will be updated (TV functions may be changed). If you do not want to do so, set **Auto Update Search in Standby** to **Off**.
- The automatic updating cannot be performed under the following conditions:
 - TV turned off with Mains Power On / Off switch
 - Recording is in progress.

= Note =

- Download may take a few hours.
- During software download and update, DO NOT perform any operations on the TV or switch Off the TV.

Manual update

You can update new software manually.

1. Display the menu with **MENU**.
2. Select **Setup > System Menu > System Update > System Update Search Now** with **△ / ▽** and press **OK** to access.
3. Searches for an update (for several minutes) and displays a corresponding message if any.
4. Download with **OK**.

= Note =

- Download may take a few hours.
- During software download and update, DO NOT perform any operations on the TV or switch Off the TV.

Setting characters

Using Numeric buttons

You can enter characters for free input items using **Numeric buttons**.

Press **Numeric buttons** repeatedly until you reach the desired character.

1 : . @ / 1 ! : # + - * _ () “ ‘ % & ? , ; = \$ [] ~ < > { } | ` ^ \

2 : a b c 2 A B C

3 : d e f 3 D E F

4 : g h i 4 G H I

5 : j k l 5 J K L

6 : m n o 6 M N O

7 : p q r s 7 P Q R S

8 : t u v 8 T U V

9 : w x y z 9 W X Y Z

0 : Space 0

- The character is set automatically if you leave for 1 second.
- You can also set the character pressing **OK** or other **Numeric buttons** less than 1 second.
- The characters may vary depending on the input items.

Bluetooth devices

Bluetooth Setup

You can use Bluetooth keyboards* / mouse* with this TV by setting [Bluetooth Setup](#) in the Setup Menu.

*: HID (Human Interface Device Profile) compliant keyboards / mouse can be used.

- Additional information for the devices may be found on the following website.

<http://panasonic.net/viera/support> (English only)

1. Display the menu with **MENU**.
 2. Select [Setup](#) > [Bluetooth Setup](#) > [Devices](#) with \triangle / ∇ and press **OK** to access.
-

Devices

Searches the available device and displays the status.

Not paired:

The device is not registered. Register the device by following the on-screen instructions to use with this TV.

Connected:

The device is registered and you can use with this TV.

Not connected:

The device is already registered, but not connected to this TV. Check the device is turned on and set within the available range.

- This setup has not been designed for the 3D Eyewear and Touch Pad Controller supporting Bluetooth wireless technology.

Keyboard

Keyboard

- Keyboards requiring the drivers are not supported.
- To change the language type, set [Keyboard Layout](#).
 - 1) Display the menu with **MENU**.
 - 2) Select [Setup](#) > [System Menu](#) > [Keyboard Layout](#) with Δ / ∇ and press **OK** to access.
 - 3) Select the language with Δ / ∇ and press **OK** to set.
- Characters may not be displayed correctly on the TV screen depending on the connected keyboard or the keyboard layout setting.
- Some of the keys of keyboards may correspond to the operation of the remote control.

Keyboard	Remote Control
\uparrow / \downarrow / \leftarrow / \rightarrow	Δ / ∇ / \triangleleft / \triangleright
Enter	OK
Backspace	BACK/RETURN
Esc	EXIT
0 - 9 / Character	Numeric buttons
F1	HOME
F2	APPS
F3	MENU
F4	AV
F5 / F6	Channel Down / Up
F7 / F8	Volume Down / Up
F9 / F10 / F11 / F12	Coloured buttons

Settings

Setting menu

How to use

Various menus allow you to make settings for the picture, sound, and other functions.

1. Display the menu with **MENU**.
 - Displayed items vary depending on the input signal.
 2. Select the menu with \triangle / ∇ and press **OK** to access.
 3. Select the items with \triangle / ∇ and press **OK** to access.
 - Only available items can be selected.
 - You can also access from **eHELP** pressing  (red) at each item (if available).
-
- You can select from among alternatives with \triangle / ∇ and press **OK** to set.
 - You can adjust using the slide bar with \triangleleft / \triangleright and press **OK** to set.
 - You can go to the next screen with **OK**.
 - You can enter names or numbers freely for some items.
 - 1) Enter characters one by one with \triangle / ∇ / \triangleleft / \triangleright and press **OK** to set.
 - You can set characters using **Numeric buttons**.
 → [Functions > Setting characters > Using Numeric buttons](#)
 - 2) Press **BACK/RETURN** to store.
 - To reset the settings
 - To initialise picture or sound settings only, select [Reset to Defaults](#) in the Picture Menu or Sound Menu.
 - To initialise all settings, select [Shipping Condition](#).
 → [Functions > Shipping Condition](#)
 - To exit the menu screen
EXIT
 - To return to the previous screen
BACK/RETURN

- To change menu pages



- To change the colour type of on-screen displays, set [OSD Colour](#).

 → [my Home Screen](#) > [my Home Screen](#) > [OSD Colour](#)

= Note =

- Menu items and selectable options vary depending on the mode (TV mode, Media Player, Network services, etc.).
- Some settings in Picture menu may also affect the menu screen when watching the content of 4K format.
- If [Demo Settings](#) is displayed in the Setup Menu, the TV is in “Shop” viewing environment. To return to “Home” viewing environment, initialise all settings by accessing [Shipping Condition](#).

 → [Functions](#) > [Shipping Condition](#)

■ Using control panel buttons

1. Press and hold INPUT/OK/HOLD for MENU button for 3 seconds to display the menu.
2. Select and set with following control panel buttons.
 - Move the cursor / select from a range of options / select the menu item (up and down only) / adjust levels (left and right only)



- Access the menu / store settings after adjustments have been made or options have been set with INPUT/OK/HOLD for MENU button

Picture

Viewing Mode

Selects your favourite picture mode for each input.

([Dynamic](#) / [Normal](#) / [Cinema](#) / [THX Cinema](#) / [THX Bright Room](#) / [True Cinema](#) / [Monitor](#) / [Custom](#) / [Professional1](#) / [Professional2](#))

 → [Watching](#) > [For best picture](#) > [Viewing Mode](#)

Basic settings

[Backlight](#), [Contrast](#), [Brightness](#), [Colour](#), [Tint](#), [Sharpness](#)

Adjusts the levels of these options according to your personal preference.

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

- [Sharpness](#) is not available when [1080p Pixel by 4pixels](#) is set to [On](#).

Colour Temperature

Sets the overall colour tone of the picture (bluer - redder).

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

Vivid Colour

([On](#) / [Off](#))

Automatically adjusts colours to vivid ones.

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

Colour Remaster

([Max](#) / [Min](#) / [Off](#))

Displays the vivid images with the expanded colour gamut.

 → [Watching](#) > [For best picture](#) > [Basic settings](#)

- For HDMI input or video contents of Media Player
 - Not valid when [Viewing Mode](#) is THX modes
-

Reversal Film Effect

(Max / Min / Off)

Provides the picture effect such as the reversal film for photo contents.

 → Watching > For best picture > Basic settings

- For HDMI input or photo contents of Media Player
 - Not valid when [Viewing Mode](#) is THX modes
-

Adaptive Backlight Control

Automatically controls the level of backlight according to the images.

 → Watching > For best picture > Basic settings

- Not valid in multi window mode
-

Letterbox

(Dimmer / Normal)

Adjusts the black level of the letterbox (anamorphic) area for watching movies, etc.

 → Watching > For best picture > Basic settings

Resolution Remaster

(Auto / Max / Mid / Min / Off)

Enhances picture resolution to make the image sharper.

 → Watching > For best picture > Basic settings

- Not valid when [1080p Pixel by 4pixels](#) is set to [On](#)
-

Caption Smoother

(Auto / Max / Mid / Min / Off)

Makes caption contours smooth. Specially effective for low resolution contents.

 → Watching > For best picture > Basic settings

- Not valid in 3D mode or when [1080p Pixel by 4pixels](#) is set to [On](#)
-

Brilliance Enhancer

(Max / Mid / Min / Off)

Enhances picture contrast locally to increase picture brilliance.

 → Watching > For best picture > Basic settings

- Not valid in 3D mode or when **1080p Pixel by 4pixels** is set to **On**
-

Intelligent Frame Creation

(Max / Mid / Min / Off)

Automatically compensates the picture frame rate and removes juddering movements to make the images smooth.

 → Watching > For best picture > Basic settings

- Depending on the contents, images may be noisy. To prevent the noise, change the setting.
 - Not valid in multi window mode, photo contents of Media Player / Network services, when **Game Mode** is set to **On** or when aspect is set to **H Full**
-

24p Smooth Film

(Max / Mid / Min / Off)

Automatically compensates the picture frame rate to make the 24p source movie images smooth.

 → Watching > For best picture > Basic settings

- This function is available only for 24p signal input and displayed instead of **Intelligent Frame Creation**.
- Not valid in multi window mode, photo contents of Media Player / Network services, when **Game Mode** is set to **On** or when aspect is set to **H Full**

Ambient Sensor

Automatic Brightness Control function

Adjusts picture settings automatically depending on ambient lighting conditions.

(On / Off)

 → Watching > For best picture > Ambient Sensor

Noise reduction settings

Noise Reduction

(Auto / Max / Mid / Min / Off)

Reduces unwanted picture noise.

 → [Watching](#) > [For best picture](#) > [Noise reduction settings](#)

MPEG Remaster

(Auto / Max / Mid / Min / Off)

Reduces flicker noise in contoured parts of a picture and block noise.

 → [Watching](#) > [For best picture](#) > [Noise reduction settings](#)

Advanced Settings

You can adjust and set up the detailed picture settings.

 → [Watching](#) > [For best picture](#) > [Advanced Settings](#)

This function is available when [Viewing Mode](#) is set to [Cinema](#), [True Cinema](#), [Monitor](#), [Custom](#) or [Professional1 / 2](#).

Option Settings

Game Mode

(On / Off)

Provides suitable images for fast response signals when playing games.

 → [Watching](#) > [For best picture](#) > [Option Settings](#)

- Not valid in TV or multi window mode
-

Film Cadence Mode

(On / Off)

Improves vertical resolution for movie images.

 → [Watching](#) > [For best picture](#) > [Option Settings](#)

- This function is available for interlaced signals (except in the mode of multi window, Network services or when [Game Mode](#) is set to [On](#)).
-

1080p Pure Direct

(On / Off)

Reproduces the original image quality in detail for 1080p (HDMI / DisplayPort) input signal.

 → [Watching](#) > [For best picture](#) > [Option Settings](#)

- Not valid in 3D mode, multi window mode or when [1080p Pixel by 4pixels](#) is set to [On](#)
-

4K Pure Direct

(On / Off)

Reproduces the original image quality in detail for 4K (HDMI / DisplayPort) input signal.

 → [Watching](#) > [For best picture](#) > [Option Settings](#)

- Not valid in 3D or multi window mode
-

1080p Pixel by 4pixels

(On / Off)

Displays like pixel by pixel to make the image sharper for 1080p signal.

 → [Watching](#) > [For best picture](#) > [Option Settings](#)

- For HDMI and DisplayPort input
 - Not all image may be displayed as pixel by pixel precisely.
 - Not valid in 3D or multi window mode
-

HDMI Content Type

([Graphics](#) / [Photos](#) / [Auto](#) / [Off](#))

Adjusts the picture settings of each HDMI input according to the selected content type.

 → [Watching](#) > [For best picture](#) > [Option Settings](#)

- For HDMI input
-

DisplayPort Content Type

(Graphics / Photos / Off)

Adjusts the picture settings of DisplayPort input according to the selected content type.

 → Watching > For best picture > Option Settings

- For DisplayPort input
-

HDMI RGB Range

(Auto / Full / Normal)

Adjusts the black level of the image for each HDMI input.

 → Watching > For best picture > Option Settings

- For HDMI input
-

DisplayPort RGB Range

(Auto / Full / Normal)

Adjusts the black level of the image for DisplayPort input.

 → Watching > For best picture > Option Settings

- For DisplayPort input
-

3D-COMB

(On / Off)

Makes still or slow moving pictures more vivid.

 → Watching > For best picture > Option Settings

- For PAL / NTSC signal reception in TV mode or from composite connection

Screen Settings

16:9 Overscan

(On / Off)

Selects the screen area displaying the image for 16:9 aspect.

 → Watching > For best picture > Screen Settings

- Not valid for 4K contents, Network services or when [1080p Pixel by 4pixels](#) is set to [On](#)
-

H-Size

(H-Size1 / H-Size2)

Switches the horizontal display range to reduce noise on the side edge of the image.

 → Watching > For best picture > Screen Settings

- For TV mode, AV, HDMI, DisplayPort input
 - Not valid for 4K contents, 3D mode or when [1080p Pixel by 4pixels](#) is set to [On](#)
-

Zoom Adjustments

Adjusts the vertical position and size when aspect is set to [Just](#), [Sidecut Just](#), [Zoom](#) or [Sidecut Zoom](#).

 → Watching > For best picture > Screen Settings

- Not valid for 4K contents
-

Multi Window

Displays two windows at once.

 → Functions > Multi Window > How to use

Screen Display

(On / Off)

Turns the screen off when you select [Off](#).

 → Watching > For best picture > Screen Settings

3D Settings

3D Detection

(On (Advance) / On / Off)

Selects whether to switch to the 3D mode automatically or not.

 → [Watching > 3D > 3D Settings](#)

3D Signal Message

(On / Off)

Selects whether to give a notification message when a signal of 3D format is found or not.

 → [Watching > 3D > 3D Settings](#)

- Not valid when [3D Detection](#) is set to [On \(Advance\)](#)
 - For DVB, Component, HDMI and DisplayPort input
-

3D Refresh Rate

(Auto / 100Hz / 120Hz)

Reduces juddering and flicker noises of the 3D images when using the 3D Eyewear.

 → [Watching > 3D > 3D Settings](#)

2D→3D Depth

(Max / Mid / Min)

Selects a level of 3D-image depth for viewing converted 2D images.

 → [Watching > 3D > 3D Settings](#)

3D Adjustment

(On / Off)

Adjustment of the 3D effect (except in [2D→3D](#) mode)

 → [Watching > 3D > 3D Settings](#)

L/R Picture Swap

(L/R (Normal) / R/L (Reversed))

Swaps pictures for left eye and right eye (except in [2D→3D](#) mode).

 → [Watching > 3D > 3D Settings](#)

Edge Smoother

(On / Off)

Set to **On** if you feel the contoured parts of an image are not smooth enough (except in **2D→3D** mode).

 → [Watching > 3D > 3D Settings](#)

Safety Precautions

Displays the precautions for viewing 3D images.

 → [Watching > 3D > 3D Settings](#)

Lock Settings

Locks the settings of **Professional1 / 2** for each input.

 → [Watching > For best picture > Lock Settings](#)

Copy Adjustment

Copies the selected **True Cinema**, **Monitor**, **Custom**, **Professional1** or **Professional2** settings to those of the other input.

 → [Watching > For best picture > Copy Adjustment](#)

Reset to Defaults

Resets the current Picture Viewing Mode to the default settings.

Sound

Mode

Selects your favourite sound mode for each input.

([Standard](#) / [Music](#) / [Ambience](#) / [User](#))

 → [Watching](#) > [For best audio](#) > [Sound mode](#)

Basic settings

Bass

Adjusts level to enhance or minimise lower, deeper sound output.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

Treble

Adjusts level to enhance or minimise sharper, higher sound output.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

Equaliser

Adjusts the frequency level to suit your favourite sound quality.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

Balance

Adjusts volume level of right and left speakers.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

Surround

([Stadium](#) / [Hall](#) / [Natural](#) / [Off](#))

Selects surround sound settings.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

Bass Boost

([On](#) / [Off](#))

Enhances the effect of bass sounds.

 → [Watching](#) > [For best audio](#) > [Basic settings](#)

Digital Remaster

(On / Off)

Compensates a compressed audio signal to reproduce the original sound quality.

 → [Watching > For best audio > Basic settings](#)

Volume settings

Speaker Setting

(TV Speaker / Headphones / Off)

Selects the sound output to adjust volume. Set to **Off** when using the external speakers.

 → [Watching > For best audio > Volume settings](#)

Headphone Volume

Adjusts the volume of headphones.

 → [Watching > For best audio > Volume settings](#)

Auto Gain Control

(On / Off)

Automatically regulates large sound level differences between channels and inputs.

 → [Watching > For best audio > Volume settings](#)

Volume Correction

Adjusts the volume of each individual channel or input mode.

 → [Watching > For best audio > Volume settings](#)

Speaker Distance to Wall

(Up to 30cm / Over 30cm)

Compensates for the low frequency sound due to the distance between the speakers and the wall.

 → [Watching > For best audio > Volume settings](#)

Voice Guidance Settings

Voice Guidance

(On / Off)

Set to **On** to enable voice guidance of the basic features (on-screen messages, etc.) for visually impaired users.

 → [Watching > For best audio > Voice Guidance Settings](#)

Speed

(Fast / Normal / Slow)

Selects the readout speed for the voice guidance.

 → [Watching > For best audio > Voice Guidance Settings](#)

Volume

(Max / Mid / Min)

Selects the volume for the voice guidance.

 → [Watching > For best audio > Voice Guidance Settings](#)

User Level

(Beginner / Expert)

Selects the level of verbosity for the voice guidance.

 → [Watching > For best audio > Voice Guidance Settings](#)

Web Browser

(On / Off)

Set to **On** to enable voice guidance of the network contents in web browser function.

 → [Watching > For best audio > Voice Guidance Settings](#)

Audio Description

Preferred Audio Type

(Standard / Audio Description)

Narration settings for visually impaired users

 → Watching > For best audio > Audio Description

- For DVB
 - Not valid on the sub screen in multi window mode
-

Volume

Adjusts the volume for Audio Description.

 → Watching > For best audio > Audio Description

- For DVB
-

Speakers

(Mix / Standard)

Set to **Mix** to activate the description sound track from TV speakers.

 → Watching > For best audio > Audio Description

- For DVB
-

Headphones

(Mix / Standard)

Set to **Mix** to activate the description sound track from headphones.

 → Watching > For best audio > Audio Description

- For DVB

Advanced settings

NICAM

(On / Off)

Near Instantaneous Companded Audio Multiplex

Reproduces NICAM stereo sound.

 → [Watching](#) > [For best audio](#) > [Advanced settings](#)

- For Analogue
-

Audio Preference

(Multichannel / Stereo / MPEG)

Selects the initial setting for audio tracks.

 → [Watching](#) > [For best audio](#) > [Advanced settings](#)

- For digital
 - Ireland only
-

SPDIF Selection

(Auto / PCM)

Selects the initial setting for digital audio output signal from DIGITAL AUDIO and HDMI2 / HDMI4 (ARC function) terminals.

 → [Watching](#) > [For best audio](#) > [Advanced settings](#)

- For digital or video contents of Media Player / Network services
-

SPDIF Delay

Adjusts the delay time of the sound output from DIGITAL AUDIO and HDMI2 / HDMI4 (ARC function) terminals if the sound does not synchronise the image.

 → [Watching](#) > [For best audio](#) > [Advanced settings](#)

- For digital
 - Ireland only
-

HDMI Input

(Digital / Analogue)

Selects to fit the input signal.

 → [Watching](#) > [For best audio](#) > [Advanced settings](#)

- For HDMI input
-

DisplayPort Input

(Digital / Analogue)

Selects to fit the input signal.

 → Watching > For best audio > Advanced settings

- For DisplayPort input
-

ARC Output

(HDMI2 / HDMI4)

Selects ARC output terminal settings.

 → Watching > For best audio > Advanced settings

Reset to Defaults

Resets the current Sound Mode to the default settings.

Network

Network Connection

Sets the network setting to use this TV in your network environment.

 → [Network > Network settings > Network Connection](#)

Network Status

Displays and checks the network status (MAC Address, current network settings, etc.).

 → [Network > Network settings > Network Status](#)

my Home Cloud Settings

Notices

Displays the terms of service.

 → [Network > Network settings > my Home Cloud Settings](#)

VIERA Name

Sets your favourite name for this TV.

 → [Network > Network settings > VIERA Name](#)

TV Remote App Settings

Sets to control the TV from network equipment (smartphone, etc.).

 → [Network > Network settings > TV Remote App Settings](#)

Network Link Settings

Sets to control the TV with devices connected to the network.

 → [Network > Network settings > Network Link Settings](#)

TV Anywhere Settings

Enables to watch TV and set timer programming events of this TV on the network equipment (smartphone, etc.) from outside the home network.

 → [Network > Network settings > TV Anywhere Settings](#)

File Sharing Settings

File Sharing Server

(On / Off)

Sets to share the files between PC and devices connected to this TV.

 → [Media Player > Using Media Player > Sharing file](#)

Network Device List

Lists the accessible network devices to play back the contents in Media Player.

 → [Media Player > Using Media Player > Network device](#)

Other settings

Software Update

Checks for available software updates from the Panasonic website.

 → [Network > Network settings > Software Update](#)

New Software Message

(On / Off)

Selects whether to give a notification message when new software is found via network or not.

 → [Network > Network settings > New Software Message](#)

Timer

Off Timer

Sets the duration of time until the TV automatically goes into Standby mode.

(90 / 75 / 60 / 45 / 30 / 15 / Off (minutes))

 → Watching > Basic > Off Timer

Timer Programming

Sets a timer to record or remind forthcoming programmes.

 → Recording > Timer Programming > Setting Timer Programming

- For digital

Time Zone

Adjusts the time data.

 → Watching > Basic > Adjusting time

- Ireland only

Auto Standby

Automatically turns the TV to Standby mode for energy saving when no operation is performed for 4 hours.

(On / Off)

 → Watching > Basic > Energy saving functions

No signal Power off

Automatically turns the TV to Standby mode to prevent unnecessary power consumption when no signal is received and no operation is performed for 10 minutes.

(On / Off)

 → Watching > Basic > Energy saving functions

Setup

Eco Navigation

Automatically sets the TV to the most suitable energy-saving mode.

 → [Watching](#) > [Basic](#) > [Energy saving functions](#)

Voice Control Settings

Settings for Voice Control function

 → [Functions](#) > [Voice Control](#) > [Preparations](#)

User Settings

Settings for user profile.

 → [Functions](#) > [User profile](#) > [Settings](#)

Info Bar Settings

Settings for Info Bar function.

 → [Functions](#) > [Info Bar](#) > [Settings](#)

TV Guide Settings

[TV Guide View](#)

([Normal](#) / [Full](#) / [Info](#))

Changes the layout of [TV Guide](#).

 → [Watching](#) > [TV Guide](#) > [Using TV Guide](#)

USB Device Setup

Formats the USB HDD or safely removes USB device.

 → [Recording](#) > [USB HDD setup](#) > [Setting for USB HDD](#)

Recording Setup

Settings for the recording feature of the USB HDD

 → [Recording](#) > [USB HDD setup](#) > [Setting for USB HDD](#)

VIERA Touch Pad Controller

Pairing

Registers Touch Pad Controller (supplied) to this TV.

 → [Functions > Touch Pad Controller > Settings](#)

Cursor Settings

Sets for the cursor of Touch Pad Controller.

 → [Functions > Touch Pad Controller > Settings](#)

Operation Guide

Displays the operation guide of Touch Pad Controller.

 → [Functions > Touch Pad Controller > Settings](#)

Bluetooth Setup

Settings for the specific devices supporting Bluetooth wireless technology

 → [Functions > Bluetooth devices > Bluetooth Setup](#)

Child Lock

Applies access control for channels or inputs to prevent unwanted access.

 → [Functions > Child Lock > Using Child Lock](#)

Tuning Menu

Favourites Edit

Creates a list of favourite channels.

 → [Watching > Tuning and editing channels > Favourites Edit](#)

- Not valid in Analogue
-

Channel List

Skips unwanted channels or edits channels.

 → [Watching > Tuning and editing channels > Channel List](#)

Regional Channel Edit

Replaces your regional channels with available channels from another region.

 → [Watching > Tuning and editing channels > Regional Channel Edit](#)

- For Freesat
-

Auto Setup

Automatically searches for receivable channels.

 → Watching > Tuning and editing channels > Auto Setup

Channel Sorting by Region

Automatically sorts tuned channels according to the available region.

 → Watching > Tuning and editing channels > Channel Sorting by Region

- For DVB
 - UK only
-

Manual Tuning

Searches for channels manually.

 → Watching > Tuning and editing channels > Manual Tuning

- Not valid in Freesat
-

Update Channel List

Updates the channel list while keeping your settings.

 → Watching > Tuning and editing channels > Update Channel List

- For DVB
-

New Channel Message

(On / Off)

Selects whether to give a notification message when a new channel is found or not.

 → Watching > Tuning and editing channels > New Channel Message

- For DVB
-

Signal Condition

Checks the signal condition.

 → Watching > Tuning and editing channels > Signal Condition

- Not valid in Analogue
-

Dual Tuner Mode

(On / Off)

Set to **On** to use dual tuner function.

 → [Watching > Tuning and editing channels > Auto Setup](#)

- For Freesat / Other Sat. (UK)
-

Add New Channels

Adds new Other Satellite channels to the channel list.

 → [Watching > Tuning and editing channels > Add New Channels](#)

- For Other Sat. (UK) / Satellite (Ireland)
-

= Note =

- The settings in [Tuning Menu](#) are applicable only for the selected TV mode. The menu name varies depending on the TV mode. ([Freesat Tuning Menu](#) / [DVB Tuning Menu](#) / [Analogue Tuning Menu](#) / [Other Sat. Tuning Menu](#) / [Satellite Tuning Menu](#))

Language

Preferred Multi Audio

([English](#) / [Welsh](#) / [Gaelic](#) / [Irish](#))

Selects the preferred language for digital channel multi audio (depending on the broadcaster).

 → [Watching > Basic > Language](#)

- UK only
-

Preferred Audio 1 / 2

Selects the first and second preferred language for digital channel multi audio (depending on the broadcaster).

 → [Watching > Basic > Language](#)

- Ireland only
-

Preferred Subtitles 1 / 2

Selects the first and second preferred language for digital channel subtitles (depending on the broadcaster).

 → [Watching > Basic > Language](#)

- Ireland only
-

Preferred Subtitles

([English](#) / [Welsh](#) / [Gaelic](#) / [Irish](#))

Selects the preferred language for digital channel subtitles (depending on the broadcaster).

 → [Watching](#) > [Basic](#) > [Language](#)

- UK only
-

Preferred Teletext

Selects the preferred language for digital channel teletext service (depending on the broadcaster).

 → [Watching](#) > [Basic](#) > [Language](#)

- Ireland only

Display Settings

OSD Colour

([Jet black](#) / [Pale grey](#) / [Organic brown](#) / [Sand beige](#))

Selects the preferred colour type of on-screen displays.

 → [my Home Screen](#) > [my Home Screen](#) > [OSD Colour](#)

Preferred Subtitle Type

([Standard](#) / [Hard of Hearing](#))

Selects the preferred subtitle type.

 → [Watching](#) > [Basic](#) > [Subtitle](#)

- Ireland only
-

Teletext

([FASTEXT](#) / [List](#))

Selects analogue teletext display mode.

 → [Watching](#) > [Teletext](#) > [Teletext mode](#)

Teletext Character Set

([West](#) / [East1](#) / [East2](#))

Selects teletext language font.

 → [Watching](#) > [Teletext](#) > [Teletext Character Set](#)

- Ireland only
-

Input Labels

Accesses the input labels list to select the label of each input mode or set to skip unconnected one for easier identification and selection in [Input Selection](#) or banner.

 → [Watching](#) > [External equipment](#) > [Watching external input](#)

Banner Display Timeout

(10 / 9 / 8 / 7 / 6 / 5 / 4 / 3 / 2 / 1 / 0 (No display) (seconds))

Sets how long the information banner stays on screen.

 → [Watching](#) > [Basic](#) > [Information banner](#)

Smart Banner

(On / Off)

Displays the introduction banner for the internet service.

 → [Watching](#) > [Basic](#) > [Information banner](#)

Playing Time Display

(On / Off)

Set to [On](#) to display a time period of continuous use in Game mode on the top right of the screen every 30 minutes.

 → [Watching](#) > [External equipment](#) > [Watching external input](#)

- This function is available when [Game Mode](#) is set to [On](#).
-

Radio Mode

(20 / 15 / 10 / 5 / Off (seconds))

Sets the timer for turning off the screen automatically when a radio channel is selected.

 → [Watching](#) > [External equipment](#) > [Energy saving functions](#)

Banner & TV Guide Selection

([Freetime](#) / [Panasonic](#))

Selects the type of the information banner and TV Guide.

 → [Watching](#) > [TV Guide](#) > [Using TV Guide](#)

- For DVB / Freesat (UK only)

HDMI4 HDCP Setting

Select a version of HDCP according to the content you watch.

(2.2 / 1.4)

 → [Watching](#) > [4K resolution](#) > [HDMI4 HDCP Setting](#)

- For HDMI4 terminal

DisplayPort Settings

Stream Setting

(Auto / Single Stream)

Selects DisplayPort signal stream.

 → [Watching](#) > [4K resolution](#) > [DisplayPort Settings](#)

- For DisplayPort input

VIERA Link Settings

VIERA Link

(On / Off)

Sets to use VIERA Link functions.

 → [Functions](#) > [VIERA Link "HDAVI Control™"](#) > [Preparations](#)

Power on Link

(On / Off)

Sets to use Power on Link functions.

 → [Functions](#) > [VIERA Link "HDAVI Control™"](#) > [Power on Link](#)

Power off Link

(On / Off)

Sets to use Power off Link functions.

 → [Functions](#) > [VIERA Link "HDAVI Control™"](#) > [Power off Link](#)

Standby Power Save

(On / Off)

Controls the connected equipment to reduce power consumption in Standby.

 → [Functions](#) > [VIERA Link "HDAVI Control™"](#) > [Standby Power Save](#)

- This function is available when [VIERA Link](#) is set to [On](#) and [Power off Link](#) is set to [On](#).
-

Intelligent Auto Standby

(On / Off)

Makes non-watched or non-used connected equipment go into Standby mode to reduce the power consumption.

 → [Functions > VIERA Link "HDAVI Control™" > Intelligent Auto Standby](#)

- This function is available when [VIERA Link](#) is set to [On](#).

System Menu

Keyboard Layout

Selects the language that your USB or Bluetooth Keyboard supports.

 → [Functions > Keyboard > Keyboard](#)

Shipping Condition

Resets all settings to the original condition.

 → [Functions > Shipping Condition > Shipping Condition](#)

Common Interface

Sets to watch encrypted channels, etc.

 → [Functions > Common Interface > Using Common Interface](#)

System Update

Downloads new software to this TV.

 → [Functions > Updating the TV Software > Auto update](#)

Licence Menu

Displays the software licence information.

Other Settings

Power on Channel List

(All Channel List / Last)

Automatically selects all channels or favourites list in the information banner when the TV is turned on.

 → Watching > Basic > Selecting channel

- Not valid in Freesat or Analogue
-

USB Charge in Standby

(On / Off)

Enables charging from the USB port in Standby mode.

 → Watching > 3D > Viewing 3D

- Available for charging the rechargeable 3D Eyewear (optional accessory)
 - This function is available when in Standby mode.
-

Power Save

(On / Off)

Reduces brightness of the picture to economise on power consumption.

Support

FAQs

Picture

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

Auto aspect

- Auto aspect is designed to provide you with the best ratio to fill the screen.

 → [Watching > For best picture > Aspect Control Signal](#)

- Press **ASPECT** if you want to change the aspect ratio manually.

 → [Watching > For best picture > Aspect](#)

Black and white picture

- Check that the output of the external equipment matches the input of the TV. When connecting with SCART, ensure the output setting of the external equipment is not S-Video.
-

Chaotic image, noisy

- Set [Noise Reduction](#) and [MPEG Remaster](#) in the Picture Menu to remove noise.

 → [Watching > For best picture > Noise reduction settings](#)

- Check nearby electrical equipment (car, motorcycle, fluorescent lamp).
-

No image can be displayed

- Check the correct input mode is selected.
 - Check the setting of **AV2 (COMPONENT / VIDEO)** in **Input Selection** to match the output of the external equipment.
 → **Watching > External equipment**
 - Is **Contrast**, **Brightness** or **Colour** in the Picture Menu set to the minimum?
 → **Watching > For best picture > Basic settings**
 - Check all required cables and connections are firmly in place.
-

Blurry or distorted image (no sound or low volume)

- Reset channels.
 → **Watching > Tuning and editing channels > Auto Setup**
-

There may be red, blue, green and black spots on the screen

- This is a characteristic of liquid crystal panels and is not a problem. The liquid crystal panel is built with very high precision technology giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of red, green, blue or black. Please note this does not affect the performance of the panel.

Digital TV

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

Block noise, frozen or disappearing image occurs / Some channels cannot be tuned

- Check the position, direction and connection of the aerial or dish.
 - Check [Signal Condition](#). If the level of [Signal Quality](#) is low, the DVB signal is weak. Connecting the aerial to the TV directly may improve signal quality than connecting the aerial through the equipment (Set top box, DVD, etc.).
 -  → [Watching > Tuning and editing channels > Signal Condition](#)
 -  → [Watching > Basic > Basic connection](#)
 - Weather conditions will affect signal reception (heavy rain, snow, etc.), in particular in poor reception areas. Even during good weather, the high pressure can cause poor reception of some channels.
 - Due to the digital reception technologies involved, quality of the digital signals may be relatively low in some cases, despite good reception of analogue channels.
 - Turn the TV off with Mains Power On / Off switch, then turn it on again.
-

[Freesat Auto Setup](#) cannot be done completely

- Check connections and dish alignment. The dish needs to be pointing at Astra2 at 28.2° East, and Eurobird1 at 28.5° East.
 - If the problem persists, consult your Freesat registered retailer or call Freesat (UK) Ltd on 08450 990 990 or visit www.freesat.co.uk
-

[Faulty dish](#) message appears

- The satellite cable may be short-circuited or there may be connection problems of the cable. Check the cable and connection and then turn the TV off with Mains Power On / Off switch, and turn it on again.
 - If the message persists, consult a dish installer for checking the dish and cable.
-

No programmes shown on [TV Guide](#)

- Check the digital transmitter.
- Check the digital transmission by contacting Digital UK on 08456 50 50 50 or at the following website.

www.digitaluk.co.uk

- Consult an aerial or dish engineer to check the alignment of your aerial or dish.
-

Cannot find a channel you have previously watched

- The channel may broadcast for part of the day.
- Check the channel in the TV Guide.

 → [Watching > TV Guide](#)

- Channel position numbers may be changed by broadcasters.
- Reset channels.

 → [Watching > Tuning and editing channels > Auto Setup](#)

Analogue TV

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

White spots or shadow image (ghosting) occurs / Some channels cannot be tuned

- Check the position, direction and connection of the aerial.
 - Weather conditions will affect signal reception (heavy rain, snow, etc.), in particular in poor reception areas. Even during good weather, the high pressure can cause poor reception of some channels.
 - Turn the TV off with Mains Power On / Off switch, and then on again.
 - If the problem persists, consult your local dealer or service provider for the availability of services.
-

No programmes shown on [TV Guide](#)

- Adjust the direction of the aerial to another transmitter installed nearby.
- Check the analogue broadcast. If the image quality is poor, check the aerial and consult your local dealer.
- Check the analogue broadcast (if still available in your area).

Sound

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

No sound is produced

- Is “Sound mute” active? Press **MUTE** to switch sound mute on or off.
 - Is the volume set to the minimum?
 - Check connections and setting of external equipment.
 → [Watching > External equipment](#)
 - Ensure that [Speaker Selection](#) is set to [TV](#).
 → [Functions > VIERA Link “HDAVI Control™” > Speaker Selection](#)
 - Ensure that [Speaker Setting](#) is set to [TV Speaker](#).
 → [Watching > For best audio > Volume settings](#)
-

Sound level is low or sound is distorted

- Sound signal reception may be poor.
- Set [NICAM](#) in the Sound Menu to [Off](#). (Analogue)
 → [Watching > For best audio > Advanced settings](#)

3D

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

Cannot view 3D images

Cannot register a 3D Eyewear to the TV

- Has the 3D Eyewear been switched on and set to 3D mode?
 - Is the battery installed correctly?
 → [Watching > 3D > 3D Eyewear - Replacing battery](#)
 - Check the remaining battery level of the 3D Eyewear. (Battery status is displayed on the screen when the 3D Eyewear is turned on.) When the battery is running low, replace it with a new one.
 - Use the 3D Eyewear within approx. 3.2 m from the TV. (The range may be shortened depending on the obstacles between the TV and the eyewear, or the surrounding environment.)
 - Register again.
 → [Watching > 3D > 3D Eyewear - Registration](#)
 - Does the 3D Eyewear support Bluetooth wireless technology?
 - Ensure that [3D Mode Selection](#) is set to [3D](#).
 → [Watching > 3D > 3D Mode Selection](#)
 - Some 3D image signals may not be automatically recognised as 3D images. Set [3D Mode Selection \(Manual\)](#) to match the picture format.
 → [Watching > 3D > Viewing 3D](#)
 - For some people, the 3D images may be difficult to see, or cannot be seen, especially among users who have a different level of eyesight between the left and right eyes. Take necessary measures (wearing glasses, etc.) to correct your eyesight before use.
-

3D Eyewear is turned off automatically

- Check that there are no obstacles between the TV and the 3D Eyewear.
-

There is something wrong with the 3D images

- Check the setting of [L/R Picture Swap](#) or [Edge Smoother](#).

 → [Watching > 3D > 3D Settings](#)

The indicator lamp does not light up when pressing Power button on the 3D Eyewear

- The battery may be running low or flat. Replace it with a new one.

 → [Watching > 3D > 3D Eyewear - Replacing battery](#)

HDMI

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

Sound is unusual

- Set the sound setting of the connected equipment to “2ch L.PCM”.
- Check the [HDMI Input](#) setting in the Sound Menu.

 → [Watching > For best audio > Advanced settings](#)

- If digital sound connection has a problem, select analogue sound connection.

 → [Watching > External equipment > HDMI features](#)

Pictures from external equipment are unusual when the equipment is connected via HDMI

- Check the HDMI cable is connected properly.

 → [Watching > External equipment > External connection](#)

- Turn the TV and equipment off, then turn them on again.
- Check an input signal from the equipment.

 → [Watching > External equipment > Valid input signals](#)

- Use equipment compliant with EIA/CEA-861/861D.

Network

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

Cannot connect to the network

- Check the LAN cable or wireless LAN is connected properly.
 → [Network > Network connections](#)
 - Check the connections and settings.
 → [Network > Network connections](#)
 → [Network > Network settings](#)
 - Check the network equipment and network environment.
 - The router may not be set to issue IP address automatically. If the network administrator prefers to allocate an IP address, set an IP address manually.
 → [Network > Network settings](#)
 - The router may be using MAC address filtering (security setting). Confirm the MAC Address of this TV and set the router to use it.
 → [Network > Network settings > Network Status](#)
 - If the problem persists, consult your Internet Service Provider or telecommunications company.
-

Cannot select the file during DLNA operations

- Is media server of the connected equipment prepared?
 → [Network > DLNA > Information](#)
 - Check applicable data format.
 → [Network > Technical information](#)
 - Check the settings of [Network Link Settings](#).
 → [Network > Network settings > Network Link Settings](#)
-

Cannot operate internet content

- Check the connections and settings.
 -  → [Network > Network connections > Internet connection](#)
 -  → [Network > Network settings](#)
- The server or connected line may be busy now.

Other

Before requesting service or assistance, please follow these simple guides to solve the problem.

If the problem still persists, please contact your local Panasonic dealer for assistance.

VIERA Link function does not work and an error message appears

- Check the connections.
 -  → [Functions > VIERA Link "HDAVI Control™" > Summary of VIERA Link](#)
 - Turn the connected equipment on and then switch the TV on.
 -  → [Functions > VIERA Link "HDAVI Control™"](#)
-

Parts of the TV become hot

- Even if the temperature of parts of the front, top and rear panels has risen, these temperature rises do not cause any problems in terms of performance or quality.
-

Overcurrent error message appears

- The connected USB device may cause this error. Remove the device and turn the TV off with Mains Power On / Off switch, then turn it on again.
 - Check foreign objects are not inside the USB port.
-

An error message appears

- Follow the message's instructions.
 - If the problem persists, contact your local Panasonic dealer or the authorised service centre.
-

Built-in Camera does not work

- Ensure the built-in Camera is held up. When the application for camera operation is activated, the built-in Camera automatically pops up.
 - Face recognition may not work properly depending on surrounding environment or condition (for example, darkened room, etc.).
-

Touch Pad Controller does not work or cannot be registered

- Are the batteries installed correctly?
 - The batteries may be running low. Replace them with new ones.
 - Register again.
 → [Functions > Touch Pad Controller > Settings](#)
 - Use Touch Pad Controller within approx. 3.2 m from the TV. (The range may be shortened depending on the obstacles between the TV and the controller, or the surrounding environment.)
-

Voice Control function does not work

- Voice Control function may not work properly depending on the pronunciation, noise and network environment.
- For details

 → [Functions > Voice Control](#)

The display panel moves slightly and clattered sound is heard when it is pushed with a finger

- There is a little gap around the panel to prevent damage to the panel. This is not a malfunction.

Maintenance

Care and Cleaning

First, remove the mains plug from the socket outlet.

■ Display panel, Cabinet, Pedestal

Regular care:

Gently wipe the surfaces of the display panel, cabinet, or pedestal using a soft cloth to clean the dirt or fingerprints.

For stubborn dirt:

- (1) First clean the dust on the surface.
- (2) Dampen a soft cloth with clean water or diluted neutral detergent (1 part detergent to 100 parts water).
- (3) Wring the cloth firmly. (Please note liquids do not enter the TV inside. May lead to product failure.)
- (4) Finally, wipe away all the moisture.

= Caution =

- Do not use a hard cloth or rub the surface too hard, otherwise this may cause scratches on the surface.
- Take care not to subject the surfaces to insect repellent, solvent, thinner or other volatile substances. This may degrade surface quality or cause peeling of the paint.
- The surface of the display panel is specially treated and may be easily damaged. Take care not to tap or scratch the surface with your fingernail or other hard objects.
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time. This may degrade surface quality.

■ Mains plug

- Wipe the mains plug with a dry cloth at regular intervals. Moisture and dust may lead to fire or electrical shock.

Information

Using Help menu

1. Display the menu with **MENU**.
 2. Select **Help** with Δ / ∇ and press **OK** to access.
 3. Select **TV Self Test** / **System Information** / **Device Information** with Δ / ∇ and press **OK** to access.
-

TV Self Test

Makes a diagnosis of picture or sound problems.

Follow the on-screen instructions.

System Information

Displays the system information of this TV.

Device Information

Displays the device information of this TV.

Optional accessories

3D Eyewear

■ 3D Eyewear

- If you need 3D Eyewear additionally, please purchase Panasonic optional accessory.
- Use Panasonic 3D Eyewear supporting Bluetooth wireless technology.
- For more information:
<http://panasonic.net/viera/support> (English only)

Wall-hanging bracket

■ Wall-hanging bracket

- Please contact your local Panasonic dealer to purchase the recommended wall-hanging bracket.

= Warning =

- Using other wall-hanging brackets, or installing a wall-hanging bracket by yourself have the risk of personal injury and product damage. In order to maintain the unit's performance and safety, be absolutely sure to ask your dealer or a licensed contractor to secure the wall-hanging brackets. Any damage caused by installing without a qualified installer will void your warranty.
- Carefully read the instructions accompanying optional accessories, and be absolutely sure to take steps to prevent the TV from falling off.
- Handle the TV carefully during installation since subjecting it to impact or other forces may cause product damage.
- Take care when fixing wall brackets to the wall. Always ensure that there are no electrical cables or pipes in the wall before hanging bracket.
- To prevent fall and injury, remove the TV from its fixed wall position when it is no longer in use.

Licence

Licence

Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.

“freesat” is a registered trademark and the “freesat” logo is a trademark of Freesat (UK) Ltd.

DVB and the DVB logos are trademarks of the DVB Project.

THX and the THX Logo are trademarks of THX Ltd., which may be registered in some jurisdictions. All rights reserved.

“RealD 3D” is a trademark of RealD.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. Other trademarks and trade names are those of their respective owners.

SDXC Logo is a trademark of SD-3C, LLC.

“AVCHD”, “AVCHD 3D” and “AVCHD Progressive” are trademarks of Panasonic Corporation and Sony Corporation.

DLNA®, the DLNA Logo and DLNA CERTIFIED™ are trademarks, service marks, or certification marks of the Digital Living Network Alliance.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Mac is a trademark of Apple Inc.

DisplayPort is a trademark owned by the Video Electronics Standards Association in the United States and other countries.

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

x.v.Colour™ is a trademark.

HDAVI Control™ is a trademark of Panasonic Corporation.

Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+Digital Out is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

Speech Powered by Dragon

2002-2014 Nuance Communications, Inc. All rights reserved.

Rovi and Rovi Guide are trademarks of Rovi Corporation and/or its subsidiaries. The Rovi Guide system is manufactured under license from Rovi Corporation and/or its subsidiaries.

The Rovi Guide system is protected by patents and patent applications filed in the US, Europe, and other countries including one or more of the United States patents 6,396,546; 5,940,073; 6,239,794 issued to Rovi Corporation and/or its subsidiaries.

“PlayReady” is a trademark registered by Microsoft. Please be aware of the following.

- (a) This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.
- (b) Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device’s ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies.

Content owners may require you to upgrade PlayReady to access their content.

If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product incorporates the following software:

- (1) the software developed independently by or for Panasonic Corporation,
- (2) the software owned by third party and licensed to Panasonic Corporation,
- (3) the software licensed under the GNU LESSER GENERAL PUBLIC LICENSE Version 2.1 (LGPL V2.1) and/or,
- (4) open sourced software other than the software licensed under the LGPL V2.1.

The software categorized as (3) and (4) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Please refer to the detailed terms and conditions thereof shown in the “Software License” menu on this product.

At least three (3) years from delivery of this product, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under LGPL V2.1 or the other licenses with the obligation to do so, as well as the respective copyright notice thereof.

Contact Information: cdrequest@unipf.jp

The source code and the copyright notice are also available for free in our website below.

<http://www.unipf.jp/dl/EUIDTV14/>

