

Panasonic[®]

Operating Instructions for advanced features

Digital Camera

Model No. **DMC-FZ1000**



LUMIX

Please read these instructions carefully before using this product,
and save this manual for future use.

Message Display P330

Troubleshooting P343

Finding the information you need P2

Contents P4

Contents by Function P10

Menu list P334

SQT0223-1
F0614YD1084

Finding the information you need

In this “Operating Instructions for advanced features”, you can find the information you need from the following pages.

By clicking a page number, you can jump to the linked page and quickly find the information.



Search from “Contents”

 **P4 ~**

Search from the list of function names

“Contents by Function”

 **P10 ~**

Search from “Names and Functions of Main Parts”

 **P15 ~**

Search from “Monitor Display/ Viewfinder Display”

 **P324 ~**

Search from the list of on-screen messages

“Message Display”

 **P330 ~**

Search from the menu list

“Menu list”

[Rec] P334

[Motion Picture] P336

[Custom] P337

[Setup] P340

[Playback] P342

 **P334 ~**

Search from

“Troubleshooting”

 **P343 ~**

For details on how to use this manual, see the next page.

P3

Wi-Fi® function

P250 ~

How to use this manual



Click this icon to jump to “Finding the information you need”.



Click this icon to jump to “Contents”.



Click this icon to jump to “Menu list”.



Click this icon to return to the previously displayed page.

About the indication of the applicable mode

Applicable modes:

The icons indicate the modes available for a function.

- Black icons: Applicable modes
- Grey icons: Unavailable modes

C1 and **C2** will differ depending on the Recording Modes registered under custom settings.

- Click a cross reference in the text to jump to the corresponding page.
- By entering keywords in the search field at the top of the Adobe Reader screen, you can run a keyword search and jump to the corresponding page.
- Operations and other details of this manual may vary depending on the Adobe Reader version you are using.

■ About the symbols in the text

MENU : Indicates that the menu can be set by pressing [MENU/SET] button.

Wi-Fi : Indicates that the Wi-Fi setting can be made by pressing [Wi-Fi] button.

: Configurations that can be performed in the [Custom] menu.

: Tips for skilful use and points for recording.

: Conditions in which a particular function cannot be used.

: Continued to next page.

In these operating instructions, steps for setting a menu item are described as follows.

MENU → [Rec] → [Quality] →

Contents

Finding the information you need	2
How to use this manual	3
Contents by Function	10

1. Before Use

Care of the camera	13
Standard Accessories	14
Names and Functions of Main Parts	15

2. Preparations before Recording

Attaching the Lens Hood	21
Attaching the Lens Cap	22
Attaching the Shoulder Strap	23
Charging the Battery	24
• Charging	24
• Approximate operating time and number of recordable pictures	26
Inserting and Removing the Card (optional)/the Battery	28
About the Card	30
• About cards that can be used with this unit	30
• Formatting the card (initialisation)	31
• Approximate number of recordable pictures and available recording time	32
Setting Date/Time (Clock Set)	35
• Changing the Clock Setting	36
Setting the Menu	37
• Setting menu items	37
Calling frequently-used menus instantly (Quick Menu)	40
• Change the Quick Menu to your preferred item	42
Assigning frequently used functions to the buttons (function buttons)	44
Configuring basic settings of this unit (Setup Menu)	47
Entering Text	55

3. Basic Operation

Tips for taking good pictures	56
• Detects orientation of camera (Direction Detection Function)	56
Using the Viewfinder	57
• [LVF] button (Switching the Monitor/Viewfinder)	57
• About the Eye Sensor AF	58
Taking a Still picture	59
Recording Motion Picture	61
Selecting the Recording Mode	62
Switching the Information Displayed on the recording screen	64
Playing Back Pictures/Motion Pictures	68

• Playing Back Pictures.....	68
• Playing Back Motion Pictures.....	70
• Changing the information displayed on the playback screen.....	71
Deleting Pictures.....	73

4. Recording Modes

Taking Pictures using the Automatic Function (Intelligent Auto Mode).....	75
• Recording night scenes ([iHandheld Night Shot]).....	80
• Combining pictures into a single picture with rich gradation ([iHDR]).....	81
• Taking a picture with a blurred background (Defocus Control).....	82
• Recording images by changing the brightness or colour tone.....	83
Taking Pictures with Your Favourite Settings (Programme AE Mode).....	84
Taking Pictures by Specifying the Aperture/Shutter Speed.....	86
• Aperture-Priority AE Mode.....	86
• Shutter-Priority AE Mode.....	87
• Manual Exposure Mode.....	88
• Confirm the Effects of Aperture and Shutter Speed (Preview Mode).....	91
• Easily set aperture/shutter speed for suitable exposure (One Push AE).....	92
Taking Pictures that match the Scene being recorded (Scene Guide Mode).....	93
Taking Pictures with different image effects (Creative Control Mode).....	107
Recording motion pictures with manually set aperture value/shutter speed (Creative Video Mode).....	118
• Recording slow motion pictures (High Speed Video).....	119
Registering your preferred settings (Custom Mode).....	120
• Registering Personal Menu Settings (Registering custom settings).....	120
• Recording using registered custom set.....	121

5. Image and Picture Quality Settings

Adjusting the Picture Quality by Adding an Effect ([Photo Style]).....	122
Adjusting Bright/Dark Portions ([Highlight Shadow]).....	124
Adjusting the White Balance.....	126
Setting the Picture Quality and Size.....	131
• Setting the aspect ratio of pictures.....	131
• Setting the number of pixels.....	131
• Setting the compression rate of pictures ([Quality]).....	132
Using Image Correction Functions.....	134
• Compensating the contrast and exposure ([i.Dynamic]).....	134
• Raising the resolution ([i.Resolution]).....	134
• Combining pictures with different exposures ([HDR]).....	135
• Reducing the long shutter noise ([Long Shtr NR]).....	136
• Setting the colour space ([Color Space]).....	137

6. Focus and Brightness (Exposure) Settings

Taking Pictures with Auto Focus.....	138
• About the focus mode (AFS/AFF/AFC).....	139

• Type of the Auto Focus Mode	140
• Setting the desired focus method	148
Taking Pictures with Manual Focus	150
Taking Close-up Pictures	155
Fixing the Focus and the Exposure (AF/AE Lock)	157
Compensating the Exposure	159
Setting the Light Sensitivity	160
• Setting the upper limit on ISO sensitivity	162
• Setting the step increment of ISO sensitivity	162
• Extending ISO sensitivity	162
Selecting the Method for Measuring Brightness ([Metering Mode])	163

7. Shutter and Drive Settings

Setting the Shutter Type	164
Select a Drive Mode	166
Taking Pictures using Burst Mode	167
Taking Pictures using Auto Bracket	171
Taking Pictures with the Self-timer	174
Taking Pictures Automatically at Set Intervals ([Time Lapse Shot])	176
Creating Stop Motion Pictures ([Stop Motion Animation])	180

8. Functions Customised for Various Subjects and Purposes

Making Multiple Exposures on One Picture ([Multi Exp.])	184
Disabling Operational Sounds and the Output of Light at once ([Silent Mode])	186
Taking Clear Pictures by Registering Faces ([Face Recog.])	187
Recording Profiles of Babies and Pets on Images	192
Using screens and displays suitable for recording	193
Recording while monitoring camera images	194

9. Stabiliser, Zoom and Flash

Optical Image Stabiliser	195
Taking Pictures with the Zoom	197
Taking pictures by using the flash	201
• Changing Flash Mode	203
• Setting to the 2nd Curtain Synchro	206
• Adjust the flash output	207
• Synchronising the output of the built-in flash to the Exposure Compensation	207
• Changing the firing mode (Manual flash)	208
• Setting the wireless flash	209
• Correcting red eyes	211

10. Recording Motion Pictures

Recording Motion Picture	212
• Setting the format, size and frame rate	212

• How to set focus when recording a motion picture ([Continuous AF])	214
• Recording Motion Picture	215
• Recording motion pictures in 4K	218
Recording still pictures while recording motion pictures	219
Using the [Motion Picture] Menu	221
• [Rec Format]	221
• [Rec Quality]	221
• [Exposure Mode]	221
• [High Speed Video]	221
• [Picture Mode]	221
• [Continuous AF]	221
• [Level Shot]	222
• [Luminance Level]	222
• [Flkr Decrease]	222
• [Mic Level Disp.]	223
• [Mic Level Adj.]	223
• [Special Mic.]	223
• Adjusting the sound input level automatically ([Mic Level Limiter])	223
• [Wind Cut]	224
• [Zoom Mic]	224

11. Playing Back and Editing Images

Playing Back Group Pictures	225
Creating Still Pictures from a Motion Picture	227
Using the [Playback] Menu	228
• [Slide Show]	228
• [Playback Mode]	230
• [Location Logging]	231
• [RAW Processing]	232
• [Title Edit]	235
• [Text Stamp]	236
• [Video Divide]	239
• [Time Lapse Video]	240
• [Stop Motion Video]	240
• [Resize]	241
• [Cropping]	242
• [Rotate]/[Rotate Disp.]	243
• [Favorite]	244
• [Print Set]	245
• [Protect]	247
• [Face Rec Edit]	248
• [Picture Sort]	248
• [Delete Confirmation]	249

12. Using the Wi-Fi function

Wi-Fi® function/NFC function	250
What you can do with the Wi-Fi function.....	253
Controlling with a Smartphone/Tablet	254
• Installing the smartphone/tablet app “Image App”	254
• Connecting to a smartphone/tablet.....	255
• Taking pictures via a smartphone/tablet (remote recording).....	260
• Playing back images in the camera.....	261
• Saving images stored in the camera	261
• Sending images in the camera to an SNS	263
• Adding location information to images stored in the camera from a smartphone/tablet	263
• Sending images to a smartphone/tablet by controlling the camera	265
Displaying pictures on a TV	268
Printing Wirelessly.....	269
When sending images to AV device.....	270
When sending images to PC	273
Using Web services	277
• When sending images to web service.....	277
• When sending images to Cloud Sync. Service	281
Registering to the “LUMIX CLUB”	283
• About the [LUMIX CLUB]	283
About Connections.....	288
• Connecting from your house (via the network).....	289
• Connecting from a location away from your house (direct connection).....	291
• Connecting quickly with the same settings as the previous ones ([Select a destination from History]/[Select a destination from Favorite])	292
• About settings for sending images	294
[Wi-Fi Setup] Menu	297

13. Connecting to other equipment

Enjoying Motion Pictures in 4K	299
Playing Back Pictures on a TV Screen	301
• Using VIERA Link (HDMI)	304
Saving still pictures and motion pictures on your PC	306
• About the supplied software	307
Saving still pictures and motion pictures on a Recorder	312
Printing the Pictures	313

14. Others

Optional accessories.....	319
Monitor Display/Viewfinder Display.....	324
Message Display.....	330
Menu list.....	334

• [Rec]	334
• [Motion Picture]	336
• [Custom]	337
• [Setup]	340
• [Playback]	342
Troubleshooting	343
Cautions for Use	360



MENU



Contents by Function



Recording

Recording

Recording Mode	P62
[Preview]	P91
Macro recording	P155
[Multi Exp.]	P184
[Silent Mode]	P186

Focus (AF/MF)

Focus Mode	P139
AF Mode	P140
Adjusting the AF area position	P145
Manual Focus	P150
AF/AE Lock	P157

Drive

Drive Mode	P166
[Self Timer]	P174
[Time Lapse Shot]	P176
[Stop Motion Animation]	P180

Picture Quality and Colour Tone

[Photo Style]	P122
[Highlight Shadow]	P124
White Balance	P126
[Picture Size]	P131



Motion Picture

Motion Picture

Creative Video Mode	P118
[High Speed Video]	P119
[Rec Format]	P212
[Rec Quality]	P212
Motion pictures in 4K	P218
Recording still pictures while recording motion pictures	P219

[Quality]	P132
[i.Dynamic]	P134
[i.Resolution]	P134
[HDR]	P135
[Long Shtr NR]	P136
[Color Space]	P137
ISO sensitivity	P160

Exposure

[One Push AE]	P92
AF/AE Lock	P157
Exposure Compensation	P159
[Metering Mode]	P163
[Auto Bracket]	P171

Flash

[Flash Mode]	P203
2nd curtain synchro	P206
[Flash Adjust.]	P207
Wireless flash settings	P209

Screen settings

[Center Marker]	P193
[Monochrome Live View]	P194
[Mic Level Disp.]	P223

Audio

[Mic Level Adj.]	P223
[Wind Cut]	P224
[Mic Level Limiter]	P223



Setup/Custom

Basic settings

[Format]	P31
[Clock Set]	P35
How to set menu items	P37
[Q.MENU]	P40
[Beep]	P49
[Economy]	P51
[Reset] (initialisation)	P54

Diopter adjustment.....	P58
Display switching	P64, 71

Customisation

[CUSTOM] in the Quick Menu	P42
Function buttons	P44
Custom Mode	P120
[Custom] menu	P337



Playback

Playback

[Auto Review]	P60
Picture playback	P68
Playback Zoom	P68
Multi Playback	P69
Motion picture playback.....	P70
Delete	P73

Display/playback settings

[Slide Show]	P228
[Rotate]/[Rotate Disp.]	P243

Edit

[RAW Processing].....	P232
[Resize].....	P241
[Cropping]	P242

Adding information

[Location Logging]	P231
[Title Edit].....	P235
[Text Stamp]	P236

Image settings

[Favorite].....	P244
[Print Set].....	P245
[Protect]	P247



MENU





Wi-Fi

Connect

"Image App"	P254
NFC	P259
[WPS (Push-Button)]	P289, 291
Direct connection	P291

[Touch Sharing]	P298
-----------------------	------

In combination with other devices

Playing back pictures on a TV	P268
Printing images	P269
Sending images to an AV device	P270
Sending images to a PC	P273
Sending images to a web service	P277
Using [Cloud Sync. Service]	P281

Image App

Remote recording	P260
Saving images	P261
Sending images	P262, 265
Sending and adding location information	P263



Connections with other devices

PC

"PHOTOfunSTUDIO"	P307
SILKYPIX	P307

Recorder

Dubbing	P312
---------------	------

TV

[VIERA Link]	P304
--------------------	------

Printer

PictBridge	P313
------------------	------


Care of the camera

Do not subject to strong vibration, shock, or pressure.

- The lens, monitor, or external case may be damaged if used in the following conditions.

It may also malfunction or image may not be recorded if you:

- Drop or hit the camera.
- Press hard on the lens or the monitor.
- **When camera is not in use or when using the playback feature, ensure that the lens is in the stored position, with lens cap on.**
- **There are times when rattling sounds or vibrations will come from the camera, but these are due to the motion of the aperture, the zoom and the motor and do not indicate a defect.**

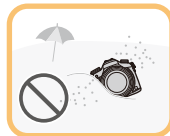


This camera is not dust/splash/water proof.

Avoid using the camera in places with a lot of dust, water, sand, etc.

- Liquid, sand and other foreign material may get into the space around the lens, buttons, etc. Be particularly careful since it may not just cause malfunctions, but it may also become irreparable.
 - Places with a lot of sand or dust.
 - Places where water can come into contact with this unit, such as when using it on a rainy day or at the beach.

■ About Condensation (When the lens, the viewfinder or monitor is fogged up)

- Condensation occurs when the ambient temperature or humidity changes. Be careful of condensation since it causes lens, viewfinder and monitor stains, fungus and camera malfunction.
- If condensation occurs, turn the camera off and leave it for about 2 hours. The fog will disappear naturally when the temperature of the camera becomes close to the ambient temperature.

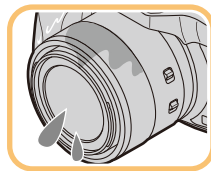

Standard Accessories

Check that all the accessories are supplied before using the camera.

- The accessories and their shape will differ depending on the country or area where the camera was purchased.

For details on the accessories, refer to “Basic Operating Instructions”.

- Battery Pack is indicated as **battery pack** or **battery** in the text.
- Battery Charger is indicated as **battery charger** or **charger** in the text.
- SD Memory Card, SDHC Memory Card and SDXC Memory Card are indicated as **card** in the text.
- **The card is optional.**




MENU





Names and Functions of Main Parts

- 1 Self-timer indicator (P174)/
AF Assist Lamp (P149)
- 2 Flash (P201)
- 3 Lens surface

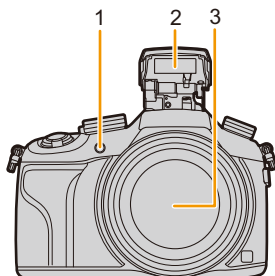

- 4 [LVF] button (P57)/
[Fn5] button (P44)
- 5 Eye sensor (P57)
- 6 Eye Cup (P361)
- 7 Viewfinder (P57)
- 8 [AF/AE LOCK] button (P157)
- 9 Focus mode lever (P138, 150)
- 10 Rear dial (P19)
- 11 Speaker

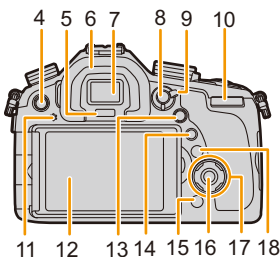

- Be careful not to cover the speaker with your finger. Doing so may make sound difficult to hear.
- 12 Monitor (P18)
 - 13 [Q.MENU] button (P40)/
[Fn3] button (P44)
 - 14 [▶] (Playback) button (P68)
 - 15 [🗑️/↵] (Delete/Cancel) button (P73)/
[Fn4] button (P44)
 - 16 [MENU/SET] button (P20, 37)
 - 17 Cursor buttons (P20)
 - ▲/ISO button (P160)
 - ▶/WB (White Balance) (P126)
 - ◀/AF Mode button (P138)
 - ▼/AF  button (P155)
 - 18 [DISP.] button (P64, 71)
 - Each time this is pressed, the display on the monitor is switched.



- 19 Focal length scale (35 mm film camera equivalent)
- Indicates values for the [3:2] aspect ratio.
(When recording motion pictures, refer to the focal length displayed on the screen.)

- 20 Motion picture button (P215)

- 21 Zoom lever (P197)

- 22 Shutter button (P59)

- 23 [Fn1] button (P44)


- 24 Drive mode dial (P166)

Single (P166): 

Burst (P167): 

Auto Bracket (P171): 

Self-timer (P174): 

Time Lapse/Animation (P176, 180): 

- 25 Hot shoe (Hot shoe cover) (P319)

- 26 Stereo microphone (P223)

- Be careful not to cover the microphone with your finger. Doing so may make sound difficult to record.

- 27 Mode dial (P62)


- 28 Camera ON/OFF switch (P35)


- 29 Status indicator (P35)

- 30 Wi-Fi® connection lamp (P251)

- 31 [Wi-Fi] button (P251)/

[Fn2] button (P44)

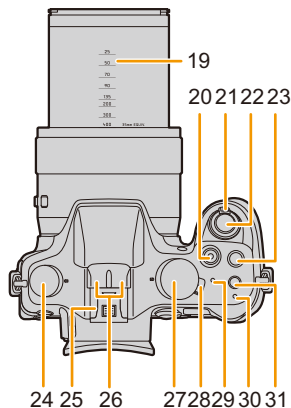

- 32 NFC antenna [

- 33 Tripod mount (P365)


- A tripod with a screw length of 5.5 mm (0.22 inch) or more may damage this unit if attached.

- 34 Card/Battery door (P28)


- 35 Release lever (P28)

- 36 DC coupler cover (P323)

- When using an AC adaptor (optional), ensure that the Panasonic DC coupler (optional) and AC adaptor are used.

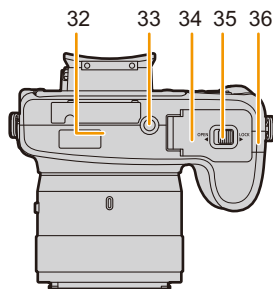


- 37 Manual ring (P150, 197)
 - Allows you to control the zoom or focus.
- 38 Manual ring selector switch (P150, 197)
- 39 O.I.S. switch (P195)
- 40 [MIC] socket (P322)
- 41 Shoulder strap eyelet (P23)
 - Be sure to attach the shoulder strap when using the camera to ensure that you will not drop it.
- 42 Flash open lever (P201)
 - The flash opens, and recording with the flash becomes possible.
- 43 Diopter adjustment dial (P58)
- 44 [REMOTE] socket (P321)
- 45 [HDMI] socket (P301)
- 46 [AV OUT/DIGITAL] socket (P302, 310, 312, 313)
- 47 Terminal cover

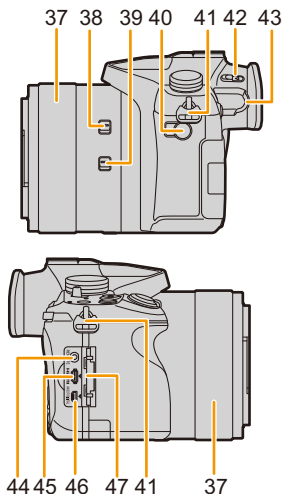

Drive mode dial


You can change what the camera will do when you press the shutter button. (P166)

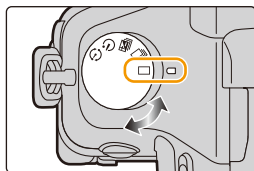

Diopter adjustment dial


Adjust the diopter to suit your vision so that you can see the viewfinder clearly. (P58)

- (A) Diopter adjustment dial

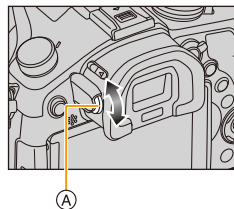

Monitor

At the time when this camera is purchased, the monitor is stowed in the camera body. Bring out the monitor as shown below.

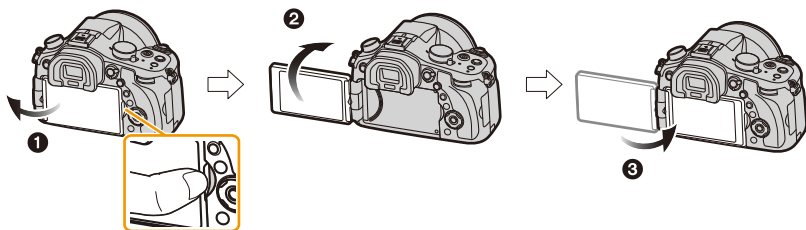

❶ Place your finger in the notch on the right side of the monitor to open it.
(Maximum 180°)

❷ It can be rotated 180° forwards.

❸ Return the monitor to its original position.


• **Only rotate the monitor after opening it wide enough, and be careful not to use excessive force as it may be damaged.**

■ Free angle shooting


The monitor can be rotated to suit your needs. This is convenient as it allows you to take pictures from various angles by adjusting the monitor.

• Do not cover the AF Assist Lamp with your fingers or other objects.

Taking pictures at a high angle

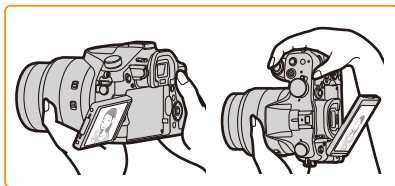

Taking pictures at a low angle

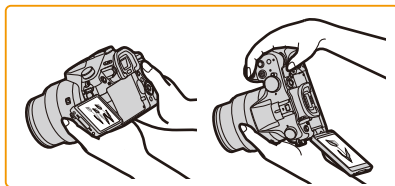

• When not using the monitor it is recommended that you close it with the screen facing inwards to prevent dirt and scratches.

Rear Dial

There are 2 ways to operate the rear dial, rotating left or right, and deciding by pressing.

Rotating:


Selection of items or setting of values is performed during the various settings.

Pressing:


Operations that are the same as [MENU/SET] button, such as determine settings, etc., are performed during the various settings.

- Rear dial is described as follows in these operating instructions.

e.g.: When rotating the rear dial to the left or right/
pressing the rear dial

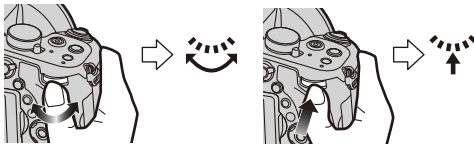

Allows you to set the aperture, shutter speed, and other settings when in **P / A / S / M** modes.

Mode dial	 Rear Dial
P (P84)	Programme Shift*
A (P86)	Aperture value*
S (P87)	Shutter speed*
M (P88)	Aperture value/Shutter speed

- * Pressing the rear dial enables you to set the exposure compensation.

Displaying/not displaying the operation guide

MENU → **f_c** [Custom] → [Dial Guide] → [ON]/[OFF]

- When [ON] is set, the operation guide for dials, buttons, etc. is displayed on the recording screen.



Cursor buttons/[MENU/SET] button


Pressing the cursor button:

Selection of items or setting of values etc., is performed.

Pressing [MENU/SET]:

Confirmation of setting contents, etc., is performed.

- These operating instructions express the up, down, left, and right of the cursor button as ▲/▼/◀/▶.

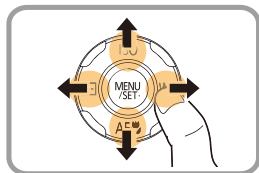

MENU



Attaching the Lens Hood


In bright sunlight or backlight, the lens hood will minimise lens flare and ghosting. The lens hood cuts off excess lighting and improves the picture quality.

- Do not hold the lens hood in a way that twists or bends it.
- Check that the camera is turned off.
- Close the flash.




- 1** Align the mounting mark on the lens hood slightly above the mounting projection on the edge of the lens.

- (A) Mounting projection (Lens edge)
- (B) Mounting mark (Lens hood)

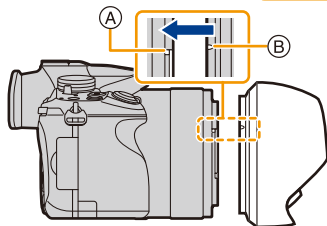


- 2** Screw in the lens hood in the direction of the arrow.

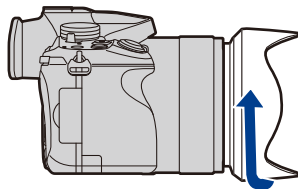


- 3** Continue to rotate the lens hood until you hear a “click” even if you feel some stiffness, and then align the mark on the bottom of the camera.

- (C) Rotate until the marks are aligned
- Check that the lens hood is firmly attached and that it does not appear in the picture.

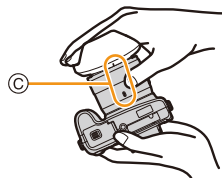


- When taking pictures with flash with the lens hood attached, the lower portion of the photo may turn dark (vignetting effect) and the control of the flash may be disabled because the photo flash may be obscured by the lens hood. We recommend detaching the lens hood.
- When temporarily detaching and carrying the lens hood, we recommend attaching with the orientation reversed. Return it to the normal direction when taking pictures.

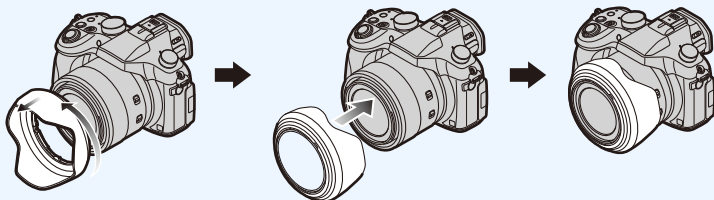

Attaching the Lens Cap

- When you turn the camera off or carry the camera, attach the lens cap to protect the surface of the lens.
- Make sure to detach the lens cap when turning this unit on.
- **Be careful not to lose the lens cap.**

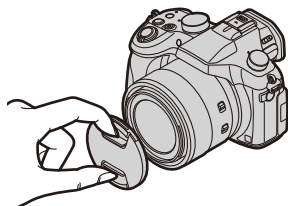

Attaching the Shoulder Strap


- We recommend attaching the shoulder strap when using the camera to prevent it from dropping.

- 1** Pass the shoulder strap through the hole at the shoulder strap eyelet.



- 2** Pass the shoulder strap through the stopper and fasten the shoulder strap.

- A** Pull the shoulder strap 2 cm (0.066 feet) or more.
 - Attach the shoulder strap to the other side of the camera being careful not to twist it.

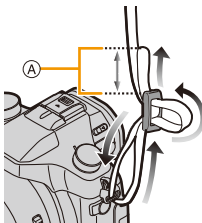

- Use the shoulder strap around your shoulder.
 - Do not wrap the strap around your neck.
 - It may result in injury or accident.
- Do not leave the shoulder strap where an infant can reach it.
 - It may result in an accident by mistakenly wrapping around the neck.

Charging the Battery

About batteries that you can use with this unit


It has been found that counterfeit battery packs which look very similar to the genuine product are made available for purchase in some markets. Some of these battery packs are not adequately protected with internal protection to meet the requirements of appropriate safety standards. There is a possibility that these battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack. To ensure that safe products are used, we recommend that a genuine Panasonic battery pack is used.

- Use the dedicated charger and battery.

Charging

- The battery is not charged when the camera is shipped. Charge the battery before use.
- Charge the battery with the charger indoors.


- 1 Attach the battery paying attention to the direction of the battery.

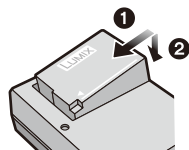


- 2 Connect the charger to the electrical outlet.

- The [CHARGE] indicator (A) lights up and charging begins.

plug-in type

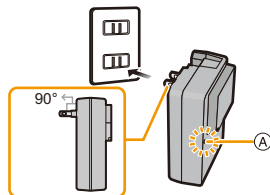

inlet type

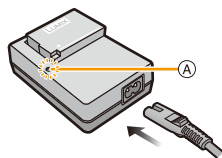

■ About the [CHARGE] indicator

On: Charging.

Off: Charging has completed.
(Disconnect the charger from the electrical socket and detach the battery after charging is completed.)

• When the [CHARGE] indicator flashes


- The battery temperature is too high or too low. It is recommended to charge the battery again in an ambient temperature of between 10 °C and 30 °C (50 °F and 86 °F).
- The terminals of the charger or the battery are dirty. In this case, wipe them with a dry cloth.

■ Charging time

Charging time	Approx. 140 min
---------------	-----------------

- The indicated charging time is for when the battery has been discharged completely. The charging time may vary depending on how the battery has been used. The charging time for the battery in hot/cold environments or a battery that has not been used for a long time may be longer than normal.

■ Battery indication



- The indication turns red and blinks if the remaining battery power is exhausted. (The status indicator also blinks)
Recharge the battery or replace it with a fully charged battery.

- **Do not leave any metal items (such as clips) near the contact areas of the power plug. Otherwise, a fire and/or electric shocks may be caused by short-circuiting or the resulting heat generated.**
- The battery can be recharged even when it still has some charge left, but it is not recommended that the battery charge be frequently topped up while the battery is fully charged. (Since characteristic swelling may occur.)

Approximate operating time and number of recordable pictures

■ Recording still pictures (when using the Monitor) (By CIPA standard in Programme AE Mode)

Number of recordable pictures	Approx. 360 pictures
Recording time	Approx. 180 min

■ Recording still pictures (when using the Viewfinder) (By CIPA standard in Programme AE Mode)

Number of recordable pictures	Approx. 300 pictures
Recording time	Approx. 150 min

Recording conditions by CIPA standard

- CIPA is an abbreviation of [Camera & Imaging Products Association].
- Temperature: 23 °C (73.4 °F)/Humidity: 50%RH when monitor is on.
- When using a Panasonic SDHC Memory Card.
- Using the supplied battery.
- Starting recording 30 seconds after the camera is turned on.
(When the Optical Image Stabiliser is set to [(|||||)].)
- **Recording once every 30 seconds** using full flash every second recording.
- Rotating the zoom lever from Tele to Wide or vice versa in every recording.
- Turning the camera off every 10 recordings and leaving it until the temperature of the battery decreases.

The number of recordable pictures varies depending on the recording interval time. If the recording interval time becomes longer, the number of recordable pictures decreases.

[For example, if you were to take one picture every two minutes, then the number of pictures would be reduced to approximately one-quarter of the number of pictures given above (based upon one picture taken every 30 seconds).]

■ Recording motion pictures (when using the monitor)

[AVCHD] (Recording with picture quality set to [FHD/17M/50i])

Recordable time	Approx. 135 min
Actual recordable time	Approx. 70 min

[MP4] (Recording with picture quality set to [FHD/20M/25p])

Recordable time	Approx. 140 min
Actual recordable time	Approx. 75 min

• [AVCHD] motion pictures:

Recording stops when the continuous recording time exceeds 29 minutes and 59 seconds.

• Motion pictures with their file size set to [FHD], [HD] or [VGA] in [MP4]:

Recording stops when the continuous recording time exceeds 29 minutes and 59 seconds or the file size exceeds 4 GB.

– Since the file size becomes larger with [FHD], recording with [FHD] will stop before 29 minutes 59 seconds.

• Motion pictures with their file size set to [4K] in [MP4]:

Recording stops when the continuous recording time exceeds 29 minutes and 59 seconds. (You can continue recording without interruption even if the file size exceeds 4 GB, but the motion picture file will be divided and played back separately.)

• These times are for an ambient temperature of 23 °C (73.4 °F) and a humidity of 50%RH. Please be aware that these times are approximate.

• Actual recordable time is the time available for recording when repeating actions such as turning this unit on and off, starting/stopping recording, zoom operation, etc.

■ Playback (when using the monitor)

Playback time	Approx. 300 min
----------------------	------------------------

• **The operating times and number of recordable pictures will differ according to the environment and the operating conditions.**

For example, in the following cases, the operating times shorten and the number of recordable pictures is reduced.

– In low-temperature environments, such as on ski slopes.

– When flash is used repeatedly.


• When the operating time of the camera becomes extremely short even after properly charging the battery, the life of the battery may have expired. Buy a new battery.

Inserting and Removing the Card (optional)/the Battery

- Check that this unit is turned off.
- We recommend using a Panasonic card.


1 Slide the release lever in the direction of the arrow and open the card/battery door.

- Always use genuine Panasonic batteries.
- If you use other batteries, we cannot guarantee the quality of this product.

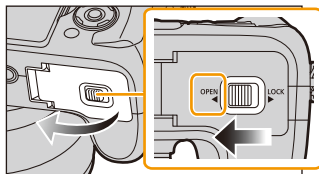

2 **Battery:** Being careful about the battery orientation, insert all the way until you hear a locking sound and then check that it is locked by lever (A).

Pull the lever (A) in the direction of the arrow to remove the battery.

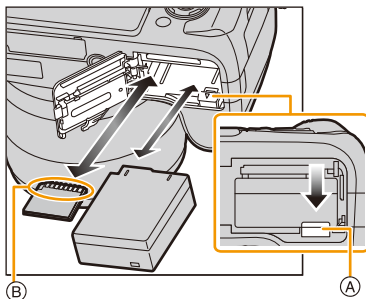


Card: Push it securely all the way until you hear a “click” while being careful about the direction in which you insert it.

To remove the card, push the card until it clicks, then pull the card out upright.

(B): Do not touch the connection terminals of the card.

3 **1:** Close the card/battery door.

2: Slide the release lever in the direction of the arrow.

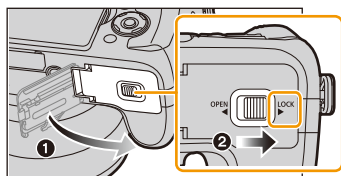

- Remove the battery after use.
(The battery will be exhausted if left for a long period of time after being charged.)
- **The battery becomes warm after using it and during and after charging. The camera also becomes warm during use. This is not a malfunction.**
- Before removing the card or battery, turn the camera off, and wait until the status indicator has gone off completely.
(Otherwise, this unit may no longer operate normally and the card itself may be damaged or the recorded pictures may be lost.)



MENU



About the Card

About cards that can be used with this unit

The following cards which conform to the SD standard can be used with this unit. (These cards are indicated as **card** in the text.)

SD Memory Card (8 MB to 2 GB)	<ul style="list-style-type: none"> SDHC Memory Cards and SDXC Memory Cards can be used only with their compatible devices. Check that the PC and other equipment are compatible when using the SDXC Memory Cards. http://panasonic.net/avc/sdcard/information/SDXC.html This unit is compatible with UHS-I UHS Speed Class 3 standard SDHC/SDXC memory cards. Only the cards with capacity listed left can be used.
SDHC Memory Card (4 GB to 32 GB)	
SDXC Memory Card (48 GB, 64 GB)	

About the motion picture recording and speed class

According to the [Rec Format] (P212) and [Rec Quality] (P212) of a motion picture, the required card differs. Use a card that meets the following ratings of the SD Speed Class or UHS Speed Class.

- SD Speed Class and UHS Speed Class are the speed standards regarding continuous writing. To check the class, see the labelled side, etc. of the card.

[Rec Format]	[Rec Quality]	Speed class	Label example
[AVCHD]	All	Class 4 or higher	CLASS 4 4
[MP4]	FHD/HD/VGA		
[MP4]	4K/ High Speed Video	UHS Speed Class 3	U3

- Please confirm the latest information on the following website.

<http://panasonic.jp/support/global/cs/dsc/>

(This Site is English only.)


Access to the card

The access indication displays red when pictures are being recorded on the card.



- During access (image writing, reading and deleting, formatting etc.), do not turn this unit off, remove the battery, card or disconnect the AC adaptor (supplied). Furthermore, do not subject the camera to vibration, impact or static electricity. The card or the data on the card may be damaged, and this unit may no longer operate normally.
If operation fails due to vibration, impact or static electricity, perform the operation again.

- If you set the Write-Protect switch (A) to "LOCK", you may not be able to write, delete or format the data or display it by recording date. These operations become available again when you unlock the switch.
- The data on the card may be damaged or lost due to electromagnetic waves, static electricity or breakdown of the camera or the card. We recommend storing important data on a PC etc.
- Keep the Memory Card out of reach of children to prevent swallowing.



Formatting the card (initialisation)

Format the card before recording a picture with this unit.

Since data cannot be recovered after formatting, make sure to back up necessary data in advance.

Select the menu.

MENU →  **[Setup]** → **[Format]**

- Confirmation screen is displayed. It is executed when [Yes] is selected.
- Use a battery with sufficient battery power or the AC adaptor (optional) (P323) when formatting.
- Do not turn the camera off during formatting.
- If the card has been formatted on a PC or other equipment, format it on the camera again.
- If the card cannot be formatted, please try another card before contacting Panasonic.

Approximate number of recordable pictures and available recording time

■ Number of recordable pictures

• [9999+] is displayed if there are more than 10000 pictures remaining.

• Aspect ratio [3:2], Quality [FINE]

[Picture Size]	2 GB	8 GB	32 GB	64 GB
L (20M)	175	720	2910	5810
EX M (10M)	320	1310	5310	10510
EX S (5M)	560	2270	9220	17640

• Aspect ratio [3:2], Quality [RAW]

[Picture Size]	2 GB	8 GB	32 GB	64 GB
L (20M)	56	220	920	1840
M (10M)	65	260	1070	2140
S (5M)	72	290	1170	2340

■ Available recording time (when recording motion pictures)

- “h” is an abbreviation for hour, “m” for minute and “s” for second.
- The recordable time is the total time of all the motion pictures which have been recorded.

• [AVCHD]

[Rec Quality]	2 GB	8 GB	32 GB	64 GB
[FHD/28M/50p]	7m00s	35m00s	2h30m	5h00m
[FHD/17M/50i]	12m00s	55m00s	4h05m	8h15m
[FHD/24M/25p]/ [FHD/24M/24p]	9m00s	40m00s	2h50m	5h50m

• [MP4]

[Rec Quality]	2 GB	8 GB	32 GB	64 GB
[4K/100M/25p]	1m00s	8m00s	40m00s	1h20m
[FHD/28M/50p]	7m00s	34m00s	2h25m	5h00m
[FHD/20M/25p]	9m00s	45m00s	3h15m	6h40m
[HD/10M/25p]	20m00s	1h25m	6h20m	12h45m
[VGA/4M/25p]	38m00s	3h15m	13h00m	26h00m

- [AVCHD] motion pictures:
 - Recording stops when the continuous recording time exceeds 29 minutes and 59 seconds.
- Motion pictures with their file size set to [FHD], [HD] or [VGA] in [MP4]:
 - Recording stops when the continuous recording time exceeds 29 minutes and 59 seconds or the file size exceeds 4 GB.
 - Since the file size becomes larger with [FHD], recording with [FHD] will stop before 29 minutes 59 seconds.
- Motion pictures with their file size set to [4K] in [MP4]:
 - Recording stops when the continuous recording time exceeds 29 minutes and 59 seconds. (You can continue recording without interruption even if the file size exceeds 4 GB, but the motion picture file will be divided and played back separately.)

- The number of recordable pictures and the available recording time are an approximation. (These vary depending on the recording conditions and the type of card.)
- The number of recordable pictures and the available recording time varies depending on the subjects.
- **The maximum available continuous recording time is displayed on the screen.**




Switching the display between the number of recordable pictures and the available recording time

MENU → **fc**[Custom] → **[Remaining Disp.]**


[] ([Remaining Shots]):

This will display the number of recordable pictures for still pictures.

[] ([Remaining Time]):

This will display the available recording time for motion pictures.

• [9999+] is displayed if there are more than 10000 pictures remaining.

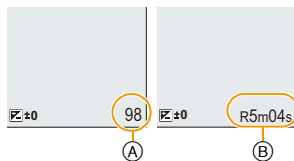

(A) Number of recordable pictures


(B) Available recording time

Setting Date/Time (Clock Set)

- The clock is not set when the camera is shipped.

1 Turn the camera on.

- The status indicator ❶ lights when you turn this unit on.
- If the language select screen is not displayed, proceed to step 4.

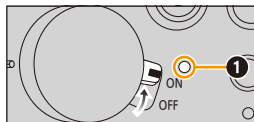

2 Press [MENU/SET].

3 Press ▲/▼ to select the language, and press [MENU/SET].

4 Press [MENU/SET].

5 Press ◀/▶ to select the items (year, month, day, hour, minute), and press ▲/▼ to set.

- (A): Time at the home area
- (B): Time at the travel destination

- You can cancel without setting the clock by pressing [🗑️/↵].

To set the display order and the time display format.

- To display the setting screen of the order/time, select [Style] and then press [MENU/SET].



6 Press [MENU/SET].

- Confirmation screen is displayed. Press [MENU/SET].
- A message prompting you to set [Home] in [World Time] will be displayed. Press [MENU/SET].

7 Press ◀/▶ to select the home area, and then press [MENU/SET].



- (A): 🏠
- (B): ✈️

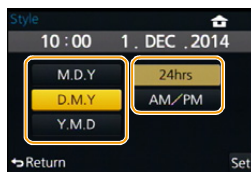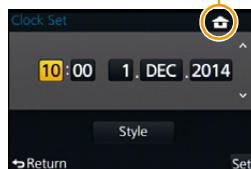

Changing the Clock Setting

Select [Clock Set] in the [Setup] menu. (P37)

- The clock can be reset as shown in steps **5** and **6**.
- **The clock setting is maintained for 3 months using the built-in clock battery even without the battery.**
(Leave the charged battery in the unit for 24 hours to charge the built-in battery.)

- If the clock is not set, the correct date cannot be printed when you stamp the date on the pictures with [Text Stamp] or order a photo studio to print the pictures.



MENU



Setting the Menu

This camera offers menu selections that allow you to customise its operation to maximise your picture taking experience.

In particular, the [Setup] menu contains some important settings relating to the camera's clock and power.

Check the settings of this menu before proceeding to use the camera.

Setting menu items



- If you set [Menu Resume] (P53) in the [Setup] menu to [ON], the screen shows the last selected menu item.
It is set to [ON] at the time of purchase.
- When [Menu Information] (P53) in the [Setup] menu is set to [ON], explanations of the menu items and settings are displayed on the menu screen.






Example: In the [Rec] menu, change [Quality] from [] to [].

In these operating instructions, steps for setting a menu item are described as follows.

MENU → [Rec] → [Quality] → []

1 Press [MENU/SET].



 [Rec] (P334)	This menu lets you set the aspect ratio, number of pixels and other aspects of the pictures you are recording.
 [Motion Picture] (P221)	This menu lets you set the [Rec Format], [Rec Quality], and other aspects for motion picture recording.
 [Custom] (P337)	Operation of the unit, such as displaying of the screen and button operations, can be set up according to your preferences. Also, it is possible to register the modified settings.
 [Setup] (P47)	This menu lets you perform the clock settings, select the operating beep tone settings and set other settings which make it easier for you to operate the camera. You can also configure the settings of Wi-Fi related functions.
 [Playback] (P342)	This menu lets you set the Protection, Cropping or Print Settings, etc. of recorded pictures.


2 Press ▲/▼ to select the menu item and then press [MENU/SET].

- The menu item can also be selected by rotating the rear dial.
- You can also switch to the next screen by pressing [DISP].
(It will also switch by rotating the zoom lever)



3 Press ▲/▼ to select the setting and then press [MENU/SET].

- The setting can also be made by selecting an option by rotating the rear dial and then pressing the rear dial.
- Depending on the menu item, its setting may not appear or it may be displayed in a different way.

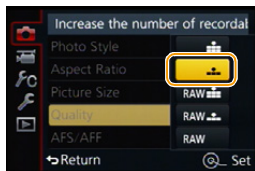

- There are functions that cannot be set or used depending on the modes or menu settings being used on the camera due to the specifications.

■ Close the menu

Press [**⏏**/**↵**] repeatedly until the screen returns to the recording/playback screen.

- In Recording Mode, the menu screen can also be exited by pressing the shutter button halfway.

■ Switching to other menus

e.g.: Switching to the [Setup] menu from [Rec] menu

- 1 Press **←**.
- 2 Press **▲/▼** to select [**⚙**] or another of the menu toggle icons.
- 3 Press [**MENU/SET**].

- Select a menu item next and set it.



Setting the menu screen background

You can set the background for the menu screen according to your preferences.

- 1 Select the menu.

MENU → **⚙** [Setup] → [Menu Background]

- 2 Press **▲/▼** to select the background colour and then press [**MENU/SET**].
 - Exit the menu after it is set.

Calling frequently-used menus instantly

(Quick Menu)


By using the Quick Menu, some of the menu settings can be easily found.

- The features that can be adjusted using Quick Menu are determined by the mode or a display style the camera is in.


[Q.MENU]/[Fn3] button can be used in two ways, as [Q.MENU] or as [Fn3] (function 3). At the time of purchase, it is initially set to [Q.MENU].

- Refer to [P44](#) for details about the function button.

1 Press [Q.MENU] to display the Quick Menu.

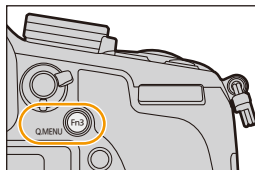


2 Rotate the rear dial to select the menu item, then press the rear dial.

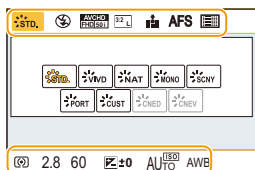

3 Rotate the rear dial to select the setting.

- You can also set items by pressing the cursor buttons ▲/▼/◀/▶.

4 Press [Q.MENU] to exit the menu once the setting is complete.

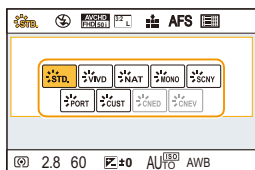

Switching the method for setting Quick Menu items

MENU →  [Custom] → [Q.MENU]

[PRESET]:

The default items can be set.

[CUSTOM]:

The Quick Menu will consist of desired items. (P42)


Using Quick Menu items on the on-monitor recording information screen of (monitor style) (P64)

(Press [DISP.] repeatedly until the screen is displayed.)

Press [Q.MENU], rotate the rear dial to select an item, and then press the rear dial.

Rotate the rear dial to select the setting, and then press the rear dial to set it.

- You can also set with ▲/▼/◀/▶ and [MENU/SET].

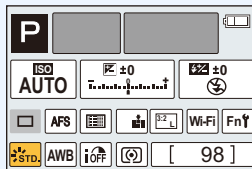


Change the Quick Menu to your preferred item

When [Q.MENU] (P41) in the [Custom] menu is set to [CUSTOM], the Quick Menu can be changed as desired.


Up to 15 items can be set to the Quick Menu.

1 Press **▼** to select [**Q**] and then press [MENU/SET].

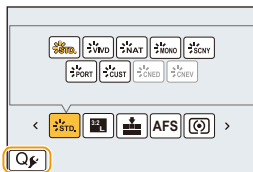

2 Press **▲/▼/◀/▶** to select the menu item in the top row and then press [MENU/SET].

3 Press **◀/▶** to select the empty space in the bottom row and then press [MENU/SET].

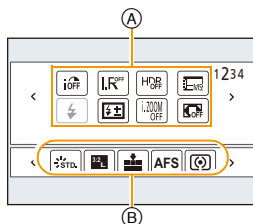

(A) Items that can be setup as Quick Menus.

(B) Items that can be displayed in the Quick Menu screen.

- If there is no empty space in the bottom row, you can replace an existing item with a new select item by selecting the existing item.
- To cancel the setting, move to the bottom row by pressing **▼** and select an item to cancel, and then press [MENU/SET].
- Items that can be set are as follows:

[Rec] menu/Recording functions	
<ul style="list-style-type: none"> – [Photo Style] (P122) – [Picture Setting] ([Aspect Ratio] (P131)/[Picture Size] (P131)) – [Quality] (P132) – [AFS/AFF] (P139) – [Metering Mode] (P163) – [Burst Rate] (P167) – [Auto Bracket] (P171) – [Self Timer] (P174) – [i.Dynamic] (P134) – [i.Resolution] (P134) – [HDR] (P135) 	<ul style="list-style-type: none"> – [Shutter Type] (P164) – [Flash Mode] (P203) – [Flash Adjust.] (P207) – [i.Zoom] (P198) – [Digital Zoom] (P199) – [Stabilizer] (P195) – [Sensitivity] (P160) – [White Balance] (P126) – [AF Mode] (P138) – [Macro Mode] (P155)



[Motion Picture] menu	[Custom] menu
<ul style="list-style-type: none"> - [Motion Pic. Set] ([Rec Format] (P212)/[Rec Quality] (P212)) - [Picture Mode] (P219) 	<ul style="list-style-type: none"> - [Silent Mode] (P186) - [Peaking] (P152) - [Histogram] (P66) - [Guide Line] (P66) - [Zebra Pattern] (P193) - [Monochrome Live View] (P194) - [Rec Area] (P216) - [Zoom Lever] (P200) - [Manual ring (Zoom)] (P200)

4 Press [/].

- It will return to screen of step 1.
Press [MENU/SET] to switch to the recording screen.

Assigning frequently used functions to the buttons (function buttons)

You can assign frequently-used functions to particular buttons.

1 Select the menu.


MENU → **f_C** [Custom] → [Fn Button Set]

2 Press ▲/▼ to select [Setting in REC mode] or [Setting in PLAY mode] and then press [MENU/SET].

3 Press ▲/▼ to select the function button you want to assign a function to and then press [MENU/SET].

4 Press ▲/▼ to select the function you want to assign and then press [MENU/SET].

- Refer to [P45](#) for [Setting in REC mode] and [P46](#) for [Setting in PLAY mode].
- To restore the default function button settings, select [Restore to Default].

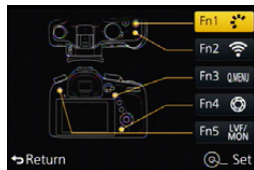

Making the function button settings for recording

You can use assigned functions by pressing a function button when recording.

- The following functions can be assigned to the button [Fn1], [Fn2], [Fn3], [Fn4] or [Fn5].

[Rec] menu/Recording functions	
– [Wi-Fi] (P251): [Fn2]*	– [Highlight Shadow] (P124)
– [Q.MENU] (P40): [Fn3]*	– [i.Dynamic] (P134)
– [LVF/Monitor Switch] (P58): [Fn5]*	– [i.Resolution] (P134)
– [AF/AE LOCK] (P151)	– [HDR] (P135)
– [AF-ON] (P151, 157)	– [Shutter Type] (P164)
– [Preview] (P91): [Fn4]*	– [Flash Mode] (P203)
– [One Push AE] (P92)	– [Flash Adjust.] (P207)
– [Level Gauge] (P67)	– [i.Zoom] (P198)
– [Focus Area Set] (P46)	– [Digital Zoom] (P199)
– [Photo Style] (P122): [Fn1]*	– [Stabilizer] (P195)
– [Aspect Ratio] (P131)	– [Sensitivity] (P160)
– [Picture Size] (P131)	– [White Balance] (P126)
– [Quality] (P132)	– [AF Mode/MF] (P138)
– [AFS/AFF] (P139)	– [Macro Mode] (P155)
– [Metering Mode] (P163)	– [Restore to Default]
– [Burst Rate] (P167)	
– [Auto Bracket] (P171)	
– [Self Timer] (P174)	
[Motion Picture] menu	
– [Motion Pic. Set] ([Rec Format] (P212)/[Rec Quality] (P212))	– [Picture Mode] (P219)
[Custom] menu	
– [Silent Mode] (P186)	– [Zebra Pattern] (P193)
– [Peaking] (P152)	– [Monochrome Live View] (P194)
– [Histogram] (P66)	– [Rec Area] (P216)
– [Guide Line] (P66)	– [Zoom Lever] (P200)
	– [Manual ring (Zoom)] (P200)

* Function button settings at the time of purchase.



- Some functions cannot be used depending on the mode or displayed screen.
- When set to [Focus Area Set], it is possible to display the position setting screen of either AF area or MF Assist.

Not available in these cases:

- [Fn1] cannot be used in the following cases.
 - [Miniature Effect]/[One Point Color]/[Sunshine] (Creative Control Mode)
 - [Multi Exp.]
- [Fn2] cannot be used during Time Lapse Shooting.

Making the function button settings for playback

You can directly set an assigned function to a selected image by pressing the function button during playback.

- The following functions can be assigned to the button [Fn1], [Fn2], [Fn3], or [Fn5].

[Playback] Menu/Playback functions

- | | |
|-----------------------------|-------------------------------|
| – [Favorite] (P244): [Fn3]* | – [Delete Single] (P73) |
| – [Print Set] (P245) | – [Off]: [Fn1]*/[Fn2]*/[Fn5]* |
| – [Protect] (P247) | – [Restore to Default] |

* Function button settings at the time of purchase.


Using the function buttons during playback

Example: When [Fn3] is set to [Favorite]

- 1 Press ◀/▶ to select the picture.
- 2 Press [Fn3], and then set the image as [Favorite].
 - When assigning [Print Set], set the number of pictures to be printed next.
 - When assigning [Delete Single], select [Yes] on the confirmation screen.



Configuring basic settings of this unit (Setup Menu)

 For details on how to select the [Setup] menu settings, refer to P37.

[Clock Set] and [Economy] are important items.
Check their settings before using them.

[Clock Set]

• Refer to P35 for details.

[World Time]

Set the time in your home area and travel destination.
You can display the local times at the travel destinations and record them on the pictures you take.


• Set [Home] first thing after purchasing.
[Destination] can be set after setting up [Home].

After selecting [Destination] or [Home], press ◀/▶ to select an area, and press [MENU/SET] to set.

[Destination]:

Travel destination area

- (A) Current time of the destination area
- (B) Time difference from home area

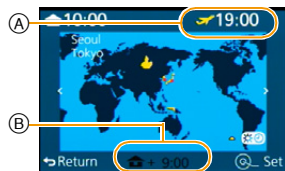





[Home]:

Your home area

- (C) Current time
- (D) Time difference from GMT (Greenwich Mean Time)



- Press ▲ if you are using Daylight Savings [▲☀]. (The time will move forward by 1 hour.) Press ▲ once more to return to the normal time.
- If you cannot find the travel destination in the areas displayed on the screen, set by the time difference from the home area.

    [Travel Date]	<p>Departure date and return date of the trip as well as the name of the travel destination can be set. You can display the number of days that have passed when playing back the pictures and stamp it on the recorded pictures with [Text Stamp] (P236).</p>
	<p>[Travel Setup]:</p> <p>[SET]: Departure date and return date are set. Elapsed days (how many days after) of the trip are recorded.</p> <p>[OFF]</p> <ul style="list-style-type: none"> • The travel date is automatically cancelled if the current date is after the return date. If the [Travel Setup] is set to [OFF], [Location] will also be set to [OFF]. <p>[Location]:</p> <p>[SET]: Travel destination is recorded at the time of recording.</p> <p>[OFF]</p> <ul style="list-style-type: none"> • For details on how to enter characters, refer to “Entering Text” on P55.
<ul style="list-style-type: none"> • The number of days that have passed since the departure date can be printed out using the “PHOTOfunSTUDIO” bundled software on the DVD (supplied). • The travel date is calculated using the date in the clock setting and the departure date you set. If you set [World Time] to the travel destination, the travel date is calculated using the date in the clock setting and the travel destination setting. • [Travel Date] cannot be set for motion pictures recorded with [AVCHD]. • [Location] cannot be recorded when taking motion pictures. 	
[Wi-Fi]	[Wi-Fi Function]/[Wi-Fi Setup]

- Refer to P253, 297 for details.

[Beep]	Set the volume for electronic noises and the electronic shutter noise.	
	[Beep Volume]: (High) (Low) (OFF)	[Shutter Vol.]: (High) (Low) (OFF)

- When [Silent Mode] is set to [ON], [Beep Volume] and [Shutter Vol.] is set to [OFF].

[Live View Mode]	Set the frame rate of the recording screen (Live View screen).
	[30fps]: Reduces the power consumption, extending the operating time. [60fps]: Displays movements smoother.

- When [Live View Mode] is set to [30fps] the image quality on the recording screen may be worse than when it is set to [60fps], but this does not affect the recorded image.
- In a dark environment, the frame rate may become slower.
- When using the AC adaptor (optional), [Live View Mode] is fixed to [60fps].

[Monitor Display]/ [Viewfinder]	Brightness, colour, or red or blue tint of the monitor/viewfinder is adjusted.
	([Brightness]): Adjust the brightness.
	([Contrast · Saturation]): Adjust the contrast or clarity of colours.
	([Red Tint]): Adjust the red tint. ([Blue Tint]): Adjust the blue tint.
	<ol style="list-style-type: none"> Select the settings by pressing ▲/▼, and adjust with ◀/▶. <ul style="list-style-type: none"> • Adjusting can also be performed by rotating the rear dial. Press [MENU/SET] to set.




- It will adjust the monitor when the monitor is in use, and the viewfinder when the viewfinder is in use.
- Some subjects may appear differently from actuality on the monitor. However, this does not affect the recorded pictures.

[Monitor Luminance]	Sets the monitor brightness according to the ambient light level.
	[A]* [AUTO]: The brightness is adjusted automatically depending on how bright it is around the camera.
	[1]* [MODE1]: Make the monitor brighter.
	[2]* [MODE2]: Set the monitor to the standard brightness.
	[3]* [MODE3]: Make the monitor darker.

- The brightness of pictures displayed on the monitor is enhanced, so some subjects on the monitor may appear different from the actual subjects. However, this enhancement does not affect recorded pictures.
- The monitor automatically returns to standard brightness if no operations are performed for 30 seconds when recording in [MODE1]. It will light up brightly again with button operation.
- When [AUTO] or [MODE1] is set, the usage time is reduced.
- [AUTO] is only available in the Recording Mode.
- The initial setting when using the AC adaptor (optional) is [MODE2].

<p>[Economy]</p>	<p>The unit can be set up to prevent unnecessary battery consumption.</p> <hr/> <p>[Sleep Mode]: The camera is automatically turned off if the camera has not been used for the time selected on the setting. [10MIN.]/[5MIN.]/[2MIN.]/[1MIN.]/[OFF]</p> <p>[Auto LVF/Monitor Off]: The monitor/viewfinder is automatically turned off if the camera has not been used for the time selected on the setting. [5MIN.]/[2MIN.]/[1MIN.]</p>
-------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

- Press the shutter button halfway or turn the camera off and on to cancel [Sleep Mode].
- To turn the monitor/viewfinder on again, press any button.
- When the monitor/viewfinder automatic switching (P57) is activated, [Auto LVF/Monitor Off] is cancelled.
- [Economy] does not work in the following cases.
 - When connecting to a PC or a printer
 - When recording or playing back motion pictures
 - During a slide show
 - [Multi Exp.]
 - [Time Lapse Shot]
 - When [Auto Shooting] in [Stop Motion Animation] is set to [ON].
 - When connect with HDMI in Recording Mode.
- When using the AC adaptor (optional), [Sleep Mode] is disabled.
- When using the AC adaptor (optional), [Auto LVF/Monitor Off] is fixed to [5MIN.].

<p>[USB Mode]</p>	<p>Select the USB communication system when connecting the camera to your PC or your printer with the USB connection cable (supplied).</p> <hr/> <p> [Select on connection]: Select either [PC] or [PictBridge(PTP)] if you connected the camera to a PC or a printer supporting PictBridge.</p> <p> [PictBridge(PTP)]: Set when connecting to a printer supporting PictBridge.</p> <p> [PC]: Set when connecting to a PC.</p>
--------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

[TV Connection]

This sets how the unit connects to a television etc.

[Video Out]:

Set to match the colour television system in each country.

[NTSC]:

Video output is set to NTSC system.

[PAL]:

Video output is set to PAL system.

- This will operate when the AV cable (optional) or HDMI micro cable is connected.

[TV Aspect]:

Set to match the type of TV.

[16:9]:

When connecting to a 16:9 screen TV.

[4:3]:

When connecting to a 4:3 screen TV.

- This will work when the AV cable (optional) is connected.

[HDMI Mode (Play)]:

Set the format for the HDMI output when playing back on the HDMI compatible high-definition TV connected with this unit using the HDMI micro cable.

[AUTO]:

The output resolution is automatically set based on the information from the connected TV.

[4K]:

The progressive method with 2160 available scan lines is used for output. The output size is set to 3840×2160.

[1080p]:

The progressive method with 1080 available scan lines is used for output.

[1080i]:

The interlace method with 1080 available scan lines is used for output.

[720p]:

The progressive method with 720 available scan lines is used for output.

[576p]^{*1}/[480p]^{*2}:





The progressive method with 576^{*1}/480^{*2} available scan lines is used for output.

*1 When [Video Out] is set to [PAL]

*2 When [Video Out] is set to [NTSC]

- This will work when the HDMI micro cable is connected.
- This will work only during playback.
- If no image appears on the TV with [AUTO], switch the setting to a constant setting other than [AUTO] to set a format supported by your TV.


(Please read the operating instructions for the TV.)

    <p>[TV Connection] (continued)</p>	<p>[HDMI Info Display (Rec)]: Set whether or not to display information when recording an image on the camera while monitoring it on a TV.</p> <p>[ON]: The camera display is output as is.</p> <p>[OFF]: Only images are output.</p> <ul style="list-style-type: none"> • This will work when the HDMI micro cable is connected. • When the camera is connected to a TV, lower the volume of the TV. <p>[VIERA Link]: Settings that allow this unit to be controlled by the remote control of the VIERA equipment by automatically coupling this unit with the VIERA Link compatible equipment using HDMI micro cable.</p> <p>[ON]: Remote control operation of the VIERA Link compatible equipment is enabled. (Not all operations are possible) Button operation of the main unit will be limited.</p> <p>[OFF]: Operation is performed with the buttons on this unit.</p> <ul style="list-style-type: none"> • This will work when the HDMI micro cable is connected. • Refer to P304 for details.
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

[Menu Resume]	<p>Stores the location of the last-used menu item for each menu.</p> <p>[ON]/[OFF]</p>
----------------------	-----------------------------------------------------------------------------------------------

[Menu Background]	<p>Set the background colour for the menu screen.</p> <p>• Refer to P39 for details.</p>
--------------------------	----------------------------------------------------------------------------------------------------------

[Menu Information]	<p>Explanations of the menu items and settings are displayed on the menu screen.</p> <p>[ON]/[OFF]</p>
---------------------------	---------------------------------------------------------------------------------------------------------------

[Language]	<p>Set the language displayed on the screen.</p> <p>• If you set a different language by mistake, select  from the menu icons to set the desired language.</p>
-------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

[Version Disp.]	—
<ul style="list-style-type: none"> • It is possible to check which version of firmware is on the camera. • Press [MENU/SET] on the version display screen to display information about the software on the unit. 	
[Exposure Comp. Reset]	<p>An exposure value can be reset when the Recording Mode is changed or the camera is turned off.</p> <p>[ON]/[OFF]</p>
[No.Reset]	Reset the file number of the next recording to 0001.
<ul style="list-style-type: none"> • The folder number is updated and the file number starts from 0001. • A folder number between 100 and 999 can be assigned. When the folder number reaches 999, the number cannot be reset. We recommend formatting the card (P31) after saving the data on a PC or elsewhere. • To reset the folder number to 100, format the card first and then use this function to reset the file number. A reset screen for the folder number will then appear. Select [Yes] to reset the folder number. 	
[Reset]	The recording or setup/custom settings are reset to the default.
<ul style="list-style-type: none"> • When the recording setting is reset, the content of the following settings is also reset. <ul style="list-style-type: none"> – The [Face Recog.] setting • When the setup/custom settings are reset, the following settings are also reset. <ul style="list-style-type: none"> – The [World Time] (home area) setting (If the camera is turned on and off, the home area setting screen is displayed.) – The settings of [Travel Date] (departure date, return date, location) – The [Profile Setup] setting – The settings of [Rotate Disp.], [Picture Sort] and [Delete Confirmation] in the [Playback] menu • The folder number and the clock setting are not changed. 	
[Reset Wi-Fi Settings]	<p>Reset all settings in the [Wi-Fi] menu to factory default settings.*</p> <p>* Excluding [LUMIX CLUB] (P287)</p>
<ul style="list-style-type: none"> • Always reset the camera when disposing or selling it to prevent personal information saved within the camera from being misused. • Always reset the camera after making a copy of personal information when sending the camera in to be repaired. 	
[Format]	—
<ul style="list-style-type: none"> • Refer to P31 for details. 	

Entering Text

It is possible to enter babies' and pets' names and the locations when recording.

When a screen that looks like the one on the right is displayed, you can enter characters.

(Only alphabetical characters and symbols can be entered.)

• Example of operation for displaying a screen:

[MENU] → **[Rec]** → **[Profile Setup]** → **[SET]** →
[Baby1] → **[Name]** → **[SET]**



1 Press ▲/▼/◀/▶ to select text and then press [MENU/SET] to register.

- Move the cursor to [A] and then press [MENU/SET] to switch text between [A] (capitals), [a] (lower case), [1] (numbers) and [&] (special characters). (You can also switch text by pressing [DISP].)
- To enter the same characters in a row, move the cursor by rotating the rear dial to the right.
- The following operations can be performed by moving the cursor to the item and pressing [MENU/SET]:
 - []: Enter a blank
 - [Delete]: Delete a character
 - [◀]: Move the entry position cursor to the left
 - [▶]: Move the entry position cursor to the right
- A maximum of 30 characters can be entered. (Maximum of 9 characters when setting names in [Face Recog.]
- A maximum of 15 characters can be entered for [\], [[], []], [•] and [-]. (Maximum of 6 characters when setting names in [Face Recog.]

2 Press ▲/▼/◀/▶ to move the cursor to [Set] and then press [MENU/SET] to end text input.

- Text can be scrolled if all of the entered text does not fit on the screen.



3.

Basic Operation


Tips for taking good pictures

Hold the camera gently with both hands, keep your arms still at your side and stand with your feet slightly apart.

- Do not cover the flash, the AF Assist lamp (A), the microphone (B) (P16) or the speaker with your fingers or other objects.
- Be careful not to move the camera when you press the shutter button.
- When taking pictures, make sure your footing is stable and there is no danger of colliding with another person, an object etc.

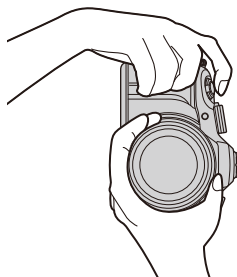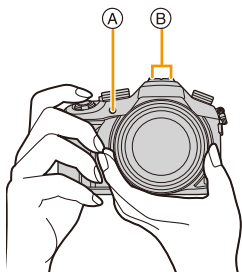

- Do not hold the lens barrel as you take pictures. There is a risk that your finger will be trapped as the lens retracts.

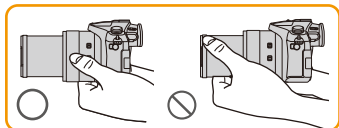


Detects orientation of camera (Direction Detection Function)

This function detects the vertical orientation when you record with the camera vertically orientated.

When you play back the recording, the recording is automatically displayed in vertical orientation.

(Only available when [Rotate Disp.] (P243) is set to [ON].)

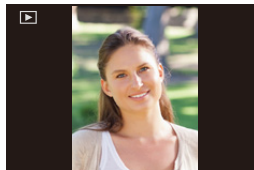

- When the camera is held vertically and tilted significantly up or down to record, the Direction Detection Function may not work correctly.
- Motion pictures taken with the camera held vertically are not displayed vertically.

Using the Viewfinder


[LVF] button (Switching the Monitor/Viewfinder)

Press [LVF] to switch between the Monitor and Viewfinder.

Ⓐ Eye sensor

[LVF]/[Fn5] button can be used in two ways, as [LVF] or as [Fn5] (function 5). At the time of purchase, it is initially set to [LVF/Monitor Switch].


• Refer to [P44](#) for details about the function button.

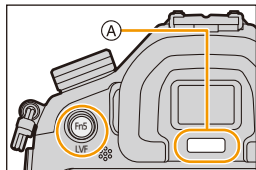


Press [LVF].

• The monitor/viewfinder will switch as follows:


Automatic viewfinder/ monitor switching*

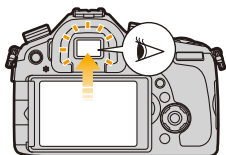

Viewfinder display*

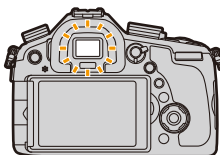

Monitor display

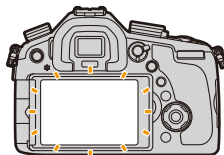

* If [Eye Sensor AF] in the [Custom] menu is set to [ON], the camera automatically adjusts the focus as the eye sensor is activated. ([P58](#))

• You can also switch between the viewfinder and the monitor in [LVF/Monitor Switch] in [Eye Sensor] in the [Custom] menu. ([P58](#))

■ Using the eye sensor to switch between the Monitor and Viewfinder

Automatic viewfinder/monitor switching enables the eye sensor to switch the display to the viewfinder automatically when you bring your eye or an object near it.

- Eye sensor might not work properly depending on the shape of your eyeglasses, the way you hold the camera, or bright light shining around the eyepiece. In that case, press [LVF] to switch the display.
- During motion picture playback or a slide show, the camera does not automatically switch the display to the Viewfinder with the eye sensor.
- You can set the eye sensor sensitivity in [Eye Sensor] in the [Custom] menu. ([P58](#))



Setting the eye sensor sensitivity and the method for switching between the monitor and viewfinder

MENU → **f_C**[Custom] → **[Eye Sensor]**


[Sensitivity]	This will set the sensitivity of the eye sensor. [HIGH]/[LOW]
[LVF/Monitor Switch]	This will set the method for switching between the monitor and viewfinder. [LVF/MON/AUTO] (automatic switching between the monitor and viewfinder)/ [LVF] (viewfinder)/ [MON] (monitor) • If you press [LVF] to switch the display, the [LVF/Monitor Switch] setting will also switch.

■ Diopter adjustment

Adjust the diopter to suit your vision so that you can see the viewfinder clearly.

Look at the display on the viewfinder and rotate the diopter adjustment dial to where the screen is in focus.

Ⓐ Diopter adjustment dial

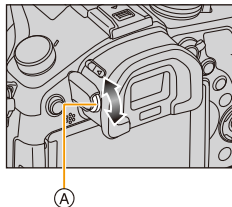

About the Eye Sensor AF

If [Eye Sensor AF] in the [Custom] menu is set to [ON], the camera automatically adjusts the focus as the eye sensor is activated.

- The Eye Sensor AF sets focus only once when you look at the viewfinder. Focus is not adjusted continuously while you are looking at the viewfinder.


- Beep sounds are not emitted when the focus is achieved in [Eye Sensor AF].

Not available in these cases:

- [Eye Sensor AF] may not work in dimly lit conditions.

Taking a Still picture

- Set the drive mode dial to [] (single recording).




1 Select the Recording Mode. (P62)

2 Press the shutter button halfway to focus.

- (A) Aperture value
- (B) Shutter speed

- Aperture value and shutter speed are displayed. (It will flash in red if the correct exposure is not achieved, except when set to flash.)

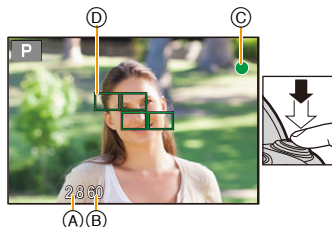

Focus	When the subject is focused	When the subject is not focused
Focus indication (C)	On	Blinks
AF area (D)	Green	—
Sound	Beeps 2 times	Beeps 4 times

- The focus indication is displayed as [●] in a dark environment, and focusing may take longer than usual.

- When the Focus Mode is set to [AFF] or [AFC].

- A beep will be emitted when focus is first achieved during the pressing halfway.
- If AF Mode is set to [Custom Multi], such as [] or [], the AF area is displayed for a moment only when focus is achieved for the first time by pressing the shutter button halfway.


3 Press the shutter button fully (push it in further), and take the picture.



About focus range


The focus range is displayed when operating the zoom.

- The focus range is displayed in red when it is not focused after pressing the shutter button halfway.



The focus range may change gradually depending on the zoom position.

e.g.: Range of focus during the Programme AE Mode

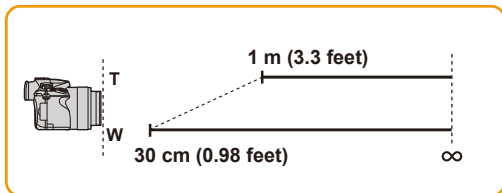

Subjects and recording conditions which are difficult to focus

- Fast-moving subjects, extremely bright subjects or subjects without contrast
- When recording subjects through windows or near shiny objects
- When it is dark or when jitter occurs
- When the camera is too close to the subject or when taking a picture of both distant and near subjects



Displaying a picture right after it is taken

MENU → **f_C**[Custom] → [Auto Review]

[Duration Time]	Set the length of time that the picture is displayed after taking the still picture. [HOLD]: The pictures are displayed until shutter button is pressed halfway. [5SEC]/[4SEC]/[3SEC]/[2SEC]/[1SEC]/[OFF]	
[Playback Operation Priority]	[ON]	Switching the display of the playback screen, deleting pictures, etc. are possible during [Auto Review].
	[OFF]	Button operations during [Auto Review] become the same as those for recording.

- When [Duration Time] is set to [HOLD], [Playback Operation Priority] is fixed to [ON].

Recording Motion Picture



This camera can record full high definition motion pictures compatible with the AVCHD format or motion pictures recorded in MP4.

Audio will be recorded in stereo.

1 Start recording by pressing the motion picture button.

- (A) Elapsed recording time
- (B) Available recording time

- Recording of motion picture appropriate for each mode is possible.
- The recording state indicator (red) (C) will flash while recording motion pictures.
- If approximately 1 minute elapses without an operation being performed, part of the display will disappear. Press [DISP.] to make the display reappear. This operation is to prevent screen burn-in and is not a malfunction.
- When recording a motion picture, do not cover the microphone with your fingers or other objects.
- Release the motion picture button right after you press it.

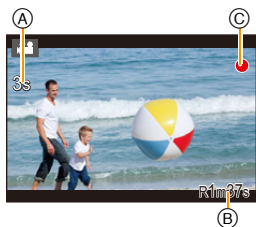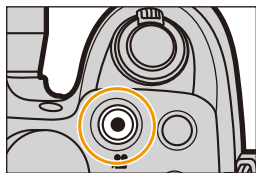


2 Stop the recording by pressing the motion picture button again.

- For details, refer to “Recording Motion Picture” on P215.
- It is recommended that you close the flash when recording motion pictures.
- You can operate the zoom even when recording motion pictures.
- Still picture recording is also possible during the motion picture recording by fully pressing the shutter button. (P219)

Selecting the Recording Mode

Switching the mode by rotating the mode dial.

- Rotate the mode dial slowly to select the desired mode.

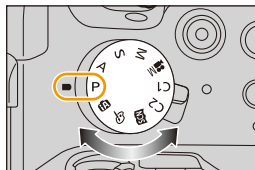

iA Intelligent Auto Mode (P75)

The subjects are recorded using settings automatically selected by the camera.

iA+ Intelligent Auto Plus Mode (P75)

Allows you to adjust the brightness and colour hue when in Intelligent Auto Mode.

P Programme AE Mode (P84)

Records at the aperture value and shutter speed set by the camera.

A Aperture-Priority AE Mode (P86)

The shutter speed is automatically determined by the aperture value you set.

S Shutter-Priority AE Mode (P87)

The aperture value is automatically determined by the shutter speed you set.

M Manual Exposure Mode (P88)

The exposure is adjusted by the aperture value and the shutter speed which are manually adjusted.



 **Creative Video Mode (P118)**

Records a motion picture with the aperture value and the shutter speed you specify. In this recording mode, all the motion picture functions become available. For example, you can record motion pictures in 4K.

* You cannot take still pictures.

C1C2 Custom Mode (P120)




Use this mode to take pictures with previously registered settings.

 **Scene Guide Mode (P93)**

This mode allows you to take pictures that match the scene being recorded.

 **Creative Control Mode (P107)**

Record while checking the image effect.

 **Displaying/not displaying the selection screen when the mode dial is switched to  / .**

MENU →  [Custom] → [Menu Guide]

[ON]:


Displays the selection screen for the Scene Guide or the Creative Control Mode.

[OFF]:

Displays the recording screen of the currently selected mode of the Scene Guide or the Creative Control Mode.

Switching the Information Displayed on the recording screen


Press [DISP.] to change.



- You can select between [] (monitor style) and [] (viewfinder style) for each of the monitor and the viewfinder display screen using [Monitor Disp. Style] and [LVF Disp. Style] in the [Custom] menu.

([] monitor style)

- Screen will switch as follows:
(Example of monitor display)

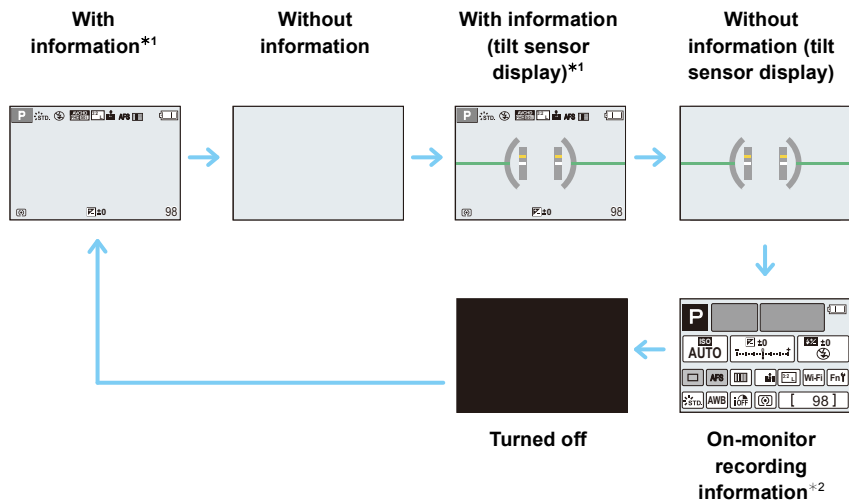

- *1 Histograms are displayed when the [Histogram] of the [Custom] menu is set to [ON]. It is also possible to display the exposure meter by setting the [Expo.Meter] of the [Custom] menu to [ON]. (P84)
- *2 It is displayed when the [Monitor Info. Disp.] of the [Custom] menu is set to [ON]. (P66)
You can record images using the viewfinder while checking recording information on the monitor.




() viewfinder style

- Screen will switch as follows:
(Example of display on viewfinder)

With information
(detailed
information)*



With information



With information
(detailed
information, tilt
sensor display)*



With information
(tilt sensor
display)




- * Histograms are displayed when the [Histogram] of the [Custom] menu is set to [ON]. It is also possible to display the exposure meter by setting the [Expo.Meter] of the [Custom] menu to [ON]. (P84)

- If approximately 1 minute elapses without an operation being performed, part of the display will disappear. Press [DISP.] to make the display reappear. This operation is to prevent screen burn-in and is not a malfunction.

Switching the display method of the monitor

MENU → **fC**[Custom] → [Monitor Disp. Style]

(): viewfinder style

(): monitor style

Switching the display method of the viewfinder

MENU → **fC**[Custom] → [LVF Disp.Style]

(): viewfinder style

(): monitor style



Displaying/not displaying the histogram

MENU → **fC**[Custom] → [Histogram] → [ON]/[OFF]

You can set the position by pressing ▲/▼/◀/▶.




- A Histogram is a graph that displays brightness along the horizontal axis (black to white) and the number of pixels at each brightness level on the vertical axis.

It allows you to easily check a picture's exposure.

(A) dark

(B) bright



- **When the recorded picture and the histogram do not match each other under the following conditions, the histogram is displayed in orange.**

- When the Manual Exposure Assistance is other than [0] during exposure compensation or in the Manual Exposure Mode
- When the flash is activated
- When suitable exposure is not achieved with the flash closed
- When the brightness of the screen is not correctly displayed in dark places

- The Histogram is an approximation in Recording Mode.
- The Histogram displayed in this camera does not match Histograms displayed by picture editing software used in PCs etc.

Displaying/not displaying the guide lines

MENU → **fC**[Custom] → [Guide Line] → [⊞]/[⊞]/[⊞]/[OFF]

- The guide lines are not displayed in [Panorama Shot] in Scene Guide Mode.

When [⊞] is set, guideline positions can be set by pressing ▲/▼/◀/▶.




Displaying/not displaying the on-monitor recording information screen

MENU → **fC**[Custom] → [Monitor Info. Disp.] → [ON]/[OFF]

■ About the tilt sensor display

With the tilt sensor displayed, it is easy to correct the tilt of the camera etc.

- 1 Press [DISP.] to display the tilt sensor.
- 2 Check the tilt of the camera.

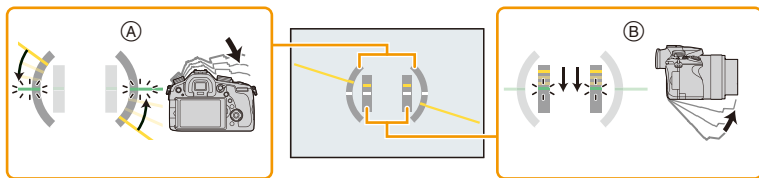

(A) Horizontal direction:

Correcting tilt to the left

(B) Vertical direction:

Correcting downward tilt

- When the tilt of the camera is little, the indicator changes to green.
- When recording with a vertical orientation, the display automatically switches to a vertically orientated display.

- Even after correcting the tilt, there may still be an error of approximately $\pm 1^\circ$.
- When a function button is set to [Level Gauge], the tilt sensor display can be switched on/off by pressing the function button.




Not available in these cases:

- Tilt sensor display may not be displayed correctly when this unit is in motion.
- When tilted significantly upwards or downwards to record, the tilt sensor display may not be displayed correctly, and the Direction Detection Function (P56) may not work correctly.

Playing Back Pictures/Motion Pictures

Playing Back Pictures

1 Press [▶].

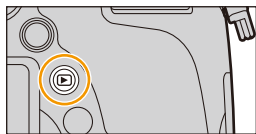

2 Press ◀/▶.

◀: Playback the previous picture

▶: Playback the next picture

- If you press and hold ◀/▶, you can play back the pictures in succession.

- Speed of picture Forwarding/Rewinding changes depending on the playback status.



■ To finish playback

Press [▶] again, press the motion picture button or press the shutter button halfway.

- The lens barrel retracts about 15 seconds after switching from Recording Mode to Playback Mode.

Not available in these cases:

- This camera complies with the DCF standard “Design rule for Camera File system” established by JEITA “Japan Electronics and Information Technology Industries Association” and with Exif “Exchangeable Image File Format”. Files which do not comply with the DCF standard cannot be played back.
- The camera may not play back images recorded on other devices correctly, and the functions of the camera may not be available for the images.

Using the Playback Zoom


Rotate the zoom lever towards [Q] (T).

1× → 2× → 4× → 8× → 16×

- When you change the magnification, the zoom position indication (A) appears for about 1 second.

- The more a picture is enlarged, the more its quality deteriorates.

- You can move the enlarged part by pressing ▲/▼/◀/▶ of the cursor button.

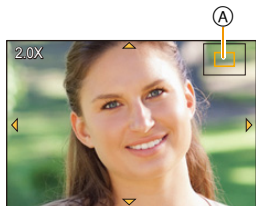


Displaying multiple screens (Multi Playback)

Rotate the zoom lever towards [] (W).

1 screen → 12 screens → 30 screens → Calendar screen display

- Pictures displayed using [] cannot be played back.

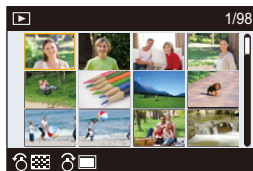


■ To return to Normal Playback

Press ▲/▼/◀/▶ to select a picture and then press [MENU/SET].

Displaying Pictures by Recording Date (Calendar Playback)

- 1 Rotate the zoom lever towards [] (W) to display the calendar screen.
- 2 Press ▲/▼/◀/▶ to select the date to be played back.

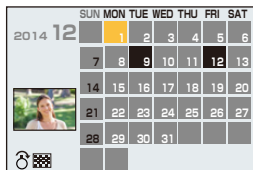


- 3 Press [MENU/SET] to display the images that are recorded in selected date.
- 4 Press ▲/▼/◀/▶ to select a picture and then press [MENU/SET].
 - To return to the calendar screen, rotate the zoom lever towards [] (W).

- The recording date of the picture selected in the playback screen becomes the date selected when the Calendar screen is first displayed.
- You can display the Calendar between January 2000 and December 2099.
- If the date is not set in the camera, the recording date is set as the 1st January, 2014.
- If you take pictures after setting the travel destination in [World Time], the pictures are displayed by the dates at the travel destination in Calendar Playback.

Playing Back Motion Pictures

This unit was designed to play motion pictures using the AVCHD and MP4 formats.

In Playback Mode, select a picture with the motion picture icon ([]), and then press **▲ to play back.**

(A) Motion picture recording time

• After playback starts, the elapsed playback time is displayed on the screen.

For example, 8 minutes and 30 seconds is displayed as [8m30s].


• Some information (recording information, etc.) is not displayed for motion pictures recorded in [AVCHD].



• High Speed Video images are displayed with elapsed recording time and playback time.

(B) Playback time

(C) Motion picture recording time



■ Operations during Motion Picture Playback

▲	Play/Pause	▼	Stop
◀	Fast rewind*	▶	Fast forward*
	Frame-by-frame rewind (while pausing)		Frame-by-frame forward (while pausing)
Rear dial (left)	Reduce volume level	Rear dial (right)	Increase volume level


* The fast forward/rewind speed increases if you press ▶/◀ again.

• To play back the motion pictures recorded by this unit on a PC, use the “PHOTOfunSTUDIO” software on the DVD (supplied).


• Motion pictures recorded with [Miniature Effect] in Creative Control Mode play back at approximately 8 times speed.

Changing the information displayed on the playback screen

Press [DISP.] to switch the monitor screen.



• Screen will switch as follows:

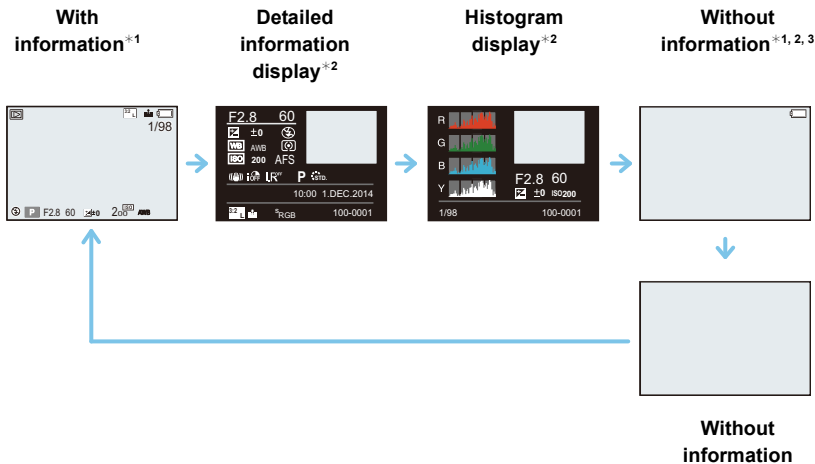

*1 If approximately 1 minute elapses without an operation being performed, part of the display will disappear. Press [DISP.] to make the display reappear. This operation is to prevent screen burn-in and is not a malfunction.

*2 Not displayed while using the playback zoom or during motion picture playback, sequential playback, panorama playback or a slide show.

*3 This is displayed if [Highlight] (P72) in the [Custom] menu is set to [ON].

• Histogram (colour) is displayed in R (red), G (green), B (blue), and Y (luminance) during the playback.



fc **Displaying/not displaying white saturated areas**

MENU → **fc**[Custom] → [Highlight] → [ON]/[OFF]

When the Auto Review function is activated or when playing back, white saturated areas appear blinking in black and white.

This does not affect the recorded image.

- If there are any white saturated areas, we recommend compensating the exposure towards negative (P159) referring to the histogram (P66) and then taking the picture again. It may result in a better quality picture.
- This does not work while in Multi Playback, Calendar Playback, or Playback Zoom.

[ON]



[OFF]






Deleting Pictures

Once deleted, pictures cannot be recovered.

- Pictures that are not in the DCF standard or those that are protected cannot be deleted.


To delete a single picture

- 1** In Playback Mode, select the picture to delete and then press [Fn4 /  / ].

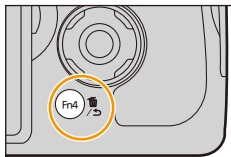

- 2** Press **▲** to select [Delete Single] and then press [MENU/SET].

- Confirmation screen is displayed.
Picture is deleted by selecting [Yes].

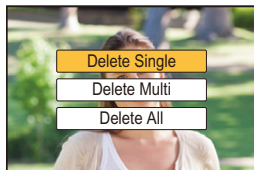

- [Delete Confirmation] in the [Playback] menu enables you to set which option on the delete confirmation screen, [Yes] or [No], will be highlighted first. The default setting is [No]. (P249)
- A single picture can be deleted directly by pressing the function button to which [Delete Single] has been set. (P46)

To delete multiple pictures (up to 100*) or all the pictures

- * Picture groups are treated as a single picture.
(All the pictures in the selected picture group will be deleted.)

1 In Playback Mode, press [🗑️/↵].

2 Press ▲/▼ to select [Delete Multi] or [Delete All] and then press [MENU/SET].

- [Delete All] → Confirmation screen is displayed.
Pictures are deleted by selecting [Yes].
- It is possible to delete all pictures except the ones set as favourite when [All Delete Except Favorite] is selected with the [Delete All] set.

3 (When [Delete Multi] is selected)


Press ▲/▼/◀/▶ to select the picture, and then press [MENU/SET] to set. (Repeat this step.)

- [🗑️] appears on the selected pictures.
If [MENU/SET] is pressed again, the setting is cancelled.

4 (When [Delete Multi] is selected)

Press ◀ to select [OK], and then press [MENU/SET].

- Confirmation screen is displayed.
Pictures are deleted by selecting [Yes].

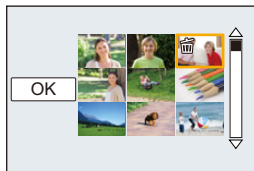

- Do not turn the camera off while deleting. Use a battery with sufficient battery power or the AC adaptor (optional) (P323).
- Depending on the number of pictures to be deleted, it may take some time to delete them.

Taking Pictures using the Automatic Function

(Intelligent Auto Mode)

Recording Mode:  

When you wish to leave settings to the camera and record without thinking about them, use Intelligent Auto Plus Mode or Intelligent Auto Mode, which makes optimal settings for the subject and scene.

About Intelligent Auto Plus Mode and Intelligent Auto Mode


- Functions that can be set differ between Intelligent Auto Plus Mode and Intelligent Auto Mode. (○: possible, —: not possible)


	Intelligent Auto Plus Mode	Intelligent Auto Mode
Setting the brightness (P83)	○	—
Setting the colour tone (P83)	○	—
Defocus Control (P82)	○	○
Menus that can be set	Refer to P79 for details.	Refer to P79 for details.

1 Set the mode dial to .

- The camera will switch to either the most recently used of Intelligent Auto Mode or Intelligent Auto Plus Mode.
At the time of purchase, the mode is set to Intelligent Auto Plus Mode.

2 Align the screen with the subject.

- When the camera identifies the optimum scene, the icon of the scene concerned is displayed in blue for 2 seconds, after which its colour changes to the usual red.
- If you press  and then press the shutter button halfway, the AF tracking function will be activated.
For details, refer to P141.

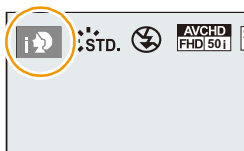

■ Switching between Intelligent Auto Plus Mode and Intelligent Auto Mode

1 Press [MENU/SET].

- Press ◀, and press ▲/▼ to select [iA+] or [iA].



2 Press ◀/▶ to select [iA+] or [iA] and then press [MENU/SET].

- Press [DISP.] to display the description of the selected mode.



■ Scene Detection

When taking pictures

iA	→		[i-Portrait]
			[i-Scenery]
			[i-Macro]
			[i-Night Portrait]* ¹
			[i-Night Scenery]
			[iHandheld Night Shot]* ²
			[i-Food]
			[i-Baby]* ³
			[i-Sunset]






*1 Only displayed when the built-in flash is open.

*2 Only displayed when [iHandheld Night Shot] is set to [ON]. (P80)

*3 When [Face Recog.] is set to [ON], will be displayed for birthdays of registered faces (P189) already set only when the Face/Eye of a person 3 years old or younger is detected.



When recording motion pictures

	→		[i-Portrait]
			[i-Scenery]
			[i-Low Light]
			[i-Macro]

- [iA] is set if none of the scenes are applicable, and the standard settings are set.
- When [iP], [iS], or [iM] is set, an eye closer to the camera will be in focus, while the exposure will be optimised for the face. In Intelligent Auto Plus Mode or Intelligent Auto Mode, you cannot change the eye in focus. (**[Face/Eye Detection]**)
- If a tripod is used, for instance, and the camera has judged that camera shake is minimal when the scene detection has been identified as [iS], the shutter speed will be slower than normal. Take care not to move the camera while taking pictures.
- During AF Tracking, Scene Detection does not work until the subject is locked.
- When [Face Recog.] is set to [ON], and the face similar to the registered face is detected, [R] is displayed in the top right of [iP], [iS] and [iM].

- Due to conditions such as the ones below, a different scene may be identified for the same subject.
 - Subject conditions: When the face is bright or dark, the size, colour and shape of the subject, the distance to the subject, the contrast of the subject, when the subject is moving
 - Recording conditions: Sunset, sunrise, under low brightness conditions, when the camera is shaken, when zoom is used

■ About the flash

Flash mode is set to [☺] when the flash is closed, and [iA] (AUTO) when it is open. When the flash is open, the camera automatically sets [iA], [iA] (AUTO/Red-Eye Reduction), [iS], or [iS] to match the type of subject and brightness.

- **Open the flash when the flash is to be used. (P201)**
- When [iS], [iS] is set, Red-Eye Removal is enabled.
- Shutter speed will be slower during [iS] or [iS].

■ Functions that work automatically

- The following functions are performed automatically to allow the camera to make the optimal settings.
 - Scene Detection
 - Backlight Compensation
 - [Face/Eye Detection]
 - Auto White Balance
 - Intelligent ISO sensitivity control
 - [Red-Eye Removal]
 - [i.Resolution]
 - [i.Dynamic]
 - [Long Shtr NR]
 - [Quick AF]
 - [AF Assist Lamp]
 - [Level Shot]



MENU



■ Menus that can be set

Only the following menus can be set.

Intelligent Auto Plus Mode	
Menu	Item
[Rec]	[Photo Style]/[Aspect Ratio]/[Picture Size]/[Quality]/[AFS/AFF]/[Burst Rate]/[Auto Bracket]/[Self Timer]/[Time Lapse/Animation]/[iHandheld Night Shot]/[iHDR]/[Shutter Type]/[Color Space]/[Stabilizer]/[Face Recog.]/[Profile Setup]
[Motion Picture]	[Photo Style]/[Rec Format]/[Rec Quality]/[AFS/AFF]/[Continuous AF]/[Mic Level Disp.]/[Mic Level Adj.]/[Special Mic.]/[Mic Level Limiter]/[Wind Cut]/[Zoom Mic]
[Custom]	[Silent Mode]/[Half Press Release]/[Pinpoint AF Time]/[Focus/Release Priority]/[AF+MF]/[MF Assist]/[MF Guide]/[Peaking]/[Histogram]/[Guide Line]/[Center Marker]/[Highlight]/[Zebra Pattern]/[Monochrome Live View]/[Constant Preview]/[Expo.Meter]/[Dial Guide]/[LVF Disp.Style]/[Monitor Disp. Style]/[Monitor Info. Disp.]/[Rec Area]/[Remaining Disp.]/[Auto Review]/[Fn Button Set]/[Zoom Lever]/[Manual ring (Zoom)]/[Zoom Resume]/[Q.MENU]/[Video Button]/[Eye Sensor]/[Menu Guide]
[Setup]	All menu items can be set. (P47)

Intelligent Auto Mode	
Menu	Item
[Rec]	[Aspect Ratio]/[Picture Size]/[AFS/AFF]/[Burst Rate]/[Self Timer]/[Time Lapse/Animation]/[iHandheld Night Shot]/[iHDR]/[Face Recog.]
[Motion Picture]	[Rec Format]/[Rec Quality]/[AFS/AFF]/[Special Mic.]
[Custom]	[Silent Mode]/[Guide Line]/[Remaining Disp.]
[Setup]	All menu items can be set. (P47)




The Backlight Compensation

- When there is a backlight, the subject appears darker and the camera will automatically attempt to correct it by increasing the brightness of the picture.
In Intelligent Auto Plus Mode or Intelligent Auto Mode, backlight compensation works automatically.



Recording night scenes ([iHandheld Night Shot])

Recording Mode:  

When [iHandheld Night Shot] is set to [ON] and  is detected while taking handheld night shots, pictures of the night scenery will be taken at a high burst speed and composed into a single picture.

This mode is useful if you want to take stunning night shots with minimal jitter and noise, without using a tripod.

MENU →  **[Rec]** → **[iHandheld Night Shot]** → **[ON]/[OFF]**

- The angle of view will be slightly narrower.
- A message notifying that multiple pictures will be taken is displayed. Do not move the camera during the continuous shooting after pressing the shutter button.
- If the camera is mounted on a tripod or other type of stand,  will not be detected.
- Flash is fixed to  (forced flash off).

Not available in these cases:

- [iHandheld Night Shot] does not work for the pictures taken during a motion picture recording.
- This function is not available in the following cases:
 - When [Quality] is set to [RAW⁺], [RAW⁺] or [RAW]
 - When using [Time Lapse Shot]
 - When using [Stop Motion Animation] (only when [Auto Shooting] is set)

Combining pictures into a single picture with rich gradation ([iHDR])

Recording Mode:  

When [iHDR] is set to [ON] and there is, for example, strong contrast between the background and the subject, multiple still pictures are recorded with differing exposures and combined to create a single still picture rich in gradation.

[iHDR] works automatically as needed. When it does, [HDR] is displayed on the screen.

MENU →  **[Rec]** → **[iHDR]** → **[ON]/[OFF]**

- The angle of view will be slightly narrower.
- A message notifying that multiple pictures will be taken is displayed. Do not move the camera during the continuous shooting after pressing the shutter button.
- You cannot take the next picture until the combination of pictures is complete.
- A moving subject may be recorded with unnatural blurs.

Not available in these cases:

- [iHDR] does not work for the pictures taken during a motion picture recording.
- This function is not available in the following cases:
 - When recording using the flash
 - When recording in Burst Mode
 - When recording with Auto Bracket
 - When [Quality] is set to [RAW⁺], [RAW₊] or [RAW]
 - When using [Time Lapse Shot]
 - When using [Stop Motion Animation] (only when [Auto Shooting] is set)

Taking a picture with a blurred background (Defocus Control)

Recording Mode:  

You can easily set the blurriness of the background while checking the screen.

1 Press the rear dial to display the setting screen.

- Each time the rear dial is pressed in Intelligent Auto Plus Mode, the camera switches among brightness setting operation (P83), Defocus Control operation, and normal operation.
- Each time the rear dial is pressed in Intelligent Auto Mode, the camera switches between Defocus Control operation and normal operation.

2 Set the blurriness by rotating the rear dial.







Strong defocus



Weak defocus



3 Record pictures or motion pictures.

- Pressing [/↵] on the blurriness setting screen will cancel the setting.
- In Intelligent Auto Mode ( or ) , Auto Focus Mode is set to [].

Recording images by changing the brightness or colour tone

Recording Mode: 


This mode enables you to change the brightness and colour tone to your preferred settings from the ones set by the camera.

Setting brightness

1 Press the rear dial to display the setting screen.

- Each press of the rear dial switches among brightness setting, Defocus Control (P82) and end operation.

2 Rotate the rear dial to adjust brightness.

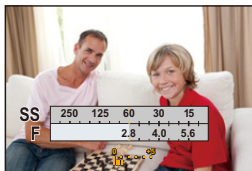

Setting colour

1 Press ► to display the setting screen.

2 Rotate the rear dial to adjust colour.

- This will adjust the colour of the image from a reddish colour to a bluish colour.
- Press [MENU/SET] to return to the recording screen.



- If the [Exposure Comp. Reset] is set to [ON], the brightness setting will return to the default level (centre point) when this unit is turned off or the camera is switched to another Recording Mode.
- The colour setting will return to the default level (centre point) when this unit is turned off or the camera is switched to another Recording Mode.

Taking Pictures with Your Favourite Settings

(Programme AE Mode)

Recording Mode: **[P]**

The camera automatically sets the shutter speed and the aperture value according to the brightness of the subject.

You can take pictures with greater freedom by changing various settings in the [Rec] menu.


1 Set the mode dial to **[P]**.

2 Press the shutter button halfway and display the aperture value and shutter speed value on the screen.

- If the exposure is not adequate when the shutter button is pressed halfway, the aperture value and shutter speed turn red and blink.

3 While the values are displayed (about 10 seconds), perform the Programme Shift by rotating the rear dial.


- It will switch between Programme Shift operation and Exposure Compensation operation (P159) every time the rear dial is pressed while the values are displayed.
- The Programme Shift indication (A) appears on the screen.
- To cancel Programme Shift, turn the camera off or rotate the rear dial until the Programme Shift indication disappears.
Programme Shift can easily be cancelled by setting a function button to [One Push AE]. (P92)

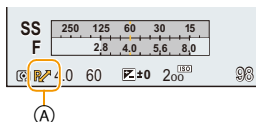

Displaying/not displaying the exposure meter

MENU → **fC**[Custom] → **[Expo.Meter]** → **[ON]/[OFF]**

- When [Expo.Meter] is set to [ON], the exposure meter (B) will be displayed when performing Programme Shift, setting the aperture value or adjusting the shutter speed.
- Unsuitable areas of the range are displayed in red.
- When the exposure meter is not displayed, switch the display information for screen by pressing [DISP.]. (P64)
- The exposure meter disappears after approximately 4 seconds if no operation is performed.

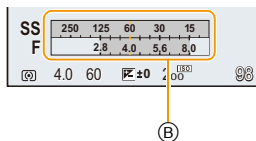


Programme Shift

In Programme AE Mode, you can change the preset aperture value and shutter speed without changing the exposure. This is called Programme Shift.

You can make the background more blurred by decreasing the aperture value or record a moving subject more dynamically by slowing the shutter speed when taking a picture in Programme AE Mode.

Example of Programme Shift

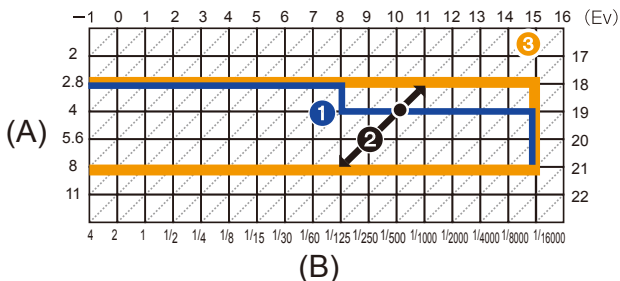

(A): Aperture value

(B): Shutter speed

① Programme Shift line chart

Represents the aperture and shutter speed set automatically by the camera at each exposure value.

② Programme Shift amount

Represents the range of the aperture and shutter speed combination you can change with Programme Shift at each exposure value.

③ Programme Shift limit

Represents the range of the aperture and shutter speed you can select when you use Programme Shift with the camera.

• “EV” is an abbreviation of “Exposure Value”.

The EV changes with the aperture value or the shutter speed.



Not available in these cases:

• Programme Shift is available in all [Sensitivity] settings except [ISO].

Taking Pictures by Specifying the Aperture/ Shutter Speed

Recording Mode: **A S M**

- The effects of the set aperture value and shutter speed will not be visible on the recording screen. To check on the recording screen, please use [Preview]. (P91)
- The brightness of the screen and the recorded pictures may differ. Check the pictures on the playback screen.

Aperture-Priority AE Mode

Set the aperture value to a higher number when you want a sharp focus background. Set the aperture value to a lower number when you want a soft focus background.

- 1 Set the mode dial to [A].
- 2 Rotate the rear dial to set the aperture value.

- (A) Aperture Value
- (B) Exposure meter




Aperture value:
Reduces

It becomes easier to defocus the background.



Aperture value:
Increases

It becomes easier to maintain focus as far as the background.

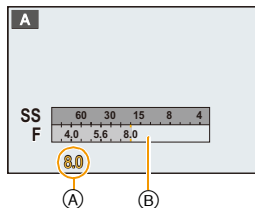

- It will switch between aperture setting operation and Exposure Compensation operation every time the rear dial is pressed.

Available Aperture Value*	Shutter Speed (Sec)
F2.8 to F8.0	60 to 1/4000 (with the mechanical shutter) 1 to 1/16000 (with the electronic shutter)

* Depending on the zoom position, some of the values cannot be selected.

- Rotate the rear dial to display the exposure meter. Unsuitable areas of the range are displayed in red.
- If the exposure is not adequate, the aperture value and the shutter speed turn red and blink when the shutter button is pressed halfway.

Shutter-Priority AE Mode

When you want to take a sharp picture of a fast moving subject, set with a faster shutter speed. When you want to create a trail effect, set to a slower shutter speed.

- 1 Set the mode dial to [S].
- 2 Rotate the rear dial to set the shutter speed.

- (A) Shutter Speed
- (B) Exposure meter




Shutter speed:
Slow

It becomes easier to express movement.



Shutter speed:
Fast

It becomes easier to freeze movement.

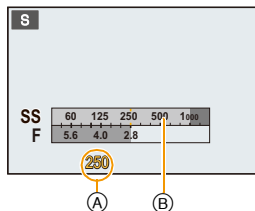

- It will switch between shutter speed setting operation and Exposure Compensation operation every time the rear dial is pressed.

Available Shutter Speed (Sec)	Aperture Value
60 to 1/4000 (with the mechanical shutter) 1 to 1/16000 (with the electronic shutter)	F2.8 to F8.0

- Rotate the rear dial to display the exposure meter. Unsuitable areas of the range are displayed in red.
- If the exposure is not adequate, the aperture value and the shutter speed turn red and blink when the shutter button is pressed halfway.
- We recommend using a tripod when the shutter speed is slow.
- The [Sensitivity] is automatically set to [AUTO] when you switch the Recording Mode to Shutter-Priority AE Mode while the [Sensitivity] is set to [ISO].


Manual Exposure Mode





Determine the exposure by manually setting the aperture value and the shutter speed. The Manual Exposure Assistance appears on the lower portion of the screen to indicate the exposure.

- 1 Set the mode dial to [M].
- 2 Rotate the rear dial to set the aperture and shutter speed.

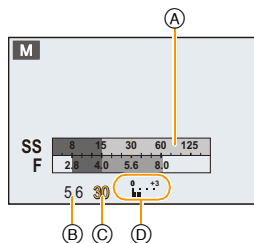- It will switch between aperture setting operation and shutter speed setting operation every time the rear dial is pressed.

- (A) Exposure meter
- (B) Aperture value
- (C) Shutter speed
- (D) Manual Exposure Assistance



Aperture value	 <p>Reduces It becomes easier to defocus the background.</p>	 <p>Increases It becomes easier to maintain focus as far as the background.</p>
Shutter speed	 <p>Slow It becomes easier to express movement.</p>	 <p>Fast It becomes easier to freeze movement.</p>

Available Aperture Value*	Available Shutter Speed (Sec)
F2.8 to F8.0	[B] (Bulb), 60 to 1/4000 (with the mechanical shutter) 1 to 1/16000 (with the electronic shutter)

* Depending on the zoom position, some of the values cannot be selected.





Manual Exposure Assistance

	The exposure is adequate.
	Set to faster shutter speed or larger aperture value.
	Set to slower shutter speed or smaller aperture value.

- The Manual Exposure Assistance is an approximation. We recommend checking the pictures on the playback screen.

■ About [B] (Bulb)

If you set the shutter speed to [B], the shutter stays open while the shutter button is pressed fully (up to about 120 seconds). The shutter closes if you release the shutter button.

Use this when you want to keep the shutter open for a long time to take pictures of fireworks, a night scene etc.

- If you set the shutter speed to [B], [B] is displayed on the screen.
- When you take pictures with the shutter speed set to [B], use a sufficiently charged battery. (P24)
- The Manual Exposure Assistance does not appear.
- When the ISO sensitivity is set to [AUTO], it will switch to [125].
- This function is not available when using the electronic shutter.
- It can only be used with Manual Exposure Mode.



- We recommend using a tripod or the shutter remote control (DMW-RSL1: optional) when you take pictures with the shutter speed set to [B]. Refer to P321 for information about the shutter remote control.
- When you take pictures with the shutter speed set to [B], noise may become visible. To avoid picture noise, we recommend setting [Long Shtr NR] in the [Rec] menu to [ON] before taking pictures. (P136)





Checking/not checking the effects of aperture and shutter speed on the recording screen

MENU → **fC**[Custom] → [Constant Preview] → [ON]/[OFF]

- Close the flash.
- It can only be used with Manual Exposure Mode.

- Rotate the rear dial to display the exposure meter. Unsuitable areas of the range are displayed in red.
- If the exposure is not adequate, the aperture value and the shutter speed turn red and blink when the shutter button is pressed halfway.
- We recommend using a tripod when the shutter speed is slow.
- When the ISO sensitivity is set to [ISO], it will switch to [AUTO].

Confirm the Effects of Aperture and Shutter Speed (Preview Mode)

Applicable modes:

The effects of aperture and shutter speed can be checked by using the Preview Mode.

• Confirm the effects of aperture:

You can check the depth of field (effective focus range) before taking a picture by closing the leaf shutter to the aperture value you set.

• Confirm the effects of shutter speed:

Movement can be confirmed by displaying the actual picture that will be taken with that shutter speed. When the shutter speed is set for high speed, display in the shutter speed preview will be displayed like a time-release film. It is used in cases such as stopping the movement of running water.

1 Set a function button to [Preview]. (P44)

- The following step is an example in which [Preview] is assigned to [Fn4].

2 Switch to confirmation screen by pressing [Fn4].

- Screen is switched every time [Fn4] is pressed.

Normal recording screen



Effects of Aperture



Effects of Shutter Speed



Depth of field properties

*1	Aperture value	Small	Large
	Focus length	Tele	Wide
	Distance to the subject	Near	Distant
Depth of field (effective focus range)		Shallow (Narrow)*2	Deep (Wide)*3

*1 Recording conditions

*2 Example: When you want to take a picture with a blurred background etc.

*3 Example: When you want to take a picture with everything in focus including the background etc.

• It is possible to record while in Preview Mode.



• Range for shutter speed effect check is 8 seconds to 1/16000th of a second.


Easily set aperture/shutter speed for suitable exposure (One Push AE)

Applicable modes:         

When the exposure setting is too bright or too dark, you can use one push AE to achieve a suitable exposure setting.

How to tell if the exposure is not adequate

- If the aperture values and shutter speed blink red (A) when the shutter button is pressed halfway.
 - If the Manual Exposure Assistance is anything other than   when in Manual Exposure mode.
- For more details on Manual Exposure Assistance, refer to P89.




1 Set a function button to [One Push AE]. (P44)

- The following step is an example in which [One Push AE] is assigned to [Fn1].

2 (When exposure is not adequate)

Press [Fn1].





- The exposure meter is displayed, and the aperture and shutter speed are changed to give a suitable exposure.
- The exposure meter is not displayed in Creative Video Mode.
- In the following cases, suitable exposure cannot be set.
 - When the subject is extremely dark and it is not possible to achieve adequate exposure by changing the aperture value or shutter speed
 - When recording using the flash
 - In Preview Mode (P91)


- In Programme AE Mode, Programme Shift can be cancelled by pressing the function button to which [One Push AE] has been set.

Taking Pictures that match the Scene being recorded (Scene Guide Mode)

Recording Mode: 

If you select a scene to suit the subject and recording conditions with reference to the example images, the camera will set optimal exposure, colour, and focus, allowing you to record in a manner appropriate to the scene.


- 1 Set the mode dial to [].
- 2 Press  to select the scene.
- 3 Press [MENU/SET] to set.

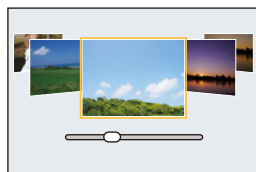

■ Switching the scene selection screen display

Press [DISP.] to switch the monitor screen.

- Each time [DISP.] is pressed, the scene selection screen is switched.

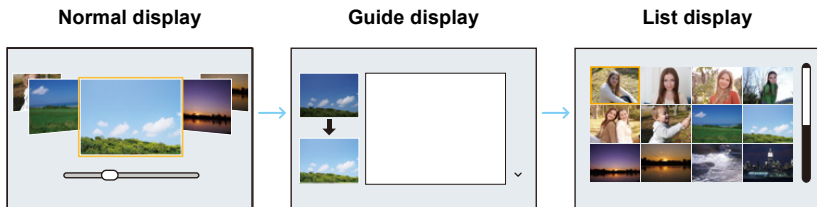



To enjoy a variety of picture effects

When the scene selection screen display is set to the guide display, tips for creating picture effects suitable for each scene, etc. is displayed.

To enjoy a wider variety of picture effects, we recommend that you read them before taking pictures.

- Pages can be switched by pressing ▲/▼.

- To change Scene Guide Mode, select the [SCN] tab on the menu screen, select [Scene Switch], and then press [MENU/SET]. You can return to step 2.
 - The following items cannot be set in Scene Guide Mode because the camera automatically adjusts them to the optimal setting.
 - Items other than the picture quality adjustment in [Photo Style]
 - [Sensitivity]
 - Although White Balance is fixed to [AWB] for certain types of scene, you can fine tune the White Balance or use White Balance bracketing by pressing the cursor button ► on the recording screen.
- For further details, please read P129, 130.

 For details on “Scene Guide Mode” settings, refer to [P93](#).

[Clear Portrait]




The brightness of the face is adjusted and the background is defocused to create a clear portrait.

Tips

- You can enhance the effect by zooming in as much as possible and closing the distance between the camera and the subject.

[Silky Skin]

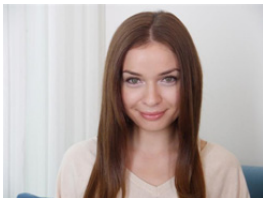

Brighter face and softer skin colour creates a healthy younger look.

Tips


- You can enhance the effect by zooming in as much as possible and closing the distance between the camera and the subject.
- The smoothing effect is applied to the part that has a similar tone to the complexion of a subject, as well.
- This mode may not be effective under insufficient lighting.

[Backlit Softness]



When backlit, the overall screen brightness is increased. Portraits are softened and infused with light.

[Clear in Backlight]

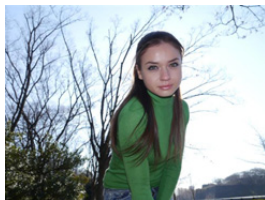

Outdoors, the flash will be used to more evenly illuminate the subject's face.

Tips

- **Open the flash.** (You can set to [\downarrow].)
 - White saturation can occur if the subject is too close.
 - Flash pictures taken closer or beyond the flash's rated distance may appear too bright or too dark.
- When [Silent Mode] is set to [ON], the flash is not activated.

[Relaxing Tone]



The warm colour tone creates an image with a relaxing mood.

[Sweet Child's Face]



Moderate background defocusing and skin tone highlighted draws attention to the child's face.

Tips


- You can enhance the effect by zooming in as much as possible and closing the distance between the camera and the subject.

[Distinct Scenery]



Saturation of sky and trees creates more distinct scenery.

[Bright Blue Sky]

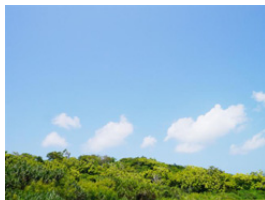


On a sunny day, the overall screen brightness is increased to create a vibrant image of the blue sky.

[Romantic Sunset Glow]




The enhanced purple tone creates a romantic image of the sky just after sunset.

[Vivid Sunset Glow]

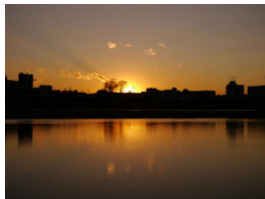

Red is enhanced to create a vivid image of the sunset.

[Glistening Water]

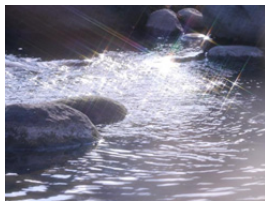

The glisten of the water is enhanced to look brighter and slightly bluish.

- Display of the recording screen will be delayed more than usual and the screen will look as if frames are dropping.
- Star filter used in this mode may cause glistening effects on the objects other than water surface.

[Clear Nightscape]



Colour saturation of the night light is increased to accentuate the nightscape.

Tips

- We recommend using a tripod and the self-timer.
- The shutter may remain closed after taking the picture. This is due to signal processing and is not a malfunction.
- Noise may become visible when you take pictures in dark places.


[Cool Night Sky]



Blue tones are enhanced to create a cool and sophisticated image of the night sky after sunset.

Tips

- We recommend using a tripod and the self-timer.
- The shutter may remain closed after taking the picture. This is due to signal processing and is not a malfunction.
- Noise may become visible when you take pictures in dark places.

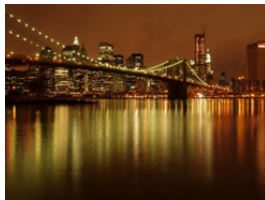[Warm Glowing Nightscape]

The warm colour tone creates a warm image of the nightscape.

**Tips**

- We recommend using a tripod and the self-timer.
- The shutter may remain closed after taking the picture. This is due to signal processing and is not a malfunction.
- Noise may become visible when you take pictures in dark places.

[Artistic Nightscape]

A slow shutter speed captures light trails that can create an artistic nightscape.

**Tips**

- We recommend using a tripod and the self-timer.
- The shutter may remain closed after taking the picture. This is due to signal processing and is not a malfunction.
- Noise may become visible when you take pictures in dark places.

[Glittering Illuminations]

The star filter enhances pinpoints of light.

**Tips**

- We recommend using a tripod and the self-timer.
- Display of the recording screen will be delayed more than usual and the screen will look as if frames are dropping.
- The shutter may remain closed after taking the picture. This is due to signal processing and is not a malfunction.
- Noise may become visible when you take pictures in dark places.

[Handheld Night Shot]

Capture multiple images and combine the data to minimise blur and noise for hand-held shooting with night scenery.

**Tips**

- Do not move the unit during the continuous shooting after pressing the shutter button.
- The angle of view will be slightly narrower.

[Clear Night Portrait]

Fill flash and a longer exposure capture better portraits against the nightscape.

**Tips**

- **Open the flash.** (You can set to [$\frac{1}{S}$].)
- We recommend using a tripod and the self-timer.
- When [Clear Night Portrait] is selected, keep the subject still for about 1 second after taking the picture.
- When [Silent Mode] is set to [ON], the flash is not activated.
- The shutter may remain closed after taking the picture. This is due to signal processing and is not a malfunction.
- Noise may become visible when you take pictures in dark places.

[Soft Image of a Flower]



The soft focus creates a diffused image.

Tips

- We recommend using a tripod and the self-timer.
- For close-up recording, we recommend that you close the flash and avoid using it.
- Display of the recording screen will be delayed more than usual and the screen will look as if frames are dropping.
- For information on the focus range, refer to “About focus range” on [P60](#).
- When a subject is close to the camera, the effective focus range is significantly narrowed. Therefore, if the distance between the camera and the subject is changed after focusing on the subject, it may become difficult to focus on it again.
- Close-up regions are prioritised when taking pictures, and so time is required to focus if you take a picture of a distant subject.
- When you take pictures at close range, the resolution of the periphery of the picture may decrease slightly. This is not a malfunction.
- If the lens becomes dirty with fingerprints or dust, the lens may not be able to focus on the subject correctly. ([P361](#))

[Appetizing Food]



The overall screen brightness is increased to make the food look appealing.



Tips

- You can enhance the effect by zooming in as much as possible and closing the distance between the camera and the subject.
- We recommend using a tripod and the self-timer.
- For close-up recording, we recommend that you close the flash and avoid using it.

[Cute Dessert]



The overall screen brightness is set higher to enhance the cuteness of the dessert.



Tips

- You can enhance the effect by zooming in as much as possible and closing the distance between the camera and the subject.
- We recommend using a tripod and the self-timer.
- For close-up recording, we recommend that you close the flash and avoid using it.

[Freeze Animal Motion]



The faster shutter speed prevents blur and captures a clear image of the fast moving animal.

- The initial setting for the AF assist lamp is [OFF].

[Clear Sports Shot]




The faster shutter speed prevents blur, for example at sporting events.

[Monochrome]



A monochrome image captures the mood of the moment.

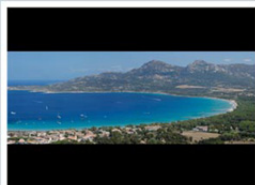

[Panorama Shot]

Consecutive photos taken while the camera is moved are combined to form a panorama.

1 Check the recording direction, and then press [MENU/SET].

- A horizontal/vertical guide is displayed.



Changing the recording direction

- 1 Select the menu.

MENU → [Rec] → [Panorama Settings] → [Direction]

- 2 Select the recording direction, and then press [MENU/SET].

[→] (left → right)/[←] (right → left)/[↑] (bottom → top)/[↓] (top → bottom)



Adding an image effect

- 1 Select the menu.

MENU → [Rec] → [Panorama Settings] → [Filter Select]

- 2 Press ▲/▼ to select the image effects (filters).

- With the same operation as the Creative Control Mode, the same image effect as the Creative Control Mode can be added. (P107) (excluding [Toy Effect], [Toy Pop], [Miniature Effect], and [Sunshine])
- During panorama picture recording, the following image effects of the Creative Control Mode are not visible on the screen:
 - [Rough Monochrome]/[Silky Monochrome]/[Soft Focus]/[Star Filter]
- If no image effect is to be added, select [No Effect].


- 3 Press [MENU/SET].

2 Press the shutter button halfway to focus.



3 Press the shutter button fully and move the camera in a small circle in the direction of the arrow on the screen.

Recording from left to right

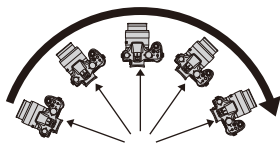


(A) Recording direction and panning (Guide)

- Move the camera at a constant speed. Pictures may not be able to be recorded properly if the camera is moved too fast or slow.

4 Press the shutter button once again to end the still picture recording.

- Recording can also be ended by keeping the camera still while recording.
- Recording can also be ended by moving the camera to the end of the guide.

Tips

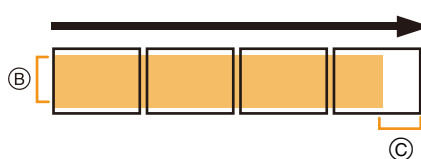


- (B) Move the camera in the recording direction without shaking it. If the camera shakes too much, pictures may not be able to be recorded, or the recorded panorama picture may become narrower (smaller).
- (C) Move the camera towards the edge of the range you wish to record. (The edge of the range will not be recorded in the last frame)

■ About playback

Pressing ▲ will start scrolling playback automatically in the same direction as the recording.

- The following operations can be performed during scrolling playback.

▲	Start panorama playback/Pause
▼	Stop
◀	Frame-by-frame rewind (while pausing)
▶	Frame-by-frame forward (while pausing)

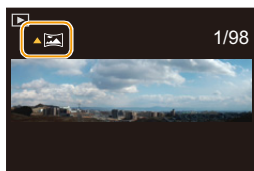

- The zoom position is fixed to Wide.
- The focus, white balance, and exposure are fixed at the optimum values for the first picture. As a result, if the focus or brightness changes substantially during recording, the entire panorama picture may not be recorded at the suitable focus or brightness.
- When an image effect is added, the White Balance is fixed to [AWB].
- When multiple pictures are combined to create a single panorama picture, the subject may appear distorted or the connection points may be noticeable in some cases.
- The number of recording pixels in the horizontal and vertical directions of the panorama picture varies depending on the recording direction and the number of combined pictures. The maximum number of pixels is shown below.

Recording direction	Horizontal Resolution	Vertical Resolution
Horizontal	8176 pixels	1920 pixels
Vertical	2560 pixels	7680 pixels

- [Shutter Type] is fixed to [AUTO].

Not available in these cases:

- A panorama picture may not be able to be created, or the pictures may not be combined properly when recording the following subjects or under the recording conditions below.
 - Subjects with a single, uniform colour or repetitive pattern (such as the sky or a beach)
 - Moving subjects (person, pet, car, waves, flowers blowing in the breeze, etc.)
 - Subjects where the colour or patterns change in a short time (such as an image appearing on a display)
 - Dark places
 - Locations with flickering light sources such as fluorescent lights or candles
- This cannot be used when [Silent Mode] is set to [ON].



Taking Pictures with different image effects


(Creative Control Mode)

Recording Mode: 

This mode records with additional image effects.

You can set the effects to add by selecting example images and checking them on the screen.


- 1 Set the mode dial to [].
- 2 Press $\blacktriangle/\blacktriangledown$ to select the image effects (filters).
 - The image effect of the selected example image will be applied in a preview display .
- 3 Press [MENU/SET] to set.

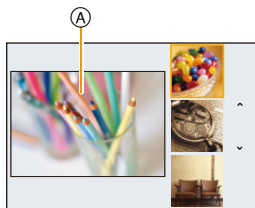


■ Switching the image effect (filter) selection screen display

Press [DISP.] to switch the monitor screen.

- Each time [DISP.] is pressed, the image effect selection screen is switched.
- When the image effect selection screen display is set to the guide display, description of the selected image effect is displayed.

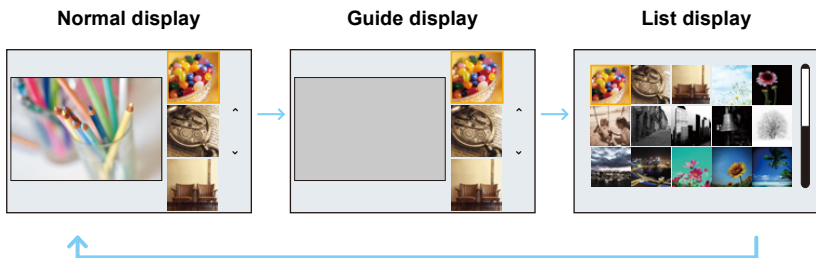

- To change Creative Control Mode, select the  tab on the menu screen, select [Filter Switch], and then press [MENU/SET]. You can return to step 2.
- The White Balance will be fixed to [AWB] and the ISO sensitivity will be fixed to [AUTO]. In addition, the Photo Style will be fixed to [Standard] and the Colour Space will be fixed to [sRGB].

Adjust the effect to fit your preferences

The strength and colours of the effects can be easily adjusted to fit your preferences.

1 Press ► to display the setting screen.

2 Rotate the rear dial to set.

- The items that can be set differ depending on which Creative Control Mode is currently set.
For information on each image effect, refer to “Items that can be set”.
- Press [MENU/SET] to return to the recording screen.
- When making the effect setting, [⚙️] is displayed on the screen.
- If you do not change the settings, select the centre (standard).



Taking a picture with a blurred background (Defocus Control)


You can easily set the blurriness of the background while checking the screen.

1 Press the rear dial to display the setting screen.

- Each press of the rear dial switches among brightness setting, Defocus Control and end operation.

2 Rotate the rear dial to set.

- Pressing [⏏️/➡️] on the blurriness setting screen will cancel the setting.

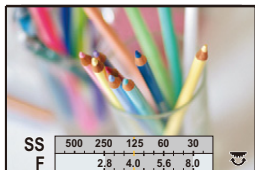

Not available in these cases:


- This function is not available in the following case:
– [Miniature Effect] (Creative Control Mode)

Setting brightness

1 Press the rear dial to display the setting screen.


- Each press of the rear dial switches among brightness setting, Defocus Control and end operation.

2 Rotate the rear dial to set.

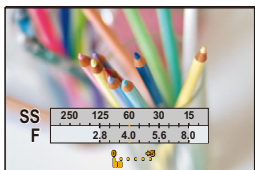

 For details on “Creative Control Mode” settings, refer to P107.

[Expressive]

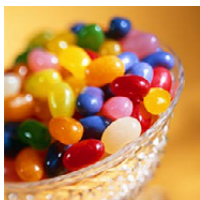

This effect emphasises the colour to make a pop art picture.

Items that can be set
(Press ► to display the setting screen.)

Freshness	Understated colours	↔	Pop colours
-----------	---------------------	---	-------------

[Retro]




This effect gives a faded image.

Items that can be set
(Press ► to display the setting screen.)

Colour	Yellow emphasised	↔	Red emphasised
--------	-------------------	---	----------------

[Old Days]

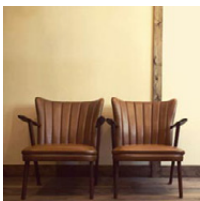

This effect adds a bright, soft and nostalgic feel to the overall image.

Items that can be set
(Press ► to display the setting screen.)

Contrast	Low contrast	↔	High contrast
----------	--------------	---	---------------


[High Key]

This effect adds a bright, airy and soft feel to the overall image.

Items that can be set
(Press ► to display the setting screen.)

Colour	Pink emphasised	↔	Aquamarine emphasised
--------	-----------------	---	-----------------------

- If you select this effect with [Panorama Shot] in Scene Guide Mode, the effect may not be apparent in places with insufficient brightness.

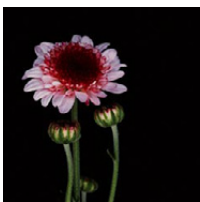[Low Key]

This effect adds a dark and relaxing feel to the overall image and enhances bright parts.

Items that can be set
(Press ► to display the setting screen.)

Colour	Red emphasised	↔	Blue emphasised
--------	----------------	---	-----------------

[Sepia]

This effect creates a sepia image.

Items that can be set
(Press ► to display the setting screen.)

Contrast	Low contrast	↔	High contrast
----------	--------------	---	---------------

[Monochrome]

This effect creates a black and white picture.

Items that can be set
(Press ► to display the setting screen.)

Contrast	Yellow emphasised	↔	Blue emphasised
----------	-------------------	---	-----------------

[Dynamic Monochrome]

This effect gives a higher contrast to create an impressive black and white picture.

Items that can be set
(Press ► to display the setting screen.)

Contrast	Low contrast	↔	High contrast
----------	--------------	---	---------------

[Rough Monochrome]

This effect creates a black and white picture with granular noise.

Items that can be set
(Press ► to display the setting screen.)

Grittiness	Less gritty	↔	Grittier
------------	-------------	---	----------

- Display of the recording screen will be delayed more than usual and the screen will look as if frames are dropping.

[Silky Monochrome]

This effect blurs the overall image to add a soft feel to a black and white picture.

Items that can be set
(Press ► to display the setting screen.)

Extent of defocus	Weak defocus	↔	Strong defocus
-------------------	--------------	---	----------------

- Display of the recording screen will be delayed more than usual and the screen will look as if frames are dropping.


[Impressive Art]

This effect gives your photo a dramatic contrast look.

Items that can be set
(Press ► to display the setting screen.)

Freshness	Black and white	↔	Pop colours
-----------	-----------------	---	-------------


- If this image effect is selected with [Panorama Shot] in Scene Guide Mode, seams between pictures may become visible.

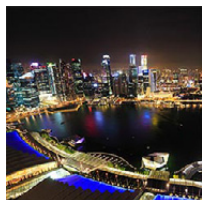[High Dynamic]

This effect produces the optimum brightness for both dark and bright parts.

Items that can be set
(Press ► to display the setting screen.)

Freshness	Black and white	↔	Pop colours
-----------	-----------------	---	-------------

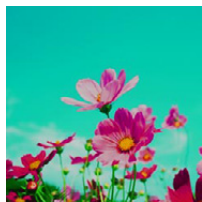
[Cross Process]


This effect gives your photo a dramatic colour look.

Items that can be set
(Press ► to display the setting screen.)

Colour	Green tone/Blue tone/Yellow tone/Red tone
--------	-------------------------------------------

- Select the desired colour tone by rotating the rear dial, and then press [MENU/SET].

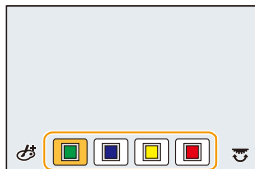

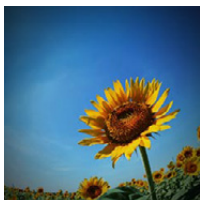[Toy Effect]

This effect reduces peripheral brightness to give the impression of a toy camera.

Items that can be set
(Press ► to display the setting screen.)


Colour	Orange emphasised	↔	Blue emphasised
--------	-------------------	---	-----------------

[Toy Pop]

This effect creates a vivid and bright image with the look of a toy camera.

Items that can be set
(Press ► to display the setting screen.)

Area with reduced peripheral brightness	Small	↔	Large
-----------------------------------------	-------	---	-------

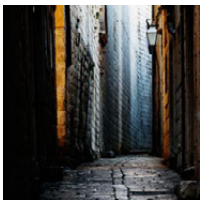[Bleach Bypass]

This effect gives a higher contrast and a lower saturation to create a calm and tranquil picture.

Items that can be set
(Press ► to display the setting screen.)

Contrast	Low contrast	↔	High contrast
----------	--------------	---	---------------

[Miniature Effect]

This effect blurs peripheral areas to give the impression of a diorama.

Items that can be set
(Press ► to display the setting screen.)

Freshness	Understated colours	↔	Pop colours
-----------	---------------------	---	-------------

■ Setting the type of defocus

With [Miniature Effect] you can make the subject stand out by intentionally creating defocused and in-focus portions.

You can set the recording orientation (defocus orientation) and the position and size of the in-focus portion.

- 1 Press [Fn1] to display the setting screen.
- 2 Press ▲/▼ or ◀/▶ to move the in-focus portion.
- 3 Rotate the rear dial to change the size of in-focus portion.
 - If you press [DISP.], settings for the in-focus portions are restored to the initial settings.
- 4 Press [MENU/SET] to set.



- Display of the recording screen will be delayed more than usual and the screen will look as if frames are dropping.
- No sound is recorded in motion pictures.
- Approximately 1/8 of the time period is recorded.
(If you record for 8 minutes, the resulting motion picture recording will be approximately 1 minute long.)
The displayed available recording time is approximately 8 times. When switching to Recording Mode, please check the available recording time.
- If you end motion picture recording after a short time, the camera may go on recording for a certain period. Please continue to hold the camera until the recording finishes.
- When the Focus Mode is set to [MF], move the focused location to the in-focus portion.


[Soft Focus]

This effect blurs the overall image to produce a soft feel.

Items that can be set
(Press ► to display the setting screen.)

Extent of defocus	Weak defocus	↔	Strong defocus
-------------------	--------------	---	----------------

- Display of the recording screen will be delayed more than usual and the screen will look as if frames are dropping.

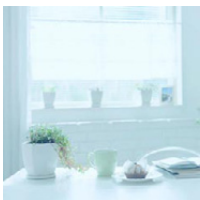[Fantasy]

This effect creates a fantastical image in a pale colour tone.

Items that can be set
(Press ► to display the setting screen.)

Freshness	Understated colours	↔	Pop colours
-----------	---------------------	---	-------------


[Star Filter]

This effect transforms pin-points of light into a star effect.

Items that can be set
(Press ► to display the setting screen.)

Length of shine	Short	↔	Long
-----------------	-------	---	------

- Display of the recording screen will be delayed more than usual and the screen will look as if frames are dropping.

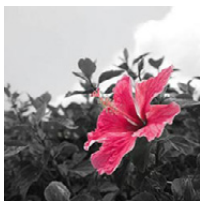[One Point Color]

This effect leaves one selected colour to emphasise impressiveness.

Items that can be set
(Press ► to display the setting screen.)

Amount of colour left	Small amount of colour	↔	Large amount of colour
-----------------------	------------------------	---	------------------------

■ Set the colour to leave in

Set the colour to leave in by selecting a location on the screen.

- 1 Press **[Fn1]** to display the setting screen.
- 2 Select the colour you want to leave by moving the frame with **▲/▼/◀/▶**.
 - Press **[DISP.]** to reset the frame position.
- 3 Press **[MENU/SET]** to set.



• Depending on the subject, the set colour may not be left in.


[Sunshine]

This effect adds a cast of light to the scene.

Items that can be set
(Press ► to display the setting screen.)

Colour	Yellow tone/Red tone/Blue tone/White tone
--------	-------------------------------------------

- Select the colour tone by rotating the rear dial, and then press [MENU/SET].

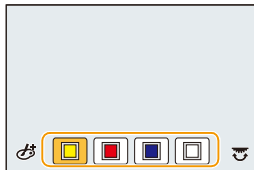

■ Setting the light source


You can change the position and size of the light source.

- 1 Press [Fn1] to display the setting screen.
- 2 Press ▲/▼/◀/▶ to move the centre position of the light source.
 - The centre of the light source can be moved to the edge of the screen.



Point for when placing the centre of the light source

A more natural appearance can be created by placing the centre of the light source outside the image.

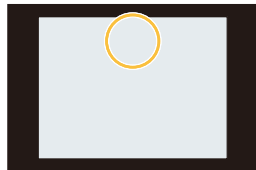

- 3 Adjust the size of the light source by rotating the rear dial.
 - It can be changed to 4 different sizes.
 - Pressing [DISP.] returns the light source setting to the default setting.
- 4 Press [MENU/SET] to set.

- Display of the recording screen will be delayed more than usual and the screen will look as if frames are dropping.

Recording motion pictures with manually set aperture value/shutter speed (Creative Video Mode)

Recording Mode: 

It is possible to manually change the aperture and shutter speed and record motion pictures.

1 Set the mode dial to [M].

2 Select the menu.

MENU →  [Motion Picture] → [Exposure Mode]

3 Press ▲/▼ to select [P], [A], [S] or [M], and then press [MENU/SET].

- The operation for changing the aperture value or shutter speed is the same as the operation for setting the mode dial to **P**, **A**, **S** or **M**.

4 Start recording.

- Press the motion picture button or the shutter button to start recording a motion picture. (Still pictures cannot be taken.)

5 Stop recording.

- Press the motion picture button or the shutter button to stop recording a motion picture.

• Aperture value

- Set the aperture value to a higher number when you want a sharp focus background. Set the aperture value to a lower number when you want a soft focus background.

• Shutter speed

- When you want to take a sharp picture of a fast moving subject, set with a faster shutter speed. When you want to create a trail effect, set to a slower shutter speed.
- Manually setting a higher shutter speed may increase the noise on-screen due to the higher sensitivity.
- When subjects are recorded in an extremely bright place or under fluorescent/LED lighting, the colour tone or brightness of the image may change, or horizontal stripes may appear on the screen. In that case, change the Recording Mode or manually adjust the shutter speed to 1/60 or 1/100.
- When [Exposure Mode] is set to [M], [AUTO] of the ISO sensitivity will switch to [125].

Recording slow motion pictures (High Speed Video)

You can record slow motion pictures by performing ultra-high-speed recording. Motion is displayed at a slower speed during playback.

- 1 **Set the mode dial to [M].**
- 2 **Select the menu.**

MENU →  **[Motion Picture]** → **[High Speed Video]**

- 3 **Press ▲/▼ to select [ON] and then press [MENU/SET].**
- 4 **Start recording.**

- Press the motion picture button or the shutter button to start recording a motion picture. (Still pictures cannot be taken.)

- 5 **Stop recording.**

- Press the motion picture button or the shutter button to stop recording a motion picture.

- Audio is not recorded.
- You can continuously record a motion picture up to 7 minutes and 29 seconds or the file size of 4 GB. (This means you can record a motion picture equivalent to up to 29 minutes and 56 seconds in playback time.)
- The focus, zoom, exposure and White Balance is fixed to the value at the beginning of the recording motion picture.
- Under fluorescent lighting, flicker or horizontal bars may be seen.

Registering your preferred settings (Custom Mode)

Recording Mode: **C1** **C2**

You can register the current camera settings as custom settings.

If you then record in Custom Mode, you can use the registered settings.

- Initial setting of the Programme AE Mode is registered as the custom settings initially.

Registering Personal Menu Settings (Registering custom settings)

To allow recording using the same settings, up to 4 sets of current camera settings can be registered using [Cust.Set Mem.]. (C1, C2-1, C2-2, C2-3)

Preparations: Set in advance the Recording Mode you wish to save and select the desired menu settings on the camera.

1 Select the menu.

MENU → **fC** [Custom] → [Cust.Set Mem.]

2 Press ▲/▼ to select the custom set to register and then press [MENU/SET].

C1	The settings are registered for C1 on the mode dial. • You can record using by simply rotating the mode dial to the corresponding position. If you register the custom settings you use often, it is then convenient to use them.
C2-1	The settings are registered for C2 on the mode dial. • You can register up to 3 sets of custom settings and use the different sets as condition demand.
C2-2	
C2-3	

- Confirmation screen is displayed. It is executed when [Yes] is selected.
Exit the menu after it is executed.

- The following menu items are not registered as custom settings.

[Rec] menu	[Setup] menu	[Custom] menu	[Playback] menu
– Data registered with [Face Recog.] – The [Profile Setup] setting	– All menus	– [Menu Guide]	– [Rotate Disp.] – [Picture Sort] – [Delete Confirmation]

Recording using registered custom set

You can easily call up the settings you have registered using [Cust.Set Mem.].

Set the mode dial to [C1], or [C2]

- The custom set will be called up. If you set the mode dial to [C2], the custom set you used last time ([C2-1], [C2-2], or [C2-3]) will be called up.

■ To change a custom set in [C2]

- 1** Set the mode dial to [C2].
- 2** Press [MENU/SET] to display the menu.
- 3** Press ◀/▶ to select the custom setting you want to use, and then press [MENU/SET].

- Saving of the selected custom settings is displayed on the screen.



■ Changing the settings

Registered contents do not change when the menu setting is changed temporarily with the mode dial set to C1 or C2. To change the registered settings, overwrite the registered content using [Cust.Set Mem.] on the custom settings menu.

Adjusting the Picture Quality by Adding an Effect ([Photo Style])

Applicable modes:

You can select effects to match the type of image you wish to record.
You can adjust the colour and image quality of the effects.

MENU → **[Rec]** → **[Photo Style]**

[Standard]	This is the standard setting.
[Vivid] *1	Brilliant effect with high saturation and contrast.
[Natural] *1	Soft effect with low contrast.
[Monochrome]	Monochrome effect with no colour shades.
[Scenery] *1	An effect appropriate for scenes with vivid blue skies and greens.
[Portrait] *1	An effect appropriate for portrait picture with a healthy and beautiful skin tone.
[Custom] *1	Use the setting registered in advance.
[Cinelike D] *1, 2	Gives priority to the dynamic range by using a gamma curve*3 designed to create film-like images. Suited for editing.
[Cinelike V] *1, 2	Gives priority to the contrast by using a gamma curve*3 designed to create film-like images.

*1 This is disabled when Intelligent Auto Plus Mode is selected.


*2 These can be set only in Creative Video Mode.

*3 When the actual brightness and the brightness to be captured are adjusted at each brightness level, the relationship between these two kinds of brightness is plotted as a nonlinear curve. This is called the gamma curve.

- In Intelligent Auto Plus () Mode, the setting will be reset to [Standard] when the camera is switched to another Recording Mode or this unit is turned on and off.
- In Scene Guide Mode, a Photo Style which matches each scene is fixed.
- Those menu items are shared by the [Rec] menu and the [Motion Picture] menu. When the setting for either of the two is changed, the setting for the other is also changed.

■ Adjusting the picture quality

- Picture quality cannot be adjusted in the Intelligent Auto Plus Mode.

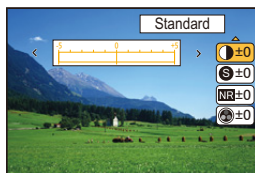

- 1 Press **◀/▶** to select the type of Photo Style.
- 2 Press **▲/▼** to select the items, and then press **◀/▶** to adjust.

☾ [Contrast]	[+]	Increases the difference between the brightness and the darkness in the picture.
	[-]	Decreases the difference between the brightness and the darkness in the picture.
Ⓢ [Sharpness]	[+]	The picture is sharply defined.
	[-]	The picture is softly focused.
NR [Noise Reduction]	[+]	The noise reduction effect is enhanced. Picture resolution may deteriorate slightly.
	[-]	The noise reduction effect is reduced. You can obtain pictures with higher resolution.
⊗ [Saturation]* ¹	[+]	The colours in the picture become vivid.
	[-]	The colours in the picture become natural.
⊗ [Color Tone]* ¹	[+]	Adds a bluish tone.
	[-]	Adds a yellowish tone.
⊗ [Filter Effect]* ²	[Yellow]	Enhances the contrast of an subject. (Effect: Weak) The blue sky can be recorded clearly.
	[Orange]	Enhances the contrast of an subject. (Effect: Medium) The blue sky can be recorded in darker blue.
	[Red]	Enhances the contrast of an subject. (Effect: Strong) The blue sky can be recorded in much darker blue.
	[Green]	The skin and lips of people and green leaves appear in natural tones. Green leaves appear brighter and more enhanced.
	[Off]	—

*¹ [Color Tone] is displayed only when [Monochrome] is selected. In other cases, [Saturation] will be displayed.

*² [Filter Effect] is displayed only when [Monochrome] is selected.

- If you adjust the picture quality, [+] is displayed beside the Photo Style icon on the screen.

3 Press [MENU/SET].

■ Registering settings to [Custom]

Adjust the picture quality following step 2 of “Adjusting the picture quality”, and then press [DISP].

- Confirmation screen is displayed. It is executed when [Yes] is selected.

Adjusting Bright/Dark Portions ([Highlight Shadow])

Applicable modes:

You can adjust the brightness of bright and dark portions on an image while checking the brightness on the screen.

1 Select the menu.

[MENU] → **[Rec]** → **[Highlight Shadow]**


2 Press to select the item.

<input checked="" type="checkbox"/> (Standard)	A state with no adjustments is set.
<input type="checkbox"/> (Raise the contrast)	Bright areas are brightened, and dark areas are darkened.
<input type="checkbox"/> (Lower the contrast)	Bright areas are darkened, and dark areas are brightened.
<input type="checkbox"/> (Brighten dark areas)	Dark areas are brightened.
/ / (Custom)	Registered custom settings can be applied.

3 Rotate the rear dial to adjust the brightness of bright/dark portions.

- (A) Bright portion
- (B) Dark portion
- (C) Preview display


- Each time you press the rear dial, you can switch between the adjustment of the dark portion and that of the bright portion.
- To register a preferred setting, press , and select the destination where the custom setting will be registered to ([Custom1] ()/[Custom2] ()/[Custom3] ()).

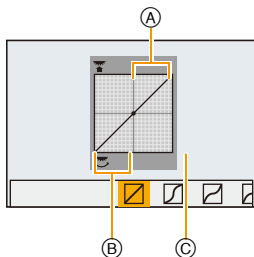

4 Press **[MENU/SET]**.



- The screen display can be switched by pressing [DISP.] on the brightness adjustment screen.

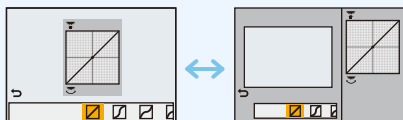


- Settings registered to / / will be stored even after this unit is turned off.
- Turning off this unit will return the setting adjusted with / / / back to the default setting.
- Those menu items are shared by the [Rec] menu and the [Motion Picture] menu. When the setting for either of the two is changed, the setting for the other is also changed.

Adjusting the White Balance

Applicable modes: **P** **A** **S** **M** **C1** **C2**

In sunlight, under incandescent lights or in other such conditions where the colour of white takes on a reddish or bluish tinge, this item adjusts to the colour of white which is closest to what is seen by the eye in accordance with the light source.

1 Press ► [WB].

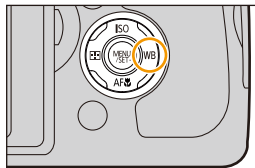

2 Select the White Balance by rotating the rear dial.



3 Press the rear dial to set.

[AWB]	Automatic adjustment
[☀]	When taking pictures outdoors under a clear sky
[☁]	When taking pictures outdoors under a cloudy sky
[🌳]	When taking pictures outdoors in the shade
[💡]	When taking pictures under incandescent lights
[🔆]	When taking pictures with the flash only
[📷]/[📷]/[📷]/[📷]	The manually set value is used
[📷]	When using the preset colour temperature setting

*It will operate as [AWB] during motion picture recording.






• Under fluorescent lighting, LED lighting fixture etc., the appropriate White Balance will vary depending on the lighting type, so use [AWB] or [], [], [], [].

- The White Balance is only calculated for subjects within the range of the camera's flash. (P201)
- In Scene Guide Mode, changing the scene or Recording Mode will return White Balance settings (including the White Balance fine adjustment setting) back to [AWB].
- In the Scene Guide Modes listed below, White Balance is fixed to [AWB].
 - [Backlit Softness]/[Relaxing Tone]/[Distinct Scenery]/[Bright Blue Sky]/[Romantic Sunset Glow]/[Vivid Sunset Glow]/[Glistening Water]/[Clear Nightscape]/[Cool Night Sky]/[Warm Glowing Nightscape]/[Artistic Nightscape]/[Glittering Illuminations]/[Handheld Night Shot]/[Clear Night Portrait]/[Appetizing Food]/[Cute Dessert]

■ Auto White Balance

Depending on the conditions prevailing when pictures are taken, the pictures may take on a reddish or bluish tinge. Furthermore, when a multiple number of light sources are being used or there is nothing with a colour close to white, Auto White Balance may not function properly. In a case like this, set the White Balance to a mode other than [AWB].


- 1 Auto White Balance will work within this range.
 - 2 Blue sky
 - 3 Cloudy sky (Rain)
 - 4 Shade
 - 5 Sunlight
 - 6 White fluorescent light
 - 7 Incandescent light bulb
 - 8 Sunrise and sunset
 - 9 Candlelight
- K=Kelvin Colour Temperature

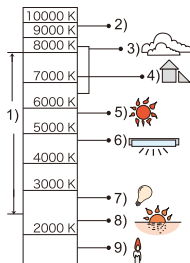

Setting the White Balance manually

Set the White Balance value. Use to match the condition when taking photographs.

- 1 Press ► [WB].
- 2 Rotate the rear dial to select [1], [2], [3], or [4], and then press ▲.
- 3 Aim the camera at a sheet of white paper etc. so that the frame in the centre is filled by the white object only and then press [MENU/SET].

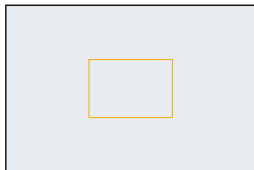


- White Balance may not be set when the subject is too bright or too dark. Set the White Balance again after adjusting to appropriate brightness.

Setting the colour temperature

You can set the colour temperature manually for taking natural pictures in different lighting conditions.

The colour of light is measured as a number in degrees Kelvin. As the colour temperature increases, the picture becomes more bluish. As the colour temperature decreases, the picture becomes more reddish.

- 1 Press ► [WB].
- 2 Rotate the rear dial to select [K], and then press ▲.
- 3 Press ▲/▼ to select the colour temperature and then press [MENU/SET].
 - You can set a colour temperature from [2500K] to [10000K].

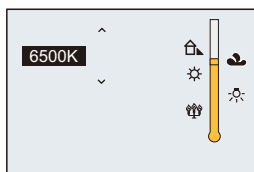

Finely adjusting the White Balance


You can finely adjust the White Balance when you cannot acquire the desired hue by setting the White Balance.

- 1 Select the White Balance and then press **▼**.
- 2 Press **▲/▼/◀/▶** to fine-adjust the White Balance.

- ◀ : A (AMBER: ORANGE)
- ▶ : B (BLUE: BLUISH)
- ▲ : G (GREEN: GREENISH)
- ▼ : M (MAGENTA: REDDISH)

- Pressing [DISP.] resets the position back to the centre.

- 3 Press **[MENU/SET]**.

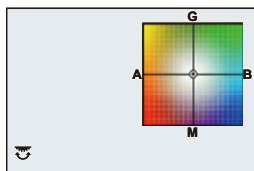

- If you finely adjust the White Balance to [A] (amber), the White Balance icon on the screen will change to orange. If you finely adjust the White Balance to [B] (blue), the White Balance icon on the screen will change to blue.
- If you finely adjust the White Balance to [G] (green) or [M] (magenta), [+] (green) or [-] (magenta) appears beside the White Balance icon on the screen.
- The White Balance fine adjustment setting is reflected in the picture when using the flash.
- You can finely adjust the White Balance independently for each White Balance item.
- The White Balance fine adjustment level returns to the standard setting (centre point) in the following cases.
 - When you reset the White Balance in [], [], [] or []
 - When you reset the colour temperature manually in []

White Balance Bracket

Bracket setting is performed based on the adjustment values for the White Balance fine adjustment, and 3 pictures with different colours are automatically recorded when the shutter button is pressed once.

1 Fine-adjust the White Balance in step 2 of “Finely adjusting the White Balance” and then perform the bracket setting by rotating the rear dial.


Rotating the rear dial to the right:

Horizontal ([A] to [B])

Rotating the rear dial to the left:

Vertical ([G] to [M])

2 Press [MENU/SET].

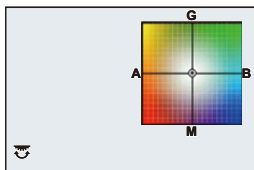

- [BK7] is displayed in White Balance icon in the screen when the White Balance Bracket is set.
- The White Balance Bracket setting is cancelled in the following cases:
 - When you turn off the camera (including Sleep Mode)
- You will only hear the shutter sound once.

Not available in these cases:

- The White Balance Bracket does not work in the following cases:
 - [Glistening Water]/[Glittering Illuminations]/[Handheld Night Shot]/[Soft Image of a Flower]/[Panorama Shot] (Scene Guide Mode)
 - When recording motion pictures
 - When [Quality] is set to [RAW $\frac{1}{1}$], [RAW $\frac{1}{2}$] or [RAW]
 - When [HDR] is set to [ON]
 - [Multi Exp.]
 - When using [Time Lapse Shot]

Setting the Picture Quality and Size

Setting the aspect ratio of pictures

Applicable modes:

This allows you to select the aspect ratio of the pictures to suit printing or the playback method.

At the time of purchase, it is initially set to [3:2].

MENU → **[Rec]** → **[Aspect Ratio]**

[4:3]	[Aspect Ratio] of a 4:3 TV
[3:2]	[Aspect Ratio] of a 35 mm film camera
[16:9]	[Aspect Ratio] of a high-definition TV, etc.
[1:1]	Square aspect ratio

- The ends of the recorded pictures may be cut at printing so check before printing. (P358)
- If you use the HDMI output during recording, the setting is fixed to [16:9].



Not available in these cases:

- Not available with [Panorama Shot] in Scene Guide Mode.

Setting the number of pixels

Applicable modes:

Set the number of pixels. The higher the numbers of pixels, the finer the detail of the pictures will appear even when they are printed onto large sheets.

MENU → **[Rec]** → **[Picture Size]**

When the aspect ratio is [4:3].

Settings	Image size
[L] (17.5M)	4864×3648
[EXM] (9M)	3456×2592
[EXS] (4.5M)	2432×1824

When the aspect ratio is [3:2].

Settings	Image size
[L] (20M)	5472×3648
[EXM] (10M)	3888×2592
[EXS] (5M)	2736×1824



When the aspect ratio is [16:9].

Settings	Image size
[L] (17M)	5472×3080
[EXM] (8M)	3840×2160
[EXS] (2M)	1920×1080

When the aspect ratio is [1:1].

Settings	Image size
[L] (13.5M)	3648×3648
[EXM] (6.5M)	2592×2592
[EXS] (3.5M)	1824×1824

- The picture size will be fixed to [S] when [Burst Rate] is set to [SH].

**Not available in these cases:**

- Not available with [Panorama Shot] in Scene Guide Mode.

Setting the compression rate of pictures ([Quality])

Applicable modes:

Set the compression rate at which the pictures are to be stored.

MENU → [Rec] → [Quality]

Settings	File format	Description of settings
[]	JPEG	A JPEG image in which image quality was given priority.
[]		A standard image quality JPEG image. This is useful for increasing the number of shots without changing the number of pixels.
[RAW]	RAW+JPEG	You can record a RAW image and a JPEG image ([] or [] simultaneously.*1
[RAW]		
[RAW]	RAW	You can only record RAW images.*2

*1 If you delete a RAW file from the camera, the corresponding JPEG image will also be deleted.

*2 It is fixed to maximum recordable pixels ([L]) for each image aspect ratio.





About RAW



RAW format refers to a data format of images that have not been processed. Playback and editing of RAW images require the camera or the dedicated software.

You can make advanced adjustments by editing RAW images. For example, you can adjust the White Balance after taking pictures or save them in file formats that are capable of displaying them on a PC. Pictures taken in RAW format will have higher image quality than those taken in JPEG format, but the data size will be larger.

- You can process RAW images in [RAW Processing] in the [Playback] menu. (P232)
- To process and edit RAW files on a PC, use the software "SILKYPIX Developer Studio" by Ichikawa Soft Laboratory on the DVD (supplied).



Not available in these cases:

- The following effects are not reflected in RAW images:
 - Intelligent Auto Mode
 - Intelligent Auto Plus Mode
 - Creative Control Mode
 - White Balance*1
 - [Photo Style]*1/[Highlight Shadow]*1/[i.Dynamic]*1/[Red-Eye Removal]*2/[i.Resolution]*1/[Color Space]*1 ([Rec] menu)
 - Scene Guide Mode
 - In the following case, [RAW , [RAW , and [RAW] cannot be set.
 - [Handheld Night Shot]/[Panorama Shot] (Scene Guide Mode)
- *1 If you perform [RAW Processing] in the [Playback] menu on a picture, you can process it into a picture in JPEG format with the settings at the time of recording. The settings will be used as initial settings when you start [RAW Processing].
- *2 If you perform [RAW Processing] in the [Playback] menu on a picture taken with [Red-Eye Removal], the effect will be applied to the processed picture in JPEG format.

Using Image Correction Functions

Compensating the contrast and exposure ([i.Dynamic])

Applicable modes:        

Contrast and exposure are compensated when the brightness difference between the background and subject is great, etc.

MENU →  **[Rec]** → **[i.Dynamic]**

Settings: **[AUTO]/[HIGH]/[STANDARD]/[LOW]/[OFF]**

- [AUTO] automatically sets the intensity of the effect according to the recording conditions.
- Those menu items are shared by the [Rec] menu and the [Motion Picture] menu. When the setting for either of the two is changed, the setting for the other is also changed.

Not available in these cases:

- This feature may be automatically disabled, depending on the lighting conditions.
- In the following cases, [i.Dynamic] does not work:
 - [Panorama Shot] (Scene Guide Mode)
 - When [HDR] is set to [ON]

Raising the resolution ([i.Resolution])

Applicable modes:        

Pictures with sharp profile and resolution can be taken by using the Intelligent Resolution Technology.

MENU →  **[Rec]** → **[i.Resolution]**

Settings: **[HIGH]/[STANDARD]/[LOW]/[EXTENDED]/[OFF]**

- [EXTENDED] allows you to take natural pictures with a higher resolution.
- When recording a motion picture, [EXTENDED] changes to [LOW].
- Those menu items are shared by the [Rec] menu and the [Motion Picture] menu. When the setting for either of the two is changed, the setting for the other is also changed.

Combining pictures with different exposures ([HDR])

Applicable modes:

You can combine 3 pictures with different levels of exposure into a single picture with rich gradation. You can minimise the loss of gradations in bright areas and dark areas when, for example, the contrast between the background and the subject is large.

An image combined by HDR is recorded in JPEG.

MENU → **[Rec]** → **[HDR]**

[ON]	Records HDR pictures.
[OFF]	Does not record HDR pictures.
[SET]	[Dynamic Range] [AUTO]: Automatically adjusts the exposure range according to the differences between the bright and dark areas. [±1 EV]/[±2 EV]/[±3 EV]: Adjusts the exposure within the selected exposure parameters.
	[Auto Align] [ON]: Automatically corrects camera shake (jitter) and other problems that can cause the images to misalign. Recommended for use during hand-held shooting. [OFF]: Image misalignment not adjusted. Recommended when a tripod is used.

■ What Is HDR?

HDR stands for High Dynamic Range and refers to a technique for expressing a wide contrast range.

- Do not move the camera during the continuous shooting after pressing the shutter button.
- You cannot take the next picture until the combination of pictures is complete.
- A moving subject may be recorded with unnatural blurs.
- The angle of view becomes narrow slightly when [Auto Align] is set to [ON].
- Flash is fixed to (forced flash off).


Not available in these cases:

- [HDR] does not work for the pictures taken during a motion picture recording.
- [HDR] is not available in the following cases.
 - When [Quality] is set to [RAW], [RAW] or [RAW]
 - When using [Time Lapse Shot]
 - When using [Stop Motion Animation] (only when [Auto Shooting] is set)

Reducing the long shutter noise ([Long Shtr NR])

Applicable modes:        

The camera automatically removes noise that appears when the shutter speed becomes slower to take pictures of night scenery etc. so you can take beautiful pictures.

MENU →  **[Rec]** → **[Long Shtr NR]**

Settings: [ON]/[OFF]

- [Long shutter noise reduction ongoing] is displayed for the same time as the shutter speed for signal processing.
- We recommend using a tripod when the shutter speed is slowed to take pictures.

Not available in these cases:

- In the following cases, [Long Shtr NR] does not work:
 - [Panorama Shot] (Scene Guide Mode)
 - When recording motion pictures
 - When [Burst Rate] is set to [SH]
 - When using the electronic shutter

Setting the colour space ([Color Space])

Applicable modes:   **P** **A** **S** **M**  **C1** **C2**  

Set this when you want to correct the colour reproduction of the recorded pictures on a PC, printer etc.

MENU →  **[Rec]** → **[Color Space]**

[sRGB]	Colour space is set to sRGB colour space. This is widely used in computer related equipment.
[AdobeRGB]	Colour space is set to AdobeRGB colour space. AdobeRGB is mainly used for business purposes such as professional printing because it has a greater range of reproducible colours than sRGB.

- Set to sRGB if you are not very familiar with AdobeRGB.
- The setting is fixed to [sRGB] in the following case.
 - When recording motion pictures

6.

Focus and Brightness (Exposure) Settings

Taking Pictures with Auto Focus

Applicable modes:

This allows the focusing method that suits the positions and number of the subjects to be selected.




1 Set the focus mode lever to [AFS/AFF] or [AFC].

- The Focus Mode will be set. (P139)

2 Press ().

3 Press to select AF Mode and then press [MENU/SET].

- The Auto Focus Mode will be set. (P140)
- AF area selection screen is displayed when is pressed while , , , or is selected. For operation in the AF area selection screen, refer to P145.

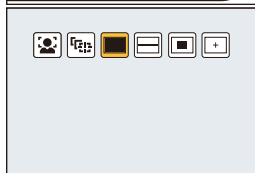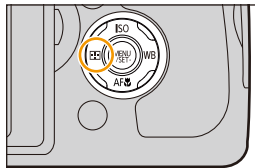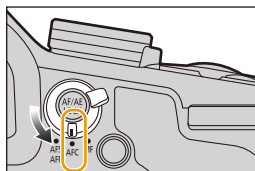

- The setting is fixed to in the following cases.
 - [Miniature Effect] (Creative Control Mode)
 - [High Speed Video] (Creative Video Mode)

Not available in these cases:

- It cannot be set to in the following cases.
 - [Clear Nightscape]/[Cool Night Sky]/[Warm Glowing Nightscape]/[Artistic Nightscape]/[Glittering Illuminations]/[Handheld Night Shot]/[Appetizing Food]/[Cute Dessert] (Scene Guide Mode)
- The is disabled in the following case.
 - [AFF]/[AFC] (Focus Mode)

About the focus mode (AFS/AFF/AFC)

Applicable modes:          

Item	The movement of the subject and the scene (recommended)	Description of settings
AFS*	Subject is still (Scenery, anniversary photograph, etc.)	"AFS" is an abbreviation of "Auto Focus Single". Focus is set automatically when the shutter button is pressed halfway. Focus will be fixed while it is pressed halfway.
AFF*	Movement cannot be predicted (Children, pets, etc.)	"AFF" is an abbreviation of "Auto Focus Flexible". In this mode, focusing is performed automatically when the shutter button is pressed halfway. If the subject moves while the shutter button is pressed halfway, the focus is corrected to match the movement automatically.
AFC	Subject is moving (Sport, trains, etc.)	"AFC" is an abbreviation of "Auto Focus Continuous". In this mode, while the shutter button is pressed halfway, focusing is constantly performed to match the movement of the subject. When the subject is moving, the focusing is performed by predicting the subject position at the time of recording. (Movement prediction)
MF	Set the focus manually. (P150)	

* In [AFS/AFF] in the [Rec] menu or the [Motion Picture] menu, you can assign [AFS] or [AFF] to [AFS/AFF] of the focus mode lever.



When recording using [AFF], [AFC]

- It may take time to focus on the subject when you operate the zoom from Wide to Tele or suddenly change the subject from a distant one to a nearby one.
- Press the shutter button halfway again when it is difficult to focus on the subject.
- While the shutter button is pressed halfway, shake may be seen on the screen.

• When the brightness is insufficient for [AFF] or [AFC], the camera will operate as if [AFS] has been set. In this case, the display will change to the yellow [AFS].



Not available in these cases:

- When Scene Guide Mode is set to [Panorama Shot], even if you set the focus mode lever to [AFS/AFF] or [AFC], the camera will operate as if [AFS] has been set.

Type of the Auto Focus Mode

About [👤] ([Face/Eye Detection])

The camera automatically detects the person's face and eyes.

An eye closer to the camera will be in focus, while the exposure will be optimised for the face.

(When [Metering Mode] is set to [☉])

- Up to 15 faces can be detected. Eyes that can be detected are only those of the face that is in focus.

When the camera detects a face, the AF area and the mark indicating the eye to be in focus are displayed.


Yellow:

When the shutter button is pressed halfway, the frame turns green when the camera is focused.

White:

Displayed when more than one face is detected. Other faces that are the same distance away as faces within the yellow AF areas are also focused.

(A) The eye to be in focus

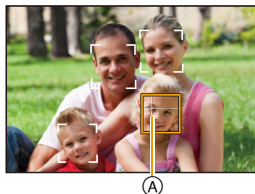

- **You can change the position and size of the AF area and the eye to be in focus. (P145)**

- When [👤] is selected and [Metering Mode] is set to multiple [☉], the camera will adjust the exposure to suit the person's face. (P163)

ⓘ Not available in these cases:

- Under certain picture-taking conditions including the following cases, the Face/Eye Detection Function may fail to work, making it impossible to detect faces. The AF Mode is switched to [📷].

- When the face is not facing the camera
- When the face is at an angle
- When the face is extremely bright or dark
- When the facial features are hidden behind sunglasses, etc.
- When the face appears small on the screen
- When there is little contrast on the faces
- When there is rapid movement
- When the subject is other than a human being
- When the camera is shaking

Setting up [AF-ON] ([Tracking])

Focus and exposure can be adjusted to a specified subject. Focus and exposure will keep on following the subject even if it moves. (Dynamic tracking)

Place the subject in the AF tracking frame, and press the shutter button halfway to lock the subject.

(A) AF tracking frame

- AF area will turn green when the camera detects the subject.
- The AF area turns yellow when the shutter button is released.
- Lock is cancelled when [MENU/SET] is pressed.
- Tracking AF and Face Detection will switch every time ◀ is pressed in the Intelligent Auto (iA or iA+) Mode.



- Exposure is adjusted in accordance with the locked subject when [Metering Mode] is set to [☉]. (P163)
- If it fails to lock, AF area will flash in red, and disappear. Try to lock again.
- When AF tracking fails, [■] is set.

Not available in these cases:

- [AF-ON] cannot be used with [Time Lapse Shot].
- In the following cases, [AF-ON] operates as [■].
 - [Glistening Water]/[Glittering Illuminations]/[Soft Image of a Flower]/[Monochrome] (Scene Guide Mode)
 - [Sepia]/[Monochrome]/[Dynamic Monochrome]/[Rough Monochrome]/[Silky Monochrome]/[Soft Focus]/[Star Filter]/[Sunshine] (Creative Control Mode)
 - [Monochrome] ([Photo Style])
- Dynamic tracking function may not work in the following cases:
 - When the subject is too small
 - When the recording location is too dark or bright
 - When the subject is moving too fast
 - When the background has the same or similar colour to the subject
 - When jitter is occurring
 - When zoom is operated

About [] ([49-Area])

Up to 49 AF areas can be focused.

This is effective when a subject is not in the centre of the screen.


- **The area to be focused can be set. (P145)**

About [], etc. ([Custom Multi])


From among 49 AF areas, you can freely set the optimum shape of the AF area for the subject. (P143)




About [] ([1-Area])

The camera focuses on the subject in the AF area on the centre of the screen.

- **Position and size of the AF area can be changed. (P145)**
- When the subject is not in the centre of the composition in [], you can bring the subject into the AF area, fix the focus and exposure by pressing the shutter button halfway, move the camera to the composition you want with the shutter button pressed halfway, and then take the picture. (Only when the Focus Mode is set to [AFS].)



About [] ([Pinpoint])


You can achieve a more precise focus on a point that is smaller than [].







- **The focus position can be set on an enlarged screen. (P146)**
- If the shutter button is pressed halfway, the screen for checking the focus position will be enlarged.
- The time for which the display is enlarged can be set using [Pinpoint AF Time] in the [Custom] menu. (P147)
- In the following case, [] operates as []
 - When recording motion pictures
- It cannot be set to [] in the following cases.
 - [AFF]/[AFC] (focus mode)

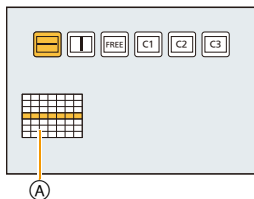Setting the shape of the AF area ([Custom Multi])

Selecting from 49 AF areas, you can freely set the optimum shape of the AF area for the subject.

- 1 Press **◀** ().
- 2 Select a Custom Multi icon (, etc.), and press **▲**.
 - If you press **▼**, the AF area setting screen will be displayed.
- 3 Press **◀/▶** to select a setting.
 - The current shape of the AF area (A) is displayed on the bottom left of the screen.



 ([Horizontal Pattern])	Horizontal line This shape is convenient for taking panning shots or similar shots.	
 ([Vertical Pattern])	Vertical line This shape is convenient for recording objects, such as buildings.	
 ([User Defined])	Free shape	
 ([Custom1]/ [Custom2]/ [Custom3])	You can select a customised setting.	


- 4 Press **▼**.
 - AF area setting screen is displayed.
- 5 **Select AF areas.**
 - The selected AF areas are displayed in yellow, while the areas that are not selected are displayed in white.



When selecting []/[]


When [] is selected, you can change the vertical size and position; when [] is selected, you can change the horizontal size and position.

Button operation	Description of operation
▲/▼/◀/▶	Moves the position
	Changes the size (Up to 3 lines)
[DISP.]	Restores the default setting

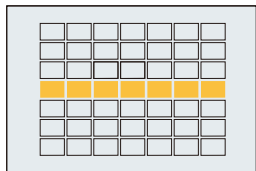**When selecting [FREE]/[C1]/[C2]/[C3]**

Press ▲/▼/◀/▶ to select the AF area, and then press [MENU/SET] to set (repeat).

- The setting is cancelled when [MENU/SET] is pressed again.
- If you press [DISP.], all the selections will be cancelled.

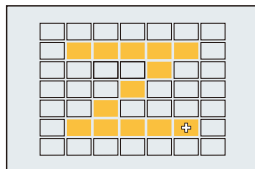**6 Press [Fn3].****■ Registering the set AF area to [C1], [C2] or [C3]**

- 1 On the screen in step 3 on P143, press ▲.**
- 2 Press ▲/▼ to select a destination to which the setting will be registered, and press [MENU/SET].**
 - Confirmation screen is displayed. It is executed when [Yes] is selected.


- Settings registered to [C1]/[C2]/[C3] will be stored even after this unit is turned off.
- Turning off this unit will return the setting adjusted with []/[]/[FREE] back to the default setting.
- If you press a cursor button when [Direct Focus Area] in the [Custom] menu is set to [ON], the AF area setting screen will be displayed.

Setting up position of the AF area/changing size of the AF area

When selecting [AF-ON], [AF-ON]

Position and size of the AF area can be changed.




- 1 Select [AF-ON] or [AF-ON] and press ▼.**
 - AF area setting screen is displayed.
- 2 Press ▲/▼/◀/▶ to move the AF area.**
 - Press [DISP.] to return the AF area to the centre of the screen.
- 3 Rotate the rear dial to change the size of AF area frame.**
 - If you set the AF area over an eye in the yellow frame when [AF-ON] is selected, the eye to be in focus will be changed.
- 4 Press [MENU/SET] to set.**

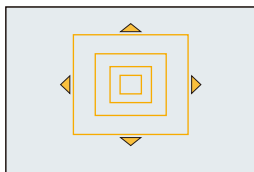**When selecting [AF-ON]**

You can set the focus position by selecting an AF area group.

The 49 AF areas are divided into groups, each consisting of 9 areas (on the edge of the screen, 6 or 4 areas).

- 1 Select [AF-ON] and press ▼.**
 - AF area setting screen is displayed.
- 2 Press ▲/▼/◀/▶ to select an AF area group.**
- 3 Press [MENU/SET] to set.**
 - Only [+] display (centre point of selected group) will remain on the screen.
 - Setting of the AF area frame is cleared when [MENU/SET] is pressed.


Examples of group

When selecting [+]

You can set the focus position precisely by enlarging the screen.

- The focus position cannot be set at the edge of the screen.

- 1 **Select [+] and press ▼.**
- 2 **Press ▲/▼/◀/▶ to set the focus position and then press [MENU/SET].**
 - The assist screen for setting the focus position is displayed in an enlarged size.
- 3 **Move [+] to the focus position with ▲/▼/◀/▶.**
 - Pressing [DISP.] will bring the focus position back to the centre of the assist screen.

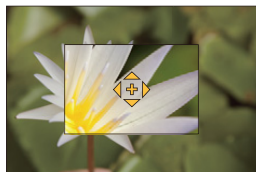

■ Changing the display of the assist screen

Each time the rear dial is pressed, an enlarged display switches between a windowed screen display and a full screen display.



- If the rear dial is rotated, the display can be enlarged/reduced up to approximately 3 to 6 times when the enlarged display is in a windowed display or up to approximately 3 to 10 times when the enlarged display is in a full screen display. The rear dial enlarges/reduces the size at a rate of 1 time.







Setting the duration for which the screen is enlarged


MENU → **fC** [Custom] → [Pinpoint AF Time] →
[LONG] (Approx. 1.5 seconds)/**[MID]** (Approx. 1.0 second)/**[SHORT]**
 (Approx. 0.5 second)


- If you release the shutter button, the enlarged display will be cancelled even during the set time period.

Moving/not moving the AF area with the cursor button

MENU → **fC** [Custom] → [Direct Focus Area] → [ON]/[OFF]

When [, , or ] is selected, the AF area can be moved; when [] is selected, the enlarged position can be moved.

- When [Custom Multi] such as [] is selected, the AF area setting screen will be displayed.
- To set the items that use the cursor buttons like, [White Balance] or [Sensitivity], use the Quick Menu (P40) instead.

- The spot metering target can also be moved to match the AF area when the [Metering Mode] (P163) is set to []. At the edge of the screen, the metering may be affected by the brightness around the AF area.

Not available in these cases:

- [Direct Focus Area] is fixed to [OFF] in the following case.
 - Creative Control Mode
- You cannot change the position and size of the AF area when the zoom position is in the digital zoom range.

Setting the desired focus method

Using the [Custom] menu, you can set the focus method in detail.

Focusing/not focusing when the shutter button is pressed halfway

MENU → **f_C[Custom]** → [Shutter AF] → [ON]/[OFF]

Releasing/not releasing the shutter by pressing the shutter button halfway

MENU → **f_C[Custom]** → [Half Press Release] → [ON]/[OFF]

Recording tips and techniques: setting focus with [AF/AE LOCK]


You can set focus with [AF/AE LOCK] instead of the shutter button.

- 1 Set items in the [Custom] menu.

MENU → **f_C[Custom]** → [Shutter AF] → [OFF]

MENU → **f_C[Custom]** → [AF/AE Lock] → [AF-ON]

- 2 Press [AF/AE LOCK].
 - Set the focus.
- 3 Press the shutter button to take a picture.
 - Set the exposure and take a picture.

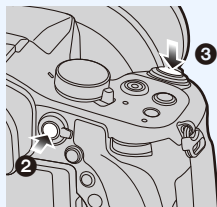

Focusing/Not focusing in advance

MENU → **f_C[Custom]** → [Quick AF] → [ON]/[OFF]

As long as the camera is held steady, the camera will automatically adjust the focus and focus adjustment will then be quicker when the shutter is pressed. This is useful when you do not want to miss a picture-taking opportunity.

- The battery will be consumed faster than usual.
- Press the shutter button halfway again when it is difficult to focus on the subject.
- The [Quick AF] feature is disabled in the following conditions:
 - In Preview Mode
 - In low light situations



Turning on/not turning on the AF Assist Lamp

MENU → **f_C[Custom]** → **[AF Assist Lamp]** → **[ON]/[OFF]**

AF assist lamp will illuminate the subject when the shutter button is pressed halfway, making it easier for the camera to focus when recording in low light conditions. (Larger AF area is displayed depending on the recording conditions.)

- The effective distance of the assist lamp is a maximum of approximately 1.5 m (4.9 feet).
- The AF Assist Lamp is valid only for the subject in the centre of the screen. Use it by positioning the subject in the centre of the screen.
- Remove the lens hood.
- When you do not want to use the AF Assist Lamp (e.g. when taking pictures of animals in dark places), set the [AF Assist Lamp] to [OFF]. In this case, it will become more difficult to focus on the subject.
- The setting is fixed to [OFF] in the following cases.
 - [Distinct Scenery]/[Bright Blue Sky]/[Romantic Sunset Glow]/[Vivid Sunset Glow]/[Glistening Water]/[Clear Nightscape]/[Cool Night Sky]/[Warm Glowing Nightscape]/[Artistic Nightscape]/[Handheld Night Shot] (Scene Guide Mode)
 - When [Silent Mode] is set to [ON]

Recording/not recording even when focus is not achieved

MENU → **f_C[Custom]** → **[Focus/Release Priority]**

[FOCUS]:

You cannot take a picture until the subject is brought into focus.

[RELEASE]:

This gives priority to the best time to take a picture so you can take a picture when the shutter button is pressed fully.

- When set to [RELEASE], please be aware that focus may not be achieved even with focus mode set to [AFS], [AFF] or [AFC].
- [Focus/Release Priority] is disabled during motion picture recording.

Adjusting/not adjusting the focus manually after achieving Auto Focus

MENU → **f_C[Custom]** → **[AF+MF]** → **[ON]/[OFF]**


When AF Lock is ON (press the shutter button halfway with the Focus Mode set to [AFS] or set AF Lock using [AF/AE LOCK]), you can make fine adjustments to the focus manually.

Taking Pictures with Manual Focus


Applicable modes: 

Use this function when you want to fix the focus or when the distance between the lens and the subject is determined and you do not want to activate Auto Focus.



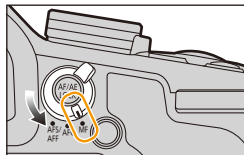

1 Set the focus mode lever to [MF].

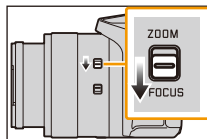


2 Set the manual ring selector switch to [FOCUS].



3 Press  ().

4 Press /// to determine the area to be enlarged, and press [MENU/SET].

- The assist screen is displayed, enlarging the area. (MF Assist) (P151)
- If you press [DISP.], the area to be enlarged will be reset to the centre.

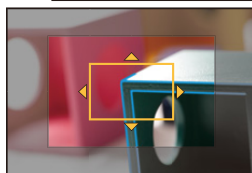

5 Operate the manual ring to set the focus.


Rotate to **A** side:

Focuses on nearby subject

Rotate to **B** side:


Focuses on faraway subject

- Be careful not to accidentally switch the O.I.S. switch or manual ring selector switch when rotating the manual ring.

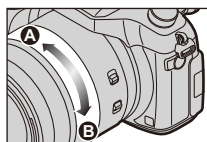

- (A) Indicator for ∞ (infinity)
- (B) MF Assist (enlarged screen)
- (C) Peaking
- (D) MF Guide

- The in-focus portions will be highlighted. (Peaking) (P152)
- You can check whether the point of focus is to the near side or to the far side. (MF Guide) (P152)

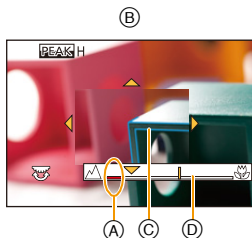

**Recording tips and techniques: when to use manual focus**


Manual focus is convenient when you fine-adjust the focus in Macro Mode or decide in-focus portions in advance.

**Achieving focus quickly using Auto Focus**

MENU → **f_C[Custom]** → **[AF/AE Lock]** → **[AF-ON]**

If [AF/AE LOCK] is pressed in Manual Focus, Auto Focus will work.

- Auto Focus works at the centre of the frame.
- If Auto Focus is used while the MF Assist screen is displayed, the centre of the MF Assist screen will be focused.

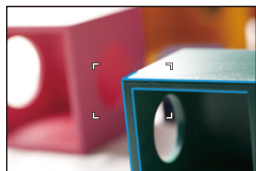**Setting the display method of the MF Assist**

MENU → **f_C[Custom]** → **[MF Assist]**













[]	Enlarge by rotating the manual ring or pressing ◀ () .
[] FOCUS	Enlarge by rotating the manual ring.
[]	Enlarge by pressing ◀ () .
[OFF]	Does not enlarge with the manual ring or ◀ () .



Highlighting/not highlighting in-focus portions

MENU → **f_C[Custom]** → **[Peaking]**

- This function works in Manual Focus or when focus is being adjusted manually with [AF+MF].

[ON]	In-focus portions are highlighted with colour.	
[OFF]	In-focus portions are not highlighted.	
[SET]	[Detect Level]	<p>The detection level for in-focus portions is set. When [HIGH] is set, portions to be highlighted are reduced, allowing you to achieve a more precise focus.</p> <p>[HIGH]/[LOW]</p> <ul style="list-style-type: none"> The detection level setting does not affect the focus range.
	[Display Color]	<p>Sets the highlighting colour used for [Peaking].</p> <ul style="list-style-type: none"> When [Detect Level] is set to [HIGH]: [] (Light blue)/[] (Yellow)/[] (Green) When [Detect Level] is set to [LOW]: [] (Blue)/[] (Orange)/[] (White) Changing the [Detect Level] setting also changes the [Display Color] setting as follows. <ul style="list-style-type: none"> [] (Light blue) ↔ [] (Blue) [] (Yellow) ↔ [] (Orange) [] (Green) ↔ [] (White)

- When [Peaking] is set, [**PEAK_H**] ([Detect Level]: [HIGH]) or [**PEAK_L**] ([Detect Level]: [LOW]) will be displayed.
- Each time the set function button is pressed when [Peaking] is set to [Fn Button Set] (P44) in the [Custom] menu, the peaking setting switches in order of [ON] ([Detect Level]: [LOW]) → [ON] ([Detect Level]: [HIGH]) → [OFF].
- Since portions with clear outlines on the screen are highlighted as in-focus portions, portions to be highlighted vary depending on the recording conditions.
- The colour used for highlighting does not affect recorded images.
- [Peaking] does not work with [Rough Monochrome] in Creative Control Mode.

Displaying/not displaying the MF Guide

MENU → **f_C[Custom]** → **[MF Guide]** → **[ON]/[OFF]**

MF ASSIST

■ **Displaying the MF Assist**

- It is displayed by rotating the manual ring.
- It can also be displayed by pressing ◀ to display the setup screen for the enlarged area, deciding the area to enlarge using the cursor button, and then pressing [MENU/SET].
- It will switch to the setting screen for the enlarged area by pressing the cursor button when the [Direct Focus Area] in the [Custom] menu is set to [ON].

■ **Changing the display of the MF Assist**

Each time the rear dial is pressed, an enlarged display switches between a windowed screen display and a full screen display.



- If the rear dial is rotated, the display can be enlarged/reduced up to approximately 3 to 6 times when the enlarged display is in a windowed display or up to approximately 3 to 10 times when the enlarged display is in a full screen display.

The rear dial enlarges/reduces the size at a rate of 1 time.

■ **Moving the enlarged area**

- The enlarged area can be moved by pressing the cursor button.
- The following will return the MF assistance to the original position.
 - Pressing [DISP.] when the setting screen for determining the area to be enlarged is displayed.

■ **Closing the MF Assist**

- It will close when the shutter button is pressed halfway.
- You can also close MF Assist by pressing [MENU/SET].
- If you have displayed the MF Assist by rotating the manual ring, it will close approximately 10 seconds after you stop operating the camera.

**Not available in these cases:**


- The MF Assist is disabled in the Digital Zoom range or when recording motion pictures.





Technique for Manual Focus

- 1 Rotate the manual ring to set the focus.
- 2 Rotate the manual ring a little further in the same direction.
- 3 Rotate the manual ring slightly in the opposite direction to fine-adjust the focus.

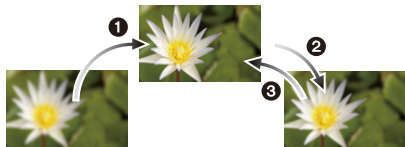

- If you zoom in/out after focusing on a subject, the focus may lose its accuracy. In that case, re-adjust the focus.
- After cancelling Sleep Mode, focus on the subject again.
- If you are taking close-up pictures:
 - We recommend using a tripod and the self-timer (P174).
 - The effective focus range (depth of field) is significantly narrowed. Therefore, if the distance between the camera and the subject is changed after focusing on the subject, it may become difficult to focus on it again.
 - The resolution of the periphery of the picture may decrease slightly. This is not a malfunction.







MENU






Taking Close-up Pictures

Applicable modes:   P A S M  C1 C2  

This mode allows you to take close-up pictures of a subject, e.g. when taking pictures of flowers.

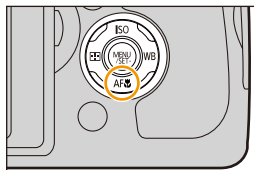- 1 Press  [AF ].
- 2 Press   to select the item and then press [MENU/SET].



[AF ] ([AF Macro])	You can take pictures of a subject as close as 3 cm (0.098 feet) from the lens by rotating the zoom lever upmost to Wide (1×).
[] ([Macro Zoom])	Use this setting to get close to the subject and then further enlarge when taking the picture. You can take a picture with the Digital Zoom up to 3× while maintaining the distance to the subject for the extreme Wide position [3 cm (0.098 feet)]. • The image quality is poorer than during normal recording. • Zoom range will be displayed in blue. (digital zoom range)
[OFF]	—



- We recommend using a tripod and the Self-timer.
- We recommend setting the flash to [⊕] (close the flash) when you take pictures at close range.
- If the distance between the camera and the subject is beyond the focus range of the camera, the picture may not be properly focused even if the focus indication lights.
- When a subject is close to the camera, the effective focus range is significantly narrowed. Therefore, if the distance between the camera and the subject is changed after focusing on the subject, it may become difficult to focus on it again.
- Macro Mode gives priority to a subject close to the camera. Therefore, if the distance between the camera and the subject is far, it takes longer to focus on it.
- When you take pictures at close range, the resolution of the periphery of the picture may decrease slightly. This is not a malfunction.
- If the lens becomes dirty with fingerprints or dust, the lens may not be able to focus on the subject correctly.

Not available in these cases:


- [AF Macro] is not available when the Focus Mode is set to [MF].
- [Macro Zoom] cannot be set in the following cases.
 - [Handheld Night Shot]/[Panorama Shot] (Scene Guide Mode)
 - [High Speed Video] (Creative Video Mode)
 - [Impressive Art]/[Toy Effect]/[Toy Pop]/[Miniature Effect] (Creative Control Mode)
 - When [Burst Rate] in the [Rec] menu is set to [SH]
 - When [HDR] is set to [ON]
 - [Multi Exp.]
 - When [Quality] is set to [RAW₁₀₀], [RAW₁₂₅] or [RAW]

Fixing the Focus and the Exposure (AF/AE Lock)

Applicable modes: **P A S M** **C1 C2**

This is useful when you want to take a picture of a subject outside the AF area or the contrast is too strong and you cannot achieve appropriate exposure.

- 1 Align the screen with the subject.
- 2 Press and hold **[AF/AE LOCK]** to fix the focus or exposure.
 - If you release **[AF/AE LOCK]**, AF/AE Lock is cancelled.
 - Only the exposure is locked in the default setting.
- 3 While pressing **[AF/AE LOCK]**, move the camera as you compose the picture and then press shutter button fully.



(A) AE Lock indication


- When **[AE LOCK]** is set, after pressing the shutter button halfway to focus, press the shutter button fully.

Setting the functions of **[AF/AE LOCK]**

MENU → **[Custom]** → **[AF/AE Lock]**

[AE LOCK]	Only the exposure is locked. • [AEL] , aperture value, the shutter speed light when the exposure is set.
[AF LOCK]	Only the focus is locked. • [AFL] , the focus indication, aperture value, the shutter speed light when the subject is focused.
[AF/AE LOCK]	Both focus and exposure are locked. • [AFL] , [AEL] , the focus indication, aperture value and the shutter speed light when the subject is focused and the exposure is set.
[AF-ON]	Auto Focus is performed.



 **Maintaining/not maintaining the lock when [AF/AE LOCK] is released**

MENU → f_c [Custom] → [AF/AE Lock Hold] → [ON]/[OFF]

- AF Lock only is effective when taking pictures in Manual Exposure Mode.
- AE Lock only is effective when taking pictures with Manual Focus.
- Only the AF lock is active during motion picture recording. Once you cancel the AF lock during the recording, the AF lock cannot be reactivated.
- The subject can be focused again by pressing the shutter button halfway even when AE is locked.
- Programme Shift can be set even when AE is locked.



MENU




Compensating the Exposure


Applicable modes: 

Use this function when you cannot achieve appropriate exposure due to the difference in brightness between the subject and the background.

- 1 Press the rear dial to switch to Exposure Compensation operation.

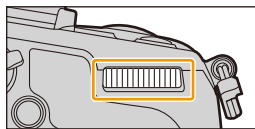

- 2 Rotate the rear dial to compensate the exposure.

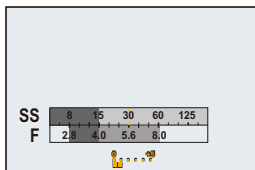

Underexposed	→	Properly exposed	←	Overexposed
				
				
Compensate the exposure towards positive.				Compensate the exposure towards negative.

- The Exposure Compensation value can be set within a range of -5 EV to $+5$ EV. When recording motion pictures, the Exposure Compensation value can be set within a range of -3 EV to $+3$ EV.
- Select [0] to return to the original exposure.

- 3 Press the rear dial to set.


- When [Auto Exposure Comp.] in [Flash] in the [Rec] menu is set to [ON], the brightness of the built-in flash will automatically be set to the level appropriate to the selected Exposure Compensation. (P207)
- When the exposure value is out of the -3 EV to $+3$ EV range, the brightness of the recording screen will no longer change. It is recommended to record by checking the actual brightness of the recorded image in the Auto Review or playback screen.
- The set exposure value is memorised even if the camera is turned off. (When [Exposure Comp. Reset] (P54) is set to [OFF])

Setting the Light Sensitivity


Applicable modes:   **P** **A** **S** **M**  **C1** **C2**  

This allows the sensitivity to light (ISO sensitivity) to be set. Setting to a higher figure enables pictures to be taken even in dark places without the resulting pictures coming out dark.

1 Press ▲ (ISO).




2 Select the ISO sensitivity by rotating the rear dial.

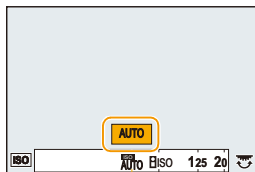

3 Press the rear dial to set.




AUTO	The ISO sensitivity is automatically adjusted according to the brightness. • Maximum [3200]* ¹
 (Intelligent)	The camera detects movement of the subject and then automatically sets the optimum ISO sensitivity and shutter speed to suit the movement of the subject and brightness of the scene to minimise the jitter of the subject. • Maximum [3200]* ¹ • The shutter speed is not fixed when the shutter button is pressed halfway. It is continuously changing to match the movement of the subject until the shutter button is pressed fully.
80*²/100*²/125/200/400/800/ 1600/3200/6400/12800/25600*²	The ISO sensitivity is fixed to various settings. • When the [ISO Increments] in [Rec] menu (P162) is set to [1/3 EV], items of ISO sensitivity that can be set will increase.

*1 When the [ISO Limit Set] (P162) of [Rec] menu is set to anything except [OFF], it is set automatically within the value set in [ISO Limit Set].

*2 Only available when [Extended ISO] is set.

Characteristics of the ISO sensitivity

	125  12800	
Recording location (recommended)	When it is light (outdoors)	When it is dark
Shutter speed	Slow	Fast
Noise	Less	Increased
Jitter of the subject	Increased	Less

- For the focus range of flash when [AUTO] is set, refer to P201.
- [ISO] is not available in Shutter-Priority AE Mode and Manual Exposure Mode.
- When [Multi Exp.] is set, the maximum setting is [3200].
- When [Direct Focus Area] (P147) is set to [ON], the operations on the cursor buttons translate to movements of the AF area. Set using the Quick Menu (P40).
- Setting items below will be selectable in Creative Video Mode.
[AUTO]/[125] to [6400]

Setting the upper limit on ISO sensitivity

Applicable modes:   **P** **A** **S** **M**  **C1** **C2**  

It will select optimal ISO sensitivity with set value as limit depending on the brightness of the subject.

MENU →  **[Rec]** → **[ISO Limit Set]**

Settings: **[200]/[400]/[800]/[1600]/[3200]/[6400]/[12800]/[OFF]**

• It will work when the [Sensitivity] is set to [AUTO] or  [ISO].


Not available in these cases:

- [ISO Limit Set] is disabled in the following cases:
 - [Clear Nightscape]/[Cool Night Sky]/[Warm Glowing Nightscape]/[Handheld Night Shot] (Scene Guide Mode)
 - When recording motion pictures

Setting the step increment of ISO sensitivity

Applicable modes:   **P** **A** **S** **M**  **C1** **C2**  

You can adjust the ISO sensitivity settings for every 1/3 EV.

MENU →  **[Rec]** → **[ISO Increments]**

[1/3 EV]	[L.80]*/[L.100]*/[125]/[160]/[200]/[250]/[320]/[400]/[500]/[640]/[800]/[1000]/[1250]/[1600]/[2000]/[2500]/[3200]/[4000]/[5000]/[6400]/[8000]/[10000]/[12800]/[H.16000]*/[H.20000]*/[H.25600]*
[1 EV]	[L.80]*/[L.100]*/[125]/[200]/[400]/[800]/[1600]/[3200]/[6400]/[12800]/[H.25600]*


* Only available when [Extended ISO] is set.

- When the setting is changed from [1/3 EV] to [1 EV], [Sensitivity] will be set to value closest to the value set during the [1/3 EV].

Extending ISO sensitivity

Applicable modes:   **P** **A** **S** **M**  **C1** **C2**  

You can extend the available ISO sensitivity values.

MENU →  **[Rec]** → **[Extended ISO]**


Settings: **[ON]/[OFF]**






Selecting the Method for Measuring Brightness

([Metering Mode])

Applicable modes:         

Type of optical measurement to measure brightness can be changed.

MENU →  **[Rec]** → **[Metering Mode]**
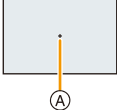
<p> (Multiple)</p>	<p>This is the method in which the camera measures the most suitable exposure by judging the allocation of brightness on the whole screen automatically. Usually, we recommend using this method.</p>
<p> (Centre weighted)</p>	<p>This is the method used to focus on the subject on the centre of the screen and measure the whole screen evenly.</p>
<p> (Spot)</p>	<p>This is the method to measure the subject in the spot metering target .</p> 

- Those menu items are shared by the [Rec] menu and the [Motion Picture] menu. When the setting for either of the two is changed, the setting for the other is also changed.

Setting the Shutter Type

Applicable modes:

You can use either of the two shutters to take pictures: the mechanical shutter or the electronic shutter.

	Mechanical shutter	Electronic Shutter
Description	The camera starts an exposure electronically, and ends it with the mechanical shutter.	The camera starts and ends an exposure electronically.
Flash	○	—
Shutter Speed (Sec.)	60 to 1/4000th	1 to 1/16000th
Shutter sound	Mechanical shutter sound ^{*1} Electronic shutter sound ^{*2}	Electronic shutter sound ^{*2}

*1 The mechanical shutter sound cannot be muted.

*2 Electronic shutter sound settings can be changed in [Shutter Vol.]. (P49)

Select the menu.

MENU → **[Rec]** → **[Shutter Type]**

[AUTO]	Depending on the recording condition and the shutter speed, the shutter type is switched automatically. • Priority is given to the mechanical shutter, which places less limitations on functions, including the ones you use when taking pictures with the flash.
[MSHTR]	Takes pictures only with the mechanical shutter.
[ESHTR]	Takes pictures using only the electronic shutter method.



- When [E] is displayed on the screen, pictures will be taken with the electronic shutter.
- When [Burst Rate] is set to [SH], pictures will be taken with the electronic shutter.
- When [Silent Mode] is set to [ON], pictures will be taken with the electronic shutter.
- **When a moving subject is recorded with the electronic shutter, the subject may appear distorted on the picture.**
- **When the electronic shutter is used under fluorescent or LED lighting, etc., horizontal stripes may appear on the picture. In such cases, lowering the shutter speed may reduce the effect of the horizontal stripes. (P87)**
- **Be sure to pay special attention to the privacy, the likeness rights, etc. of the subject when you use this function. Use at your own risk.**



MENU









Select a Drive Mode

Applicable modes:   P A S M  C1 C2  

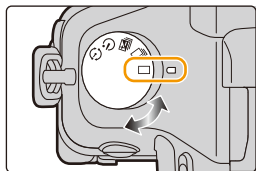You can change what the camera will do when you press the shutter button.

Rotating the drive mode dial.



 Single	When the shutter button is pressed, only one picture is recorded.
 Burst (P167)	Recordings are made in succession while the shutter button is pressed.
 Auto Bracket (P171)	Each time the shutter button is pressed, recordings are made with different exposure settings according to the Exposure Compensation range.
 Self-timer (P174)	When the shutter button is pressed, recording takes place after the set time has elapsed.
 Time Lapse/Animation (P176, 180)	Pictures are recorded with Time Lapse Shot or Stop Motion Animation.



Not available in these cases:

- Not available with [Panorama Shot] in Scene Guide Mode.


Taking Pictures using Burst Mode

Applicable modes:

Pictures are taken continuously while the shutter button is pressed.

- Pictures taken with a burst speed of [SH] will be recorded as a single burst group (P225).

1 Set the drive mode dial to [].

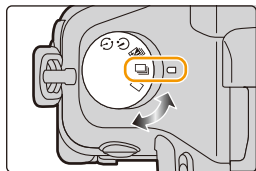

2 Focus on the subject and take a picture.

- Hold down the shutter button fully to activate the Burst Mode.



■ Changing the burst speed

1 Select the menu.

MENU → [Rec] → [Burst Rate]

2 Press ▲/▼ to select the burst speed and then press [MENU/SET].



		[SH] ^{*2} (Super high speed)	[H] (High speed)	[M] (Middle speed)	[L] (Low speed)
Burst speed (pictures/second)	AFS	50	12	7	2
	AFF/AFC	—	7	7	2
Live View during Burst Mode		None	None	Available	Available
*1	With RAW files	—	10 ^{*3,4}	10 ^{*3,4}	10 ^{*3,4}
	Without RAW files	Max. 60	Depends on the capacity of the card ^{*4}		

*1 Number of recordable pictures

*2 The electronic shutter will operate.

*3 Depending on the recording conditions, the number of frames in a burst may be reduced. (For example, when you set [i.Resolution] of the recording menu, the number of frames in a burst may be reduced)

*4 Pictures can be taken until the capacity of the card becomes full. However the burst speed will become slower halfway. The exact timing of this depends on the aspect ratio, the picture size, the setting for the quality and the type of card used.

- The Burst speed may become slower depending on the following settings.
 - [Picture Size] (P131)/[Quality] (P132)/[Sensitivity] (P160)/Focus Mode (P139)/[Focus/Release Priority] (P149)
- Refer to P132 for information about RAW files.





Focusing in Burst Mode

The method for achieving focus varies depending on the focus mode (P139) and the [Focus/Release Priority] (P149) setting in the [Custom] menu.

Focus Mode	Focus/Release Priority	Focus
AFS	[FOCUS]	At the first picture
	[RELEASE]	
AFF/AFC*1	[FOCUS]	Normal focusing*2
	[RELEASE]	Predicted focusing*3
MF	—	Focus set with Manual Focus

*1 When the subject is dark or the burst speed is set to [SH], the focus is fixed on the first picture.

*2 The burst speed may become slower because the camera is continuously focusing on the subject.

*3 Burst speed takes priority, and focus is estimated within possible range.

- When the burst speed is set to [H], continuous shooting speed may be reduced while shooting a large number of consecutive pictures.
- We recommend using the shutter remote control (DMW-RSL1: optional) when you want to keep the shutter button pressed fully while taking pictures in Burst Mode. Refer to P321 for information about the shutter remote control.
- When the burst speed is set to [SH] or [H] (when the Focus mode is [AFS] or [MF]), the exposure and White Balance are fixed at the settings used for the first picture for the subsequent pictures as well. When the burst speed is set to [H] (when the Focus mode is [AFF] or [AFC]), [M] or [L], they are adjusted each time you take a picture.
- Since the shutter speed becomes slower in dark places, the burst speed (pictures/second) may become slower.
- Depending on the operating conditions, it may take time to take the next picture if you repeat the recording of pictures.
- **It may take time to save pictures taken in Burst Mode on the card. If you take pictures continuously while saving, the maximum number of recordable pictures decreases. For continuous shooting, use of a high speed memory card is recommended.**





Not available in these cases:

- The Burst Mode is disabled in the following cases.
 - [Glistening Water]/[Glittering Illuminations]/[Handheld Night Shot]/[Soft Image of a Flower]/[Panorama Shot] (Scene Guide Mode)
 - [Rough Monochrome]/[Silky Monochrome]/[Miniature Effect]/[Soft Focus]/[Star Filter]/[Sunshine] (Creative Control Mode)
 - When White Balance Bracket is set
 - When recording motion pictures
 - When recording using the flash
 - When recording with [iHandheld Night Shot]
 - When [HDR] is set to [ON]
 - [Multi Exp.]
- In the following cases, [SH] in Burst Mode cannot be used.
 - When [Quality] is set to [RAW⁺], [RAW₊] or [RAW]



MENU



Taking Pictures using Auto Bracket

Applicable modes:   **P** **A** **S** **M**  **C1** **C2**  

Maximum of 7 pictures will be recorded with different exposure settings following the Exposure Compensation range every time the shutter button is pressed.

With Auto Bracket

[Step]: [3•1/3], [Sequence]: [0/-/+]

1st picture



±0 EV

2nd picture




-1/3 EV

3rd picture



+1/3 EV

- 1 Set the drive mode dial to [].

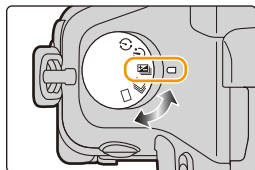

- 2 Focus on the subject and take a picture.

- If you press and hold the shutter button, the number of pictures that you set is taken.
- The Auto Bracket indication blinks until the number of pictures that you set is taken.
- The picture count is reset to [0] if you change the Auto Bracket setting or turn the camera off before all the pictures that you set are taken.



■ Changing the settings for [Single/Burst Settings], [Step] and [Sequence] in Auto Bracket

1 Select the menu.

MENU → [Rec] → [Auto Bracket]

2 Press ▲/▼ to select [Single/Burst Settings], [Step] or [Sequence] and then press [MENU/SET].

3 Press ▲/▼ to select the setting and then press [MENU/SET].

[Single/Burst Settings]	[□] (single)	[Sequence]	[0/-/+]
	[] (burst)		[-/0/+]
[Step]	[3•1/3] (3 pictures)		
	[3•2/3] (3 pictures)		
	[3•1] (3 pictures)		
	[5•1/3] (5 pictures)		
	[5•2/3] (5 pictures)		
	[5•1] (5 pictures)		
	[7•1/3] (7 pictures)		
	[7•2/3] (7 pictures)		
	[7•1] (7 pictures)		

- You can take one picture at a time when set to [□].
- You can continuously take pictures up to set numbers when set to [].
- Exit the menu after it is set.



- When taking pictures using Auto Bracket after setting the Exposure Compensation value, the pictures taken are based on the selected Exposure Compensation value.



Not available in these cases:

- Auto Bracket is disabled in the following cases.
 - [Glistening Water]/[Glittering Illuminations]/[Handheld Night Shot]/[Soft Image of a Flower]/[Panorama Shot] (Scene Guide Mode)
 - [Rough Monochrome]/[Silky Monochrome]/[Miniature Effect]/[Soft Focus]/[Star Filter]/[Sunshine] (Creative Control Mode)
 - When White Balance Bracket is set.
 - When recording motion pictures
 - When recording using the flash
 - When recording with [iHandheld Night Shot]
 - When [HDR] is set to [ON]
 - [Multi Exp.]




MENU



Taking Pictures with the Self-timer


Applicable modes: **P** **A** **S** **M** **C1** **C2**

1 Set the drive mode dial to .

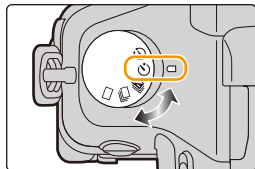

2 Press the shutter button halfway to focus and then press it fully to take the picture.

- Focus and exposure will be set when the shutter button is pressed halfway.
- After the self-timer indicator flashes, recording starts.

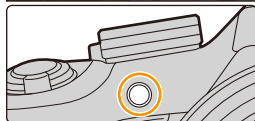

■ Changing the time setting for the self-timer

1 Select the menu.

MENU → **[Rec]** → **[Self Timer]**

2 Press **▲/▼** to select the mode and then press **[MENU/SET]**.

	Picture is taken 10 seconds after shutter is pressed.
	After 10 seconds the camera takes 3 pictures at about 2 seconds intervals.
	Picture is taken 2 seconds after shutter is pressed.
	• When using a tripod, etc., this setting is a convenient way to avoid the jitter caused by pressing the shutter button.




- We recommend using a tripod when recording with the self-timer.



- The flash output may vary slightly when the  is selected.



Not available in these cases:

- It cannot be set to  in the following cases.
 - When White Balance Bracket is set
 - [Multi Exp.]
- Self-timer is disabled in the following cases.
 - [Panorama Shot] (Scene Guide Mode)
 - When recording motion pictures



MENU



Taking Pictures Automatically at Set Intervals

([Time Lapse Shot])


Applicable modes: 

If you set the start time of recording, the recording interval and the number of pictures, the camera can automatically take pictures of subjects such as animals or plants as time elapses and create a motion picture.


• **Set the date and time settings in advance. (P35)**


• Pictures taken with Time Lapse Shot are displayed as a set of group pictures. (P225)

1 Set the drive mode dial to [].

- To use the settings you used in the previous recording with the drive mode [], start recording without changing the settings.

2 Press [MENU/SET].


- The screen selected with [Time Lapse/Animation] in the recording menu will be displayed. (The screen will be displayed only when you press [MENU/SET] for the first time after switching the drive mode dial to []. In other cases, the camera operates as usual, displaying the menu screen.)

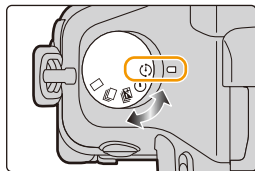

3 Press [MENU/SET].

4 Select [Mode] with ▲/▼, and then press [MENU/SET].

5 Select [Time Lapse Shot] with ▲/▼, and then press [MENU/SET].

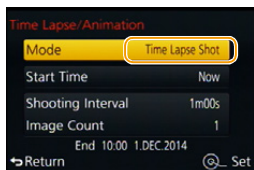


6 Press ▲/▼ to select the item and then press [MENU/SET].

[Start Time]	[Now]	Starts the recording by fully-pressing the shutter button.
	[Start Time Set]	You can set the time to start recording. Any time up to 23 hours 59 minutes ahead can be set. Select the item (hour or minute) by pressing ◀/▶, set the start time by pressing ▲/▼, and then press [MENU/SET].
[Shooting Interval]/ [Image Count]	The recording interval and the number of pictures can be set. ◀/▶: Select the item (minute/second/number of pictures) ▲/▼: Setting [MENU/SET]: Set <ul style="list-style-type: none"> • A recording interval ranging from 1 second to 99 minutes and 59 seconds can be set at 1 second interval. • The number of pictures ranging from 1 to 9999 can be set. 	

- Set the recording interval ① so that it will be longer than the exposure time (shutter speed) ②. (The figure below)

Recording may be skipped when the recording interval ① is shorter than the exposure time (shutter speed) ②, for example during night-time recording.

- ①: First
- ②: Second
- ③: Third



7 Press the shutter button halfway.

- The recording screen will be displayed. You can also perform the same operation by pressing and holding [⏏/➡] until the recording screen is displayed.



8 Press the shutter button fully.

- The recording starts automatically.
- During recording standby, the power will turn off automatically if no operation is performed for a certain period. The Time Lapse Shot is continued even with the power turned off. When the recording start time arrives, the power turns on automatically. To turn on the power manually, press the shutter button halfway.
- If [Fn2] is pressed while this unit is turned on, a selection screen asking you to pause or end will be displayed. Operate in accordance with the screen. Also, if [Fn2] is pressed during the pause, a selection screen asking you to resume or end will be displayed. Pressing the shutter button fully will also enable you to resume from the pause.
- Confirmation screen for creating a motion picture is displayed next, so select [Yes].


9 Select the methods for creating a motion picture.

- The recording format is set to [MP4].

[Rec Quality]	Sets the quality of a motion picture. [4K/25p]/[FHD/50p]/[FHD/25p]/[HD/25p]/[VGA/25p]
[Frame Rate]	Sets the number of frames per second. The larger the number is, the smoother the motion picture will be. [50fps]*/[25fps]/[12.5fps]/[8.3fps]/[6.25fps]/[5fps]/[2.5fps]/[1fps] * Only when set to [FHD/50p]
[Sequence]	[NORMAL]: Splices pictures together in recording order. [REVERSE]: Splices pictures together in reverse recording order.

10 Select [OK] with ▲/▼, and then press [MENU/SET].

- Confirmation screen is displayed. It is executed when [Yes] is selected.
- Motion pictures can also be created from [Time Lapse Video] in the [Playback] menu. (P240)

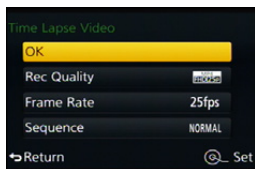**■ Changing the Time Lapse Shot settings**

You can change the settings in [Time Lapse/Animation] in the [Rec] menu.



- This function is not for use in a security camera.
- **If you leave the unit somewhere to perform [Time Lapse Shot], please be careful of theft.**
- **Recording for long periods in cold places such as ski resorts or places at high altitude, or in warm, wet environments may cause a malfunction, so please be careful.**
- Recording may not be consistent with the set recording interval or the set number of pictures depending on recording conditions.
- Recording may be skipped when the recording time is longer than the recording interval, such as long time exposure.
- We recommend that you use a sufficiently charged battery or an AC adaptor (optional) and a DC coupler (optional).
- [Time Lapse Shot] is paused in the following cases.
During [Time Lapse Shot], you can replace the battery and the card, and then restart by turning on this unit. Turn off this unit when replacing the battery or the card.
 - When the charge on the battery runs out
 - Turning the camera off
- Do not connect the AV cable (optional), the HDMI micro cable, or the USB connection cable (supplied) during Time Lapse Shooting.
- When a picture quality different from the aspect ratio of the original pictures is selected, black strips will be displayed on the top and bottom or the left and right of the motion picture.
- If power supply is lost by unplugging the AC adaptor or due to a blackout while creating a motion picture with the AC adaptor, the motion picture you are creating will not be recorded.
- A motion picture that exceeds the recording time of 29 minutes and 59 seconds and a motion picture that exceeds the file size of 4 GB cannot be created.
- Motion pictures less than two seconds long will display "2s" as the motion picture recording time.
- When only one picture is taken, it will not be saved as a group picture.

 **Not available in these cases:**

- This function is not available in the following cases:
 - [Handheld Night Shot]/[Panorama Shot] (Scene Guide Mode)
 - [Multi Exp.]

Creating Stop Motion Pictures ([Stop Motion Animation])

Applicable modes: **[TA] [AF] [P] [A] [S] [M]** **[C1] [C2] [SCN]**

A stop motion picture is created by splicing pictures together.

- **Set the date and time settings in advance.** (P35)
- Pictures taken with [Stop Motion Animation] are displayed as a set of group pictures. (P225)



Before creating a motion picture with [Stop Motion Animation]

With [Stop Motion Animation], you can make a motion picture in which objects appear to be moving by making a recording each time you move a doll, etc, in small increments, and then splicing the recordings together.




- With this unit, pictures of 1 to 50 frames have to be taken per second of a motion picture.
- For smoother motion, record movement in as small increments as possible, and set the frame rate per second (frame rate) to a large value.

1 Set the drive mode dial to [⌚].

- To use the settings you used in the previous recording with the drive mode [⌚], start recording without changing the settings.

2 Press [MENU/SET].


- The screen selected with [Time Lapse/Animation] in the recording menu will be displayed. (The screen will be displayed only when you press [MENU/SET] for the first time after switching the drive mode dial to [⌚]. In other cases, the camera operates as usual, displaying the menu screen.)

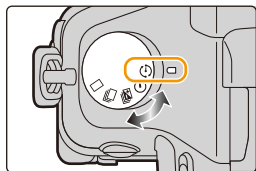

3 Press [MENU/SET].

4 Select [Mode] with ▲/▼, and then press [MENU/SET].

5 Select [Stop Motion Animation] with ▲/▼, and then press [MENU/SET].

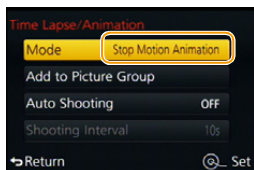

6 Press ▲/▼ to select the recording method, and then press [MENU/SET].

[Auto Shooting]	[ON]	Takes pictures automatically at a set recording interval. When the shutter button is pressed fully, recording starts.
	[OFF]	This is for taking pictures manually, frame by frame.
[Shooting Interval]	<p>(Only when [Auto Shooting] is set to [ON]) Sets the interval for automatic recording. A value between 1 and 60 seconds can be set in 1 second intervals. Press ◀/▶ to select the recording interval (seconds), press ▲/▼ to set it, and press [MENU/SET].</p>	

7 Press the shutter button halfway.

- The recording screen will be displayed. You can also perform the same operation by pressing and holding [⏏/⏏] until the recording screen is displayed.



8 Press the shutter button fully.

- Up to 9999 frames can be recorded.

9 Move the subject to decide on the composition.

- Repeat recording in the same way.
- If the camera is turned off during recording, a message for resuming the recording is displayed when the camera is turned on. Selecting [Yes] allows you to resume the recording from the interruption point.



Recording materials skillfully

- The recording screen displays up to two pictures taken previously. Use them as reference for the amount of movement.
- Pressing [▶] allows you to check recorded pictures. Unnecessary pictures can be deleted by pressing [⏏/⏏]. Pressing [▶] again will return you to the recording screen.

10 To stop the recording, press [MENU/SET], select [Time Lapse/Animation] in the [Rec] menu, and press [MENU/SET].

- Confirmation screen is displayed. It is ended when [Yes] is selected.
- Confirmation screen for creating a motion picture is displayed next, so select [Yes].

11 Select the methods for creating a motion picture.


- The recording format is set to [MP4].



[Rec Quality]	Sets the quality of a motion picture. [4K/25p]/[FHD/50p]/[FHD/25p]/[HD/25p]/[VGA/25p]
[Frame Rate]	Sets the number of frames per second. The larger the number is, the smoother the motion picture will be. [50fps]*/[25fps]/[12.5fps]/[8.3fps]/[6.25fps]/[5fps]/[2.5fps]/[1fps] * Only when set to [FHD/50p]
[Sequence]	[NORMAL]: Splices pictures together in recording order. [REVERSE]: Splices pictures together in reverse recording order.

12 Press ▲/▼ to select [OK] and then press [MENU/SET].

- Confirmation screen is displayed. It is executed when [Yes] is selected.
- Motion pictures can also be created from [Stop Motion Video] in the [Playback] menu. (P240)

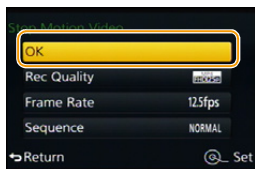

■ Changing the settings of Stop Motion Animation

You can change the settings in [Time Lapse/Animation] in the [Rec] menu.

■ Adding pictures to the Stop Motion Animation group

Selecting [Add to Picture Group] in step 6 will display group pictures recorded with [Stop Motion Animation].

Select a set of group pictures, press [MENU/SET], and then select [Yes] on the confirmation screen.

- Automatic recording may not take place at set intervals because recording takes time under certain recording conditions, such as when the flash is used for recording.
- When a picture quality different from the aspect ratio of the original pictures is selected, black strips will be displayed on the top and bottom or the left and right of the motion picture.
- When a picture quality with a picture size larger than the original pictures is selected, the resolution of the motion picture will deteriorate.
- We recommend that you use a sufficiently charged battery or an AC adaptor (optional) and a DC coupler (optional).
- If power supply is lost by unplugging the AC adaptor or due to a blackout while creating a motion picture with the AC adaptor, the motion picture you are creating will not be recorded.
- A motion picture that exceeds the recording time of 29 minutes and 59 seconds and a motion picture that exceeds the file size of 4 GB cannot be created.
- Motion pictures less than two seconds long will display “2s” as the motion picture recording time.
- If only one picture was taken, the picture is not saved as a group picture. A picture cannot be selected from [Add to Picture Group] when it is the only one that was taken.



Not available in these cases:

- [Stop Motion Animation] is not available in the following cases.
 - [Panorama Shot] (Scene Guide Mode)
 - [Multi Exp.]
- [Auto Shooting] is not available in the following cases.
 - [Handheld Night Shot] (Scene Guide Mode)

Functions Customised for Various Subjects and Purposes

Making Multiple Exposures on One Picture

([Multi Exp.])


Applicable modes:    

Gives an effect like multi exposure. (up to 4 times equivalent per a single image)

1 Select the menu.

MENU →  [Rec] → [Multi Exp.]

2 Press ▲/▼ to select [Start] and then press [MENU/SET].

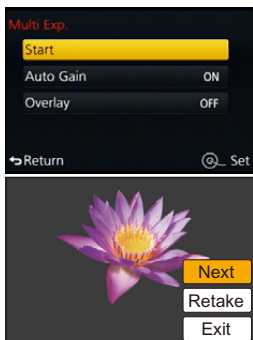

3 Decide on the composition, and take the first picture.

- After taking the picture, press the shutter button halfway down to take the next picture.
- Press ▲/▼ to select the item and then press [MENU/SET] for one of the following operations.


- [Next]: Advance to the next picture.
- [Retake]: Return to the first picture.
- [Exit]: Record the image of the first picture, and finish the multiple exposure picture-taking session.

4 Shooting the second, third, and fourth exposures.

- If [Fn1] is pressed while taking pictures, the photographed images are recorded, and the multiple exposure picture-taking session will be completed.

5 Press ▼ to select [Exit] and then press [MENU/SET].

- You can also press the shutter button halfway to finish.

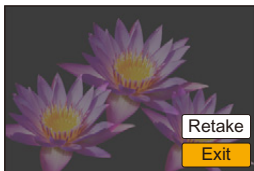

■ About Automatic Gain Control setting

Select [Auto Gain] on the screen shown in step 2 and set it.

- **[ON]:** The brightness level is adjusted according to the number of pictures taken and the pictures are superimposed over each other.
- **[OFF]:** Compensate the exposure to match the subject so that all the superimposed exposure effects will be just right.

■ Combining RAW images in the card

On the screen shown in step 2, set [Overlay] to [ON].

After [Start], images in the card will be displayed. Select the RAW images, press [MENU/SET], and continue recording.

- [Overlay] is available only for RAW images taken with this unit.

- Image is not recorded until completion.
- The recording information displayed for pictures taken with multiple exposures is the recording information for the last picture taken.
- Items shown in grey on the menu screen cannot be set during multiple exposures.



Not available in these cases:

- This function is not available in the following cases:
 - When using [Time Lapse Shot]
 - When using [Stop Motion Animation]

Disabling Operational Sounds and the Output of Light at once ([Silent Mode])

Applicable modes:   P A S M  C1 C2  

This function is useful for recording images in a quiet environment, public facility, etc. or recording images of subjects such as babies or animals.




Select the menu.

MENU → fC[Custom] → [Silent Mode]

Settings: [ON]/[OFF]

- Operational sounds are muted, and the flash and the AF Assist lamp are forced off.

The following settings are fixed.

- [Shutter Type]: [ESHTR]
- [Flash Mode]:  (forced flash off)
- [AF Assist Lamp]: [OFF]
- [Beep Volume]:  (OFF)
- [Shutter Vol.]:  (OFF)

- Even when [ON] is set, the following functions light up/flash.

- Status indicator
- Self-timer indicator
- Wi-Fi connection lamp

- Operational sounds of the camera, such as the sound of the lens aperture being adjusted, are not muted.

- Be sure to pay special attention to the privacy, the likeness rights, etc. of the subject when you use this function. Use at your own risk.**

Taking Clear Pictures by Registering Faces

([Face Recog.])

Applicable modes:

Face Recognition is a function which finds a face resembling a registered face and prioritises focus and exposure automatically. Even if the person is located towards the back or on the end of a line in a group photo, the camera can still take a clear picture.

Select the menu.

MENU → [Rec] → [Face Recog.]

Settings: [ON]/[OFF]/[MEMORY]

[Face Recog.] is initially set to [OFF] on the camera.

[Face Recog.] will turn [ON] automatically when the face image is registered.


- The following functions will also work with the Face Recognition function.

In Recording Mode

- Display of corresponding name when camera detects a registered face* (if name has been set for the registered face)

* Names of up to 3 people are displayed.

Precedence for the names displayed when taking pictures is determined according to the order of registration.

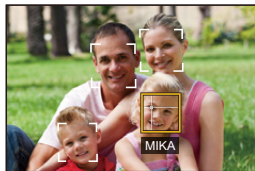


In Playback Mode

- Display of name and age (if information has been registered)
- Selective playback of pictures chosen from pictures registered with Face Recognition ([Category Play] (P230))



- **[Face Recog.] only works when the AF Mode is set to [👤].**
- During the Burst Mode, [Face Recog.] picture information can be attached to only the first picture.
- When group pictures are played back, the name of the first picture of the set is displayed.
- Face Recognition may take more time to select and recognise distinctive facial features than regular Face/Eye Detection.
- Even when face recognition information has been registered, pictures taken with [Name] set to [OFF] will not be categorised by face recognition in [Category Play].
- **Even when Face Recognition information is changed (P191), Face Recognition information for the pictures already taken will not be changed.**
For instance, if the name is changed, pictures recorded before the change will not be categorised by face recognition in [Category Play].
- To change the name information of the pictures taken, perform the [REPLACE] in [Face Rec Edit] (P248).

 **Not available in these cases:**

- You cannot use [Face Recog.] in the following cases.
 - Recording Modes which do not allow setting to [👤] of the AF Mode (P138)
 - [Panorama Shot] (Scene Guide Mode)
 - [Miniature Effect] (Creative Control Mode)
 - When recording motion pictures
 - When using [Time Lapse Shot]

Face Settings

You can register information such as names and birthdays for face images of up to 6 people.

■ Point of recording when registering the face images

- Face front with eyes open and mouth closed, making sure the outline of the face, the eyes, or the eyebrows are not covered with hair when registering.
- Make sure there is no extreme shading on the face when registering. (Flash will not flash during registration.)

(Good example for registering)




■ When face is not recognised during recording

- Register the face of same person indoors and outdoors, or with different expressions or angles. (P190)
- Additionally register at the location of recording.
- When a person who is registered is not recognised, correct by re-registering.
- Face Recognition may not be possible or may not recognise faces correctly even for registered faces, depending on the facial expression and environment.

1 Press ▲/▼ to select [MEMORY] and then press [MENU/SET].


2 Press ▲/▼/◀/▶ to select the Face Recognition frame that is not registered, and then press [MENU/SET].

- [New] will not display if there are 6 people already registered. Delete a person already registered to register a new person.

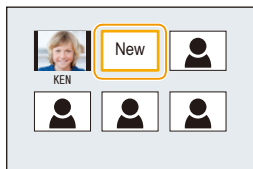

3 Take the picture adjusting the face with the guide.

- Confirmation screen is displayed. It is executed when [Yes] is selected.
- The faces of subjects other than people (pets, etc.) cannot be registered.
- To display the description of the face registration, press ▶.

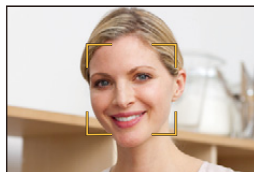

4 Press ▲/▼ to select the item and then press [MENU/SET].

- You can register up to 3 face images.

[Name]	<p>It is possible to register names.</p> <ol style="list-style-type: none"> 1 Press ▼ to select [SET] and then press [MENU/SET]. 2 Enter the name. <ul style="list-style-type: none"> • For details on how to enter characters, refer to “Entering Text” section on P55.
[Age]	<p>It is possible to register the birthday.</p> <ol style="list-style-type: none"> 1 Press ▼ to select [SET] and then press [MENU/SET]. 2 Press ◀/▶ to select the items (Year/Month/Day), and then press ▲/▼ to set and then press [MENU/SET].
[Add Images]	<p>To add additional face images.</p> <p>(Add Images)</p> <ol style="list-style-type: none"> 1 Select the unregistered face recognition frame, and then press [MENU/SET]. 2 Perform step 3 in “Face Settings”.
	<p>To delete one of the face images.</p> <p>(Delete)</p> <p>Press ◀/▶ to select the face image to delete, and then press [MENU/SET].</p> <ul style="list-style-type: none"> • This feature requires that at least one facial image remain, once registered. • Confirmation screen is displayed. It is executed when [Yes] is selected.

Change or delete the information for a registered person

You can modify the pictures or information of an already registered person. You can also delete the information of the registered person.

- 1 Press **▼** to select **[MEMORY]** and press **[MENU/SET]**.
- 2 Press **▲/▼/◀/▶** to select the face image to edit or delete and then press **[MENU/SET]**.
- 3 Press **▲/▼** to select the item and then press **[MENU/SET]**.

[Info Edit]	Changing the information of an already registered person. Perform step 4 in “Face Settings”.
[Priority]	The focus and exposure are preferentially adjusted for higher-priority faces. Press ▲/▼/◀/▶ to select the priority and then press [MENU/SET].
[Delete]	Deleting information of a registered person. • Confirmation screen is displayed. It is executed when [Yes] is selected.

Recording Profiles of Babies and Pets on Images

Applicable modes:

By setting the name and birthday of your baby or pet in advance, you can record their name and age in months and years on images.

You can display them during playback or stamp them on recorded images using [Text Stamp] (P236).

■ Setting [Age] or [Name]

1 Select the menu.

MENU → [Rec] → [Profile Setup]

Settings: [] ([Baby1])/[] ([Baby2])/[] ([Pet])/[OFF]/[SET]

2 Press ▲/▼ to select [SET] and then press [MENU/SET].

3 Press ▲/▼ to select [Baby1], [Baby2] or [Pet] and then press [MENU/SET].

4 Press ▲/▼ to select [Age] or [Name] and then press [MENU/SET].

5 Press ▲/▼ to select [SET] and then press [MENU/SET].

Enter [Age] (birthday)


◀/▶: Select the items (year/month/day)

▲/▼: Setting

[MENU/SET]: Set

Enter [Name]

For details on how to enter characters, refer to “Entering Text” on P55.

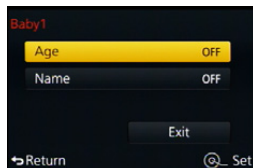

6 Press ▼ to select [Exit] and then press [MENU/SET] to finish.

■ To cancel [Age] and [Name]

Select the [OFF] setting in step 1.

- The age and name can be printed out using the “PHOTOfunSTUDIO” bundled software on the DVD (supplied).



Not available in these cases:

- Still pictures recorded during motion picture recording ([] (motion picture priorities)) (P219) will not record age or name.

Using screens and displays suitable for recording

Displaying the centre of the screen ([Center Marker])

Applicable modes: 

The centre of the recording screen will be displayed as [+]. This is convenient for operating the zoom while keeping the subject at the centre of the screen.

MENU → f_C [Custom] → [Center Marker]

Settings: [ON]/[OFF]





Checking areas that may be white saturated ([Zebra Pattern])

Applicable modes: 

You can check areas that may be white saturated by displaying areas above a certain luminance level in a zebra pattern. You can also set the minimum luminance level (brightness) to be processed as a zebra pattern.

MENU → f_C [Custom] → [Zebra Pattern]

[ZEBRA1]	Displays areas above a certain luminance level by a right-leaning zebra pattern.	
[ZEBRA2]	Displays areas above a certain luminance level by a left-leaning zebra pattern.	
[OFF]	—	
[SET]	<p>Sets the minimum brightness level for each zebra pattern. [Zebra 1]/[Zebra 2] Press ▲/▼ to select the brightness, and press [MENU/SET].</p> <ul style="list-style-type: none"> You can select a brightness value between [50%] and [105%]. In [Zebra 2], you can select [OFF]. If you select [100%] or [105%], only the areas that are already white saturated are displayed in a zebra pattern. The smaller the value is, the wider the brightness range to be processed as a zebra pattern will be. 	



- If there are any white saturated areas, we recommend compensating the exposure towards negative (P159) referring to the histogram (P66) and then taking the picture. It may result in a better quality picture.
- Displayed zebra patterns will not be recorded.
- If you assign [Zebra Pattern] to [Fn Button Set] (P44) in the [Custom] menu, each time you press the function button to which the setting is assigned, the zebra pattern toggles as follows: [Zebra 1] → [Zebra 2] → [OFF].
When [Zebra 2] is set to [OFF], the setting toggles in the order of [Zebra 1] → [OFF], allowing you to switch the setting quickly.

Displaying the recording screen in black and white ([Monochrome Live View])

Applicable modes:           

You can display the recording screen in black and white. This function is convenient when a black and white screen will make it easier to set focus with Manual Focus.

MENU → f_c [Custom] → [Monochrome Live View]

Settings: [ON]/[OFF]


- Recorded images will not be affected.

Recording while monitoring camera images

When using the HDMI output, you can take pictures while monitoring the camera image on a TV, etc.

Refer to P301 on how to connect with TV by using HDMI micro cable.

- The camera image is not output to the TV during motion picture recording.

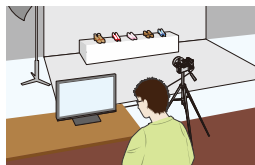

Switching the information displayed

You can change the display shown during HDMI output using [HDMI Info Display (Rec)] (P53) in [TV Connection] on the [Setup] menu.

[ON]: The camera display is output as is.


[OFF]: Only images are output.

- When using the Auto Focus Mode [\oplus] or MF assist, the screen cannot be enlarged in windowed mode.
- [Aspect Ratio] in the [Rec] menu is fixed to [16:9].
- Electronic sounds and electronic shutter sounds are muted.
- If you set up a Wi-Fi connection while using the HDMI output, no image will be displayed on the camera monitor.
- The scene selection screen in Scene Guide Mode is not output through the HDMI connection.
- Images are not output through the HDMI connection in panorama picture recording.

Optical Image Stabiliser

The camera detects jitter during recording and automatically corrects it, so you can record images with reduced jitter.

Confirm that the O.I.S. switch is set to [ON].

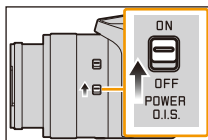

■ **Setting the Stabiliser in the [Rec] menu**

1 Select the menu.

MENU → [Rec] → [Stabilizer]

2 Press **▲/▼** to select the item and then press **[MENU/SET]**.

([Normal])	Vertical and horizontal shake are compensated for.
([Panning])	Camera shake is corrected for up/down movements. This mode is ideal for panning (a method of taking pictures which involves turning the camera to track the movements of a subject which continues to move in a fixed direction).

Preventing jitter (camera shake)

When the jitter alert [] appears, use [Stabilizer], a tripod or the self-timer (P174).

• Shutter speed will be slower particularly in the following cases. Keep the camera still from the moment the shutter button is pressed until the picture appears on the screen.

We recommend using a tripod.


– Slow Sync.

– Slow Sync./Red-Eye Reduction

– [Clear Nightscape]/[Cool Night Sky]/[Warm Glowing Nightscape]/[Artistic Nightscape]/
[Glittering Illuminations]/[Clear Night Portrait] (Scene Guide Mode)

– When you set to a slow shutter speed

- We recommend setting the O.I.S. switch to [OFF] when using a tripod.
- We recommend taking pictures with the viewfinder when panning in [📷].
- The 5-axis Hybrid Image Stabiliser function automatically functions while recording motion pictures. This decreases the jitter of the image when recording motion pictures while zooming or walking, etc.
 - The recording range may become narrower.
 - If you record a motion picture with [Rec Quality] set to [VGA/4M/25p], the stabiliser function may be less effective compared to other picture quality settings.
- The angle of view for the motion picture recording changes if you use the O.I.S. switch during the recording.
- The stabiliser function may not be effective in the following cases. Be careful of camera jitter when you press the shutter button.
 - When there is a lot of jitter.
 - When the zoom magnification is high.
 - In digital zoom range.
 - When taking pictures while following a moving subject.
 - When the shutter speed becomes slower to take pictures indoors or in dark places.
- The panning effect in [📷] is more difficult to achieve in the following cases.
 - In brightly lit places such as in broad daylight on a summer's day.
 - When the shutter speed is faster than 1/100th of a second
 - When you move the camera too slowly because the subject is moving slowly. (The background will not become a blur.)
 - When the camera does not keep up with the subject satisfactorily.




 **Not available in these cases:**

- The [📷]([Normal]) stabiliser is not available for [Panorama Shot] in Scene Guide Mode.
- The stabiliser is not available for [High Speed Video].
- The 5-axis Hybrid Image Stabiliser function is not available when recording a motion picture with [Rec Quality] set to [4K/100M/25p].

Taking Pictures with the Zoom

Applicable modes: 

You can zoom-out to record landscapes etc. in wide angle (Wide) or zoom-in to make people and objects appear closer (Tele).

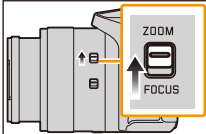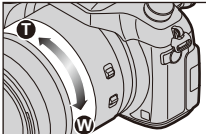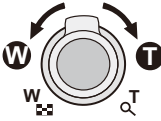With the manual ring	With the zoom lever
<p>1 Set the manual ring selector switch to [ZOOM].</p>  <p>2 Rotate the manual ring.</p>  <ul style="list-style-type: none"> • Be careful not to accidentally switch the O.I.S. switch or manual ring selector switch when rotating the manual ring. 	<p>Rotate the zoom lever.</p>  <ul style="list-style-type: none"> • The smaller the rotation angle is, the slower the zoom speed becomes; the greater the rotation angle is, the faster the zoom speed becomes.
<p>T side: Enlarges distant subject</p> <p>W side: Widens angle of view</p>	<p>T side: Enlarges distant subject</p> <p>W side: Widens angle of view</p>

• The lens barrel will extend or retract depending on the zoom position. Take care not to obstruct the movement of the lens barrel when using the Zoom function.

Optical Zoom

Zooms in without deteriorating the image quality.

Maximum magnification: 16×



Not available in these cases:

- This function is not available in the following cases:
 - [Panorama Shot] (Scene Guide Mode)
 - When recording with Zoom Macro

Extra Optical Zoom

This function works when any of the picture sizes (P131) indicated with **EX** is selected. You can zoom in further than you can with the Optical Zoom without deteriorating the image quality.

Maximum magnification: 32×

(This includes the optical zoom magnification. The magnification level differs depending on [Picture Size] setting.)


Not available in these cases:

- This function is not available in the following cases:
 - [Toy Effect]/[Toy Pop] (Creative Control Mode)
 - [Handheld Night Shot]/[Panorama Shot] (Scene Guide Mode)
 - When [Burst Rate] in the [Rec] menu is set to [SH]
 - When [HDR] is set to [ON]
 - [Multi Exp.]
 - When [iHandheld Night Shot] is set to [ON]
 - When [iHDR] is set to [ON]
 - When [Quality] is set to [RAW⁺], [RAW₊] or [RAW]
 - When recording with Zoom Macro
 - When recording motion pictures

Intelligent Zoom

Applicable modes:           

You can zoom in up to twice the original zoom magnification while minimising the deterioration of the image quality.

MENU →  [Rec] → [i.Zoom] → [ON]/[OFF]

MENU →  [Motion Picture] → [i.Zoom] → [ON]/[OFF]

Not available in these cases:


- This function is not available in the following cases:
 - [Impressive Art]/[Toy Effect]/[Toy Pop] (Creative Control Mode)
 - [Handheld Night Shot]/[Panorama Shot] (Scene Guide Mode)
 - When [Burst Rate] in the [Rec] menu is set to [SH]
 - When [HDR] is set to [ON]
 - [Multi Exp.]
 - When [iHandheld Night Shot] is set to [ON]
 - When [iHDR] is set to [ON]
 - When [Quality] is set to [RAW⁺], [RAW₊] or [RAW]

[Digital Zoom]

Applicable modes:   **P A S M**  **C1 C2**  

Although the image quality deteriorates every time you zoom in further, you can zoom in up to four times the original zoom magnification.

MENU →  **[Rec]** → **[Digital Zoom]** → **[ON]/[OFF]**

MENU →  **[Motion Picture]** → **[Digital Zoom]** → **[ON]/[OFF]**

- When using the [i.Zoom], the maximum magnification of the Digital Zoom is limited to 2×.
- When using the Digital Zoom, we recommend using a tripod and the self-timer (P174) for taking pictures.
- In the Digital Zoom range, the AF area is displayed at the centre in a larger size.




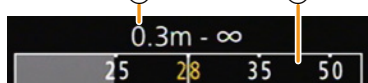

 **Not available in these cases:**

- This function is not available in the following cases:
 - [Impressive Art]/[Toy Effect]/[Toy Pop]/[Miniature Effect] (Creative Control Mode)
 - [Handheld Night Shot]/[Panorama Shot] (Scene Guide Mode)
 - [High Speed Video] (Creative Video Mode)
 - When [Burst Rate] in the [Rec] menu is set to [SH]
 - When [HDR] is set to [ON]
 - [Multi Exp.]
 - When [Quality] is set to [RAW_{iii}], [RAW₊₊] or [RAW]

Changing the zoom setting

MENU → **f_C** [Custom] → [Zoom Lever]

MENU → **f_C** [Custom] → [Manual ring (Zoom)]

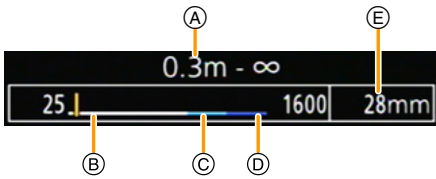 (Seamless Zoom)	<p>Performs normal zooming when you operate the zoom.</p> <p>(A) Recordable range display (B) Optical Zoom range (C) Intelligent Zoom range (D) Digital Zoom range (E) Current focal distance (35 mm film camera equivalent)</p> 
 (Step Zoom)	<p>Stops zooming at preset focal lengths when you operate the zoom. • [Step Zoom] is disabled during motion picture recording.</p> <p>(F) Recordable range display (G) Step zoom indication</p> 
 (Exposure Compensation)	<p>(This option is displayed only when [Zoom Lever] is selected.) Assigns the exposure compensation function to the zoom lever.</p>

Saving the zoom position when you turn off the camera

MENU → **f_C** [Custom] → [Zoom Resume] → [ON]/[OFF]

Taking pictures by using the flash

Applicable modes: **[A]** **[Av]** **[P]** **[A]** **[S]** **[M]** **[C1]** **[C2]** **[SCN]**

With the built-in flash you can take pictures in dark places or adjust the entire contrast of a picture by illuminating a subject with a bright background.

■ Open/Close the built-in flash


(A) To open the flash

Slide the flash open lever.

(B) To close the flash

Press the flash until it clicks.

- Forcibly closing the flash can damage the camera.
- Make sure to close the built-in flash when it is not in use.
- The flash setting is fixed to **[⊕]** while the flash is closed.

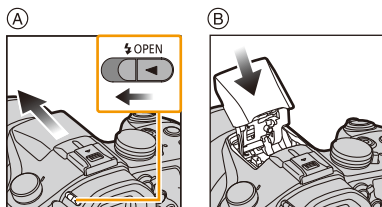

- **Be careful when opening the flash as the flash will jump out.**
- **Be careful not to catch a finger when closing a flash bulb.**



Forcing the flash off (**[⊕]**)

When the flash is closed or pictures cannot be taken with the flash due to motion picture recording, etc., **[⊕]** (forced flash off) is displayed on the recording screen and the flash will not fire.

- **Close the flash in places where its use is prohibited so that it will not fire.**

■ The available flash range (approximation)

If the distance to the subject is close when taking a picture using a flash, part of the recorded image becomes dark because the light of flash is blocked by the lens or it becomes out of flash range. Check the distance to the subject when taking a picture.

	Wide	Tele
[AUTO] in [Sensitivity]	30 cm (0.98 feet) to 13.5 m (44 feet)	1.0 m (3.3 feet) to 9.5 m (31 feet)

- This is the range when [ISO Limit Set] (**P162**) is set to [OFF].





Using the flash skilfully

- When recording with the flash, white saturation can occur if the subject is too close. If [Highlight] of the [Custom] menu is set to [ON], regions of white saturation will blink black and white when you play back or use Auto Review. In this case, we recommend that you adjust [Flash Adjust.] (P207) in the minus direction and record the pictures again.
 - When taking pictures with flash with the lens hood attached, the lower portion of the photo may turn dark and the control of the flash may be disabled because the photo flash may be obscured by the lens hood. We recommend detaching the lens hood.
- Be careful so that dust or sticky substances do not adhere to the flash. When this occurs, the flash may not pop up smoothly or at all.
 - Do not bring the flash too close to objects or close the flash while it is activated. The objects may be deformed or discoloured by its heat or lighting.
 - Do not close the flash soon after the flash is activated prior to taking pictures due to Forced ON/Red-Eye Reduction etc. It causes a malfunction.
 - It may take time to charge the flash if you repeatedly take pictures. You must wait a moment to take the next picture while the flash icon is blinking red indicating the flash is charging.
 - When you attach an external flash, it takes priority over the built-in flash. Refer to P319 for the external flash.
 - In the following cases, the flash is fixed to [☹] (forced flash off).
 - When recording motion pictures
 - When using the electronic shutter
 - When [HDR] is set to [ON]
 - When [Silent Mode] is set to [ON]



MENU



Changing Flash Mode

Applicable modes: **P** **A** **S** **M** **C1** **C2** **SCN**

Set the built-in flash to match the recording.

1 Select the menu.

MENU → [Rec] → [Flash]

2 Press ▲/▼ to select [Flash Mode] and then press [MENU/SET].

3 Press ▲/▼ to select the item and then press [MENU/SET].

((Forced Flash On))	The flash is activated every time regardless of the recording conditions.
((Forced On/Red-Eye))*	<ul style="list-style-type: none"> • Use this when your subject is back-lit or under fluorescent light.
((Slow Sync.))	When taking pictures against a dark background landscape, this feature will slow the shutter speed when the flash is activated. Dark background landscape will appear brighter.
((Slow Sync./Red-Eye))*	
	<ul style="list-style-type: none"> • Use this when you take pictures of people in front of a dark background. • Using a slower speed can cause motion blur. Using a tripod can enhance your photos.

* It can be set only when [Wireless] in [Flash] is set to [OFF] and [Firing Mode] is set to [TTL].

The flash is activated twice.

The interval between the first and second flash is longer when [] or [] is set. The subject should not move until the second flash is activated.

• The Red-Eye Reduction effect differs between people. Also, if the subject was far away from the camera or was not looking at the first flash, the effect may not be evident.

■ Shutter speed for each flash setting

Flash setting	Shutter speed (Sec.)
	1/60*1 to 1/4000th

Flash setting	Shutter speed (Sec.)
	1 to 1/16000th
	60*2 to 1/16000th

*1 This becomes 60 seconds in Shutter-Priority AE Mode and B (Bulb) in the Manual Exposure Mode.

*2 This becomes B (Bulb) in the Manual Exposure Mode.

• In Intelligent Auto (or) Mode, shutter speed changes depending on the identified scene.

■ Available flash settings by Recording Mode

The available flash settings depend on the Recording Mode.

(○: Available, —: Not available, ●: Initial setting of Scene Guide Mode)

Recording Mode						
	Intelligent Auto Mode	—*3	—*3	—*3	—*3	○
	Intelligent Auto Plus Mode	—*3	—*3	—*3	—*3	○
P	Programme AE Mode	○	○	○	○	○
A	Aperture-Priority AE Mode	○	○	○	○	○
S	Shutter-Priority AE Mode	○	○	—	—	○
M	Manual Exposure Mode	○	○	—	—	○
	Creative Video Mode	—	—	—	—	○
	Creative Control Mode	—	—	—	—	○

*3 Cannot be set using the [Rec] menu.

[A] is set when the flash is opened. (P77)



	⚡	⚡Ⓞ	⚡S	⚡SⓄ	Ⓞ
[Clear Portrait]	○	●	—	—	○
[Silky Skin]	○	●	—	—	○
[Backlit Softness]	—	—	—	—	●
[Clear in Backlight]	●	—	—	—	○
[Relaxing Tone]	—	—	—	—	●
[Sweet Child's Face]	○	●	—	—	○
[Distinct Scenery]	—	—	—	—	●
[Bright Blue Sky]	—	—	—	—	●
[Romantic Sunset Glow]	—	—	—	—	●
[Vivid Sunset Glow]	—	—	—	—	●
[Glistening Water]	—	—	—	—	●
[Clear Nightscape]	—	—	—	—	●
[Cool Night Sky]	—	—	—	—	●
[Warm Glowing Nightscape]	—	—	—	—	●
[Artistic Nightscape]	—	—	—	—	●
[Glittering Illuminations]	—	—	—	—	●
[Handheld Night Shot]	—	—	—	—	●
[Clear Night Portrait]	—	—	—	●	○
[Soft Image of a Flower]	●	—	—	—	○
[Appetizing Food]	●	—	—	—	○
[Cute Dessert]	●	—	—	—	○
[Freeze Animal Motion]	●	—	—	—	○
[Clear Sports Shot]	●	—	—	—	○
[Monochrome]	●	○	○	○	○
[Panorama Shot]	—	—	—	—	●

SCN

Scene Guide
Mode

- The flash setting may change if the Recording Mode is changed. Set the flash setting again if necessary.
- When changing scene using Scene Guide Mode, the Scene Guide Mode flash setting is returned to the default value with each change of scene.
- Flash will not be activated when recording motion picture.

Setting to the 2nd Curtain Synchro

Applicable modes: **P** **A** **S** **M** **C1** **C2**



2nd curtain synchro activates the flash just before the shutter closes when taking pictures of moving objects such as cars using a slow shutter speed.

1 Select the menu.

MENU → **[Rec]** → **[Flash]**

2 Press ▲/▼ to select **[Flash Synchro]** and then press **[MENU/SET]**.

3 Press ▲/▼ to select the item and then press **[MENU/SET]**.

[1ST]	1st curtain synchro The normal method when taking pictures with the flash.	
[2ND]	2nd curtain synchro The light source appears behind the subject and picture becomes dynamic.	

- Set it to [1ST] for normal use.
- [2nd] is displayed in the flash icon on the screen if you set [Flash Synchro] to [2ND].
- Only available when [Wireless] in [Flash] is set to [OFF]. (P209)
- The [Flash Synchro] settings also apply to an external flash. (except the wireless flash) (P319)
- When a fast shutter speed is set, the effect of [Flash Synchro] may deteriorate.
- You cannot set [] or [] when [Flash Synchro] is set to [2ND].

Adjust the flash output

Applicable modes:   

Adjust the flash brightness when pictures taken with the flash are over or underexposed.

1 Select the menu.

MENU →  **[Rec]** → **[Flash]**

2 Press ▲/▼ to select **[Flash Adjust.]** and then press **[MENU/SET]**.

3 Press ◀/▶ to set the flash output and then press **[MENU/SET]**.

- You can adjust from [−3 EV] to [+3 EV] in steps of 1/3 EV.
- Select [±0] to return to the original flash output.

- [+] or [−] is displayed on the flash icon in the screen when the flash level is adjusted.
- It can be set only when [Wireless] (P209) in [Flash] is set to [OFF] and [Firing Mode] (P208) is set to [TTL].
- The [Flash Adjust.] setting also applies to an external flash. (excluding the wireless flash) (P319)

Synchronising the output of the built-in flash to the Exposure Compensation

Applicable modes:   

When [Auto Exposure Comp.] in [Flash] in the [Rec] menu is set to [ON], the brightness of the built-in flash will automatically be set to the level appropriate to the selected Exposure Compensation.

- For details on Exposure Compensation, refer to P159.
- The [Auto Exposure Comp.] setting also applies to an external flash. (P319)

Changing the firing mode (Manual flash)

Applicable modes:        

You can set a flash type at [Firing Mode] in [Flash].

[TTL]	The camera automatically sets the flash output.
[MANUAL]	Set the luminosity ratio of the flash manually. In [TTL] you can shoot the photograph you want even when shooting dark scenes that may otherwise be too brightly lit by the flash.

- When [MANUAL] is set, the luminosity ratio ([1/1], etc.) is displayed on the flash icon on the screen.

Setting the luminosity ratio (When [MANUAL] is selected)

- 1 Select [Flash] in the [Rec] menu. (P37)
- 2 Press ▲/▼ to select [Manual Flash Adjust.] and then press [MENU/SET].
- 3 Press ◀/▶ to select an item and then press [MENU/SET].
 - You can set from [1/1] (full brightness) to [1/128] in steps of [1/3].

Setting the wireless flash

Applicable modes:   

By using flashes that support the wireless control (DMW-FL360L, DMW-FL580L: optional), you can control firing of the built-in flash (or a flash attached to the hot shoe of this unit) and three flash groups separately.

Preparations: Open the flash by sliding the flash open lever of this unit.
Alternatively, attach a flash (DMW-FL360L, DMW-FL580L: optional) to this unit.

- 1 Set the external flashes to be controlled to RC Mode, and then place them.**
 - Set the channel and groups for the external flashes to be controlled.
- 2 Select the menu.**

MENU →  **[Rec]** → **[Flash]**

- 3 Press ▲/▼ to select [Wireless] and then press [MENU/SET].**
- 4 Press ▲/▼ to select [ON] and then press [MENU/SET].**
 - When [Wireless] is set to [ON], [WL] is displayed on the flash icon on the recording screen.
 - When making detailed settings of the wireless flash, set the following from [Flash].

[Wireless Channel]

Select the channel that corresponds to the channel of the external flash you want to control.

Settings: [1CH]/[2CH]/[3CH]/[4CH]

[Communication Light]

Set the communication light level for wireless recording.


Settings: [HIGH]/[STANDARD]/[LOW]



[Wireless Setup]

• Press the [DISP.] button to fire a test-flash.

- (A) Firing Mode
- (B) Flash output
- (C) Luminosity ratio

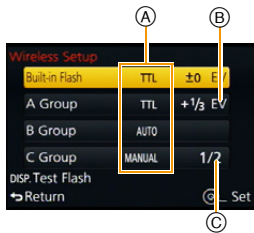


[Built-in Flash]*	<p>[Firing Mode]</p> <p>[TTL]: The camera automatically sets the output of the built-in flash.</p> <p>[OFF]: The built-in flash fires only a signal-flash.</p> <hr/> <p>[Flash Adjust.] The output of the built-in flash is set manually.</p>
[External Flash]*	<p>[Firing Mode]</p> <p>[TTL]: The camera automatically sets the output of the external flash.</p> <p>[AUTO]: Flash output is set by the external flash.</p> <p>[MANUAL]: Set the luminosity ratio of the external flash manually.</p> <p>[OFF]: The external flash fires only a signal-flash.</p> <hr/> <p>[Flash Adjust.] Set the output of the external flash manually when [Firing Mode] is set to [TTL].</p> <hr/> <p>[Manual Flash Adjust.] Set the luminosity ratio of the external flash when [Firing Mode] is set to [MANUAL]. • You can set from [1/1] (full brightness) to [1/128] in steps of 1/3.</p>
[A Group]/ [B Group]/ [C Group]	<p>[Firing Mode]</p> <p>[TTL]: The camera automatically sets the output of the external flash.</p> <p>[AUTO]: Flash output is set by the external flash.</p> <p>[MANUAL]: Set the luminosity ratio of the external flash manually.</p> <p>[OFF]: The external flashes in the specified group will not fire.</p> <hr/> <p>[Flash Adjust.] Set the output of the external flash manually when [Firing Mode] is set to [TTL].</p> <hr/> <p>[Manual Flash Adjust.] Set the luminosity ratio of the external flash when [Firing Mode] is set to [MANUAL]. • You can set from [1/1] (full brightness) to [1/128] in steps of 1/3.</p>

* When the flash (DMW-FL360L, DMW-FL580L: optional) is attached, [External Flash] is displayed instead of [Built-in Flash].


■ Controllable range of the wireless flash

Place the wireless flash with its wireless sensor facing toward the camera.

Estimated controllable range is shown in the following figure. Controllable range differs depending on the surrounding environment.

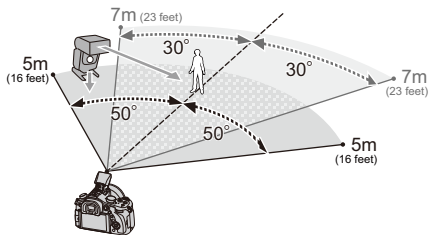

Placement example

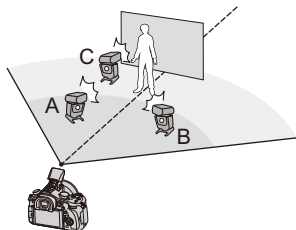

- In this placement example, flash C is placed to erase the shadow of the subject that flashes A and B will create.

- The recommended number of wireless flashes for each group is three or less.
- If the subject is too close, signal flashing may affect the exposure.
(This can be reduced by lowering the output with a diffuser, etc.)

Correcting red eyes

Applicable modes:

When Red-Eye Reduction ([], []) is selected, Red-Eye Removal is performed whenever the flash is used. The camera automatically detects red-eye and corrects the picture.

MENU → [Rec] → [Red-Eye Removal]

Settings: [ON]/[OFF]

- [] is displayed on the icon when it is set to [ON].



Not available in these cases:

- Under certain circumstances, red-eye cannot be corrected.

Recording Motion Picture

This camera can record full high definition motion pictures compatible with the AVCHD format or motion pictures recorded in MP4. Audio will be recorded in stereo.

Setting the format, size and frame rate

Applicable modes:   P A S M  C1 C2  

1 Select the menu.

MENU →  **[Motion Picture]** → **[Rec Format]**

2 Press ▲/▼ to select the item and then press [MENU/SET].

[AVCHD]	This data format is suitable for when playing back on a high-definition TV, etc.
[MP4]	This data format is suitable for when playing back on a PC, etc.

3 Press ▲/▼ to select [Rec Quality] and then press [MENU/SET].

4 Press ▲/▼ to select the item and then press [MENU/SET].

- Exit the menu after it is set.



When [AVCHD] is selected

Item	Size	Frame rate	Bit rate
[FHD/28M/50p]*1	1920×1080	50p	28 Mbps
[FHD/17M/50i]	1920×1080	50i	17 Mbps
[FHD/24M/25p]	1920×1080	50i ⁺²	24 Mbps
[FHD/24M/24p]	1920×1080	24p	24 Mbps

*1 AVCHD Progressive

*2 The sensor output is 25 frames/second

When [MP4] is selected

Item	Size	Frame rate	Bit rate
[4K/100M/25p]*3	3840×2160	25p	100 Mbps
[FHD/28M/50p]	1920×1080	50p	28 Mbps
[FHD/20M/25p]	1920×1080	25p	20 Mbps
[HD/10M/25p]	1280×720		10 Mbps
[VGA/4M/25p]	640×480		4 Mbps

*3 These can be set only in Creative Video Mode.

■ About the compatibility of the recorded motion pictures

Even when a compatible device is used, recorded motion pictures may be played back with reduced picture and sound quality, or they may not be played back.

Also, recording information may not be displayed correctly. Use this unit to playback in such case.

- If you want to use another device to play back motion pictures recorded in [FHD/28M/50p], [FHD/24M/25p], [FHD/24M/24p] of [AVCHD] or if you want to transfer them to the device, a PC installed with "PHOTOfunSTUDIO" or a compatible Blu-ray disc recorder is required.
- For motion pictures recorded with [MP4] set to [4K/100M/25p], refer to "Enjoying Motion Pictures in 4K" on [P299](#).

■ Indication of the icon

- (A) Format
- (B) Size
- (C) Frame rate (sensor output)



• What is bit rate

This is the volume of data for a definite period of time, and the quality becomes higher when the number gets bigger. This unit is using the “VBR” recording method. “VBR” is an abbreviation for “Variable Bit Rate”, and the bit rate (volume of data for definite period of time) is changed automatically depending on the subject to record. Therefore, the recording time is shortened when a subject with fast movement is recorded.

How to set focus when recording a motion picture ([Continuous AF])

Applicable modes:

The method for achieving focus varies depending on the focus mode (P139) and the [Continuous AF] setting in the [Motion Picture] menu.

Focus Mode	[Continuous AF]	Description of settings
[AFS]/[AFF]/ [AFC]	[ON]	The camera automatically keeps focusing on subjects during recording. (P139)
	[OFF]	The camera maintains the focus position at the start of recording.
[MF]	[ON]/[OFF]	You can focus manually. (P150)

- When the focus mode is set to [AFS], [AFF] or [AFC], if you press the shutter button halfway while recording a motion picture, the camera will re-adjust the focus.
- Depending on the recording conditions, operational sound may be recorded when the Auto Focus is operated while recording a motion picture.
It is recommended to record with [Continuous AF] in the [Motion Picture] menu set to [OFF], if the sound of operation bothers you to avoid recording the lens noise.
- When operating the zoom when recording motion pictures, it may take time to come into focus.



Recording Motion Picture

Applicable modes:   **P** **A** **S** **M**  **C1** **C2**  

1 Start recording by pressing the motion picture button.

- (A) Elapsed recording time
- (B) Available recording time

- Recording of motion picture appropriate for each mode is possible.
- The recording state indicator (red) © will flash while recording motion pictures.
- If approximately 1 minute elapses without an operation being performed, part of the display will disappear. Press [DISP.] to make the display reappear. This operation is to prevent screen burn-in and is not a malfunction.
- When recording a motion picture, do not cover the microphone with your fingers or other objects.
- Release the motion picture button right after you press it.

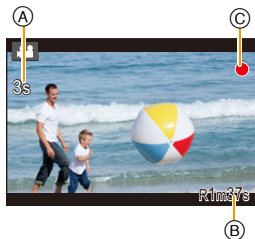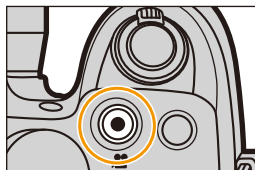

2 Stop the recording by pressing the motion picture button again.

- Still picture recording is also possible during the motion picture recording by fully pressing the shutter button. (P219)







About the operation sound that is produced when you stop recording

Since motion picture recording stops only after you press the motion picture button, the sound of the operation may be noticeable. If the sound bothers you, try the following:

- Divide the last part of the motion picture using [Video Divide] (P239) in the [Playback] menu.
- The motion picture may not be divided near the very end of it. To avoid this, record approximately 3 seconds longer.
- Set the camera to Creative Video Mode, and use a shutter remote control (optional) to record motion pictures. (P321)



**f_c** Enabling/disabling the motion picture button**MENU** → **f_c**[Custom] → [Video Button] → [ON]/[OFF]

- This function is for preventing accidental operation of the button.

f_c Switching between the angle of view for taking pictures and the one for recording motion pictures**MENU** → **f_c**[Custom] → [Rec Area] → [📷] (Picture)/[👤] (Motion picture)

- When the aspect ratio setting is different in still and motion pictures, the angle of view changes at the start of motion picture recording.
- When [Rec Area] is set to [👤], angle of view during motion picture recording is displayed.
- The recording area indicated is an approximation.



- When a motion picture is recorded in a high temperature environment or is recorded continuously, the recording may stop after [△] is displayed to protect this unit.
- If the Extra Optical Zoom are used before pressing the motion picture button, those settings will be cleared, so the shooting range will change dramatically.
- Confirm the settings for the O.I.S. switch and the manual ring selector switch before recording a motion picture. Be careful not to accidentally switch them during recording.
- The operational sound of the zoom or button operation may be recorded when it is operated during the recording of a motion picture.
- The zoom speed decreases during the recording of a motion picture.
- The available recording time displayed on the screen may not decrease regularly.
- Depending on the type of the card, the card access indication may appear for a while after recording motion pictures. This is not a malfunction.
- The [Sensitivity] will be set to [AUTO] (for motion pictures) when recording motion pictures. Also, the [ISO Limit Set] will not operate.
- Even if [Stabilizer] is set to [(⦿)], [(⦿)] will operate in motion picture recording.
- It is recommended to use a fully charged battery or AC adaptor (optional) when recording motion pictures. (P323)
- If while recording motion pictures using the AC adaptor (optional) the power supply is cut off due to a power cut or if the AC adaptor (optional) is disconnected etc., the motion picture will not be recorded.
- It will be recorded in the following categories for certain Recording Modes. A motion picture recording matching each Recording Mode will be performed for the ones not listed below.

Selected Recording Mode	Recording Mode while recording motion picture
<ul style="list-style-type: none"> – Programme AE Mode – Aperture-Priority AE Mode – Shutter-Priority AE Mode – Manual Exposure Mode 	Normal motion picture
– [Clear in Backlight] (Scene Guide Mode)	Portrait Mode
– [Clear Nightscape]/[Artistic Nightscape]/[Handheld Night Shot]/[Clear Night Portrait] (Scene Guide Mode)	Low Light Mode

Not available in these cases:

- Motion pictures cannot be recorded in the following cases.
 - [Glistening Water]/[Glittering Illuminations]/[Soft Image of a Flower]/[Panorama Shot] (Scene Guide Mode)
 - [Rough Monochrome]/[Silky Monochrome]/[Soft Focus]/[Star Filter]/[Sunshine] (Creative Control Mode)
 - When using [Time Lapse Shot]
 - When using [Stop Motion Animation]

Recording motion pictures in 4K

Applicable modes:   P A S M      

You can create finely-detailed motion pictures in 4K by recording motion pictures with their size set to [4K] in [Rec Quality].

- You can record motion pictures in 4K only in Creative Video Mode.
- The angle of view of motion pictures in 4K is narrower than those of motion pictures in other sizes.
- When recording motion pictures in 4K, use a card rated as UHS Speed Class 3. (P30)

To record motion pictures in 4K:

- 1 Set the mode dial to [M]. (P62)
- 2 Set [Rec Format] in the [Motion Picture] menu to [MP4]. (P212)
- 3 Set [Rec Quality] in the [Motion Picture] menu to [4K/100M/25p]. (P212)


Recording still pictures while recording motion pictures

Applicable modes:   **P** **A** **S** **M**  **C1** **C2**  

Still pictures can be recorded even while recording a motion picture. (Simultaneous recording)

During motion picture recording, press the shutter button fully to record a still picture.



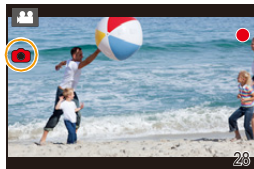


- Simultaneous recording indicator is displayed while recording still pictures.



■ Setting motion picture and still picture priorities

Applicable modes:   **P** **A** **S** **M**  **C1** **C2**  

Recording method for the still pictures taken while recording a motion picture can be set with [Picture Mode] in the [Motion Picture] menu.

 <p>(Motion picture priorities)</p>	<ul style="list-style-type: none"> • Pictures will be recorded with a picture size of [S] (2 M). The picture quality may be different to [S] (2 M) of standard pictures. • Only JPEG images are recorded when [Quality] is set to [RAW ], [RAW ] or [RAW]. (When set to [RAW], still pictures will be recorded in [Quality] of [].) • Up to 30 still pictures can be taken during recording of the motion picture. • In [Miniature Effect] of Creative Control Mode, there may be a slight delay between fully pressing the shutter button and recording.
 <p>(Still picture priorities)</p>	<ul style="list-style-type: none"> • Pictures will be recorded with the set picture size and quality. • The screen will go dark while recording pictures. A still picture will be recorded in the motion picture during that period, and audio is not recorded. • Up to 4 still pictures can be recorded during recording of the motion picture.



- The picture aspect ratio will be fixed to [16:9].



Not available in these cases:

- This function is not available in the following cases:
 - When [Rec Format] is set to [VGA/4M/25p] in [MP4]
 - When [AVCHD] in [Rec Format] is set to [FHD/24M/24p] (only when [Still picture priorities]) is set)



MENU



Using the [Motion Picture] Menu

 For details on [Motion Picture] menu settings, refer to [P37](#).

- [Photo Style], [AFS/AFF], [Metering Mode], [Highlight Shadow], [i.Dynamic], [i.Resolution], [i.Zoom] and [Digital Zoom] are common to both the [Rec] menu and [Motion Picture] menu. Changing these settings in one of these menus is reflected in other menu.
- [Motion Picture] menu is not displayed in the following cases.
 - [Glistening Water]/[Glittering Illuminations]/[Soft Image of a Flower]/[Panorama Shot] (Scene Guide Mode)
 - [Rough Monochrome]/[Silky Monochrome]/[Soft Focus]/[Star Filter]/[Sunshine] (Creative Control Mode)

[Rec Format]

- Refer to [P212](#) for details.

[Rec Quality]

- Refer to [P212](#) for details.

[Exposure Mode]

- Refer to [P118](#) for details.

[High Speed Video]

- Refer to [P119](#) for details.

[Picture Mode]

- Refer to [P219](#) for details.

[Continuous AF]

- Refer to [P214](#) for details.

[Level Shot]**Applicable modes:** **P** **A** **S** **M** **C1** **C2**

The camera automatically detects its tilt and corrects the motion pictures you record to a level position to prevent them from being skewed.

Settings: [ON]/[OFF]

- If you record a motion picture while walking or if the tilt is too steep, the motion picture may not be corrected to a level position.
- If you set [Level Shot] to [ON], the recording range will become narrower when you start recording a motion picture.
- Pictures you take during motion picture recording will not be corrected to a level position.

Not available in these cases:

- [Level Shot] does not work in the following cases:
 - When recording with [High Speed Video]
 - When the O.I.S. switch is set to [OFF]
 - When [Rec Quality] is set to [4K/100M/25p] or [VGA/4M/25p]

[Luminance Level]**Applicable modes:** **P** **A** **S** **M** **C1** **C2**

Select the luminance range to match the use of video.

- [Luminance Level] can be set only when [MP4] has been selected as the [Rec Format] setting.

Settings: (16-255) / (0-255)]

- (16-255)] is suitable for normal motion picture recording.
- (0-255)] is suitable for creating still pictures from recorded motion pictures.

[Flkr Decrease]**Applicable modes:** **P** **A** **S** **M** **C1** **C2**

The shutter speed can be fixed to reduce the flicker or striping in the motion picture.

Settings: [1/50]/[1/60]/[1/100]/[1/120]/[OFF]

[Mic Level Disp.]

Applicable modes:   **P** **A** **S** **M**  **C1** **C2**  

Set whether or not the mic levels are displayed on the recording screen.

Settings: [ON]/[OFF]

- When [Mic Level Limiter] is set to [OFF], [Mic Level Disp.] is fixed to [ON].

 **Not available in these cases:**

- This function is not available in the following case:
 - [Miniature Effect] (Creative Control Mode)
- This function is not available during High Speed Video recording.

[Mic Level Adj.]

Applicable modes:   **P** **A** **S** **M**  **C1** **C2**  

Adjust the sound input level to 19 different levels (–12 dB ~ +6 dB).

- Displayed dB values are approximate.

 **Not available in these cases:**

- This function is not available in the following case:
 - [Miniature Effect] (Creative Control Mode)
- This function is not available during High Speed Video recording.

[Special Mic.]

- Refer to [P322](#) for details.

Adjusting the sound input level automatically ([Mic Level Limiter])

Applicable modes:   **P** **A** **S** **M**  **C1** **C2**  

The camera adjusts the sound input level automatically, minimising the sound distortion (crackling noise) when the volume is too high.

Settings: [ON]/[OFF]

 **Not available in these cases:**


- This function is not available in the following case:
 - [Miniature Effect] (Creative Control Mode)
- This function is not available during High Speed Video recording.

[Wind Cut]**Applicable modes:**   **P** **A** **S** **M**  **C1** **C2**  

You can reduce the wind noise effectively when recording with sound.

Settings: **[AUTO]/[HIGH]/[STANDARD]/[LOW]/[OFF]**

- Setting [Wind Cut] may alter the usual sound quality.

 **Not available in these cases:**

- This function is not available in the following case:
 - [Miniature Effect] (Creative Control Mode)
- This function is not available when [Zoom Mic] is set to [ON].
- This function is not available during High Speed Video recording.

[Zoom Mic]**Applicable modes:**   **P** **A** **S** **M**  **C1** **C2**  

Coupled to the zoom operation, it will clearly record far sounds with tele, and surrounding sounds with wide.

Settings: **[ON]/[OFF]**

- When set to [ON] and performing zoom, the operation sound may be recorded enhanced in accordance with the surrounding sounds. Also, audio recording level will be lower compared to when [OFF].
- The stereo effect of the audio is reduced when the picture is enlarged.
- [Zoom Mic] does not work in the following cases:
 - [Miniature Effect] (Creative Control Mode)
 - [High Speed Video] (Creative Video Mode)

Playing Back Group Pictures

A picture group consists of multiple pictures. You can play back pictures in a group either continuously or one by one.

[▲🖼️]:

A picture group consisting of pictures taken in the Burst Mode with the burst speed [SH]. (P167)


[▲📷]:

A picture group consisting of pictures taken in a Time Lapse Shot. (P176)

[▲👤]:

A picture group consisting of pictures taken in the Stop Motion Animation. (P180)

- You can edit or delete all pictures in a group at once.
(For example, if you delete a picture group, all pictures in the group are deleted.)

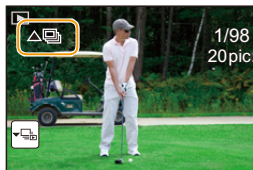

- Pictures will not be grouped if recorded without setting the clock.

Continuously playing back Group Pictures

Select a picture with the group picture icon ([▲🖼️], [▲📷], [▲👤]), and then press ▲.

- When playing back group pictures one at a time, options are displayed.




[From the first picture]: Pictures are played back continuously from the first picture of the group.


[From the current picture]: Pictures are played back continuously from the picture being played back.

Operations during Group Pictures playback

▲	Continuous playback/Pause	▼	Stop
◀	Fast rewind	▶	Fast forward
	Rewind (while pausing)		Forward (while pausing)

Playing back each Group Pictures

- 1 **Select a picture with the group display icon** ([, [, [)], and then press **▼**.
- 2 **Press **◀/▶** to flip through images.**
 - Press **▼** again to return to the normal playback screen.
 - Each picture in a group can be treated same as normal pictures when they are played back. (Such as Multi Playback, Playback Zoom and deleting images)

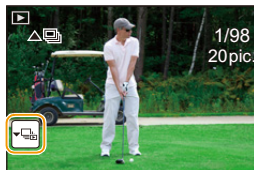

Creating Still Pictures from a Motion Picture

You can create a single still picture from a recorded motion picture.

1 Press **▲** to pause motion picture playback.

2 Press **[MENU/SET]**.

- Confirmation screen is displayed. It is executed when [Yes] is selected.



- Still pictures will be saved with [Aspect Ratio] set to [16:9] and [Quality] set to [L]. The number of pixels will differ according to the motion picture you play back.
 - When the motion picture size is set to [4K] in [Rec Quality]: [M] (8 M)
 - When the motion picture size is set to [FHD], [HD] in [Rec Quality]: [S] (2 M)
- Still pictures created from a motion picture may be coarser than with normal picture quality.
- [L] is displayed during playback of still pictures created from motion pictures.
- To create still pictures from motion pictures when the camera is connected to a TV with an HDMI micro cable, set [VIERA Link] in [TV Connection] in the [Setup] menu to [OFF].



Not available in these cases:

- Still pictures cannot be created from motion pictures recorded in [VGA/4M/25p] of [MP4].

Using the [Playback] Menu

With this menu, you can use various playback functions such as cropping and other editing of recorded images, protect settings, etc.

- With [RAW Processing], [Text Stamp], [Time Lapse Video], [Stop Motion Video], [Resize] or [Cropping], a new edited picture is created. A new picture cannot be created if there is no free space on the card so we recommend checking that there is free space before editing the picture.
- The camera may not play back images recorded on other devices correctly, and the functions of the camera may not be available for the images.

[Slide Show]

You can play back the pictures you have taken in synchronisation with music, and you can do this in sequence while leaving a fixed interval between each of the pictures.

You can also put together a slide show composed of only still pictures, only motion pictures etc.

We recommend this feature when you view your pictures by connecting the camera to a TV.

1 Select the menu.


MENU → **[Playback]** → **[Slide Show]**

2 Select the group to play back by pressing ▲/▼, and then press [MENU/SET].

- During [Category Selection], press ▲/▼/◀/▶ to select a category, and then press [MENU/SET].

Refer to [P230](#) for category details.

3 Press ▲ to select [Start] and then press [MENU/SET].

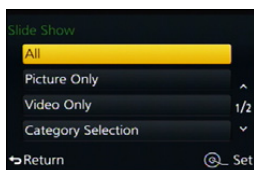

■ Operations during a slide show

▲	Play/Pause	▼	Exit slide show
◀	Back to previous picture	▶	Ahead to next picture
Rear dial (left)	Reduce volume level	Rear dial (right)	Increase volume level

- Normal playback resumes after the slide show finishes.




■ Changing the slide show settings

You can change the settings for slide show playback by selecting [Effect] or [Setup] on the slide show menu screen.

[Effect]

This allows you to select the screen effects when switching from one picture to the next.

[AUTO]/[NATURAL]/[SLOW]/[SWING]/[URBAN]/[OFF]

- When [URBAN] has been selected, the picture may appear in black and white as a screen effect.
- [AUTO] can be used only when [Category Selection] has been selected. The pictures are played back with the recommended effects in each category.
- [Effect] is fixed to [OFF] when in [Video Only] or during the slide show for [], [], [] in [Category Selection].
- Even if [Effect] is set, it does not work during a slide show of Group Pictures.
- When pictures are displayed on a TV connected via an HDMI micro cable or when vertically-displayed pictures are played back, some of the [Effect] settings will not work.

[Setup]

[Duration] or [Repeat] can be set.

[Duration]	[5SEC]/[3SEC]/[2SEC]/[1SEC]
[Repeat]	[ON]/[OFF]
[Sound]	<p>[AUTO]: Music is played when the still pictures are played back, and audio is played when the motion pictures are played back.</p> <p>[Music]: Music is played back.</p> <p>[Audio]: Audio (only for motion pictures) is played back.</p> <p>[OFF]: There will be no sound.</p>

- [Duration] can be set only when [OFF] has been selected as the [Effect] setting.
- When playing back the following pictures, the [Duration] setting is disabled.
 - Motion pictures
 - Panorama pictures
 - Group Pictures

[Playback Mode]

Playback in [Normal Play], [Picture Only], [Video Only], [Category Play] or [Favorite Play] can be selected.

1 Select the menu.











MENU → **[Playback]** → **[Playback Mode]**

2 Select the group to play back by pressing ▲/▼, and then press [MENU/SET].

When [Category Play] is selected in above step 2

3 Press ▲/▼/◀/▶ to select the category and then press [MENU/SET] to set.

- Pictures are sorted into the categories shown below.

	– [Face Recog.]*
	– [i-Portrait], [i-Night Portrait], [i-Baby] in Scene Detection – [Clear Portrait]/[Silky Skin]/[Backlit Softness]/[Clear in Backlight]/[Relaxing Tone]/[Sweet Child's Face]/[Clear Night Portrait] (Scene Guide Mode)
	– [i-Scenery], [i-Sunset] in Scene Detection – [Distinct Scenery]/[Bright Blue Sky]/[Romantic Sunset Glow]/[Vivid Sunset Glow]/[Glistening Water] (Scene Guide Mode)
	– [i-Night Portrait], [i-Night Scenery], [iHandheld Night Shot] in Scene Detection – [Clear Nightscape]/[Cool Night Sky]/[Warm Glowing Nightscape]/[Artistic Nightscape]/[Glittering Illuminations]/[Handheld Night Shot]/[Clear Night Portrait] (Scene Guide Mode)
	– [Clear Sports Shot] (Scene Guide Mode)
	– [i-Food] in Scene Detection – [Appetizing Food]/[Cute Dessert] (Scene Guide Mode)
	– [Travel Date]
	– Still pictures recorded continuously with burst speed set to [SH]
	– [Time Lapse Shot]/[Time Lapse Video]
	– [Stop Motion Animation]/[Stop Motion Video]

* Press ▲/▼/◀/▶ to select the person to play back and then press [MENU/SET].

As for group pictures, the entire group is treated as a single picture with Face Recognition information.

- Categorisation of the motion pictures differ from the still pictures depending on the Recording Mode. Some motion pictures may not be played back.

[Location Logging]

You can write location information sent from a smartphone (latitude and longitude) on images.

You can send location information and write it on images using a smartphone.

(P263)

Preparation:

Sending location information to the camera from the smartphone.

- You need to install “Panasonic Image App” on your smartphone. (P254)
- Read the [Help] in the “Image App” menu for further details on how to operate.

1 Select the menu.

MENU → **[Playback]** → **[Location Logging]** → **[Add Location Data]**

2 Press ▲/▼ to select the period you intend to record location information on images, then press [MENU/SET].

- Confirmation screen is displayed. It is executed when [Yes] is selected.
- Images with location information are indicated with [GPS].

■ To pause the recording of location information

Press [MENU/SET] while recording of the location information onto images is taking place.

- During a suspended period, [O] is displayed.
Select the period with [O] to restart the recording process from the picture you left off.

■ To delete the received location information

1 Select the menu.

MENU → **[Playback]** → **[Location Logging]** → **[Delete Location Data]**

2 Press ▲/▼ to select the period you want to delete, then press [MENU/SET].

- Confirmation screen is displayed. It is executed when [Yes] is selected.

- Location information can be written only to images taken on this camera.



Not available in these cases:

- Location information will not be written on pictures taken after the location information had been sent (P263).
- Location information is not written onto the images recorded when [Rec Format] is set to [AVCHD].
- When there is insufficient free space on the card, location information might not be able to be written.
- Location information cannot be written on images that were recorded when the clock was not set.

[RAW Processing]

You can process the pictures taken in RAW format. The processed pictures will be saved in JPEG format. You can check how effects are applied to each picture while processing it.

1 Select the menu.

MENU → **[Playback]** → **[RAW Processing]**

2 Select RAW images with ◀/▶, and then press **[MENU/SET]**.

3 Press ▲/▼ to select an item.

- You can set the following items. The settings you used for the recording are selected when you start setting these items.



[White Balance]	Allows you to select a White Balance preset and adjust it. If you select an item with [Q] , you can process the image with the setting at the time of recording.
[Exposure Comp.]	Allows you to correct the exposure within the range between -1 EV and $+1$ EV.
[Photo Style]	Allows you to select a photostyle effect ([Standard]/[Vivid]/[Natural]/[Monochrome]/[Scenery]/[Portrait])
[i.Dynamic]	Allows you to select an [i.Dynamic] setting ([HIGH]/[STANDARD]/[LOW]/[OFF]).
[Contrast]	Allows you to adjust the contrast.
[Highlight]	Allows you to adjust the brightness of bright portions.
[Shadow]	Allows you to adjust the brightness of dark portions.
[Saturation]/[Color Tone]	Allows you to adjust the saturation. (When [Monochrome] is selected in [Photo Style], you can adjust the colour tone.)
[Filter Effect]	Allows you to select a filter effect. (Only when [Monochrome] in [Photo Style] is selected)
[Noise Reduction]	Allows you to adjust the noise reduction setting.
[i.Resolution]	Allows you to select an [i.Resolution] setting ([HIGH]/[STANDARD]/[LOW]/[EXTENDED]/[OFF]).
[Sharpness]	Allows you to adjust the resolution effect.
[Setup]	<p>You can set the following items:</p> <p>[Reinstate Adjustments]: Returns the settings to the ones you used during the recording.</p> <p>[Color Space]: Allows you to select a [Color Space] setting from [sRGB] or [Adobe RGB].</p> <p>[Picture Size]: Allows you to select the size in which the image will be saved in JPEG format ([L]/[M]/[S]).</p>



4 Press [MENU/SET] and set.

- The setting method differs according to the item. For details, refer to “How to set each item” on P233.

5 Press [MENU/SET].


- This operation returns you to the screen in step 3. To set other items, repeat steps 3 through 5.

6 Select [Begin Processing] with ▲/▼, and then press [MENU/SET].

- A confirmation screen will be displayed. Selecting [Yes] will execute the operation. After the operation, exit the menu.

■ How to set each item

When you select an item, the setting screen will be displayed.


Button operation	Description of operation
	Selects a setting.
▲	Displays the screen that lets you set the colour temperature. (P128) (only when [White Balance] is set to [K])
▼	Displays the screen that lets you fine-adjust the White Balance. (P129) (only when [White Balance] is set)
[DISP.]	Displays the comparison screen.
[MENU/SET]	Sets the adjusted level and returns you to the item selection screen.


- When [Noise Reduction], [i.Resolution] or [Sharpness] is selected, the comparison screen cannot be displayed.
- You can enlarge the picture with the zoom lever.



On the comparison screen, you can use the following operations to make adjustments:

(A) Current setting

Button operation	Description of operation
	Selects a setting.
[DISP.]	Returns you to the setting screen.
[MENU/SET]	Sets the adjusted level and returns you to the item selection screen.

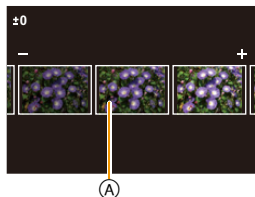

[Setup] setting

When you select an item, the screen that asks you to select [Reinstate Adjustments], [Color Space], or [Picture Size] will be displayed.

- 1 Press ▲/▼ to select an item, and press [MENU/SET].
 - If you select [Reinstate Adjustments], a confirmation screen will be displayed. Selecting [Yes] will execute the operation and return you to the item selection screen.
- 2 Press ▲/▼ to select a setting, and press [MENU/SET].

- The effects applied through the RAW processing on the camera and those applied through the RAW processing on the DVD software (supplied) “SILKYPIX Developer Studio” are not completely identical.
- The range within which you can correct the exposure differs from the one you can correct during recording.
- The [White Balance] setting of pictures taken with multiple exposures is fixed to the setting at the time of recording.
- If you perform [RAW Processing] in the [Playback] menu on a picture taken with [Red-Eye Removal], the effect will be applied to the processed picture in JPEG format.
- You can process only one RAW image at a time.

Not available in these cases:

- When an AV cable (optional) or an HDMI micro cable is connected, [RAW Processing] is not available.
- You can process only the RAW images you recorded with the camera. [RAW Processing] is not available for images recorded with other models and images that are not stored in RAW format.


[Title Edit]

You can add text (comments) to pictures. After text has been registered, it can be stamped in prints using [Text Stamp] (P236).

1 Select the menu.

MENU → **▶** [Playback] → [Title Edit] → [Single]/[Multi]

2 Select an image to add text.

-  is displayed for pictures with titles already registered.

[Single] setting

- 1 Press **◀/▶** to select the picture.
- 2 Press [MENU/SET].


**[Multi] setting**

- 1 Press **▲/▼/◀/▶** to select the picture and then press [MENU/SET] (repeat).
 - The setting is cancelled when [MENU/SET] is pressed again.
- 2 Press **◀** to select [OK], and then press [MENU/SET] to execute.

**3 Enter the text. (P55)**

- Exit the menu after it is set.

- To delete the title, erase all the text in the text input screen.
- You can print out texts (comments) using the "PHOTOfunSTUDIO" bundled software on the DVD (supplied).
- You can set up to 100 pictures at one time with [Multi].

 Not available in these cases:

- You cannot use [Title Edit] for the following pictures.
 - Motion pictures
 - Pictures taken with [RAW₁], [RAW₂] or [RAW]

[Text Stamp]

You can stamp the recording date/time, name, location, travel date or title onto the recorded pictures.

1 Select the menu.

MENU → **▶ [Playback]** → **[Text Stamp]** → **[Single]/[Multi]**

2 Select an image you wish to stamp with text.

- appears on screen if the picture is stamped with text.

[Single] setting

- 1 Press **◀/▶** to select the picture.
- 2 Press **[MENU/SET]**.



**[Multi] setting**

- 1 Press **▲/▼/◀/▶** to select the picture and then press **[MENU/SET]** (repeat).
 - The setting is cancelled when **[MENU/SET]** is pressed again.
- 2 Press **◀** to select **[OK]**, and then press **[MENU/SET]** to execute.

**3 Press ▲/▼ to select [Set], and then press [MENU/SET].**

4 Press ▲/▼ to select text stamp items, and then press [MENU/SET].

5 Press ▲/▼ to select the settings, and then press [MENU/SET].

[Shooting Date]	[W/O TIME]:	Stamp the year, month and date.
	[WITH TIME]:	Stamp the year, month, day, hour and minutes.
	[OFF]	
[Name]	[]: ([Face Recognition])	Name registered in [Face Recog.] will be stamped.
	[]: ([Baby/Pet])	Name registered in [Profile Setup] will be stamped.
	[OFF]	
[Location]	[ON]:	Stamps the travel destination name set under [Location].
	[OFF]	
[Travel Date]	[ON]:	Stamps the travel date set under [Travel Date].
	[OFF]	
[Title]	[ON]:	Title input in the [Title Edit] will be stamped.
	[OFF]	


6 Press [/↵].

7 Press ▲ to select [OK], and then press [MENU/SET].

- Confirmation screen is displayed. It is executed when [Yes] is selected.
Exit the menu after it is executed.



- When you print pictures stamped with text, the date will be printed over the stamped text if you specify printing of the date at the photo shop or on the printer.
- You can set up to 100 pictures at one time in [Multi].
- The picture quality may deteriorate when text stamping is carried out.
- Depending on the printer being used, some characters may be cut at printing. Check before printing.
- When you stamp pictures in a group, the stamped ones are saved separately from the original ones in the group.

 **Not available in these cases:**

- You cannot use [Text Stamp] for the following pictures.
 - Motion pictures
 - Pictures taken with [Panorama Shot] in Scene Guide Mode
 - Pictures recorded without setting the clock and title
 - Pictures that were previously stamped with [Text Stamp]
 - Pictures taken with [RAW₁], [RAW₂] or [RAW]



MENU



[Video Divide]

Recorded motion picture can be divided in two. It is recommended for when you want to divide a part you need with a part you do not need.


Dividing a motion picture is permanent. Decide before you divide!

1 Select the menu.

MENU → **[Playback]** → **[Video Divide]**

2 Press ◀/▶ to select the motion picture to divide, and then press [MENU/SET].**3 Press ▲ at the location to divide.**

- Motion picture is played back from the same location when ▲ is pressed again.
- You can finely adjust the location for division by pressing ◀/▶ while the motion picture is paused.

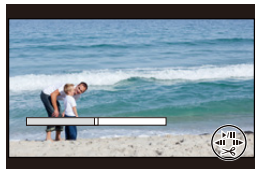**4 Press ▼.**

- Confirmation screen is displayed. It is executed when [Yes] is selected. Exit the menu after it is executed.
- Motion picture may be lost if the card or battery is removed while processing the dividing.

 **Not available in these cases:**

- Avoid trying to divide motion picture near the very beginning or end of the motion picture.
- You cannot use [Video Divide] for the following pictures.
 - Motion pictures with a short recording time

[Time Lapse Video]

This function allows you to create a motion picture from a picture group recorded with [Time Lapse Shot].

The created motion picture is saved in MP4 recording format.

1 Select the menu.

MENU → **[Playback]** → **[Time Lapse Video]**

2 Select the [Time Lapse Shot] picture group with ◀/▶, and then press [MENU/SET].**3 Create a motion picture by selecting the methods for creating it.**

- The steps are the same as those for creating a motion picture following the recording of [Time Lapse Video].

Refer to step **9** onwards on [P178](#) for details.

Also refer to the notes on [P179](#) for created motion pictures.

[Stop Motion Video]

A motion picture is created from group pictures taken with [Stop Motion Animation].

Created motion pictures are saved in MP4 recording format.

1 Select the menu.

MENU → **[Playback]** → **[Stop Motion Video]**

2 Select the Stop Motion Animation group with ◀/▶, and then press [MENU/SET].**3 Create a motion picture by selecting the methods for creating it.**

- The steps are the same as those for creating a motion picture following the recording of [Stop Motion Animation].

Refer to step **11** onwards on [P181](#) for details.

Also refer to the notes on [P183](#) for created motion pictures.

[Resize]

To allow easy posting to web pages, attachment to e-mail etc., picture size (number of pixels) is reduced.

1 Select the menu.

[MENU] → **[Playback]** → **[Resize]** → **[Single]/[Multi]**

2 Select the picture and size.**[Single] setting**

- ❶ Press **◀/▶** to select the picture, and then press **[MENU/SET]**.
- ❷ Press **▲/▼** to select the size, and then press **[MENU/SET]**.
 - Confirmation screen is displayed. It is executed when **[Yes]** is selected.
 - Exit the menu after it is executed.

**[Multi] setting**

- ❶ Press **▲/▼** to select the size, and then press **[MENU/SET]**.
- ❷ Press **▲/▼/◀/▶** to select the picture, and then press **[MENU/SET]** to set (repeat).
 - The setting is cancelled when **[MENU/SET]** is pressed again.
- ❸ Press **◀** to select **[OK]**, and then press **[MENU/SET]** to execute.
 - Confirmation screen is displayed. It is executed when **[Yes]** is selected.
 - Exit the menu after it is executed.



- You can set up to 100 pictures at one time in **[Multi]**.
- The picture quality of the resized picture will deteriorate.

ⓘ Not available in these cases:

- This function is not available in the following cases:
 - Motion pictures
 - Pictures taken with **[Panorama Shot]** in Scene Guide Mode
 - Group Pictures
 - Pictures stamped with **[Text Stamp]**
 - Pictures taken with **[RAW]**, **[RAW]** or **[RAW]**

[Cropping]

You can enlarge and then clip the important part of the recorded picture.

1 Select the menu.

MENU → **[Playback]** → **[Cropping]**

2 Press ◀/▶ to select the picture, and then press [MENU/SET].**3 Use the zoom lever and press ▲/▼/◀/▶ to select the parts to be cropped.**

Zoom lever (W):	Reduction
Zoom lever (T):	Enlargement
▲/▼/◀/▶:	Move

4 Press [MENU/SET].

- Confirmation screen is displayed. It is executed when [Yes] is selected.
Exit the menu after it is executed.

- The picture quality of the cropped picture will deteriorate.
- Crop one picture at a time when you want to crop the pictures in a picture group.
(You cannot edit all pictures in a group at once.)
- When you crop pictures in a group, the cropped ones are saved separately from the original ones in the group.
- Information regarding the Face Recognition in the original picture will not be copied to images having undergone [Cropping].

**Not available in these cases:**

- This function is not available in the following cases:
 - Motion pictures
 - Pictures taken with [Panorama Shot] in Scene Guide Mode
 - Pictures stamped with [Text Stamp]
 - Pictures taken with [RAW₁], [RAW₂] or [RAW]

[Rotate]/[Rotate Disp.]

This mode allows you to automatically display pictures vertically if they were recorded holding the camera vertically or rotate pictures manually in 90° steps.

[Rotate] (The picture is rotated manually)

- The [Rotate] function is disabled when [Rotate Disp.] is set to [OFF].

1 Select the menu.

MENU → **[Playback]** → **[Rotate]**

2 Press ◀/▶ to select the picture and then press [MENU/SET].

- The [Rotate] function is disabled for Group Pictures.

3 Press ▲/▼ to select the direction to rotate the picture and then press [MENU/SET].

The picture rotates clockwise in steps of 90°.



The picture rotates counter-clockwise in steps of 90°.

- Exit the menu after it is set.

**[Rotate Disp.] (The picture is automatically rotated and displayed)****Select the menu.**

MENU → **[Playback]** → **[Rotate Disp.]** → **[ON]**

- The pictures are displayed without being rotated when you select [OFF].
- Exit the menu after it is set.

**Not available in these cases:**

- When you play back pictures on a PC, they cannot be displayed in the rotated direction unless the OS or software is compatible with Exif.
[Exif is a file format for still pictures which allows recording information etc. to be added. It was established by "JEITA (Japan Electronics and Information Technology Industries Association)".]
- [Rotate Disp.] may not work on a screen that plays back multiple pictures, such as the one displayed after [Delete Multi] is selected.

[Favorite]

You can do the following if a mark has been added to pictures and they have been set as favourites.

- Play back the pictures set as favourites only as a slide show.
- Play back only the pictures set as favourites. ([Favorite Play])
- Delete all the pictures not set as favourites. ([All Delete Except Favorite])

1 Select the menu.

MENU →  **[Playback]** → **[Favorite]** → **[Single]/[Multi]**

2 Select the picture.**[Single] setting**

Press ◀/▶ to select the picture, and then press [MENU/SET].


- The setting is cancelled when [MENU/SET] is pressed again.
- Exit the menu after it is set.

**[Multi] setting**

Press ▲/▼/◀/▶ to select the picture, and then press [MENU/SET] to set (repeat).

- The setting is cancelled when [MENU/SET] is pressed again.
- Exit the menu after it is set.

**■ Cancelling all the [Favorite] settings****Select the menu.**

MENU →  **[Playback]** → **[Favorite]** → **[Cancel]**

- Confirmation screen is displayed. It is executed when [Yes] is selected. Exit the menu after it is executed.
- In [Playback Mode], the [Cancel] is disabled.

- You can set up to 999 pictures as favourites.
- When you set pictures in a group as [Favorite], the number of your [Favorite] pictures is displayed on the [Favorite] icon of the group's top picture.

 Not available in these cases:

- This function is not available in the following case:
 - Pictures taken with [RAW]

[Print Set]

DPOF "Digital Print Order Format" is a system that allows the user to select which pictures to print, how many copies of each picture to print and whether or not to print the recording date on the pictures when using a DPOF compatible photo printer or photo printing store. For details, ask at your photo printing store.

When you set [Print Set] for a group pictures, the print setting for the number of prints will be applied to every picture in the group.


1 Select the menu.

MENU → **[Playback]** → **[Print Set]** → **[Single]/[Multi]**

2 Select the picture.


[Single] setting

Press **◀/▶** to select the picture, and then press **[MENU/SET]**.

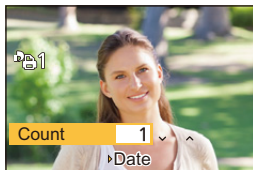

[Multi] setting

Press **▲/▼/◀/▶** to select the picture and then press **[MENU/SET]**.

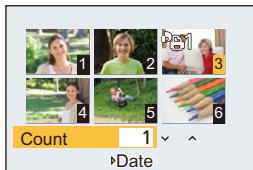

3 Press **▲/▼** to set the number of prints, and then press **[MENU/SET]** to set.

- When [Multi] has been selected
 - Repeat steps **2** and **3** for each picture.

(It is not possible to use the same setting for a multiple number of pictures.)
- [999+] is displayed on the screen, if the total number of prints you set for a group pictures is more than 1000 pictures.
- Exit the menu after it is set.

■ Cancelling all the [Print Set] settings

Select the menu.

MENU → [Playback] → [Print Set] → [Cancel]

- Confirmation screen is displayed. It is executed when [Yes] is selected. Exit the menu after it is executed.

■ To print the date

After setting the number of prints, set/cancel printing with the recording date by pressing ▶.

- Depending on the photo printing store or the printer, the date may not be printed even if you set to print the date. For further information, ask at your photo printing store or refer to the operating instructions for the printer.
- The date print feature is disabled for pictures that are stamped with text.

- The number of prints can be set from 0 to 999.
- Depending on the printer, the date print settings of the printer may take precedence so check if this is the case.
- It may not be possible to use the print settings with other equipment. In this case, cancel all the settings, and reset the settings.
- When you set pictures in a group to [Print Set], the number of pictures added to [Print Set] and the total number of pictures to be printed are displayed on the [Print Set] icon of the group's top picture.



Not available in these cases:

- This function is not available in the following cases:
 - Motion pictures
 - Pictures taken with [RAW]
 - File that does not comply with the DCF standard

[Protect]

You can set protection for pictures you do not want to delete by mistake.

1 Select the menu.

MENU → **[Playback]** → **[Protect]** → **[Single]/[Multi]**

2 Select the picture.**[Single] setting**

Press ◀/▶ to select the picture, and then press [MENU/SET].

- The setting is cancelled when [MENU/SET] is pressed again.
- Exit the menu after it is set.

[Multi] setting

Press ▲/▼/◀/▶ to select the pictures and then press [MENU/SET] (repeat).

- The setting is cancelled when [MENU/SET] is pressed again.
- Exit the menu after it is set.

**■ Cancelling all the [Protect] settings****Select the menu.**

MENU → **[Playback]** → **[Protect]** → **[Cancel]**

- Confirmation screen is displayed. It is executed when [Yes] is selected. Exit the menu after it is executed.



- Even if you do not protect pictures on a card, they cannot be deleted when the card's Write-Protect switch is set to [LOCK].

- The [Protect] feature is only designed to work with this camera.
- Even if you protect pictures on a card, they will be deleted if the card is formatted.
- When you set pictures in a group to [Protect], the number of pictures with the [Protect] setting is displayed on the [Protect] icon of the group's top picture.

[Face Rec Edit]

You can clear and replace all information relating to face recognition in selected images.

1 Select the menu.

[MENU] → **[Playback]** → **[Face Rec Edit]** → **[REPLACE]/[DELETE]**

2 Press </> to select the picture and then press [MENU/SET].**3 Press </> to select the person and then press [MENU/SET].****4 (When [REPLACE] is selected)**

Press </>/</> to select the person to replace and then press [MENU/SET].

- Confirmation screen is displayed. It is executed when [Yes] is selected.

Exit the menu after it is executed.

- Cleared information regarding the [Face Recog.] cannot be restored.
- When all Face Recognition information in a picture has been cancelled, the picture will not be categorised using Face Recognition in [Category Play].
- The Face Recognition information of pictures in a group has to be edited at once. (You cannot edit one picture at a time.)
- Editing of group pictures can be performed only on the first picture of each set.

[Picture Sort]

You can set the order in which the camera displays images during playback.

1 Select the menu.

[MENU] → **[Playback]** → **[Picture Sort]**

2 Press </>/</> to select an item and then press [MENU/SET].


[FILE NAME]	Displays images by folder name/file name. This display format allows you to locate images in the card easily.
[DATE/TIME]	Displays images by recording date. If the card contains pictures taken with more than one camera, this display format is convenient for looking for images.

- Exit the menu after it is set.

- When you insert another card, images may not be displayed by [DATE/TIME] first. The images will be displayed by [DATE/TIME] if you wait for a while.

[Delete Confirmation]

This sets which option, [Yes] or [No], will be highlighted first when the confirmation screen for deleting a picture is displayed.

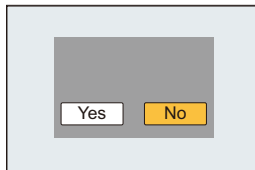**1 Select the menu.**

MENU → **[Playback]** → **[Delete Confirmation]**

2 Press ▲/▼ to select an item and then press [MENU/SET].

["Yes" first]	[Yes] is highlighted first, so deletion can be done quickly.
["No" first]	[No] is highlighted first. Accidental deletion of pictures is avoided.

- Exit the menu after it is set.



Wi-Fi[®] function/NFC function

■ Use the camera as a wireless LAN device

When using equipment or computer systems that require more reliable security than wireless LAN devices, ensure that the appropriate measures are taken for safety designs and defects for the systems used. Panasonic will not take any responsibility for any damage that arises when using the camera for any purpose other than as a wireless LAN device.

■ Use of the Wi-Fi function of this camera is presumed to be in countries where this camera is sold

There is the risk that the camera violates the radiowave regulations if used in countries other than those where this camera is sold, and Panasonic takes no responsibility for any violations.

■ There is the risk that data sent and received via radio waves may be intercepted

Please note that there is the risk that data sent and received via radio waves may be intercepted by a third party.

■ Do not use the camera in areas with magnetic fields, static electricity or interference

- Do not use the camera in areas with magnetic fields, static electricity or interference, such as near microwave ovens. These may cause the interruption of the radio waves.
- Using the camera near devices such as microwave ovens or cordless telephones that use the 2.4 GHz radio wave band may cause a decrease in performance in both devices.

■ Do not connect to the wireless network you are not authorised to use

When the camera utilises its Wi-Fi function, wireless networks will be searched automatically. When this happens, wireless networks that you are not authorised to use (SSID*) may be displayed, however do not attempt to connect to the network as it may be considered as unauthorised access.

* SSID refers to the name that is used to identify a network over a wireless LAN connection. If the SSID matches for both devices, transmission is possible.

■ Before Use

- To use the Wi-Fi function on this unit, a wireless access point or a destination device equipped with the wireless LAN function is required.

■ This unit is compatible with NFC

Using the NFC “Near Field Communication” function, you can easily transfer data necessary for a Wi-Fi connection between this camera and the smartphone.



Compatible models

This function can be used with the NFC compatible device with Android (OS version 2.3.3 or higher). (excluding some models)

- For information on the operation and settings of NFC-compatible smartphones, refer to the operating instructions of your device.

■ About the Wi-Fi connection lamp

- Lit blue: The Wi-Fi connection is on standby
- Blinking blue: Sending/receiving data through the Wi-Fi connection



■ About the [Wi-Fi] button

[Wi-Fi]/[Fn2] button can be used in two ways, as [Wi-Fi] or as [Fn2] (function 2).


At the time of purchase, it is initially set to [Wi-Fi].

- Refer to P44 for details about the function button.



Pressing and holding [Wi-Fi] before connecting to Wi-Fi (When connecting to a smartphone)

- The information required for connecting the smartphone to this unit (QR code, SSID and password) is displayed. (P255)

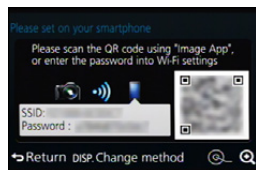

Pressing [Wi-Fi] before connecting to Wi-Fi

- Following items can be selected.

[New Connection]

[Select a destination from History] (P292)

[Select a destination from Favorite] (P292)

- These operating instructions describe the procedure for [New Connection].



What you can do with the [Wi-Fi] button when connected to Wi-Fi


• Following items can be selected.

[Terminate the Connection]	Terminates the Wi-Fi connection.
[Change the Destination]	Terminates the Wi-Fi connection, and allows you to select a different Wi-Fi connection.
[Change Settings for Sending Images]*	Refer to P296 for details.
[Register the Current Destination to Favorite]	Registering the current connection destination or the connection method, you can easily connect with the same connection method next time.
[Network Address]	Displays the MAC address and IP address of this unit.

* This is not displayed when the destination of [Remote Shooting & View], [Playback on TV] or [Send Images Stored in the Camera] is set to [Printer].






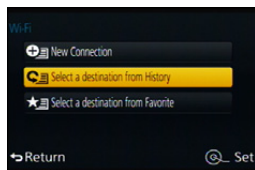


■ Describing method

When you see a step that says, "Select [Select a destination from History]." or a similar step, press the cursor buttons to select [Select a destination from History], and press [MENU/SET].

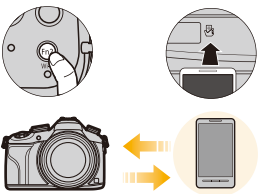

- The camera cannot be used to connect to a public wireless LAN connection.
- Use a IEEE802.11b, IEEE802.11g or IEEE802.11n compatible device when using a wireless access point.
- We strongly recommend that you set an encryption to maintain information security.
- It is recommended to use a fully charged battery when sending images.
- When the battery indicator is flashing red, the connection with other equipment may not start or the connection may be disrupted.
(A message such as [Communication error] is displayed.)
- When sending images on a mobile network, high packet communication fees may be incurred depending on the details of your contract.
- Pictures may not be completely sent depending on radio wave conditions. If the connection is terminated while sending pictures, pictures with missing sections may be sent.
- **Do not remove the memory card or battery or move to an area without any reception while sending images.**
- The monitor display may become distorted for an instant while connected to the service, however this will not affect the image being sent.

What you can do with the Wi-Fi function

	<h2>Controlling with a Smartphone/Tablet</h2> <ul style="list-style-type: none"> Recording with a smartphone. Playing back images in the camera Saving images stored in the camera. Sending images to an SNS. Writing location information on images stored in the camera <div data-bbox="233 393 927 633" style="border: 1px solid black; padding: 10px;"> <p> Easy connection, easy transfer</p> <p>You can use easily by pressing and holding [Wi-Fi] or by using the NFC function.</p>  </div>	P254
	<h2>Displaying pictures on a TV</h2>	P268
	<h2>Printing Wirelessly</h2>	P269
	<h2>When sending images to AV device</h2> <p>You can send pictures and motion pictures to AV devices in your house (home AV devices).</p>	P270
	<h2>When sending images to PC</h2>	P273
	<h2>Using Web services</h2> <p>You can send pictures and motion pictures to an SNS, etc. via "LUMIX CLUB".</p> <p>By using [Cloud Sync. Service], you can receive pictures and motion pictures on a PC or smartphone.</p>	P277

These operating instructions refer to both smartphones and tablets as "smartphones" from this point on unless noted otherwise.

Controlling with a Smartphone/Tablet

You can remotely operate the camera using a smartphone.

You need to install “Panasonic Image App” (referred to as “Image App” from this point on) on your smartphone.



Installing the smartphone/tablet app “Image App”


The “Image App” is an application provided by Panasonic.

• OS (As of June 2014)

App for Android™: Android 2.3.3 or higher*

App for iOS: iOS 5.0 or higher

* Connecting to this unit with [Wi-Fi Direct] requires Android OS 4.0 or higher and Wi-Fi Direct™ support.

- 1 **Connect the smartphone to a network.**
- 2 **(Android) Select “Google Play™ Store”.**
(iOS) Select “App StoreSM”.
- 3 **Enter “Panasonic Image App” or “LUMIX” into the search box.**
- 4 **Select “Panasonic Image App”  and install it.**

- Use the latest version.
- Read the [Help] in the “Image App” menu for further details on how to operate.
- The screen differs depending on the OS.
- The screens and procedures described from this point on are those at the time when the model first became available for purchase. The screens and procedures may change with version updates.
- The service may not be able to be used properly depending on the type of smartphone being used.

For information on the “Image App”, refer to the support site below.

<http://panasonic.jp/support/global/cs/dsc/>

(This Site is English only.)

- When downloading the app on a mobile network, high packet communication fees may be incurred depending on the details of your contract.

Connecting to a smartphone/tablet

A connection can be easily established by pressing and holding [Wi-Fi] or by using the NFC function.

Preparations:


- Install the "Image App" in advance. (P254)

1 Press and hold [Wi-Fi].

- The information required for connecting the smartphone to this unit (QR code, SSID and password) is displayed.
- The same screen can be displayed by selecting the following menu items.

Wi-Fi → **[New Connection]** → **[Remote Shooting & View]**

- (A) SSID and password
- (B) QR code

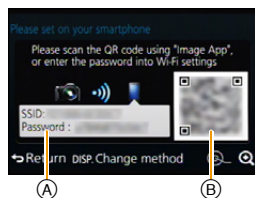

- To change the connection method, press [DISP.], and then select the connection method.

2 Operate the smartphone.

- Once the connection is complete, the image from the camera will be displayed on the screen of the smartphone.
(After this operation, it may take a while for the connection to be completed.)
- The connection method differs according to your smartphone.



If you are using an iOS device

When scanning the QR code to set up a connection

(If you are reconnecting the camera, steps ❶ to ❷ are not required)

- ❶ Start "Image App". (P254)




- ❷ Select [QR code], and then select [OK].
- ❸ Using "Image App", scan the QR code displayed on the screen of the camera.

- If you press [MENU/SET] on the camera, the QR code will be enlarged. When it is difficult to scan the QR code, try enlarging it.

(If the scanning is not successful, move the camera and the smartphone further away from each other and try again or use a connection method other than the QR code method.)



- ❹ Install the profile of "IMAGE APP".
 - A message will be displayed on the browser.
 - If the smartphone is locked with a passcode, enter the passcode to unlock the smartphone.

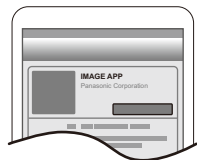

- ❺ Press the home button to close the browser.
- ❻ Turn on the Wi-Fi function in the setting menu of the smartphone.



- ❼ Select the SSID displayed on the screen of the camera.



- ❽ Return to the home screen, and then start "Image App". (P254)



When using an SSID and password to set up a connection


- 1 Turn on the Wi-Fi function in the setting menu of the smartphone.
- 2 Select the SSID displayed on the screen of the camera.
- 3 Enter the password displayed on the screen of the camera.
(Only when connecting for the first time)
- 4 Start "Image App". (P254)

**If you are using an Android device****When scanning the QR code to set up a connection**


- 1 Start "Image App". (P254)



- 2 Select [QR code].
- 3 Using "Image App", scan the QR code displayed on the screen of the camera.
 - If you press [MENU/SET] on the camera, the QR code will be enlarged. When it is difficult to scan the QR code, try enlarging it.
(If the scanning is not successful, move the camera and the smartphone further away from each other and try again or use a connection method other than the QR code method.)

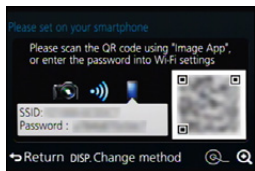**When using an SSID and password to set up a connection**


- 1 Start "Image App". (P254)
- 2 Select [Wi-Fi].
- 3 Select the SSID displayed on the screen of the camera.

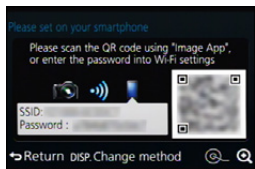

- 4 Enter the password displayed on the screen of the camera.
(Only when connecting for the first time)
 - If you mark the box that enables the smartphone to display the password, you can see the password as you enter it.

■ Changing the connection method

To change the connection method, press [DISP.], and then select the connection method.

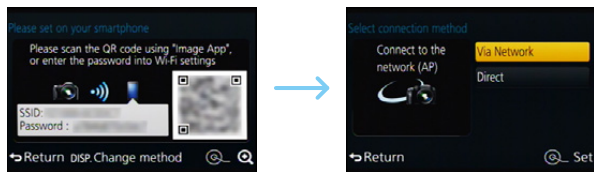

When connecting with [Via Network]:

On the camera

1 Select [Via Network].

- Follow the connection procedure described on [P289](#) to connect the camera to a wireless access point.

On your smartphone/tablet

- 2 Turn on the Wi-Fi function.**
- 3 Connect the smartphone to the wireless access point to which the camera is connected.**
- 4 Start "Image App". ([P254](#))**

When connecting with [WPS Connection]* in [Direct]:

On the camera

1 Select [Direct].

- Follow the connection procedure described on [P291](#) to connect the camera to the smartphone.

On your smartphone/tablet

2 Start "Image App". ([P254](#))

- * WPS is a function that allows you to easily set up a connection with a wireless LAN device and make security-related settings. To check whether your smartphone supports the function, refer to the operating instructions of the smartphone.

■ Terminating the connection

After use, terminate the connection to the smartphone.

1 Press [Wi-Fi] on the camera. ([P252](#))

2 On the smartphone, close "Image App".

(If you are using an iOS device)

On the screen of "Image App", press the home button to close the app.

(If you are using an Android device)

On the screen of "Image App", press the return button twice to close the app.

Connecting to a smartphone/tablet by using the NFC function

Using the NFC “Near Field Communication” function, you can easily transfer data necessary for a Wi-Fi connection between this camera and the smartphone.

Compatible models

This function can be used with the NFC compatible device with Android (OS version 2.3.3 or higher). (excluding some models)

Preparation:



(On the camera)

- Set [NFC Operation] to [ON]. (P297)

(On your smartphone)

- Check that your smartphone is a compatible model.
- Turn on the Wi-Fi function.
- Install the “Image App” in advance. (P254)


1 Launch “Image App” on the smartphone.

2 While [] is displayed on the screen of the smartphone, touch the smartphone to [] of the camera.

3 When the connection confirmation screen is displayed on the camera, select [Yes].

4 Touch the smartphone to [] of the camera again.

- Steps **3** through **4** are not required from the second time on.
- It may take time to complete the connection.
- When the smartphone has connected, an image of this camera will be displayed on the smartphone.
- The connected smartphone is registered to this camera.
- If a connection attempt by touching fails, restart the “Image App”, and then display the screen in step **1** again.
- If a connection is established during single picture playback, the picture will be transferred to the smartphone. (P262)

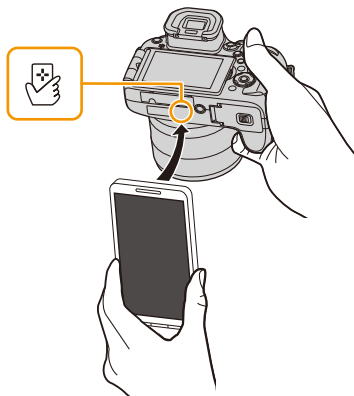


- You can register up to 20 smartphones. When the number exceeds 20, registrations will be deleted, starting from the oldest touched one.
- Performing [Reset Wi-Fi Settings] will delete the smartphone registration.
- If the camera is not recognised even when touching the smartphone, change positions and try again.
- Do not touch the smartphone to this camera strongly.
- For information on the operation and settings of NFC-compatible smartphones, refer to the operating instructions of your device.
- If there is a metal object between this camera and the smartphone, reading may fail. Also, putting a sticker around the NFC area may deteriorate the communication performance.
- This function is not available in the following cases:
 - When connecting to a PC or a printer
 - When recording motion pictures
 - When using [Time Lapse Shot]
 - [Multi Exp.]

Taking pictures via a smartphone/tablet (remote recording)

1 Connect to a smartphone. (P255)

2 Operate the smartphone.


- 1 Select [].
- 2 Record an image.
 - The recorded images are saved in the camera.
 - Some settings are not available.




Playing back images in the camera

1 Connect to a smartphone. (P255)

2 Operate the smartphone.


- 1 Select [].
 - You can switch the images to be displayed by selecting the icon (A) on the top left of the screen. To display images stored in the camera, select [LUMIX].
- 2 Touch the image to enlarge it.

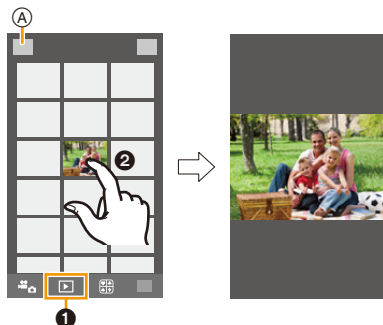


Saving images stored in the camera

1 Connect to a smartphone. (P255)

2 Operate the smartphone.

- 1 Select [].
 - You can switch the images to be displayed by selecting the icon (A) on the top left of the screen. To display images stored in the camera, select [LUMIX].
- 2 Touch and hold an image, and drag it to save it.

- The function can be assigned to the top, bottom, left or right according to your preference.
- You cannot save pictures taken in RAW format, motion pictures recorded with [AVCHD] or with their picture quality size set to [MP4] in 4K.

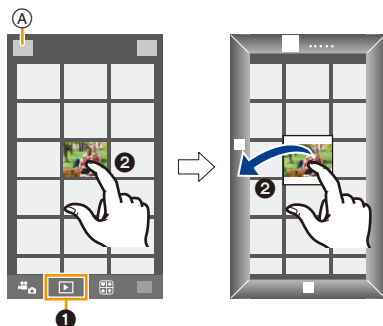

Transferring images stored in the camera easily

A Wi-Fi connection using NFC function is possible by touching the smartphone to this unit, and you can easily transfer images displayed on the screen.

An image can be sent on site immediately after taking it, so you can easily send it to the smartphone* of your family or friend.

* Installing the “Image App” is required for use.

Preparation:

(On the camera)


- Set [NFC Operation] to [ON]. (P297)
- Set [Touch Sharing] to [ON]. (P298)

(On your smartphone)

- Check that your smartphone is a compatible model.
- Turn on the Wi-Fi function.
- Install the “Image App” in advance. (P254)

- 1 Play back the picture in the camera.**
- 2 Launch “Image App” on the smartphone.**
- 3 While [👉] is displayed on the connection screen of the “Image App”, touch the smartphone to [👉] of the camera.**

- It may take time to complete the connection.
- If a connection attempt by touching fails, restart the “Image App”, and then display the screen in step 2 again.
- To transfer more than one image, repeat steps 1 and 3.
(They cannot be transferred as a batch.)

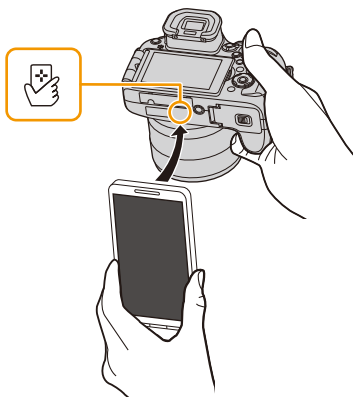


- Depending on the environment you are using, it may take a few minutes to complete the image transfer.
- You do not need to keep the devices in contact with each other while an image is being transferred. Do not put the camera down on top of the lens.

Sending images in the camera to an SNS

1 Connect to a smartphone. (P255)

2 Operate the smartphone.


- 1 Select [▶].
 - You can switch the images to be displayed by selecting the icon (A) on the top left of the screen. To display images stored in the camera, select [LUMIX].
- 2 Touch and hold an image, and drag it to send it to an SNS, etc.
 - The image is sent to a web service such as an SNS.

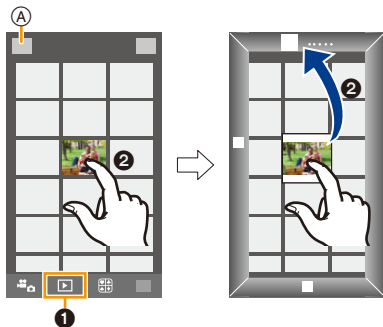

- The function can be assigned to the top, bottom, left or right according to your preference.

Adding location information to images stored in the camera from a smartphone/tablet

You can send location information acquired with a smartphone to the camera. After sending the information, you can also write it on images stored in the camera.

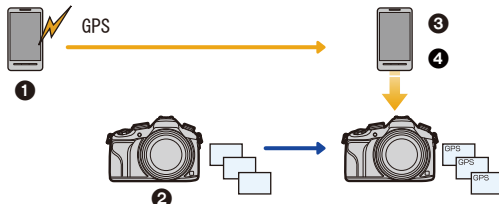

- 1 Start recording location information
- 2 Start recording images
- 3 Finish recording the location information
- 4 Sending and writing location information

- Location information different from that at the time of recording may be written. Keep the following points in mind:
 - Set the camera's [Home] setting in [World Time] to your region.
 - Once you start recording location information with your smartphone, do not change the camera's [Home] setting in [World Time].
- Location information cannot be written on images that were recorded when the clock was not set.

■ Start recording location information

Operate the smartphone.

- 1 Select [].
- 2 Select [Geotagging].
- 3 Select [].



■ Finish recording the location information

Operate the smartphone.

- 1 Select [].
- 2 Select [Geotagging].
- 3 Select [].



■ Sending and writing location information

1 Connect to a smartphone. (P255)

2 Operate the smartphone.

- 1 Select [].
- 2 Select [Geotagging].
- 3 Select [].



- Follow the on-screen messages to operate the smartphone.
- Location information is not written onto the images recorded when [Rec Format] is set to [AVCHD].
- When the card in the camera lacks sufficient free space, writing location information may not be possible.
- Once the location information is sent to the camera, you can also write it on images by performing [Location Logging] in the [Playback] menu.

• Cautions for Use:


Be sure to pay special attention to the privacy, the likeness rights, etc. of the subject when you use this function. Use at your own risk.

- On the smartphone, you can set the acquisition interval of location information and check the transfer status of location information.
Refer to [Help] in the "Image App" menu for details.
- (When using "Image App" for iOS)
If you press the Home or On/Off button of the smartphone while location information is being recorded, the recording will stop.

Not available in these cases:

- The smartphone may fail to acquire location information in China and the border area in the neighbouring countries of China.
(As of June 2014)

Sending images to a smartphone/tablet by controlling the camera

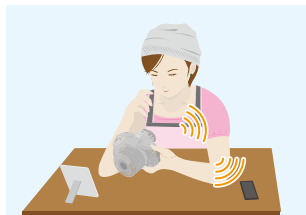

■ Methods for sending images that can be sent

	JPEG	RAW	MP4	AVCHD
Sending an image each time a recording is made ([Send Images While Recording])	○	—	—	—
Sending selected images ([Send Images Stored in the Camera])	○	—	○*	—

* Excluding motion pictures recorded with their size set to [4K] in [Rec Quality]

- Some images may not be played back or sent depending on the device.
- For information on the playback of images, check the operating instructions of the destination device.
- For details on how to send images, refer to [P294](#).

Preparations:

- Install the "Image App" in advance. ([P254](#))

Click the followings to jump to the beginning of each menu.

Sending an image each time a recording is made ([Send Images While Recording]) [P266](#)

Sending selected images ([Send Images Stored in the Camera]) [P267](#)

Sending an image each time a recording is made ([Send Images While Recording])

1 Select the menu.

Wi-Fi → [New Connection] → [Send Images While Recording] → [Smartphone]

2 Select [Via Network] or [Direct], and connect. (P288)

On your smartphone

When connecting with [Via Network]:

- 1 Turn on the Wi-Fi function.
- 2 Select the wireless access point you want to connect to, and set.
- 3 Start "Image App". (P254)

When connecting with [Wi-Fi Direct] or [WPS Connection] in [Direct]:

- 1 Start "Image App". (P254)

When connecting with [Manual Connection] in [Direct]:

- 1 Turn on the Wi-Fi function.
- 2 Select the SSID that matches the one displayed on the screen of this unit, and then enter the password.
- 3 Start "Image App". (P254)

3 Select a device you want to connect.

- When the connection is complete, the screen is displayed. To change the send setting, press [DISP.]. (P296)

4 Take pictures.

- The pictures are sent automatically after taking them.
- To change the setting or disconnect, press [Wi-Fi]. (P252)
You cannot change the settings while sending pictures. Wait until sending is complete.

Sending selected images ([Send Images Stored in the Camera])

1 Select the menu.

Wi-Fi → [New Connection] → [Send Images Stored in the Camera] → [Smartphone]

2 Select [Via Network] or [Direct], and connect. (P288)

On your smartphone

When connecting with [Via Network]:

- ❶ Turn on the Wi-Fi function.
- ❷ Select the wireless access point you want to connect to, and set.
- ❸ Start "Image App". (P254)

When connecting with [Wi-Fi Direct] or [WPS Connection] in [Direct]:

- ❶ Start "Image App". (P254)

When connecting with [Manual Connection] in [Direct]:

- ❶ Turn on the Wi-Fi function.
- ❷ Select the SSID that matches the one displayed on the screen of this unit, and then enter the password.
- ❸ Start "Image App". (P254)

3 Select a device you want to connect.

- When the connection is complete, the screen is displayed. To change the send setting, press [DISP.]. (P296)

4 Select [Single Select] or [Multi Select].

- To change the setting or disconnect, press [Wi-Fi]. (P252)


[Single Select] setting

- ❶ Select the picture.
- ❷ Press [MENU/SET].



[Multi Select] setting

- ❶ Select the picture. (repeat)
 - The setting is cancelled when the picture is selected again.
- ❷ Select [OK].
 - The number of pictures that can be sent by [Multi Select] is limited.

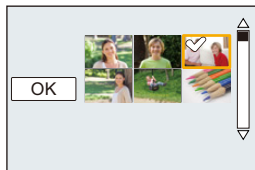

- Confirmation screen is displayed. It is executed when [Yes] is selected.

Displaying pictures on a TV

You can display pictures on a TV that supports the Digital Media Renderer (DMR) function of the DLNA standard.

- If you display pictures using the Wi-Fi function, they cannot be output in 4K resolution. To output them in 4K resolution, connect the camera and the TV with an HDMI micro cable. (P301)



Preparations:

Set the TV to DLNA waiting mode.

- Read the operating instructions for your TV.

1 Select the menu.

Wi-Fi → **[New Connection]** → **[Playback on TV]**

2 Select **[Via Network]** or **[Direct]**, and connect. (P288)

3 Select a device you want to connect.

- When the connection is established, the screen is displayed.

4 Take or play back pictures on this unit.

- To change the setting or disconnect, press **[Wi-Fi]**. (P252)

- When a TV is connected to this unit, the TV screen may temporarily return to the status before the connection. Pictures are displayed again when you take or play back pictures.
- **[Effect]** and **[Sound]** of the Slide Show are disabled.



Not available in these cases:

- Motion pictures cannot be played back.
- During the multi/calendar playback, pictures displayed on the screen of this unit are not displayed on TV.

Printing Wirelessly

You can send images to a compatible printer, and print them wirelessly.



■ Methods for sending and images that can be sent

	JPEG	RAW	MP4	AVCHD
Sending selected images ([Send Images Stored in the Camera])	○	—	—	—

- Some images may not be sent depending on the device.
- For details on how to send images, refer to [P294](#).

Preparations:

- You can print out recorded pictures wirelessly from a PictBridge (wireless LAN-compatible)* printer.
 - * Compliant with the DPS over IP standards.
For details on the PictBridge (wireless LAN-compatible) printer, contact the respective company.

1 Select the menu.

Wi-Fi → **[New Connection]** → **[Send Images Stored in the Camera]** → **[Printer]**

2 Select [Via Network] or [Direct], and connect. (P288)

3 Select a printer you want to connect.

4 Select pictures, and then print.

- The procedure for selecting pictures is the same as the one for when the USB connection cable is connected.
For details, refer to [P315](#).
- To change the setting or disconnect, press [Wi-Fi]. ([P252](#))




Not available in these cases:

- Motion pictures cannot be printed out.

When sending images to AV device

You can send pictures and motion pictures to AV devices in your house (home AV devices).

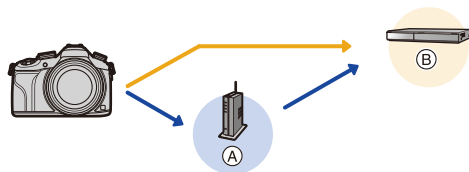

(A) Wireless access point

(B) Home AV device

■ Methods for sending and images that can be sent

	JPEG	RAW	MP4	AVCHD
Sending an image each time a recording is made ([Send Images While Recording])	○	—	—	—
Sending selected images ([Send Images Stored in the Camera])	○	—	—	—

- Some images may not be played back or sent depending on the device.
- For information on the playback of images, check the operating instructions of the destination device.
- For details on how to send images, refer to [P294](#).



Preparations:

When sending a picture to AV devices, set your device to DLNA waiting mode.

- Read the operating instructions of your device for details.

Click the followings to jump to the beginning of each menu.

Sending an image each time a recording is made ([Send Images While Recording]) P271

Sending selected images ([Send Images Stored in the Camera]) P272

Sending an image each time a recording is made ([Send Images While Recording])

1 Select the menu.

Wi-Fi → **[New Connection]** → **[Send Images While Recording]** → **[AV device]**

2 Select [Via Network] or [Direct], and connect. (P288)

3 Select a device you want to connect.

- When the connection is complete, the screen is displayed. To change the send setting, press [DISP.]. (P296)

4 Take pictures.

- To change the setting or disconnect, press [Wi-Fi]. (P252)
You cannot change the settings while sending pictures. Wait until sending is complete.

Sending selected images ([Send Images Stored in the Camera])

1 Select the menu.

Wi-Fi → **[New Connection]** → **[Send Images Stored in the Camera]** → **[AV device]**

2 Select **[Via Network]** or **[Direct]**, and connect. (P288)

3 Select a device you want to connect.

- When the connection is complete, the screen is displayed. To change the send setting, press [DISP.]. (P296)

4 Select **[Single Select]** or **[Multi Select]**.

- To change the setting or disconnect, press [Wi-Fi]. (P252)


[Single Select] setting

- 1 Select the picture.
- 2 Press [MENU/SET].



[Multi Select] setting

- 1 Select the picture. (repeat)
 - The setting is cancelled when the picture is selected again.
- 2 Select [OK].
 - The number of pictures that can be sent by [Multi Select] is limited.

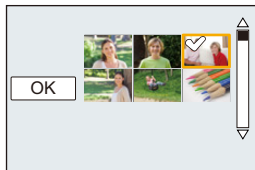

- Confirmation screen is displayed. It is executed when [Yes] is selected.

When sending images to PC

You can send pictures and motion pictures recorded with this unit to a PC.



■ Methods for sending and images that can be sent

	JPEG	RAW	MP4	AVCHD*
Sending an image each time a recording is made ([Send Images While Recording])	○	○	—	—
Sending selected images ([Send Images Stored in the Camera])	○	○	○	○

* A motion picture recorded in [AVCHD] can be sent to [PC] if the file size is 4 GB or smaller. It cannot be sent if the size is greater than 4 GB.

- Some images may not be played back or sent depending on the device.
- For information on the playback of images, check the operating instructions of the destination device.
- For details on how to send images, refer to [P294](#).

Preparations:

(On the camera)

- If the workgroup of the destination PC has been changed from the standard setting, you also need to change the setting of this unit in [PC Connection]. ([P297](#))

(On your PC)

- Turn the computer on.
- Prepare folders for receiving images on the PC before sending a picture to the PC. ([P274](#))

Click the followings to jump to the beginning of each menu.

Sending an image each time a recording is made ([Send Images While Recording]) [P275](#)

Sending selected images ([Send Images Stored in the Camera]) [P276](#)

To create a folder that receives images

- Create a PC user account [account name (up to 254 characters) and password (up to 32 characters)] consisting of alphanumeric characters. An attempt to create a receive folder may fail if the account includes non-alphanumeric characters.

■ When using “PHOTOfunSTUDIO”

1 Install “PHOTOfunSTUDIO” to the PC.

- For details on hardware requirements and installation, read “About the supplied software” (P307).

2 Create a folder that receives images with “PHOTOfunSTUDIO”.

- To create the folder automatically, select [Auto-create]. To specify a folder, create a new folder, or set a password to the folder, select [Create manually].
- For details, refer to the operating instructions of “PHOTOfunSTUDIO” (PDF).

■ When not using “PHOTOfunSTUDIO”

(For Windows)

Supported OS: Windows XP/Windows Vista/Windows 7/Windows 8/Windows 8.1

Example: Windows 7

1 Select a folder you intend to use for receiving, then right-click.

2 Select [Properties], then enable sharing of the folder.

- For details, refer to the operating instructions of your PC or Help on the OS.

(For Mac)

Supported OS: OS X v10.5 to v10.9

Example: OS X v10.8

1 Select a folder you intend to use for receiving, then click on the items in the following order.

[File] → [Get Info]

2 Enable sharing of the folder.

- For details, refer to the operating instructions of your PC or Help on the OS.

Sending an image each time a recording is made ([Send Images While Recording])

1 **Select the menu.**

Wi-Fi → **[New Connection]** → **[Send Images While Recording]** → **[PC]**

2 **Select [Via Network] or [Direct], and connect. (P288)**

3 **Select the PC you want to connect to.**

- When the PC you want to connect to is not displayed, select [Manual Input], and enter the computer name of the PC (NetBIOS name for Apple Mac computers).

4 **Select the folder you want to send.**

- When the connection is complete, the screen is displayed. To change the send setting, press [DISP.]. (P296)

5 **Take pictures.**

- To change the setting or disconnect, press [Wi-Fi]. (P252)
You cannot change the settings while sending pictures. Wait until sending is complete.

Sending selected images ([Send Images Stored in the Camera])

1 Select the menu.

Wi-Fi → [New Connection] → [Send Images Stored in the Camera] → [PC]

2 Select [Via Network] or [Direct], and connect. (P288)

3 Select the PC you want to connect to.

- When the PC you want to connect to is not displayed, select [Manual Input], and enter the computer name of the PC (NetBIOS name for Apple Mac computers).

4 Select the folder you want to send.

- When the connection is complete, the screen is displayed. To change the send setting, press [DISP.]. (P296)

5 Select [Single Select] or [Multi Select].

- To change the setting or disconnect, press [Wi-Fi]. (P252)


[Single Select] setting

- 1 Select the picture.
- 2 Press [MENU/SET].



[Multi Select] setting

- 1 Select the picture. (repeat)
 - The setting is cancelled when the picture is selected again.
- 2 Select [OK].
 - The number of pictures that can be sent by [Multi Select] is limited.

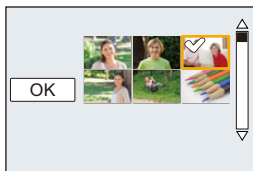


- Confirmation screen is displayed. It is executed when [Yes] is selected.

- Folders sorted by the sent date are created in the specified folder, and pictures are saved in those folders.
 - If the screen for a user account and password entry appears, enter the one you set on your PC.
 - When the computer name (NetBIOS name for Apple Mac computers) contains a space (blank character), etc., it may not be recognised correctly.
- If a connection attempt fails, we recommend that you change the computer name (or NetBIOS name) to the one consisting of only alphanumeric characters, with a maximum of 15 characters.

Using Web services

You can send pictures and motion pictures to an SNS, etc. via “LUMIX CLUB”. By setting up automatic transfers of pictures and motion pictures to the Cloud Sync Service, you can receive the transferred pictures or motion pictures on a PC or smartphone.

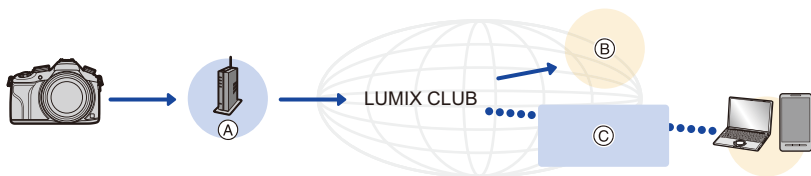

(A) Wireless access point

(B) Web service

(C) Cloud Sync. Service

Preparations:

You need to register to “LUMIX CLUB” (P283) to send a picture to a web service. To send images to a web service, you need to register the web service. (P279)

Click the followings to jump to the beginning of each menu.

When sending images to web service P277

When sending images to Cloud Sync. Service P281

When sending images to web service

■ Methods for sending and images that can be sent

	JPEG	RAW	MP4	AVCHD
Sending an image each time a recording is made ([Send Images While Recording])	○	—	—	—
Sending selected images ([Send Images Stored in the Camera])	○	—	○*	—

* Excluding motion pictures recorded with their size set to [4K] in [Rec Quality]

- Some images may not be played back or sent depending on the device.
- For information on the playback of images, check the web service.
- For details on how to send images, refer to P294.



Click the followings to jump to the beginning of each menu.

Sending an image each time a recording is made ([Send Images While Recording]) P279

Sending selected images ([Send Images Stored in the Camera]) P280

- Images uploaded to the web service cannot be displayed or deleted with this camera. Check images by accessing the web service with your smartphone or computer.
- If sending images fails, a report email outlining the failure will be sent to the email address registered with "LUMIX CLUB".
- **Images may contain personal information that can be used to identify the user, such as a title, the time and date when the images was taken, and the location where the image was taken. Check this information before uploading images to web services.**

- Panasonic assumes no responsibility for the damages resulting from the leakage, loss, etc. of images uploaded on web services.
- When uploading images to the web service, do not delete images from this camera, even after they have finished sending, until you have checked that they have been properly uploaded to the web service. Panasonic assumes no responsibility for the damages resulting from the deletion of images stored in this unit.

Registering web services

When sending images to web services, the web service being used must be registered with the "LUMIX CLUB".

- Check the "FAQ/Contact us" on the following site for compatible web services.
http://lumixclub.panasonic.net/eng/c/lumix_faqs/

Preparation:

Make sure that you have created an account on the web service you want to use, and have the login information available.

- 1 **Connect to the "LUMIX CLUB" site using a smartphone or computer.**
<http://lumixclub.panasonic.net/eng/c/>
- 2 **Enter your "LUMIX CLUB" login ID and password and log in to the service.** (P283)
- 3 **Register your email address.**
- 4 **Select the web service to be used and register it.**
 - Follow the instructions on the screen to register the service.

Sending an image each time a recording is made ([Send Images While Recording])

- 1 **Select the menu.**

Wi-Fi → **[New Connection]** → **[Send Images While Recording]** → **[Web service]**

- 2 **Select [Via Network], and connect.** (P288)
- 3 **Select a web service you want to connect.**
 - When the connection is complete, the screen is displayed. To change the send setting, press [DISP.]. (P296)
- 4 **Take pictures.**
 - To change the setting or disconnect, press [Wi-Fi]. (P252)
You cannot change the settings while sending pictures. Wait until sending is complete.

Sending selected images ([Send Images Stored in the Camera])

1 Select the menu.

Wi-Fi → **[New Connection]** → **[Send Images Stored in the Camera]** → **[Web service]**

2 Select **[Via Network]**, and connect. (P288)

3 Select a web service you want to connect.

- When the connection is complete, the screen is displayed. To change the send setting, press [DISP.]. (P296)

4 Select **[Single Select]** or **[Multi Select]**.

- To change the setting or disconnect, press [Wi-Fi]. (P252)


[Single Select] setting

- 1 Select the picture.
- 2 Press [MENU/SET].



[Multi Select] setting

- 1 Select the picture. (repeat)
 - The setting is cancelled when the picture is selected again.
- 2 Select [OK].
 - The number of pictures that can be sent by [Multi Select] is limited.

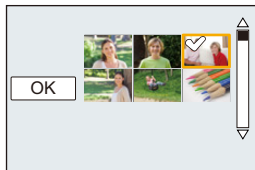

- Confirmation screen is displayed. It is executed when [Yes] is selected.

When sending images to Cloud Sync. Service

■ Using [Cloud Sync. Service] (As of June 2014)

Preparations:

You need to register to "LUMIX CLUB" (P283) and configure the Cloud Sync. setting to send a picture to a Cloud Folder.

For a PC, use "PHOTOfunSTUDIO" to set up Cloud Sync settings. For a smartphone, use "Image App" to set them up.

- If you set the picture destination to [Cloud Sync. Service], sent pictures are temporarily saved in the cloud folder, and they can be synchronised with the device in use, such as the PC or smartphone.
- A Cloud Folder stores transferred images for 30 days (up to 1000 pictures). Transferred images are deleted automatically 30 days after the transfer. Furthermore, when the number of stored images exceeds 1000, some images may be deleted depending on the [Cloud Limit] (P296) setting even within 30 days after the transfer.
- When the download of images from a Cloud Folder to all specified devices is complete, images may be deleted from the Cloud Folder even within 30 days after the transfer.

■ Methods for sending and images that can be sent

	JPEG	RAW	MP4	AVCHD
Sending an image each time a recording is made ([Send Images While Recording])	○	—	—	—
Sending selected images ([Send Images Stored in the Camera])	○	—	○*	—

* Excluding motion pictures recorded with their size set to [4K] in [Rec Quality]

- Some images may not be played back or sent depending on the device.
- For information on the playback of images, check the operating instructions of the destination device.
- For details on how to send images, refer to P294.

Click the followings to jump to the beginning of each menu.

Sending an image each time a recording is made ([Send Images While Recording]) P282

Sending selected images ([Send Images Stored in the Camera]) P282

Sending an image each time a recording is made ([Send Images While Recording])

1 Select the menu.

Wi-Fi → [New Connection] → [Send Images While Recording] → [Cloud Sync. Service]

2 Select [Via Network], and connect. (P288)

3 Check the send setting.

- When the connection is complete, the screen is displayed. To change the send setting, press [DISP.]. (P296)

4 Take pictures.

- To change the setting or disconnect, press [Wi-Fi]. (P252)
You cannot change the settings while sending pictures. Wait until sending is complete.

Sending selected images ([Send Images Stored in the Camera])

1 Select the menu.

Wi-Fi → [New Connection] → [Send Images Stored in the Camera] → [Cloud Sync. Service]

2 Select [Via Network], and connect. (P288)

3 Check the send setting.

- When the connection is complete, the screen is displayed. To change the send setting, press [DISP.]. (P296)

4 Select [Single Select] or [Multi Select].

- To change the setting or disconnect, press [Wi-Fi]. (P252)


[Single Select] setting

- 1 Select the picture.
- 2 Press [MENU/SET].



[Multi Select] setting

- 1 Select the picture. (repeat)
 - The setting is cancelled when the picture is selected again.
- 2 Select [OK].
 - The number of pictures that can be sent by [Multi Select] is limited.

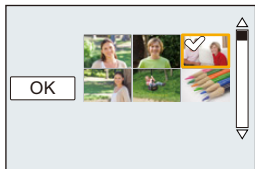

- Confirmation screen is displayed. It is executed when [Yes] is selected.

Registering to the “LUMIX CLUB”

About the [LUMIX CLUB]

Acquire a “LUMIX CLUB” login ID (free).

If you register this unit to the “LUMIX CLUB”, you can synchronise images between the devices you are using, or transfer these images to web services.

Use the “LUMIX CLUB” when uploading pictures to web services.

- You can set the same “LUMIX CLUB” login ID for this unit and a smartphone. (P286)

Refer to the “LUMIX CLUB” site for details.

<http://lumixclub.panasonic.net/eng/c/>

Please note:


- The service may be suspended due to regular maintenance or unexpected troubles, and the service contents may be changed or added, without prior notice to the users.
- The service may be stopped in whole or in part with a reasonable period of advance notice.

Acquiring a new login ID ([New account])

1 Select the menu.

MENU → **Setup** → **[Wi-Fi]** → **[Wi-Fi Setup]** → **[LUMIX CLUB]**

2 Select [Set/Add Account].

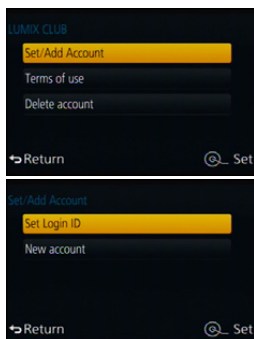

3 Select [New account].

- Connect to the network.

Proceed to the next page by pressing [MENU/SET].

- A confirmation screen will be displayed if a login ID has already been acquired for the camera. Select [Yes] to acquire a new login ID, or [No] if you do not need to acquire a new login ID.

4 Select the method for connecting to a wireless access point, and set.

- Refer to P289 for details.

- A setting screen will be displayed only when connecting for the first time.

Once you set the connection method, it will be saved on this unit and used when connecting the next time. To change the wireless access point you want to connect to, press [DISP.], and change the connection destination.



5 Read through the “LUMIX CLUB” terms of use and press [MENU/SET].


- You can switch pages by ▲/▼.
- Rotating the zoom lever towards [T] will enlarge the view (2×).
- Rotating the zoom lever towards [W] with the view enlarged returns the view to its original size (1×).
- You can move the position of the enlarged display with ▲/▼/◀/▶.
- Press [⏏/↵] to cancel the process without acquiring a login ID.

6 Enter a password.

- Enter any combination of 8 to 16 characters and numbers for the password.
- For details on how to enter characters, refer to “Entering Text” section on P55.

7 Check the login ID and press [MENU/SET].

- The login ID (12-digit number) will be displayed automatically.
When logging in to the “LUMIX CLUB” with a computer, you only need to enter the numbers.
- A message is displayed when the connection is complete. Press [MENU/SET].
- **Be sure to make a note of the login ID and password.**
- Exit the menu after it is set.

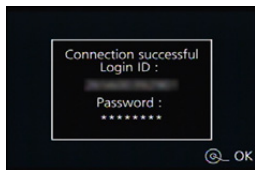

Using the acquired login ID/Checking or changing the login ID or password ([Set Login ID])

Preparation:

When using the acquired login ID, check the ID and password.

To change the "LUMIX CLUB" password on the camera, access the "LUMIX CLUB" website from your smartphone or PC and change the "LUMIX CLUB" password in advance.

- The login ID and password registered to the "LUMIX CLUB" cannot be changed on this unit.

1 Select the menu.

MENU → **[Setup]** → **[Wi-Fi]** → **[Wi-Fi Setup]** → **[LUMIX CLUB]**

2 Select [Set/Add Account].


3 Select [Set Login ID].

- The login ID and password are displayed.
- The password is displayed as "★".
- Close the menu if only checking the login ID.

4 Select the item to change.

5 Enter the login ID or password.

- Refer to "Entering Text" (P55) for information on how to enter text.
- Enter the new password you have created on your smartphone or PC into the camera. If the password differs from the one you created on your smartphone or PC, you will not be able to upload images.
- Exit the menu after it is set.

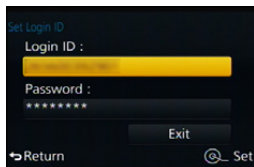

To set the same login ID for the camera and the smartphone/tablet

- Setting the same login ID on this unit and your smartphone is convenient for sending images on this unit to other devices or web services.

When either this unit or the smartphone/tablet has acquired the login ID:

- 1 **Connect this unit to the smartphone. (P255)**
 - 2 **From the “Image App” menu, set the common login ID.**
 - The login IDs for this unit and the smartphone become the same.
- After connecting this unit to the smartphone, the setup screen for a common login ID may appear when you display the playback screen. You can also set a common login ID by following the on-screen instructions.
 - This operation is not available for [Wi-Fi Direct] connection.

When this unit and the smartphone/tablet have acquired different login IDs:

(When you want to use the smartphone’s login ID for this unit)

Change the login ID and password for this unit to those acquired by the smartphone.

(When you want to use this unit’s login ID for the smartphone)

Change the login ID and password for the smartphone to those acquired by this unit.

Check the “LUMIX CLUB” terms of use

Check the details if the terms of use have been updated.

- 1 **Select the menu.**

MENU → **⌂ [Setup]** → **[Wi-Fi]** → **[Wi-Fi Setup]** → **[LUMIX CLUB]**


- 2 **Select [Terms of use].**

- The camera will connect to the network and the terms of use will be displayed. Close the menu after checking the terms of use.

Delete your login ID and account from the “LUMIX CLUB”

Delete the login ID from the camera when transferring it to another party or disposing of it. You can also delete your “LUMIX CLUB” account.

1 Select the menu.

MENU →  **[Setup]** → **[Wi-Fi]** → **[Wi-Fi Setup]** → **[LUMIX CLUB]**

2 Select [Delete account].

- The message is displayed. Press [MENU/SET].

3 Select [Yes] in the login ID delete confirmation screen.

- The message is displayed. Press [MENU/SET].

4 Select [Yes] on the confirmation screen for deleting the “LUMIX CLUB” account.

- If you want to continue using the service, selecting [No] will only delete the login ID. Exit the menu after it is executed.

5 Press [MENU/SET].


- The login ID is deleted, and then the message notifying the deletion of your account is displayed. Press [MENU/SET].
- Exit the menu after it is executed.

• Changes and other actions to login IDs can only be made to the login ID acquired with the camera.

About Connections

You can select a connection method after selecting a Wi-Fi function and a destination. Performing a direct connection is convenient for when you are in a place away from home where wireless access points are not available or for when connecting temporarily to a device you do not usually use.

When connecting with the same settings as the previous ones, you can use the Wi-Fi function quickly by connecting via [Select a destination from History] or [Select a destination from Favorite].

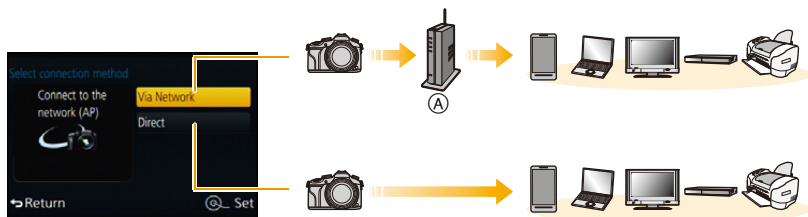

Ⓐ Wireless access point


[Via Network]	Connects via a wireless access point.	P289
[Direct]	Your device connects directly to this unit.	P291


Connecting from your house (via the network)

You can select the method for connecting to a wireless access point.

* WPS refers to a function that allows you to easily configure the settings related to the connection and security of wireless LAN devices.

To check if the wireless access point you are using is compatible with WPS, refer to the manual of the wireless access point.

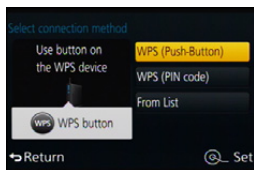
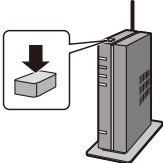
<p>[WPS (Push-Button)]</p>	<p>Save push button type wireless access point that is compatible with Wi-Fi Protected Setup™ with a WPS mark.</p> <p>Press the wireless access point WPS button until it switches to WPS mode. e.g.:</p> <ul style="list-style-type: none"> Refer to the wireless access point instruction manual for details. 
<p>[WPS (PIN code)]</p>	<p>Save PIN code type wireless access point that is compatible with Wi-Fi Protected Setup with a WPS mark.</p> <ol style="list-style-type: none"> Select the wireless access point you are connecting to. Enter the PIN code displayed on the camera screen into the wireless access point. Press [MENU/SET]. <ul style="list-style-type: none"> Refer to the wireless access point instruction manual for details.
<p>[From List]</p>	<p>Select this option when you are not sure about the WPS compatibility, or when you want to search for and connect to a wireless access point.</p> <ul style="list-style-type: none"> Refer to P290 for details.

If you are not sure about the WPS compatibility (connecting by [From List])

Search for available wireless access points.


- Confirm encryption key of the selected wireless access point if the network authentication is encrypted.
- When connecting by [Manual Input], confirm SSID, encryption type, encryption key of the wireless access point you are using.

1 Select the wireless access point you are connecting to.

- Pressing [DISP.] will search for a wireless access point again.
- If no wireless access point is found, refer to “When connecting with [Manual Input]” on [P290](#).

2 (If network authentication is encrypted)**Enter the encryption key.**

- For details on how to enter characters, refer to “Entering Text” section on [P55](#).

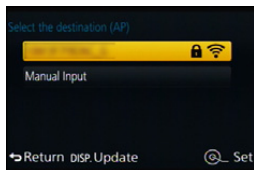**■ When connecting with [Manual Input]****1 On the screen displayed in step 1 of “If you are not sure about the WPS compatibility (connecting by [From List])”, select [Manual Input].****2 Enter the SSID of the wireless access point you are connecting to, then select [Set].**

- For details on how to enter characters, refer to “Entering Text” section on [P55](#).

3 Select the network authentication type.

- For information on network authentication, see the manual of the wireless access point.

4 Select the encryption type.

- The type of settings that can be changed may vary depending on the details of network authentication settings.

Network authentication type	Encryption types that can be set
[WPA2-PSK]/[WPA-PSK]	[TKIP]/[AES]
[Common Key]	[WEP]
[Open]	[No Encryption]/[WEP]


5 (When an option other than [No Encryption] is selected)**Enter the encryption key.**

- Check the wireless access points instruction manual and settings when saving a wireless access point.
- If no connection can be established, the wireless access point's radio waves may be too weak. Refer to “Message Display” ([P330](#)) and “Troubleshooting” ([P343](#)) for details.
- Transmission speed may decrease, or may not be usable depending on the environment it is used in.


Connecting from a location away from your house (direct connection)

You can select the method for connecting to the device you are using.

Select the connection method supported by your device.

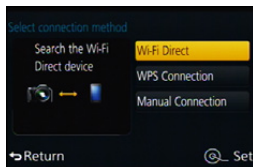

[Wi-Fi Direct]	<ol style="list-style-type: none"> 1 Set the device to Wi-Fi Direct™ mode. 2 Select [Wi-Fi Direct]. 3 Select the device to connect to. <ul style="list-style-type: none"> • Read the operating instructions of your device for details.
[WPS Connection]	<p>[WPS (Push-Button)]</p> <ol style="list-style-type: none"> 1 Select [WPS (Push-Button)]. 2 Set the device to WPS mode. <ul style="list-style-type: none"> • You can wait longer for a connection by pressing the [DISP.] button on this unit.
	<p>[WPS (PIN code)]</p> <ol style="list-style-type: none"> 1 Select [WPS (PIN code)]. 2 Enter the PIN code of the device into this unit.
[Manual Connection]	<p>Enter the SSID and password into the device. The SSID and password are displayed on the connection waiting screen of this unit.</p> <ul style="list-style-type: none"> • If the destination is [Smartphone], you can set up a connection by scanning the QR code with the smartphone. (P256, 257) • If you press [MENU/SET] on the camera, the QR code will be enlarged. When it is difficult to scan the QR code, try enlarging it.

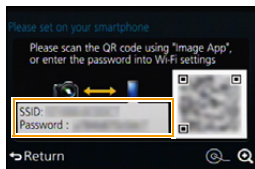

Connecting quickly with the same settings as the previous ones ([Select a destination from History])/([Select a destination from Favorite])


When the Wi-Fi function is used, a record is saved in the history. You can register records as favourites.

Connecting from the history or favourites allows you to easily connect with the same settings as the previous ones.

1 Press [Wi-Fi].




2 Select [Select a destination from History] or [Select a destination from Favorite].

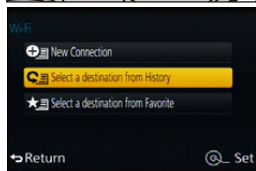

[Select a destination from History]	Connects with the same settings as the previous ones.
[Select a destination from Favorite]	Connects with settings registered as favourites.

3 Select item.

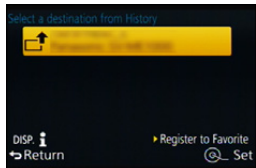

Registering records as favourites

- 1 Press [Wi-Fi].
- 2 Select [Select a destination from History].
- 3 Select the item you want to register to favourites, and then press ►.
- 4 Enter a registration name.
 - For details on how to enter characters, refer to “Entering Text” section on P55.
 - A maximum of 30 characters can be entered. A two-byte character is treated as two characters.

Editing the items registered to favourites

- 1 Press [Wi-Fi].
- 2 Select [Select a destination from Favorite].
- 3 Select the favourite item you want to edit, and then press ►.
- 4 Select the item.

[Remove from Favorite]	—
[Change the Order in Favorite]	Select the destination.
[Change the Registered Name]	<ul style="list-style-type: none"> • For details on how to enter characters, refer to “Entering Text” section on P55. • A maximum of 30 characters can be entered. A two-byte character is treated as two characters.



Save frequently-used Wi-Fi connection settings as favourites

The number that can be saved in the history is limited.

We recommend that you save frequently-used Wi-Fi connection settings by registering them as favourites. (P292)



Checking the connection detail of the history or favourite


If [DISP.] is pressed when selecting an item in the history or favourites, the detail of the connection can be displayed.

- Performing [Reset Wi-Fi Settings] clears the history and the contents saved in [Select a destination from Favorite].
- When connecting to a network to which many PCs are connected by using [Select a destination from History] or [Select a destination from Favorite], a connection attempt may fail because the previously-connected device will be identified from among many devices. If a connection attempt fails, reconnect by using [New Connection].

About settings for sending images

When sending images, select the method for sending them after selecting [New Connection].

After the connection has been completed, settings for sending, such as the image size for sending, can also be changed.

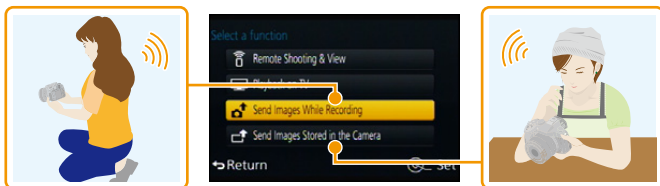

■ Images that can be sent

Destination	JPEG	RAW	MP4 ^{*1}	AVCHD ^{*1,2}
[Smartphone]	○	—	○ ^{*3}	—
[PC]	○	○	○	○
[Cloud Sync. Service]	○	—	○ ^{*3}	—
[Web service]	○	—	○ ^{*3}	—
[AV device]	○	—	—	—
[Printer] ^{*1}	○	—	—	—

*1 Sending by [Send Images While Recording] is not available.

*2 A motion picture recorded in [AVCHD] can be sent to [PC] if the file size is 4 GB or smaller. It cannot be sent if the size is greater than 4 GB.

*3 Excluding motion pictures recorded with their size set to [4K] in [Rec Quality]

• Some images may not be played back or sent depending on the device.


• Refer to the manual of the destination equipment or the web service for more information on how to playback pictures.

Send Images While Recording

A picture can be automatically sent to a specified device every time you take it.

- Since the camera gives priority to recording, sending may take longer during the recording.

- When connected with [Send Images While Recording], [Wi-Fi] is displayed on the recording screen, and [Send] is displayed while sending a file.
- If you turn off this unit or the Wi-Fi connection before sending is complete, unsent pictures will not be resent.
- You may not be able to delete files or use the playback menu while sending.

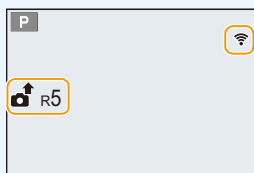

Not available in these cases:

- Motion pictures cannot be sent.

Send Images Stored in the Camera

Images can be selected and sent after recording.

- Details of the playback menu [Favorite] or [Print Set] settings will not be sent.

Not available in these cases:

- Some images taken with a different camera may not be able to be sent.
- Images that have been modified or edited with a computer may not be able to be sent.

Changing the settings for sending images

Pressing [DISP.] after completing a connection allows you to change the settings for sending such as the image size for sending.

[Size]	<p>Resize the image to send. [Original]/[Auto]^{*1}/[Change]</p> <ul style="list-style-type: none"> If you select [Auto], the image size is determined by the circumstances at the destination. You can select the image size for [Change] from [M], [S] or [VGA]. The aspect ratio does not change.
[File Format] ^{*2}	[JPG]/[RAW+JPG]/[RAW]
[Delete Location Data] ^{*3}	<p>Select whether to delete the location information from images before sending them.</p> <p>[ON]: Delete the location information, then send. [OFF]: Keep the location information and send.</p> <ul style="list-style-type: none"> This operation only deletes the location information from the images that are set to be sent. (The location information will not be deleted from the original images stored in this unit.)
[Cloud Limit] ^{*4}	<p>You can select whether to send images when the Cloud Folder runs out of free space.</p> <p>[ON]: Do not send images. [OFF]: Delete images from the oldest ones, then send new images.</p>

*1 Only available when the destination is set to [Web service].

*2 Only available when the destination is set to [PC].

*3 Only available when the destination is set to [Cloud Sync. Service] or [Web service].

*4 Only available when the destination is set to [Cloud Sync. Service].

[Wi-Fi Setup] Menu

Configure the settings required for the Wi-Fi function.
The settings cannot be changed when connected to Wi-Fi.

Select the menu.

MENU → ⚙ [Setup] → [Wi-Fi] → [Wi-Fi Setup] → Desired item to be set	
[LUMIX CLUB]	Acquires or changes the "LUMIX CLUB" login ID. • Refer to P283 for details.
[PC Connection]	<p>You can set the workgroup. To send images to a PC, a connection to the same workgroup as the destination PC is required. (The default setting is "WORKGROUP".)</p> <p>[Change Workgroup Name]: Enter the workgroup of the connecting PC. Exit the menu after it is set.</p> <p>[Restore to Default]: Restores the default state. Confirmation screen is displayed. It is executed when [Yes] is selected. Exit the menu after it is executed.</p>
<ul style="list-style-type: none"> • For details on how to enter characters, refer to "Entering Text" section on P55. • If you are using the PC with standard settings, you do not need to change the workgroup. 	
[Device Name]	<p>You can change the name of this unit.</p> <ol style="list-style-type: none"> 1 Press [DISP]. 2 Enter the desired device name. <ul style="list-style-type: none"> • For details on how to enter characters, refer to "Entering Text" section on P55. • A maximum of 32 characters can be entered.
[NFC Operation]	<p>Configures the settings for the NFC function.</p> <p>[ON]: NFC function is worked.</p> <p>[OFF]</p>

[Touch Sharing]	<p>Sets the camera operation after the connection with the NFC function is complete.</p> <hr/> <p>[ON]: When a Wi-Fi connection is complete by using the NFC function during single picture playback, the single picture can be transferred.</p> <p>[OFF]</p>
------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

[Wi-Fi Password]	<p>To prevent incorrect operation or use of the Wi-Fi function by a third party and to protect saved personal information, it is recommended that you protect the Wi-Fi function with a password. Setting a password will automatically display the password input screen when the Wi-Fi function is used.</p> <hr/> <p>[Setup]: Enter any 4-digit numbers as the password.</p> <p>[Delete]</p>
-------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

• For details on how to enter characters, refer to “Entering Text” section on [P55](#).

• Make a copy of password.

If you forget the password, you can reset it with [Reset Wi-Fi Settings] in the [Setup] menu, however other settings will also be reset. (excluding [LUMIX CLUB])

[Network Address]	Displays the MAC address and IP address of this unit.
--------------------------	-------------------------------------------------------

• A “MAC Address” is a unique address that is used to identify network equipment.

• “IP address” refers to a number that identifies a PC connected to a network such as the Internet. Usually, the addresses for homes are automatically assigned by the DHCP function such as a wireless access point. (Example: 192.168.0.87)

Enjoying Motion Pictures in 4K

Watching motion pictures in 4K

■ Playing Back on a TV Screen


By connecting the camera to a TV that supports motion pictures in 4K and playing back motion pictures recorded with their size set to [4K] in [Rec Quality], you can enjoy finely-detailed motion pictures in 4K. Even though the output resolution will be lower, you can also play them back by connecting the camera to a TV that does not support motion pictures in 4K.



Preparation: If the size is [4K], set [HDMI Mode (Play)] (P52) to [AUTO] or [4K].

Connect the camera and a 4K-compatible TV with an HDMI micro cable, and display the playback screen. (P301)

- When [VIERA Link] is set to [ON] and the camera is connected to a TV supporting VIERA Link, input of the TV will be switched automatically and playback screen will be displayed. Refer to P304 for details.
- When you have motion pictures recorded with [Rec Format] set to [MP4] and their size set to [4K] in [Rec Quality], you can also play them back by inserting the card into the SD card slot of a TV that supports motion pictures in 4K.
- Read the operating instructions for the TV.



■ Watching on a PC

To play back motion pictures recorded with their size set to [4K] in [Rec Quality] on a PC, use the software "PHOTOfunSTUDIO" on the DVD (supplied).

- To play back and edit motion pictures in 4K, you need a high-performance PC environment.
- Refer to the operating instructions of "PHOTOfunSTUDIO" (PDF).



Storing 4K motion pictures

■ Storing on a PC

You can acquire recorded pictures to a PC by connecting the camera and the PC. Refer to P306 for details.

■ Storing on a DVD or CD

You cannot dub motion pictures recorded with their size set to [4K] in [Rec Quality] to Blu-ray discs and DVDs with Panasonic recorders. (As of June 2014)

With the "PHOTOfunSTUDIO" software on the DVD (supplied), you can convert 4K motion pictures into smaller sized motion pictures or copy 4K motion pictures to a DVD or CD.

- Refer to the operating instructions of "PHOTOfunSTUDIO" (PDF).



MENU




Playing Back Pictures on a TV Screen

Pictures recorded with this unit can be played back on a TV screen.

Preparations: Turn this unit and the TV off.

- Confirm the terminals on your TV and use a cable compatible with the terminals.


Image quality may vary with the connected terminals.

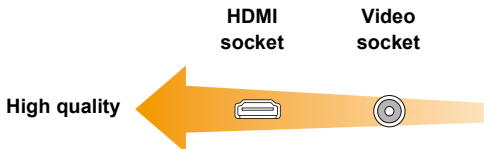

1 Connect the camera and a TV.

- Check the direction of the terminals and plug in/out straight holding onto the plug.
(It may result in malfunction by the deforming of the terminal if it is plugged in obliquely or in wrong direction.)
Do not connect devices to incorrect terminals. Doing so may cause malfunction.

To connect with an HDMI micro cable

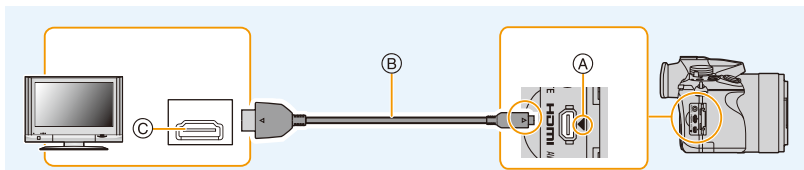


- Use a "High Speed HDMI micro cable" with the HDMI logo.
Cables that do not comply with the HDMI standards will not work.
"High Speed HDMI micro cable" [Type D–Type A plug, up to 2 m (6.6 feet) long]
- Check the [HDMI Mode (Play)]. (P52)
- During 24p motion picture playback, please set [HDMI Mode (Play)] to [AUTO].
For settings other than [AUTO], it cannot output at 24 frames/second.
- Audio will be played back as stereo (2ch).
- No picture is displayed on the screen of this unit.
- When [VIERA Link] is set to [ON], operations using the buttons on the camera are restricted.

- A Align the marks, and insert. C HDMI socket
B HDMI micro cable



To connect with an AV cable (optional)

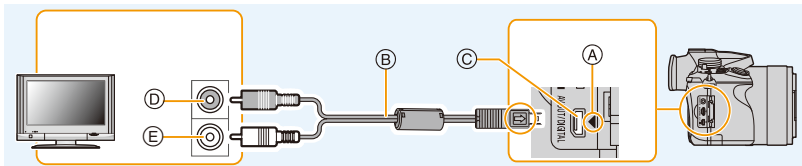

- Always use a genuine Panasonic AV cable (DMW-AVC1: optional).
- Check the [TV Aspect]. (P52)
- Audio will be played back in monaural.
- The viewfinder cannot be displayed when connected with a AV cable.

- (A) Align the marks, and insert. (D) Yellow: to the video input socket
 (B) AV cable (optional) (E) White: to the audio input socket
 (C) [AV OUT/DIGITAL] terminal
 • The colour of the terminal is gold.

2 Turn on the TV and select the input to match the connector in use.

3 Turn the camera on and then press [▶].

- Input of the TV will switch automatically and playback screen is displayed when connected to a VIERA Link compatible TV using an HDMI micro cable with the [VIERA Link] (P53) set to [ON]. (P304)
- Depending on the [Aspect Ratio], black bands may be displayed on the top and bottom or the left and right of the pictures.
- Change the screen mode on your TV if the picture is displayed with the top or bottom cut off.
- Output from the HDMI micro cable has priority when both AV cable (optional) and HDMI micro cable are connected.
- The connection with the USB connection cable (supplied) will take priority when you connect the USB connection cable (supplied) simultaneously with the HDMI micro cable.
- When you play back a picture vertically, it may be blurry.
- Proper playback will be dependent on the TV used for viewing.
- You can view pictures on TVs in other countries (regions) which use the NTSC or PAL system when you set [Video Out] in the [Setup] menu.
- No sound is output from the camera speakers.
- Read the operating instructions for the TV.





The recorded pictures can be played back on a TV with an SD Memory Card slot

- Depending on the TV model, pictures may not be displayed on the full screen.
- The file format of the motion pictures that can be played back differs depending on the TV model.
- In some cases, panorama pictures cannot be played back. Also, auto-scroll playback of panorama pictures may not work.
- For cards compatible with playback, refer to the operating instructions of the TV.



MENU



Using VIERA Link (HDMI)

What is the VIERA Link (HDMI) (HDAVI Control™)?

- This function allows you to use your remote control for the Panasonic TV for easy operations when this unit has been connected to a VIERA Link compatible device using a HDMI micro cable for automatic linked operations.
(Not all operations are possible.)
- VIERA Link is a unique Panasonic function built on a HDMI control function using the standard HDMI CEC (Consumer Electronics Control) specification.
Linked operations with HDMI CEC compatible devices made by other companies are not guaranteed. When using devices made by other companies that are compatible with VIERA Link, refer to the operating instructions for the respective devices.
- This unit supports "VIERA Link Ver.5" function. "VIERA Link Ver.5" is the standard for Panasonic's VIERA Link compatible equipment. This standard is compatible with Panasonic's conventional VIERA Link equipment.

Preparations: Set the [VIERA Link] to [ON]. (P53)

- 1 Connect this unit to a Panasonic TV compatible with VIERA Link with an HDMI micro cable (P301).**
- 2 Turn the camera on and then press [▶].**
- 3 Operate with the remote control for the TV.**
 - Operate with reference to the operation icons displayed on the screen.

- To play back the sound of a film during a slide show, set [Sound] to [AUTO] or [Audio] on the Slide Show setting screen.
- It is recommended to connect this unit to an HDMI terminal other than the HDMI1 if there are 2 or more HDMI input terminals on the TV.
- Operation using the buttons on this unit will be limited.

■ Other linked operations

Turning this unit off:

If you use the remote control for the TV to turn the TV off, this unit is also turned off.

Automatic input switching:

- If you connect with an HDMI micro cable and then turn this unit on, and then press [▶], the input channel on the TV automatically switches to this unit's screen. If the TV's power is in standby status, it will turn on automatically (if [Set] has been selected for the TV's [Power on link] setting).
- Depending on your TV's HDMI connection, on some TV's it may be necessary to manually select the HDMI connection you are using. In this case, use the remote control for the TV to switch the input channel.
(For details on how to switch input, please read the operating instructions for the TV.)
- If VIERA Link does not work properly, refer to [P357](#).

- If you are unsure whether or not the TV you are using is compatible with VIERA Link, read the operating instructions for the TV.
- Available linked operations between this unit and a Panasonic TV are different depending on the types of Panasonic TVs even if they are compatible with VIERA Link. Refer to the operating instructions of the TV for the operations are supported on the TV.
- Be sure to use a cable that is HDMI certified.
- Use a "High Speed HDMI micro cable" with the HDMI logo.
Cables that do not comply with the HDMI standards will not work.
"High Speed HDMI micro cable" [Type D–Type A plug, up to 2 m (6.6 feet) long]
- [HDMI Mode (Play)] for this unit is determined automatically when the VIERA Link is operating.

Saving still pictures and motion pictures on your PC

You can acquire recorded pictures to a PC by connecting the camera and the PC.

- Some PCs can read directly from the card removed from the camera. For details, refer to the operating instructions of your PC.
- **If the computer being used does not support SDXC Memory Cards, a message prompting you to format may appear. (Doing so will cause recorded images to be erased so do not choose to format.) If the card is not recognised, please refer to the below support site.**
<http://panasonic.net/avc/sdcard/information/SDXC.html>

■ PC that can be used

The unit can be connected to any PC capable of recognising a mass storage device.

- Windows support: Windows XP/Windows Vista/Windows 7/Windows 8/
Windows 8.1
- Mac support: OS X v10.5 to v10.9



AVCHD motion pictures may not be imported correctly when copied as files or folder

- With Windows, always import AVCHD motion pictures using "PHOTOfunSTUDIO", one of the programmes on the DVD (supplied).
- With a Mac, AVCHD motion pictures can be imported using "iMovie".
Please note that importing is not possible depending on the picture quality.
(For details about iMovie, please contact Apple Inc.)

About the supplied software

The supplied DVD includes the following software.
Install the software on to your computer before use.

- **PHOTOfunSTUDIO 9.5 PE**

(Windows XP/Windows Vista/Windows 7/Windows 8/Windows 8.1)

This software allows you to manage images. For example, you can send pictures and motion pictures to a PC and sort them by recording date or model name. You can also perform operations such as writing images to a DVD, processing and correcting images, and editing motion pictures.

- **SILKYPIX Developer Studio 4.1 SE**

(Windows XP/Windows Vista/Windows 7/Windows 8/Windows 8.1, Mac OS X v10.5/v10.6/v10.7/v10.8/v10.9)

This is software to edit RAW format images.

Edited images can be saved in a format (JPEG, TIFF, etc.) that can be displayed on a personal computer.

**For details on how to use the SILKYPIX Developer Studio, refer to the “Help” or the Ichikawa Soft Laboratory’s support website:
<http://www.isl.co.jp/SILKYPIX/english/p/support/>**

- **LoiLoScope 30 day full trial version**

(Windows XP/Windows Vista/Windows 7/Windows 8/Windows 8.1)

LoiLoScope is a video editing software where that draws out the full power of your PC. Creating videos is as easy as organizing cards on top of a desk. Use your music, picture and video files to create videos to share with your friends and family by burning it to a DVD, uploading it to websites, or simply share your videos with your friends via e-mail.

– This will only install a shortcut to the trial version download site.

**For more information on how to use LoiLoScope, read the LoiLoScope manual available for download at the link below.
Manual URL: <http://loilo.tv/product/20>**

■ Installing supplied software

- Before inserting the DVD, close all running applications.

1 Check the environment of your PC.

- **Operating environment of “PHOTOfunSTUDIO”**

- OS:

- Windows® XP (32bit) SP3,
Windows Vista® (32bit) SP2,
Windows® 7 (32bit/64bit) or SP1,
Windows® 8 (32bit/64bit),
Windows® 8.1 (32bit/64bit)

- CPU:

- Pentium® III 500 MHz or higher (Windows® XP),
Pentium® III 800 MHz or higher (Windows Vista®),
Pentium® III 1 GHz or higher (Windows® 7/Windows® 8/Windows® 8.1)

- Display:

- 1024×768 pixels or more (1920×1080 pixels or more recommended)

- RAM:

- 512 MB or more (Windows® XP/Windows Vista®),
1 GB or more (Windows® 7 32bit/Windows® 8 32bit/Windows® 8.1 32bit),
2 GB or more (Windows® 7 64bit/Windows® 8 64bit/Windows® 8.1 64bit)

- Free hard disk space:

- 450 MB or more for installing software

- Refer to the operating instructions of “PHOTOfunSTUDIO” (PDF) for further operating environment.
- For details on “SILKYPIX Developer Studio”, please read the support site given on [P307](#).

2 Insert the DVD with the supplied software.

3 Click on the [Applications] on the install menu.

- If the automatic playback screen is displayed, you can display the menu by selecting and executing [Launcher.exe].
- In Windows 8/Windows 8.1, you can display the menu by clicking a message that is displayed after inserting the DVD and then selecting and executing [Launcher.exe].
- You can also display the menu by double-clicking [SFMXXXX] in [Computer] (XXXX differs depending on the model).

4 Click on the [Recommended Installation].

- Proceed with installation according to messages appearing on the screen.



- The software compatible with your PC will be installed.
- On the Mac, SILKYPIX can be installed manually.

- ❶ Insert the DVD with the supplied software.
- ❷ Double-click the application folder on the DVD.
- ❸ Double-click on the automatically displayed folder.
- ❹ Double-click the icon in the application folder.



Not available in these cases:

- “PHOTOfunSTUDIO” and “LoiLoScope” are not compatible with Mac.



MENU




■ Transferring pictures to a PC

Preparations: Install "PHOTOfunSTUDIO" to the PC.

1 Connect the computer and camera with the USB connection cable (supplied).

- Please turn this unit on and your PC before connecting.
- Check the direction of the terminals and plug in/out straight holding onto the plug.
(It may result in malfunction by the deforming of the terminal if it is plugged in obliquely or in wrong direction.)
Do not connect devices to incorrect terminals. Doing so may cause malfunction.
- Do not use any other USB connection cables except the supplied one or a genuine Panasonic USB connection cable (DMW-USBC1: optional).

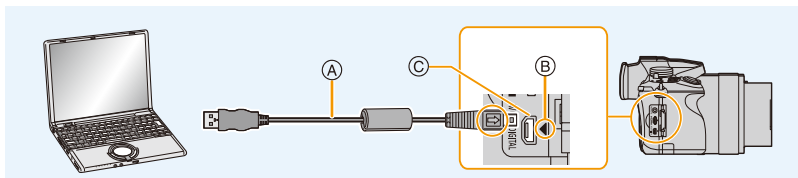

- (A) USB connection cable (supplied)
- (B) Align the marks, and insert.
- (C) [AV OUT/DIGITAL] terminal
 - The colour of the terminal is gold.

2 Press ▲/▼ to select [PC], and then press [MENU/SET].

- If [USB Mode] (P51) is set to [PC] in the [Setup] menu in advance, the camera will be automatically connected to the PC without displaying the [USB Mode] selection screen.
- When the camera is connected to a PC while [USB Mode] is set to [PictBridge(PTP)], a message may appear on the PC screen. In that case, close the message, and remove the USB connection cable safely, and then set the [USB Mode] to [PC].

3 Copy the images to a PC using "PHOTOfunSTUDIO".

- Do not delete or move copied files or folders in Windows Explorer.
When viewing in "PHOTOfunSTUDIO", you will not be able to play back or edit.

• Use a battery with sufficient battery power or the AC adaptor (optional) (P323). If the remaining battery power becomes low while the camera and the PC are communicating, the status indicator blinks and the alarm beeps.

Disconnect the USB connection cable safely. Otherwise, data may be destroyed.

- Before connecting or disconnecting the AC adaptor (optional), turn the camera off.
- Before inserting or removing a card, turn the camera off and disconnect the USB connection cable. Otherwise, data may be destroyed.

■ Copying to a PC without using “PHOTOfunSTUDIO”


If you are not able to install “PHOTOfunSTUDIO”, you can copy files and folders to your PC by dragging and dropping files from this unit.

- The content (folder structure) on the card of this unit is as follows.

For Windows: A drive ([LUMIX]) is displayed in [Computer]

For Mac: A drive ([LUMIX]) is displayed on the desktop

• Card

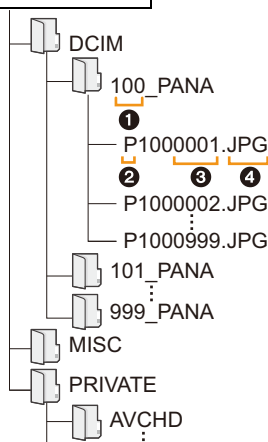

DCIM: Images

① Folder number

② Colour space P: sRGB

_: AdobeRGB

③ File number

④ JPG: Still pictures

MP4: [MP4] Motion pictures

RW2: Pictures in RAW files

MISC: DPOF print

Favourite

AVCHD:

[AVCHD] Motion pictures

- A new folder is created when pictures are taken in the following situations.
 - After [No.Reset] (P54) in the [Setup] menu has been executed
 - When a card containing a folder with the same folder number has been inserted (such as when pictures were taken using another maker of camera)
 - When there is a picture with file number 999 inside the folder

■ Connection in the PTP Mode


Set [USB Mode] to [PictBridge(PTP)].

- Data can now be read only from the card in the PC.
- When there are 1000 or more pictures on a card, the pictures may not be imported in the PTP Mode.
- Motion picture cannot be played back in PTP Mode.

Saving still pictures and motion pictures on a Recorder

If you insert card holding content recorded with this unit into a Panasonic recorder, you can dub the content to a Blu-ray Disc or DVD etc.

Methods to export still pictures and motion pictures to other devices will vary depending on the file format. (JPEG, RAW, AVCHD, or MP4).

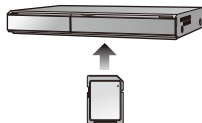

- See the operating instructions for the recorder about the details about copying and playing back.


■ Dubbing with non-compatible equipment

You can dub the content played back using this unit to non-compatible equipment such as recorders and video players by connecting this unit to the non-compatible equipment using an AV cable (optional).

Non-compatible equipment will be able to play back the content. This is convenient if you wish to pass around dubbed content. In this case, the content will be played back in standard rather than high-definition picture quality.

- 1 Connect this unit with the recording equipment with an AV cable (optional).**
- 2 Start the playback of this unit.**
- 3 Start the recording on the recording equipment.**

- When ending the recording (copying), stop the playback on this unit after stopping the recording on recording equipment.

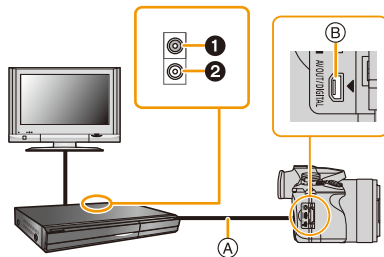

- ① Yellow: to the video input socket
- ② White: to the audio input socket
- Ⓐ AV cable (optional)
- Ⓑ [AV OUT/DIGITAL] terminal
 - The colour of the terminal is gold.

- When you play back motion pictures on 4:3 aspect ratio TV, you must set [TV Aspect] (P52) on this unit to [4:3] before starting a copy. The image will be vertically long if you play back motion pictures copied with [16:9] setting on a [4:3] aspect TV.
- Always use a genuine Panasonic AV cable (DMW-AVC1: optional).
- See the operating instructions for the recording equipment for details about copying and playing back.

Printing the Pictures

If you connect the camera to a printer supporting PictBridge, you can select the pictures to be printed out and instruct that printing be started on the camera's monitor.


- Group pictures will not be displayed as group pictures but as single pictures.
- Some printers can print directly from the card removed from the camera. For details, refer to the operating instructions of your printer.

Preparations: Turn on the camera and the printer.

Perform the print quality and other settings at the printer before printing the pictures.

1 Connect the printer and camera with the USB connection cable (supplied).

- Check the direction of the terminals and plug in/out straight holding onto the plug.
(It may result in malfunction by the deforming of the terminal if it is plugged in obliquely or in wrong direction.)
Do not connect devices to incorrect terminals. Doing so may cause malfunction.
- Do not use any other USB connection cables except the supplied one or a genuine Panasonic USB connection cable (DMW-USBC1: optional).

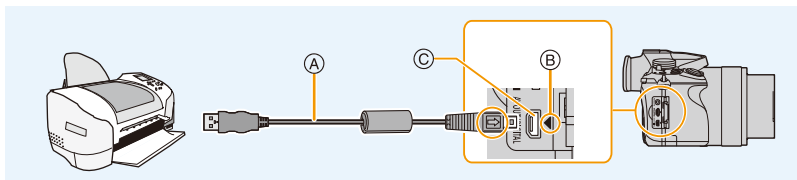

- (A) USB connection cable (supplied)
- (B) Align the marks, and insert.
- (C) [AV OUT/DIGITAL] terminal
 - The colour of the terminal is gold.

2 Press ▲/▼ to select [PictBridge(PTP)], and then press [MENU/SET].



- Use a battery with sufficient battery power or the AC adaptor (optional) (P323). If the remaining battery power becomes low while the camera and the printer are connected, the status indicator blinks and the alarm beeps. If this happens during printing, stop printing at once. If not printing, disconnect the USB connection cable.
- Do not disconnect the USB connection cable while [⊘] (Cable disconnect prohibit icon) is displayed.
(May not be displayed depending on the type of printer used.)
- Before connecting or disconnecting the AC adaptor (optional), turn the camera off.
- Before inserting or removing a card, turn the camera off, and disconnect the USB connection cable.



Not available in these cases:

- Motion pictures recorded cannot be printed out.



MENU



Selecting a single picture and printing it

- 1 Press **◀/▶** to select the picture and then press **[MENU/SET]**.



- 2 Press **▲** to select **[Print start]** and then press **[MENU/SET]**.
 - Refer to [P316](#) for the items that can be set before starting to print the pictures.
 - Disconnect the USB connection cable after printing.

Selecting multiple pictures and printing them

- 1 Press **▲**.
- 2 Press **▲/▼** to select an item and then press **[MENU/SET]**.

[Multi Select]	<p>Multiple pictures are printed at one time.</p> <ul style="list-style-type: none"> • Press ▲/▼/◀/▶ to select the pictures and then press [MENU/SET]. (When [MENU/SET] is pressed again, the setting is cancelled.) • After the pictures have been selected, press ◀ to select [OK], and then press [MENU/SET].
[Select All]	Prints all the stored pictures.
[Print Set (DPOF)]	Prints the pictures set in [Print Set] only. (P245)
[Favorite]	Prints the pictures set as favourites only. (P244)

- 3 Press **▲** to select **[Print start]** and then press **[MENU/SET]**.
 - If the print check screen has appeared, select **[Yes]**, and print the pictures.
 - Refer to [P316](#) for the items which can be set before starting to print the pictures.
 - Disconnect the USB connection cable after printing.

Print Settings

Select and set the items both on the screen in step 2 of the “Selecting a single picture and printing it” and in step 3 of the “Selecting multiple pictures and printing them” procedures.

- When you want to print pictures on a paper size or a layout which is not supported by the camera, set [Paper Size] or [Page Layout] to [] and then set the paper size or the layout on the printer.
(For details, refer to the operating instructions of the printer.)
- When [Print Set (DPOF)] has been selected, the [Print with Date] and [Num.of prints] items are not displayed.

■ [Print with Date]

[ON]	Date is printed.
[OFF]	Date is not printed.

- If the printer does not support date printing, the date cannot be printed on the picture.
- Depending on the printer, the date print settings of the printer may take precedence so check if this is the case.
- When printing images with a text stamp, please remember to set print with date to [OFF] or the date will print on top.
- In some printers, the picture date for pictures taken with the aspect ratio set to [1:1] will be printed vertically.


When asking the photo shop to print the pictures

- By stamping the date using [Text Stamp] (P236) or setting date printing at the time of the [Print Set] (P245) setting before going to a photo shop, the dates can be printed on the pictures at the photo shop.

■ [Num.of prints]






You can set the number of prints up to 999.

■ [Paper Size]

	Settings on the printer are prioritised.
[L/3.5"×5"]	89 mm×127 mm
[2L/5"×7"]	127 mm×178 mm
[POSTCARD]	100 mm×148 mm
[16:9]	101.6 mm×180.6 mm
[A4]	210 mm×297 mm
[A3]	297 mm×420 mm
[10×15cm]	100 mm×150 mm
[4"×6"]	101.6 mm×152.4 mm
[8"×10"]	203.2 mm×254 mm
[LETTER]	216 mm×279.4 mm
[CARD SIZE]	54 mm×85.6 mm

• Paper sizes not supported by the printer will not be displayed.


■ [Page Layout] (Layouts for printing that can be set with this unit)

	Settings on the printer are prioritised.
	1 picture with no frame on 1 page
	1 picture with a frame on 1 page
	2 pictures on 1 page
	4 pictures on 1 page


• An item cannot be selected if the printer does not support the page layout.


■ Layout printing

When printing a picture several times on 1 sheet of paper.

For example, if you want to print the same picture 4 times on 1 sheet of paper, set [Page Layout] to  and then set [Num.of prints] to 4 for the picture that you want to print.

When printing different pictures on 1 sheet of paper.

For example, if you want to print 4 different pictures on 1 sheet of paper, set [Page Layout] to  and then set [Num.of prints] to 1 for each of the 4 pictures.

- The camera is receiving an error message from the printer when the  indication lights orange during printing. After finishing printing, make sure there are no problems with the printer.
- If the number of prints is high, the pictures may be printed several times. In this case, the remaining number of prints indicated may differ from the number set.
- Only pictures taken in JPEG format can be printed. Those taken in RAW will use the JPEG pictures that were simultaneously created. If an equivalent JPEG picture is not available, no print will take place.

Optional accessories

External Flash (optional)

After attaching the flash (DMW-FL360L, DMW-FL580L: optional), the effective range will be increased when compared to the camera's built-in flash.


Preparations:

- Turn off the camera and close the built-in flash.


Removing the Hot Shoe Cover

The camera comes with a hot shoe cover attached to the hot shoe.

Remove the hot shoe cover by pulling it in the direction indicated by arrow ② while pressing it in the direction indicated by arrow ①.

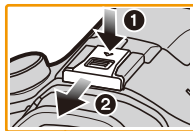

- When the hot shoe is not in use, make sure to attach the hot shoe cover.
- Please be careful not to lose the hot shoe cover.
- Keep the Hot Shoe Cover out of reach of children to prevent swallowing.

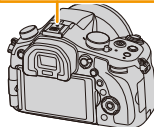

■ Using the dedicated flash (DMW-FL360L: optional)

- 1 Attach the dedicated flash to the hot shoe and then turn on the camera and the dedicated flash.
- 2 Select the menu.

MENU → [Rec] → [Flash]

- 3 Press **▲/▼** to select [Flash Mode] and then press [MENU/SET].
- 4 Press **▲/▼** to select an item and then press [MENU/SET].
 - While the external flash is connected, the following icons are displayed.

: External flash Forced ON

: External flash Slow Sync.


: External flash Forced OFF

- Signal-flashing with wireless flashes is also disabled.




**When using other commercially available external flashes without communication functions with the camera**

- It is necessary to set the exposure on the external flash. If you want to use the external flash in Auto Mode, use an external flash that allows you to set the aperture value and the ISO sensitivity to match the settings on the camera.
- Set to Aperture-Priority AE Mode or Manual Exposure Mode on the camera and then set the same aperture value and ISO sensitivity on the external flash. (The exposure cannot be compensated adequately due to the change on the aperture value in Shutter-Priority AE Mode and the external flash cannot control the light adequately in Programme AE Mode because the aperture value cannot be fixed.)

- You can set the aperture value, the shutter speed and the ISO sensitivity on the camera even when attaching the external flash.
- Some commercial external flashes have synchro terminals with high-voltage or reversed polarity. Using such extra flashes may cause a malfunction or the camera may not operate normally.
- If you use commercially available external flashes with communication functions other than the dedicated one, they may not operate normally or they may be damaged. Do not use them.
- Even if the external flash is turned off, the camera may enter the external flash mode when the external flash is attached. When you are not using the external flash, detach it.
- Do not open the built-in flash when an external flash is attached.
- The camera will become unstable when attaching the external flash, it is recommended to use a tripod when taking picture.
- Detach the external flash when carrying the camera.
- When attaching the external flash, do not hold only the external flash because it may detach from the camera.
- If you use the external flash when the White Balance is set to [], finely adjust the White Balance depending on the picture quality. (P129)
- If you record at close range with a wide angle, light from the flash may be blocked by the lens, darkening the lower part of the screen.
- Refer to P209 about the settings for the wireless flash.
- Read the operating instructions of the external flash for details.

Shutter Remote Control (optional)

If you use the shutter remote control (DMW-RSL1: optional), you can avoid jitter (camera shake) when using a tripod and you can keep the shutter pressed fully when taking pictures with [B] (Bulb) or Burst Mode. The shutter remote control works similar to the shutter button on the camera.

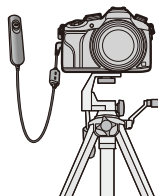

- Always use a genuine Panasonic shutter remote control (DMW-RSL1: optional).
- Record with Creative Video Mode (P118) when using for motion picture recording. Motion picture recording can be started/stopped with the shutter remote control.
- Read the operating instructions of the shutter remote control for details.



Not available in these cases:


- You cannot use the shutter remote control for the following operation.
 - Sleep Mode cancellation

External Microphone (optional)

Using a stereo shotgun microphone (DMW-MS2: optional) or stereo microphone (VW-VMS10: optional), you can record sounds with quality superior to those recorded with the built-in microphone. Using the stereo shotgun microphone (DMW-MS2: optional), you can switch between the gun (ultra-directional) recording and the wide range stereo recording.

Preparations:

- Close the built-in flash, and then turn this unit off.
- Remove the hot shoe cover that is attached to the camera. (P319)

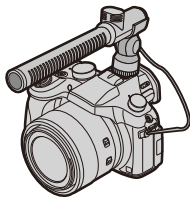

■ Setting the range within which the stereo shotgun microphone (DMW-MS2: optional) will record sounds

- 1 Attach the dedicated stereo shotgun microphone to this unit, and then turn this unit on.**
- 2 Select [Special Mic.] on the [Motion Picture] menu. (P37)**
 - The menu items are displayed only when the stereo shotgun microphone is connected.
- 3 Press ▲/▼ to select the item and then press [MENU/SET].**

[STEREO]	Allows stereo recording of sound over a wide area.
[SHOTGUN]	Allows recording from one direction by shutting out background and surrounding noise.

- While the external microphone is connected, [🎤] is displayed on the screen.
- When the external microphone is connected, [Mic Level Disp.] (P223) is automatically set to [ON], and the mic level is displayed on the screen.
- When an external microphone is attached to the camera, do not hold only the external microphone to prevent the camera from falling.
- [Wind Cut] in the [Motion Picture] menu can reduce the wind noise effectively.
- When an external microphone is attached to the camera, do not open the built-in flash.
- If the noises are recorded when you use an AC adaptor (optional), use a battery.
- When a stereo microphone (VW-VMS10: optional) is used, [Special Mic.] is fixed to [STEREO].
- If the sound of the camera in operation such as the sound of zoom operation are recorded, we recommend using a shoe adaptor.
- For details, refer to the operating instructions of the external microphone.

AC adaptor (optional)/DC coupler (optional)

By connecting the AC adaptor (optional), and then plugging them into an electrical socket, you can connect this unit to a PC or printer and use without worrying about the capacity of the battery.

To use the AC adaptor, a DC coupler (optional) is required.

- Always use a genuine Panasonic AC adaptor (optional).
- When using an AC adaptor, use the AC cable supplied with the AC adaptor.
- Also read the operating instructions for the AC adaptor and DC coupler.

Filters (optional)

The MC protector is a transparent filter which affects neither the colours nor the amount of light, so it can always be used to protect the camera's lens.

The ND filter reduces the amount of light to approximately 1/8th (equal to adjusting the aperture value 3 increments) without affecting the colour balance.


PL filter will suppress the reflected light from a metal or non spherical surfaces (flat non-metallic surfaces, water vapour or invisible particles in the air), making it possible to take a picture with enhanced contrast.

- Do not attach multiple filters at the same time.
- You can attach the lens cap or the lens hood when the filter is attached.
- Refer to the instructions for each filter for details.

Monitor Display/Viewfinder Display

• The following images are examples of when the display screen is set to [] (monitor style) in the monitor.


■ In recording

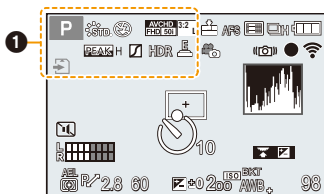

LVF/ MON/AUTO	Automatic viewfinder/ monitor switching (P57)
PEAK H PEAK L	Peaking (P152)
	Highlight Shadow (P124)
HDR	HDR (P135)
	Multi exposure (P184)
E	Electronic shutter (P164)

1


	Recording Mode (P62)
C 1	Custom settings (P120)
	Photo Style (P122)
	Creative control adjustment display (P108)
	Flash Mode (P203)
	Flash (P206, 209)
	Recording format/ Recording quality (P212)
	Picture size/Aspect Ratio (P131)
	Card (displayed only during recording) (P30)
8m30s	Elapsed recording time*1 (P215)
	Simultaneous recording indicator (P219)

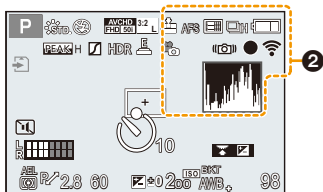

2

	RAW	Quality (P132)
100fps		High Speed Video (P119)
AFS AFF AFC MF		Focus Mode (P139)
		AF Mode (P138)
		Face Recognition (P187)
AFL		AF Lock (P157)
		Burst (P167)
		Auto Bracket (P171)
		Self-timer (P174)
		Time Lapse Shot (P176)
		Stop Motion Animation (P180)
		Battery indication (P25)
		Picture Mode (Still picture priorities) (P219)
		Luminance Level (P222)
AF		Macro recording (P155)
		Level Shot (P222)

	Optical Image Stabiliser (P195)
	Jitter alert (P195)
	Recording state (Flashes red.)/Focus (Lights green.) (P59)
	Focus (Under low illumination) (P59)
	Connected to Wi-Fi
	Histogram (P66)

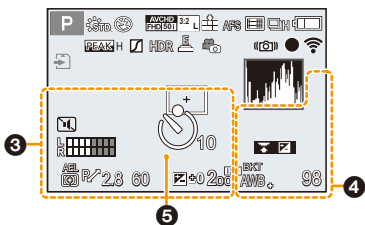

3

Name*² (P192)Number of days that have passed since the departure date*² (P48)Age*² (P192)Location*² (P48)Current date and time/Travel destination setting*²: (P47)

AF area (P59, 145)



Spot metering target (P163)

Self-timer*³ (P174)

Silent Mode (P186)



External Microphone (P322)



Zoom Microphone (P224)



Mic Level display (P223)



Mic Level Limiter (OFF) (P223)



AE Lock (P157)



Metering Mode (P163)



Programme Shift (P85)



Aperture value (P59)

60 Shutter speed (P59)

Exposure compensation value (P159)

Brightness (P83)

Manual Exposure Assistance (P89)

ISO sensitivity (P160)

4

Dial operation guide (P19)

White Balance Bracket (P130)

White Balance Fine Adjustment (P129)



White Balance (P126)



Colour (P83)

98

Number of recordable pictures*⁴ (P32)

R8m30s

Available recording time*^{1,4} (P33)

5

Exposure meter (P84)

Zoom (P200)


*1 m: minute, s: second

*2 This is displayed for about 5 seconds when the camera is turned on, after setting the clock and after switching from Playback Mode to Recording Mode.

*3 This is displayed during countdown.

*4 It is possible to switch the display between the number of recordable pictures and available recording time with the [Remaining Disp.] setting in the [Custom] menu.


On-monitor recording information

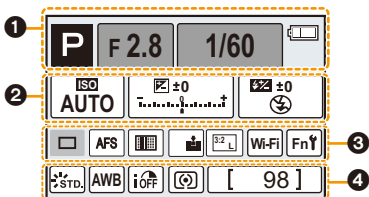

1		Recording Mode (P62)
		F2.8 Aperture value (P59)
		1/60 Shutter speed (P59)
		Battery indication (P25)
2		ISO 200 ISO sensitivity (P160)
		Exposure compensation value (P159)
		Brightness (P83)
		Manual Exposure Assistance (P89)
		Flash Mode (P203)
		Flash (P206, 209)
3		Single (P166)
		Burst (P167)
		Auto Bracket (P171)
		Self-timer (P174)

	Time Lapse Shot (P176)
	Stop Motion Animation (P180)
AFS AFF AFC MF	Focus Mode (P139, 150)
	AF Mode (P138)
	Quality (P132)
	Picture size/Aspect Ratio (P131)
Wi-Fi	Wi-Fi (P251)
Fn	Function button setting (P44)
4	
	Photo Style (P122)
	White Balance (P126)
	Intelligent Dynamic Range Control (P134)
	Metering Mode (P163)
98	Number of recordable pictures (P32)
R8m30s	Available recording time (P33)

In playback

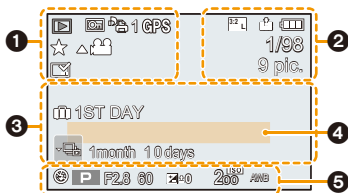

1

	Playback Mode (P230)
	Protected picture (P247)
	Number of prints (P245)
	Location Information display (P231)
	Favourites (P244)
	Cable disconnect prohibit icon (P314)
	Motion picture playback (P70)
	Play panorama (P106)
	Continuous Burst Picture Group Playback (P225)
	Continuous [Time Lapse Shot] Picture Group Playback (P225)
	Continuous playback of the Stop Motion Animation Group (P225)
	Stamped with text indication (P236)
8m30s	Elapsed playback time*1 (P70)

2

	Picture size/Aspect Ratio (P131)
	Recording format/Recording quality (P212)
	Quality (P132)

100fps	High Speed Video (P119)
	Luminance Level (P222)
	Battery indication (P25)
1/98	Picture number/Total pictures
9 pic.	Number of pictures in burst
8m30s	Motion picture recording time*1 (P70)

3

	Currently retrieving information icon (P331)
	Number of days that have passed since the departure date (P48)
	Burst Picture Group Display (P226)
	[Time Lapse Shot] Picture Group Display (P226)
	Display for the Stop Motion Animation Group (P226)
	Silent Mode (P186)
1 month 10days	Age (P192)


4

Name*2 (P190, 192)
Location*2 (P48)
Title*2 (P235)

5

Recording information*3

Detailed information display

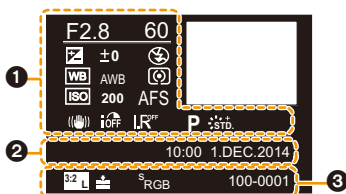

①

Recording information

	Intelligent Dynamic Range Control ^{*3} (P134)
	HDR ^{*4} (P135)
	Intelligent Resolution (P134)


②

Recorded date and time/World Time (P47)

③

	Picture size/Aspect Ratio (P131)
	Quality (P132)
	Recording format/Recording quality (P212)
100fps	High Speed Video (P119)
	Luminance Level (P222)
	Colour space ^{*4} (P137)
100-0001	Folder/File number ^{*3} (P311)

Histogram display

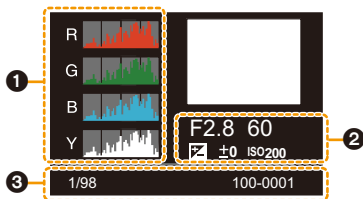

①

Histogram (P71)

②

Recording information^{*3}

③

1/98	Picture number/Total pictures
100-0001	Folder/File number ^{*3} (P311)

*1 m: minute, s: second

*2 It is displayed in order of [Title], [Location], [Name] ([Baby1]/[Baby2], [Pet]), [Name] ([Face Recog.]).

*3 This is not displayed for motion pictures recorded in [AVCHD].

*4 This is not displayed for motion pictures.

Message Display

Confirmation messages or error messages will be displayed on the screen in some cases. The major messages are described below as examples.

[This picture is protected]

- Delete the picture after cancelling the protect setting. (P247)

[Some pictures cannot be deleted]/[This picture cannot be deleted]

- This feature can only be used with pictures that comply with the DCF standard. Perform formatting (P31) on this unit after saving necessary data on a PC, etc.

[Cannot be set on this picture]

- [Title Edit], [Text Stamp] or [Print Set] cannot be set for pictures not based on the DCF standard.

[Memory Card Error Format this card?]

- It is a format that cannot be used with this unit.
 - Insert a different card.
 - Format the card again with the camera after saving necessary data on a PC etc. (P31)
Data will be deleted.

[Please turn camera off and then on again]/[System Error]

- This is displayed when the lens has stopped operating normally due to being pressed on by a hand etc.
Turn the camera off and on. If the message persists, contact the dealer or Panasonic.

[Memory Card Error]/[This memory card cannot be used]

- Use a card compatible with this unit. (P30)

[Insert SD card again]/[Try another card]

- An error has occurred accessing the card.
Insert the card again.
- Insert a different card.

[Read Error/Write Error Please check the card]

- It has failed to read or write data.
Remove the card after turning this unit off. Insert the card again, turn this unit on, and try to read or write the data again.
- The card may be broken.
- Insert a different card.

[Cannot record due to incompatible format(NTSC/PAL) data on this card.]

- Perform formatting (P31) on this unit after saving necessary data on a PC, etc.
- Insert a different card.

[Motion recording was cancelled due to the limitation of the writing speed of the card]

- Depending on the [Rec Format] and [Rec Quality] of a motion picture, the speed class rating required for the card differs. Use a card that meets the rating. For details, refer to “About the motion picture recording and speed class” on P30.
- If the recording stops even when you are using a card that meets the speed class rating, the data writing speed is too slow. We recommend making a backup and then format the card (P31).
Depending on the type of the card, motion picture recording may stop in the middle.



[A folder cannot be created]

- A folder cannot be created because there are no remaining folder numbers that can be used. Format the card on this unit after saving necessary data on a PC etc. (P31)
If you execute [No.Reset] in the [Setup] menu after formatting, the folder number is reset to 100. (P54)

[Picture is displayed for 16:9 TV]/[Picture is displayed for 4:3 TV]

- Select [TV Aspect] in the [Setup] menu if you want to change the TV aspect. (P52)
- This message also appears when the USB connection cable is connected to the camera only. If the other end of the USB connection cable is connected to a PC or printer, the message will disappear. (P310, 313)

[Editing operation cannot proceed as information processing is ongoing.]

When there are too many image files, the currently retrieving information icon ([) or [) may be displayed on the playback screen for a long period of time. During this time, use of some items in the [Playback] menu is not possible.

- If this unit is turned off while acquiring information, only the pictures that have already acquired the information are saved as a group.

When you turn on again, the information retrieval will restart from the same point.

[This battery cannot be used]

- Use a genuine Panasonic battery. If this message is displayed even when a genuine Panasonic battery is used, contact the dealer or Panasonic.
- If the battery terminal is dirty, clean it and remove any objects.

[Failed to connect wireless access point]/[Connection failed]/[No destination found]

- Check following regarding the wireless access point.
 - The wireless access point information set on this unit is wrong.
 - Check the authentication type, encryption type, and encryption key. (P290)
 - Power of the wireless access point is not turned on.
 - Setting of the wireless access point is not supported by this unit.
- Check the network setting of the destination.
- Radio waves from other devices may block the connection to a wireless access point. Check other devices that are connected to the wireless access point and devices that use the 2.4 GHz band.

[No picture to send]

- This is displayed when there is no image to transmit due to the restriction of the destination. Check the file format of the image to send. (P265, 269, 270, 273, 277, 281)

[Connection failed. Please retry in a few minutes.]/[Network disconnected. Transfer stopped.]

- Radio waves from the wireless access point are getting weak.
 - Perform the connection closer to the wireless access point.
- There is no reply from the server or it has exceeded the communication processing time.
 - Try again after a while.
- Depending on the wireless access point, connection may be automatically disconnected after specific time has passed.
 - Reconnect the connection again.

[Upload to the Cloud Folder is available after Cloud Sync settings have been set up on downloadable devices such as PCs or smartphones.]

- Devices that download images from a cloud folder are not registered.
- Perform Cloud Sync setting. Configure the settings on a PC with "PHOTOfunSTUDIO" or on a smartphone with "Image App".
 - Refer to P281 for details on [Cloud Sync. Service].

[Connection failed]

- Check following regarding the smartphones you intend to connect.
 - The smartphone does not operate.
 - Change the access point to connect to in the smartphone Wi-Fi settings to this camera.
 - There is no free storage space on the smartphone.

[Login failed. Please check Login ID and Password.]

- Login ID or password for the “LUMIX CLUB” is not correct.
Please enter it again.
If you have forgotten the login ID or the password, there is information in the login screen of the “LUMIX CLUB” website.

[Some files cannot be sent because of destination limit]/[Transfer completed. Some files are left because of destination limit.]

- Check the file format of the image to send. (P265, 269, 270, 273, 277, 281)
- Sending motion pictures may fail if the file size is too large.
Split the motion picture using [Video Divide]. (P239)

[Unavailable. Please set Login settings on LUMIX CLUB web site.]

- Login to the “LUMIX CLUB” from your smartphone or PC, and set the login details of the destination web service.

[Both picture and video sharing service cannot be selected together]

- Web services designed only for pictures, and web services designed only for motion pictures cannot be selected at the same time.
Deselect one of the services.

[Cannot get IP address. Please set wireless AP's IP address setting to DHCP.]

- Turn on DHCP settings of the IP address of the connected wireless access points.

[Cannot connect to server]

- If a message is displaying asking to update the root certificate, agree to update the root certificate.

Menu list

[Rec]

This menu lets you set the aspect ratio, number of pixels and other aspects of the pictures you are recording.

- [Photo Style], [AFS/AFF], [Metering Mode], [Highlight Shadow], [i.Dynamic], [i.Resolution], [i.Zoom] and [Digital Zoom] are common to both the [Rec] menu and [Motion Picture] menu. Changing these settings in one of these menus is reflected in other menu.

[Photo Style]	You can select effects to match the type of image you wish to record. You can adjust the colour and image quality of the effects.	P122
[Aspect Ratio]	Sets the aspect ratio of the image.	P131
[Picture Size]	Set the number of pixels.	P131
[Quality]	Set the compression rate at which the pictures are to be stored.	P132
[AFS/AFF]	Assigns [AFS] or [AFF] to [AFS/AFF] of the focus mode lever.	P139
[Metering Mode]	Sets the light metering method for measuring brightness.	P163
[Burst Rate]	Sets the burst speed for burst recording.	P167
[Auto Bracket]	Sets single/burst recording, compensation range and recording sequence for Auto Bracket recording.	P171
[Self Timer]	Sets the manner in which the self-timer works.	P174
[Time Lapse/Animation]	Makes the recording settings for Time Lapse Shot and Stop Motion Animation.	P176, P180
[Highlight Shadow]	You can adjust the brightness of bright and dark portions on an image while checking the brightness on the screen.	P124
[i.Dynamic] (Intelligent dynamic range control)	Adjusts the contrast and exposure.	P134
[i.Resolution]	Records pictures with more defined outlines and sense of clarity.	P134
[iHandheld Night Shot]	Pictures of the night scenery will be taken at a high burst speed and composed into a single picture.	P80
[iHDR]	There is, for example, strong contrast between the background and the subject, multiple still pictures are recorded with differing exposures and combined to create a single still picture rich in gradation.	P81

[HDR]	You can combine 3 pictures with different levels of exposure into a single picture with rich gradation.	P135
[Multi Exp.]	Gives an effect like multi exposure. (up to 4 times equivalent per a single image)	P184
[Panorama Settings]	Sets the recording direction and image effect for panorama recording.	P104
[Shutter Type]	You can choose between taking pictures with the mechanical shutter and the electronic shutter.	P164
[Flash]	Sets the manner in which the flash works.	P203
[Red-Eye Removal]	Automatically detects red-eye caused by the flash and corrects the image data accordingly.	P211
[ISO Limit Set]	When the ISO sensitivity is set to [AUTO] or [ISO], an optimal ISO sensitivity is set with the selected value as an upper limit.	P162
[ISO Increments]	The ISO sensitivity settings values changes in steps of 1/3 EV or 1 EV.	P162
[Extended ISO]	You can extend the available ISO sensitivity values.	P162
[Long Shtr NR]	You can eliminate the noise caused by recording with a slower shutter speed.	P136
[i.Zoom]	You can raise the zoom magnification with minimum image deterioration.	P198
[Digital Zoom]	Increases the Tele effect. The higher the level of magnification, the greater the degradation in image quality.	P199
[Color Space]	Set this when you want to correct the colour reproduction of the recorded pictures on a PC, printer etc.	P137
[Stabilizer]	When camera shake is sensed during recording, the camera corrects it automatically.	P195
[Face Recog.]	Sets the focus and exposure automatically prioritising registered faces.	P187
[Profile Setup]	If you set the name and birthday of your baby or pet in advance, you can record their name and age in months and years in the images.	P192

[Motion Picture]

This menu lets you set the [Rec Format], [Rec Quality], and other aspects for motion picture recording.

- [Photo Style], [AFS/AFF], [Metering Mode], [Highlight Shadow], [i.Dynamic], [i.Resolution], [i.Zoom] and [Digital Zoom] are common to both the [Rec] menu and [Motion Picture] menu. Changing these settings in one of these menus is reflected in other menu.

– For details, refer to the explanation for the corresponding setting in the [Rec] menu.



[Rec Format]	Sets the file format for the motion pictures you record.	P212
[Rec Quality]	This sets up the picture quality of motion pictures.	P212
[Exposure Mode]	Select the method for setting the aperture value and shutter speed in Creative Video Mode.	P118
[High Speed Video]	You can record slow motion pictures by performing ultra-high-speed recording.	P119
[Picture Mode]	Sets the recording method for still pictures during motion picture recording.	P219
[Continuous AF]	Continues to focus on the subject for which focus has been achieved.	P214
[Level Shot]	The camera automatically detects its tilt and corrects the motion pictures you record to a level position to prevent them from being skewed.	P222
[Luminance Level]	Select the luminance range to match the use of video.	P222
[Flkr Decrease]	The shutter speed can be fixed to reduce the flicker or striping in the motion picture.	P222
[Mic Level Disp.]	Set whether or not the mic levels are displayed on the recording screen.	P223
[Mic Level Adj.]	Adjust the sound input level to 19 different levels.	P223
[Special Mic.]	Sets the sound recording method when a stereo shotgun microphone (optional) is connected.	P322
[Mic Level Limiter]	Adjusts the sound input level automatically.	P223
[Wind Cut]	You can reduce the wind noise effectively when recording with sound.	P224
[Zoom Mic]	Coupled to the zoom operation, it will clearly record far sounds with tele, and surrounding sounds with wide.	P224

[Custom]

Operation of the unit, such as displaying of the screen and button operations, can be set up according to your preferences. Also, it is possible to register the modified settings.

[Cust.Set Mem.]	Registers the current camera settings as custom set.	P120
[Silent Mode]	Disables operational sounds and output of light at once.	P186
[AF/AE Lock]	Sets the fixed content for focusing and exposure when the AF/AE lock is on.	P157
[AF/AE Lock Hold]	This will set the operation of [AF/AE LOCK] button when taking a picture with fixed focus or exposure.	P158
[Shutter AF]	Set whether or not the focus is adjusted automatically when the shutter button is pressed halfway.	P148
[Half Press Release]	The shutter will immediately fire when the shutter button is pressed halfway.	P148
[Quick AF]	Speeds up the focusing that takes place when you press the shutter button.	P148
[Eye Sensor AF]	The camera automatically adjusts the focus when the eye sensor is active.	P58
[Pinpoint AF Time]	Sets the time for which the screen is enlarged when the shutter button is pressed halfway with Auto Focus Mode set to [⊕].	P147
[AF Assist Lamp]	AF assist lamp will illuminate the subject when the shutter button is pressed half-way making it easier for the camera to focus when recording in low light conditions.	P149
[Direct Focus Area]	Moves the AF area or MF assist using the cursor button when recording.	P147, P153
[Focus/Release Priority]	It will set so no picture can be taken when it is out of focus.	P149
[AF+MF]	You can set the focus manually after the automatic focus has finished.	P149
[MF Assist]	Sets the display method of MF Assist (enlarged screen).	P151
[MF Guide]	When you set the focus manually, an MF guide that allows you to check the direction to achieve focus is displayed.	P152
[Peaking]	In-focus portions are highlighted when focus is being adjusted manually.	P152

[Histogram]	This allows you to set either to display or not display the histogram.	P66
[Guide Line]	This will set the pattern of guide lines displayed when taking a picture.	P66
[Center Marker]	Displays [+], which indicates the centre of the recording screen.	P193
[Highlight]	When the Auto Review function is activated or when playing back, white saturated areas appear blinking in black and white.	P72
[Zebra Pattern]	Indicates parts that may be whited out through overexposure in a zebra pattern.	P193
[Monochrome Live View]	You can display the recording screen in black and white.	P194
[Constant Preview]	You can check the effects of the chosen aperture and shutter speed on the recording screen in Manual Exposure Mode.	P90
[Expo.Meter]	Set whether or not to display the exposure meter.	P84
[Dial Guide]	Set whether or not to display the dial operation guide.	P19
[LVF Disp.Style]	This will set the display style of the viewfinder.	P65
[Monitor Disp. Style]	This will set the display style of the monitor.	P64
[Monitor Info. Disp.]	Display the recording information screen.	P66
[Rec Area]	This changes the angle of view during motion picture recording and still picture recording.	P216
[Remaining Disp.]	This will switch display between the number of recordable pictures and available recording time.	P34
[Auto Review]	Set the length of time that the picture is displayed after taking the still picture.	P60
[Fn Button Set]	You can assign frequently-used functions to particular buttons.	P44
[Zoom Lever]	Change the zoom setting of the zoom lever.	P200
[Manual ring (Zoom)]	Change the zoom setting of the manual ring.	P200
[Zoom Resume]	Saves the zoom position when you turn off the camera.	P200

[Q.MENU]	Switch the setting method of Quick Menu.	P41
[Video Button]	Enables/disables the motion picture button.	P216
[Eye Sensor]	Setting the eye sensor sensitivity and the method for switching between the monitor and viewfinder.	P58
[Menu Guide]	Set the screen that is displayed when the mode dial is set to  and  .	P63



MENU



[Setup]

This menu lets you perform the clock settings, select the operating beep tone settings and set other settings which make it easier for you to operate the camera.

You can also configure the settings of Wi-Fi related functions.

[Clock Set]	Setting Date/Time.	P35
[World Time]	Sets the times for the region where you live and your holiday destination.	P47
[Travel Date]	Departure date and return date of the trip as well as the name of the travel destination can be set.	P48
[Wi-Fi]	Configure the each setting for Wi-Fi functions.	P297
[Beep]	Set the volume for electronic noises and the electronic shutter noise.	P49
[Live View Mode]	Set the frame rate of the recording screen (Live View screen).	P49
[Monitor Display]/ [Viewfinder]	Brightness, colour, or red or blue tint of the monitor/viewfinder is adjusted.	P49
[Monitor Luminance]	Set the monitor brightness to suit the amount of surrounding light.	P50
[Economy]	Suppresses the unit's power consumption to prevent the battery from being run down.	P51
[USB Mode]	Sets the communication method when connecting using the USB connection cable (supplied).	P51
[TV Connection]	This sets how the unit connects to a television etc.	P52
[Menu Resume]	Stores the location of the last-used menu item for each menu.	P53
[Menu Background]	Set the background colour for the menu screen.	P39
[Menu Information]	Descriptions of menu items or their settings are displayed on the menu screen.	P53

[Language]	Set the language displayed on the screen.	P53
[Version Disp.]	It is possible to check which version of firmware is on the camera.	P54
[Exposure Comp. Reset]	An exposure value can be reset when the Recording Mode is changed or the camera is turned off.	P54
[No.Reset]	Returns the image file number to 0001.	P54
[Reset]	The recording or setup/custom settings are reset to the default.	P54
[Reset Wi-Fi Settings]	Reset all settings in the [Wi-Fi] menu to factory default settings. (Excluding [LUMIX CLUB])	P54
[Format]	The card is formatted.	P31

[Playback]

This menu lets you set the Protection, Cropping or Print Settings, etc. of recorded pictures.

[Slide Show]	Selects the type etc. of the images and plays back in order.	P228
[Playback Mode]	Selects the type etc. of the images and plays back only particular images.	P230
[Location Logging]	You can write location information (longitude/latitude) on images sent from the smartphone.	P231
[RAW Processing]	You can convert the pictures taken in the RAW format into the JPEG format on the camera.	P232
[Title Edit]	Input texts (comments) on the recorded pictures.	P235
[Text Stamp]	Stamps the recorded pictures with recording date and time, names, travel destination, travel date, etc.	P236
[Video Divide]	Splits the recorded motion picture in two.	P239
[Time Lapse Video]	Creates a motion picture from a set of group pictures recorded with the [Time Lapse Shot].	P240
[Stop Motion Video]	Creates a motion picture from the Stop Motion Animation group.	P240
[Resize]	Reduces the image size (number of pixels).	P241
[Cropping]	Crops the recorded image.	P242
[Rotate]	Rotate pictures manually in 90° steps.	P243
[Rotate Disp.]	This mode allows you to display pictures vertically if they were recorded holding the camera vertically.	P243
[Favorite]	Marks can be added to images, and images can be set as favourites.	P244
[Print Set]	Sets the images for printing and the number of prints.	P245
[Protect]	Protects images to prevent deletion by mistake.	P247
[Face Rec Edit]	Removes or changes information relating to personal identity.	P248
[Picture Sort]	Sets the display order of the images you play back on the camera.	P248
[Delete Confirmation]	This sets which option, [Yes] or [No], will be highlighted first when the confirmation screen for deleting a picture is displayed.	P249

Troubleshooting

First, try out the following procedures (P343–P359).

If the problem is not resolved, it may be improved by selecting [Reset] (P54) on the [Setup] menu.

Battery and power source

**The camera cannot be operated even when it is turned on.
The camera turns off immediately after it is turned on.**

- The battery is exhausted.
→ Charge the battery.
- If you leave the camera on, the battery will be exhausted.
→ Turn the camera off frequently by using the [Economy] etc. (P51)

This unit is turned off automatically.

- Is the linked operation of VIERA Link enabled?
→ If you are not using VIERA Link, set [VIERA Link] to [OFF]. (P53)

The card/battery door does not close.

- Insert the battery securely all the way in. (P28)

The battery becomes flat too quickly.

- Is a Wi-Fi connection being used for a long period of time?
The battery can become flat quickly when connected to Wi-Fi.
→ Turn the camera off frequently by using the [Economy] etc. (P51)

Recording

**Taking pictures is not possible.
The shutter will not operate immediately when the shutter button is pressed.**

- Is the subject focused?
→ Is [Focus/Release Priority] in the [Custom] menu set to [FOCUS]? (P149)
You cannot take a picture until the subject is brought into focus.


The recorded picture is whitish.

- Picture might look whitish when lens gets dirty with fingerprints or similar.
→ If the lens is dirty turn the camera off and then gently wipe the lens surface with a soft, dry cloth.

The recorded picture is too bright or dark.

- Check that the exposure is correctly compensated. (P159)
- Is the AE Lock (P157) applied incorrectly?

Multiple pictures are taken at one time.

- Cancel the following settings:
 - Burst/Auto Bracket/[] of the self-timer (P166)
 - White Balance Bracket (P130)

The subject is not focused properly.

- The subject is beyond the focus range of the camera. (P60)
- There is camera shake (jitter) or the subject is moving slightly. (P195)
- Is [Focus/Release Priority] in the [Custom] menu set to [RELEASE]? (P149)
- Is [Shutter AF] in the [Custom] menu set to [OFF]? (P148)
- Is the AF Lock (P157) applied incorrectly?

The recorded picture is blurred.**The Optical Image Stabiliser is not effective.**

- The shutter speed will become slower and the Optical Image Stabiliser function may not work properly when taking pictures especially in dark places.
 - We recommend holding the camera firmly with both hands when taking pictures. (P56)
 - We recommend using a tripod and the self-timer (P174) when taking pictures with a slow shutter speed.

Taking pictures using White Balance Bracket is not possible.

- Is there any memory remaining on the card?

The recorded picture looks rough.**Noise appears on the picture.**

- Try the following:
 - Take pictures in bright places.
 - Decrease the ISO sensitivity. (P160)
 - Increase the setting for [Noise Reduction] in [Photo Style] or lower the setting for each of the items other than [Noise Reduction]. (P123)
 - Set the [Long Shtr NR] to [ON]. (P136)
- Is the [Picture Size] (P131) or the [Quality] (P132) set low?
- Is the [Digital Zoom] set? (P199)

Striping or flicker may appear under lighting such as fluorescent lighting and LED lighting fixture.

- This is characteristic of MOS sensors which serve as the camera's pickup sensors.
This is not a malfunction.
- Are you taking pictures with the electronic shutter? (P164)
 - When using the electronic shutter, lowering the shutter speed may reduce the effect of the horizontal stripes.



The brightness or the hue of the recorded picture is different from the actual scene.

- When recording under fluorescent or LED lighting fixture, etc., increasing the shutter speed may introduce slight changes to brightness and colour. These are a result of the characteristics of the light source and do not indicate a malfunction.
- When recording subjects in extremely bright locations or recording under fluorescent lighting, LED lighting fixture, mercury lamp, sodium lighting, etc., the colours and screen brightness may change or horizontal striping may appear on the screen.

**Subject cannot be locked.
(AF tracking not possible)**

- Set the AF area to the distinctive colour of the subject if there is a part that is different from the surrounding colour. (P141)

Operation sound is small.

- Is your finger covering up the speaker? (P15)

Motion pictures

Recording motion pictures is not possible.

- You may not be able to record for a short while after turning this unit on when using a large capacity card.

Motion picture recording stops in the middle.

- Depending on the [Rec Format] and [Rec Quality] of a motion picture, the speed class rating required for the card differs. Use a card that meets the rating. For details, refer to “About the motion picture recording and speed class” on [P30](#).
- When a card with a slow data writing speed is used, motion picture recording may stop midway.
→ If a card on which recording and deleting have been repeated many times or a card that has been formatted on a PC or other equipment is being used, we recommend that you make a backup of the data and format ([P31](#)) the card on the unit.

When recording a motion picture, the screen may go dark.

- When recording a motion picture, the screen may go dark after a certain period to reduce battery consumption, but this will not affect the recorded motion picture.

The screen may be blacked out momentarily, or the unit may record noise.

- Depending on the environment at the time of motion picture recording, the screen may be blacked out momentarily or the unit may record noise due to static electricity or powerful electromagnetic waves (radio towers, high voltage power lines, etc.).

Striping or flicker appears under lighting such as a fluorescent or LED lighting fixture.**The subject appears distorted.**

- This is characteristic of MOS sensors which serve as the camera's pickup sensors. This is not a malfunction.
When a subject moves across the image very fast, the subject may appear slightly distorted.
- When noticeable flicker or striping is seen under lighting such as a fluorescent or LED lighting fixture, you can reduce the flicker or striping by setting up [Fikr Decrease] ([P222](#)) and fixing the shutter speed. It is possible to select a shutter speed from [1/50], [1/60], [1/100], or [1/120]. You can set the shutter speed manually in the Creative Video Mode. ([P118](#))

In motion pictures, abnormal clicking and buzzing sounds are recorded.**The recorded sound is very quiet.**

- When recording in a quiet environment, the sound of aperture, focus or zoom operation may be recorded in motion pictures.
Focus operation can be set to [OFF] in [Continuous AF] ([P214](#)).
- While recording motion pictures, plugging the aperture of the microphone with a finger may reduce the level of audio recording or audio may not record at all. Also be careful because the operation sound of lenses can easily be recorded at this time.

An operation sound is recorded at the end of a motion picture.

Since motion picture recording stops only after you press the motion picture button, the sound of the operation may be noticeable. If the sound bothers you, try the following:

- Divide the last part of the motion picture using [Video Divide] (P239) in the [Playback] menu.
The motion picture may not be divided near the very end of it. To avoid this, record approximately 3 seconds longer.
- Set the camera to Creative Video Mode, and use a shutter remote control (optional) to record motion pictures. (P321)

Flash**The flash is not activated.**

- Is the flash closed?
 - Open the flash. (P201)
- When the electronic shutter is used, the flash is not activated. (P164)
 - Set [Shutter Type] to [AUTO] or [MSHTR].
- When [Silent Mode] is set to [ON], the flash is not activated. (P186)
 - Set [Silent Mode] to [OFF].

The flash is activated 2 times.

- (Except for when [Firing Mode] in [Flash] is set to [MANUAL]) The flash is activated 2 times. The interval between the first and second flash is longer when Red-Eye Reduction (P203) is set so the subject should not move until the second flash is activated.

Monitor/Viewfinder

The Monitor/Viewfinder turns off although the camera is turned on.

- If no operations are performed during the set time period, [Auto LVF/Monitor Off] (P51) is activated, and the Monitor/Viewfinder turns off.
- When an object or your hand is positioned near the eye sensor, the Monitor display may switch to the Viewfinder display. (P57)

The Monitor/Viewfinder is too bright or dark.

- Check [Monitor Luminance] setting. (P50)
- Perform [Monitor Display]/[Viewfinder]. (P49)

It may flicker for an instant or the brightness of the screen may change significantly for an instant.

- This occurs due to the aperture of the lens changing when the shutter button is pressed halfway, or when the brightness of the subject changes. This is not a malfunction.

The picture is not displayed on the monitor.

- Does the picture appear on the viewfinder?
→ Press [LVF] to switch to monitor display. (P57)
- Is the monitor switched off?
→ Switch the display by pressing [DISP.]. (P64)

Monitor and viewfinder do not switch when [LVF] is pressed.

- It is only displayed on the monitor when the camera is connected to a PC or printer.

Black, white, red, blue and green dots appear on the Monitor/Viewfinder.

- This is not a malfunction.
These pixels do not affect the recorded pictures.

Noise appears on the monitor.

- In dark places, noise may appear to maintain the brightness of the monitor.

Unevenly bright parts or irregular colours appear on the Viewfinder.

- Viewfinder of this unit adopts OLED. Screen burn-in may occur on the screen/viewfinder when a same image is displayed for a long period of time, but it does not affect the recorded images.

Playback

The picture being played back is not rotated, or is rotated in an unexpected direction, when displayed.

- You can display the pictures without being rotated when [Rotate Disp.] (P243) is set to [OFF].
- You can rotate pictures with the [Rotate] function. (P243)

**The picture is not played back.
There are no recorded pictures.**

- Is the card inserted?
- Is there a picture on the card?
- Is this a folder or picture which was processed in the PC?
If it is, it cannot be played back by this unit.
→ It is recommended to use the "PHOTOfunSTUDIO" software in the DVD (supplied) to write pictures from PC to card.
- Has [Playback Mode] been set for playback?
→ Change to [Normal Play]. (P230)

The folder number and the file number are displayed as [—] and the screen turns black.

- Is this a non-standard picture, a picture which has been edited using a PC or a picture which was taken by another make of digital camera?
- Did you remove the battery immediately after picture-taking or did you take the picture using a battery with a low remaining charge?
→ To delete such pictures, make a backup of the data and format the card (P31).

Playback sound or operation sound is too low.

- Is something covering up the speaker? (P15)

Images with different date as recorded date are played back in the Calendar Playback.

- Is the clock in the camera set properly? (P35)
- Images edited on a PC or images recorded on other cameras might display a different date to the recorded date during the Calendar Playback.

White round spots like soap bubbles appear on the recorded picture.




- If you take a picture with the flash in a dark place or indoors, white round spots may appear on the picture caused by the flash reflecting of particles of dust in the air. This is not a malfunction.



[Thumbnail is displayed] appears on the screen.

- Is it a picture that has been recorded with other equipment?
In such cases, these pictures may be displayed with a deteriorated picture quality.

Red part of the recorded image has changed colour to black.

- When Red-Eye Removal ([] or []) is performed, red parts may be corrected to black.
→ It is recommended to take a pictures with the flash closed, Flash Mode set to [], or [Red-Eye Removal] set to [OFF]. (P211)

Motion pictures recorded with this model cannot be played back on other equipment.

- The picture quality or sound quality of recorded motion pictures may be deteriorated even when these are played back with the compatible devices. Also, recording information may not be displayed correctly.

Wi-Fi function

**A Wi-Fi connection cannot be established.
Radio waves get disconnected.
Wireless access point is not displayed.**

■ General tips for using a Wi-Fi connection

- Try [Reset Wi-Fi Settings] in the [Setup] menu.
- Use within the communication range of the device to be connected.
- Is any device, such as microwave oven, cordless phone, etc., that uses 2.4 GHz frequency operated nearby?
 - Radio waves may get interrupted when used simultaneously. Use them sufficiently away from the device.
- When the battery indicator is flashing red, the connection with other equipment may not start or the connection may be disrupted.
(A message such as [Communication error] is displayed.)
- If you place the camera on a metal table or shelf, the radio waves may be adversely affected. In such cases, you may not be able to establish a connection. Move the camera away from the metal surface.

■ About a wireless access point

- Check if the wireless access point to connect is in operating state.
- The camera may not display or connect to a wireless access point depending on the radio wave condition.
 - Move this unit closer to the wireless access point.
 - Remove the obstacles between this unit and the wireless access point.
 - Change the direction of this unit.
 - Change the location and orientation of the wireless access point.
 - Perform the [Manual Input]. (P290)
- It may not display even if the radio waves exist depending on the setting of the wireless access point.
 - Check the settings of the wireless access point.
 - When the network SSID of the wireless access point is set not to broadcast, the wireless access point may not be detected. Enter the network SSID to start the connection (P290) or enable the SSID broadcast of the wireless access point.
- Connection types and security setting methods are different depending on the wireless access point. (Refer to the operating instructions of the wireless access point.)
- Is the 5 GHz/2.4 GHz switchable wireless access point connected to other equipment using the 5 GHz band?
 - The use of a wireless access point that can use 5 GHz/2.4 GHz simultaneously is recommended. It cannot be used simultaneously with this camera if it is not compatible.

It takes long time every time to connect to a smartphone.

- It may take longer time to connect depending on the Wi-Fi connection setting of the smartphone, but it is not a malfunction.

This unit is not displayed in the Wi-Fi setting screen of the smartphone.

- From the Wi-Fi setting menu on the smartphone, turn off and then on the Wi-Fi function.

I have forgotten the login ID or password for the “LUMIX CLUB”.

- Check the information in the login screen of “LUMIX CLUB”.
<http://lumixclub.panasonic.net/eng/c/>

I cannot send images to an AV device.

- Sending may fail depending on the operational status of the AV device. Also, sending may take a while.

I do not have a wireless access point at my home, but I would like to perform service user registration of the “LUMIX CLUB”.

- Service user registration for the “LUMIX CLUB” is not possible in the environment without a wireless access point.

Images cannot be transmitted to a PC.

- When the firewall of the OS, security software, etc. is enabled, connecting to the PC may not be possible.

When I try to set up a Wi-Fi connection with a Windows 8 PC, my user name and password are not recognised, so I cannot connect to the PC.

- Some OS versions, including Windows 8, use two types of accounts: a local account and a Microsoft account.
→ Be sure to use the user name and password for the local account.
If you haven't set up a local account, please create one.

The PC is not recognised when I use a Wi-Fi connection. The camera cannot be connected to PC via Wi-Fi connection.

- The default workgroup name is set to "WORKGROUP". If you changed the workgroup name, the PC will not be recognised.
In [Change Workgroup Name] in [PC Connection] of the [Wi-Fi Setup] menu, change the workgroup name to that of the PC you are connecting to. Refer to [P297](#) for details.
- Please confirm login name and password are correctly typed.
- When the system time of Mac computer or Windows PC connected to a camera differs severely from that of the camera, the camera cannot be connected to the computer or PC in some OSs.
→ Please confirm [Clock Set] and [World Time] of the camera matches with time, date and time zone in Windows PC or Mac computer. When both settings do not match severely, please match them.

Images cannot be transmitted to the web service.

- Confirm that the login information (login ID/user name/email address/password) is correct.
- Web service server or the network may be busy.
→ Try again after a while.
→ Check the site of the web service you are sending the image to.

It takes time to transmit an image to the web service.

- Is the size of the image too large?
→ Reduce the image size at [Size] ([P296](#)), and then send.
→ Transmit after dividing the motion picture with [Video Divide] ([P239](#)).
- It may take longer time to transmit when distance to the wireless access point is far.
→ Transmit closer to the wireless access point.

The image that was supposed to have uploaded to the web service is not there.

- Upload may not complete when it is disconnected while transmitting the image.
- It may take some time after uploading the image to be reflected in the web service depending on the status of the server.
→ Wait for a while and try again.
- You can check the transmission status on the web service link settings by logging into "LUMIX CLUB".

I would like to return the image in the web service to the camera.

- The images in the web service cannot be saved (downloaded) to this unit.
→ Do not delete the uploaded images, and make a backup of them.

I cannot display or delete the images uploaded to the web service by this unit.

- The images uploaded to the web service cannot be displayed or deleted by this unit.
→ Perform the task using a smartphone or a PC.

Transmission of the image fails midway. Some images cannot be transmitted.

- Image cannot be transmitted when the battery indicator is flashing red.
- Is the size of the image too large?
→ Reduce the image size at [Size] (P296), and then send.
→ Transmit after dividing the motion picture with [Video Divide] (P239).
- File format of the motion picture that can be sent differs depending on the destination. (P265, P269, P270, P273, P277, 281)
- Capacity or number of images in the web service is full.
→ Login to “LUMIX CLUB”, and check the status of the destination on the web service link settings.

Your “LUMIX CLUB” login ID and password were deleted after sending the camera in to be repaired.

- The settings stored in the camera may be deleted depending on the type of repair.
→ Always make a copy of important settings.

I have forgotten the password for the Wi-Fi.

- Execute the [Reset Wi-Fi Settings] in the [Setup] menu. (P54)
However, all the information you have set on the [Wi-Fi Setup] menu will be reset. (excluding [LUMIX CLUB])

Cannot be connected using NFC.

- Is your smartphone compatible with NFC?
→ This unit can be used with NFC-compatible terminals via Android (OS version 2.3.3 or higher).
- Make sure the NFC function of your smartphone is ON.
- Is [NFC Operation] set to [OFF]? (P297)
- Some smartphones cannot be easily checked simply by touching.
→ If the camera is not recognised even after touching, change positions and try again by touching slowly.
- If the duration of touching is short, the smartphone may not be recognised.
→ Touch and hold the smartphone for a while.

TV, PC and printer

The picture does not appear on the television.

- Is the camera connected to the TV correctly?
→ Set the TV input to external input mode.

The picture is not displayed fully on the TV.

The display areas on the TV screen and the camera's monitor are different.

- Check [TV Aspect] setting. (P52)
- Depending on the TV model, the pictures may be extended horizontally or vertically or they may be displayed with their edges cut off.

The motion pictures cannot be played back on a TV.

- Are you trying to play back the motion pictures by directly inserting the card in the card slot of the TV?
→ Connect the camera to the TV with the AV cable (optional), or with the HDMI micro cable, and then play back the motion pictures on the camera. (P301)

Sound is not output from the speaker of the camera.

- When an AV cable (optional) or an HDMI micro cable is connected, sound is not output from the camera.

VIERA Link does not work.

- Is it connected properly with the HDMI micro cable? (P301)
- Is the [VIERA Link] on this unit set to [ON]? (P53)
 - If the input channel does not switch automatically, use the remote control for the TV to switch it.
 - Check the VIERA Link setting on the connected device.
 - Turn this unit off and on.
 - Set [HDAVI Control] to [Off] on the TV and then turn it back to [On].
(Refer to the operating instructions of the TV for details.)
 - Check [Video Out] setting. (P52)

Cannot communicate with the PC.

- Is the camera recognised by the PC correctly?
 - Set to [PC] in [USB Mode]. (P51, 310)
 - Turn this unit off and on.

The card is not recognised by the PC.

- Disconnect the USB connection cable. Connect it again while the card is inserted in the camera.
- If there are two or more USB terminal on a single PC, try connecting the USB connection cable to another USB terminal.

The card is not recognised by the PC. (SDXC memory card is used.)

- Check if your PC is compatible with SDXC memory cards.
<http://panasonic.net/avc/sdcard/information/SDXC.html>
- A message prompting to format the card may be displayed when connecting, but do not format.
- If the [Access] displayed on the monitor does not disappear, disconnect the USB connection cable after turning this unit off.

The picture cannot be printed when the camera is connected to a printer.

- Pictures cannot be printed using a printer that does not support PictBridge.
→ Set to [PictBridge(PTP)] in [USB Mode]. (P51, 313)

The ends of the pictures are cut at printing.



- When using a printer with a Cropping or borderless printing function, cancel this function before printing.
(For details, refer to the operating instructions for the printer.)
- When you order photo studios to print pictures, ask the photo studio if the 16:9 pictures can be printed.

Others

There is a sound from lens unit.

- It is a sound of lens movement or aperture operation when this unit is turned on or off, and it is not a malfunction.
- The sound, which is caused by the automatic adjustment of the aperture, is heard when the brightness has changed due to, for example, zooming or the movement of the camera. This is not a malfunction.

An unreadable language was selected by mistake.

- Press [MENU/SET], select the [Setup] menu icon [] and then select the [] icon to set the desired language. (P53)

Part of the picture is flashing in black and white.

- This is a highlight function showing the white saturated area. (P72)

A red lamp sometimes turns on when the shutter button is pressed halfway.

- In dark places, the AF Assist Lamp (P149) lights red to make it easier to focus on a subject.

Zooming stops instantaneously.

- When using the Extra Optical Zoom, the zooming action will stop temporarily. This is not a malfunction.

The AF Assist Lamp does not turn on.

- Is [AF Assist Lamp] set to [ON]? (P149)
- The AF Assist Lamp does not turn on in bright places.

The camera becomes warm.

- The surface of the camera and the reverse side of the monitor may become warm during use. This does not affect the performance or quality of the camera.

The clock is reset.

- If you do not use the camera for a long time, the clock may be reset.
→ [Please set the clock] message will be displayed; please reset the clock. (P35)

The file numbers are not recorded consecutively.

- When you perform an operation after taking a certain action, the pictures may be recorded in folders with different numbers from the ones used prior to the operation.

The file numbers are recorded with previously used numbers.

- If you insert or remove the battery before turning off this unit, the folder and file numbers for the pictures taken will not be stored in the memory. When this unit is turned on again and pictures are taken, they may be stored under file numbers which should have been assigned to previous pictures.

Cautions for Use

Optimal use of the camera

Keep this unit as far away as possible from electromagnetic equipment (microwave ovens, TVs, speakers, large motors, etc.).

- If you use this unit on top of or near a TV, the pictures and/or sound on this unit may be disrupted by electromagnetic wave radiation.
- Do not use this unit near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect this unit, disturbing the pictures and/or sound.
- If this unit is adversely affected by electromagnetic equipment and stops functioning properly, turn this unit off and remove the battery or disconnect AC adaptor (optional). Then reinsert the battery or reconnect AC adaptor and turn this unit on.

Do not use this unit near radio transmitters or high-voltage lines.

- If you record near radio transmitters or high-voltage lines, the recorded pictures and/or sound may be adversely affected.

Always use the supplied cords and cables.

**If you use optional accessories, use the cords and the cables supplied with them.
Do not extend the cords or the cables.**

Do not spray the camera with insecticides or volatile chemicals.

- If the camera is sprayed with such chemicals, the body of the camera may be damaged and the surface finish may peel off.

Do not keep rubber or plastic products in contact with the camera for a long period of time.

Cleaning

Before cleaning the camera, remove the battery or the DC coupler (optional), or disconnect the power plug from the outlet. Then wipe the camera with a dry, soft cloth.

- When the camera is soiled badly, it can be cleaned by wiping the dirt off with a wrung wet cloth, and then with a dry cloth.
- To wipe off the dust or dirt on the manual ring, use a dry, dust-free cloth.
- Do not use solvents such as benzine, thinner, alcohol, kitchen detergents, etc., to clean the camera, since it may deteriorate the external case or the coating may peel off.
- When using a chemical cloth, be sure to follow the accompanying instructions.

■ For care of the eye cup on the viewfinder

- As the eye cup cannot be removed, gently wipe it with a dry and soft cloth, and be careful not to remove it.
- If you wipe the eye cup too hard and it is removed, consult the dealer or Panasonic.

About the Monitor/Viewfinder

- Do not press the monitor with excessive force. Uneven colours may appear on the monitor and it may malfunction.
- If the camera is cold when you turn it on, the picture on the Monitor/Viewfinder will be slightly darker than usual at first. However, the picture will return to normal brightness when the internal temperature of the camera increases.

Extremely high precision technology is employed to produce the Monitor/Viewfinder screen. However there may be some dark or bright spots (red, blue or green) on the screen. This is not a malfunction. Though the Monitor/Viewfinder screen parts are produced with highly controlled precision technology, some pixels may be inactive or always lit. The spots will not be recorded on pictures on a card.

About the Lens

- Do not press the lens with excessive force.
- Do not leave the camera with the lens facing the sun as rays of light from the sun may cause it to malfunction. Also, be careful when placing the camera outside or near a window.
- When there is dirt (water, oil, and fingerprints, etc.) on the surface of the lens, the picture may be affected. Lightly wipe the surface of the lens with a soft, dry cloth before and after taking pictures.
- Retract the lens when carrying the camera.

Battery

The battery is a rechargeable lithium ion battery. Its ability to generate power comes from the chemical reaction that takes place inside it. This reaction is susceptible to the surrounding temperature and humidity. If the temperature is too high or too low, the operating time of the battery will become shorter.

Always remove the battery after use.

- Place the removed battery in a plastic bag, and store or keep away from metallic objects (clips, etc.).

If you drop the battery accidentally, check to see if the body of the battery and the terminals are damaged.

- Inserting a damaged battery in the camera will damage the camera.

Bring charged spare batteries when going out.

- Be aware that the operating time of the battery becomes shorter in low temperature conditions such as at a ski resort.
- When you travel, do not forget to bring the battery charger (supplied) so that you can charge the battery in the country that you are travelling in.

Dispose of unusable battery.

- The battery has a limited life.
- Do not throw the battery into fire because it may cause an explosion.

Do not allow battery terminals to come into contact with metal objects (such as necklaces, hairpins, etc.).

- This can cause short-circuiting or heat generation and you may be badly burned if you touch a battery.

Charger

- The [CHARGE] indicator may blink under the influence of static electricity or electromagnetic wave. This phenomenon has no effects on charging.
- If you use the battery charger near a radio, the radio reception may be disturbed. Keep the charger 1 m (3.3 feet) or more away from radio.
- The charger may generate whirring sounds when it is being used. This is not a malfunction.
- After use, be sure to disconnect the power supply device from the electrical outlet. (A very small amount of current is consumed if it is left connected.)
- Keep the terminals of the charger and battery clean.

Card

Do not leave the card where the temperature is high, where electromagnetic waves or static electricity are easily generated or exposed to direct sunlight.

Do not bend or drop the card.

- The card may be damaged or the recorded content may be damaged or deleted.
- Put the card in the card case or the storage bag after use and when storing or carrying the card.
- Do not allow dirt, dust, or water to get into the terminals on the back of the card and do not touch the terminals with your fingers.

Notice for when transferring to another party, or disposing of the memory card “Format” or “delete” using the camera or a PC will only modify the file management information, it will not erase the data in the memory card completely.

It is recommended to physically destroy the memory card or use the commercially available computer data deletion software to completely erase the data in the memory card before transferring to another party or disposing.

Management of data in the memory card is the responsibility of the user.



MENU



About the personal information

If a name or birthday is set for [Profile Setup]/Face Recognition function, this personal information is kept in the camera and recorded in the image.

Setting a Wi-Fi password is recommended to protect personal information. (P298)

Disclaimer

- Information including personal information may be altered or vanish due to erroneous operation, effect of static electricity, accident, malfunction, repair, or other handlings. Please note in advance that Panasonic is not liable in any way for any direct or indirect damage from the alteration or vanishing of information or personal information.

When requesting a repair, transferring to another party, or disposing.

- After making a copy of personal information, always delete information such as personal information and wireless LAN connection settings that you have saved within the camera with [Reset Wi-Fi Settings]/[Delete account] (P54, 287).
- Reset the settings to protect the personal information. (P54)
- Remove the memory card from the camera when requesting a repair.
- Settings may return to factory default when camera is repaired.
- Please contact the dealer where you purchased the camera or Panasonic if above operations are not possible due to malfunction.

When transferring to another party, or disposing of the memory card, please refer to “Notice for when transferring to another party, or disposing of the memory card”. (P363)

When uploading images on web services

- Images may contain information that can be used for identifying individuals such as titles, recording dates, and location information. When uploading images on web services, check carefully, and then upload.

When not using the camera for a long period of time

- Store the battery in a cool and dry place with a relatively stable temperature: [Recommended temperature: 15 °C to 25 °C (59 °F to 77 °F), Recommended humidity: 40%RH to 60%RH]
- Always remove the battery and the card from the camera.
- If the battery is left inserted in the camera, it will discharge even if the camera is turned off. If the battery continues to be left in the camera, it will discharge excessively and may become unusable even if charged.
- When storing the battery for a long period of time, we recommend charging it once a year. Remove the battery from the camera and store it again after it has completely discharged.
- We recommend storing the camera with a desiccant (silica gel) when you keep it in a closet or a cabinet.
- **Check all the parts before taking pictures when you have not used the camera for a long period of time.**

About the picture data

- Recorded data may be damaged or lost if the camera breaks down due to inappropriate handling. Panasonic will not be liable for any damage caused due to loss of recorded data.

About tripods or unipods

- When you use a tripod, make sure the tripod is stable when this unit is attached to it.
- You may not be able to remove the card or the battery when using a tripod or unipod.
- You may not be able to touch the NFC antenna with another device when using a tripod or unipod.
- Make sure that the screw on the tripod or unipod is not at an angle when attaching or detaching the camera. You may damage the screw on the camera if you use excessive force when turning it. Also, the camera body and the rating label may be damaged or scratched if the camera is attached too tightly to the tripod or unipod.
- Read the operating instructions for the tripod or unipod carefully.

- SDXC Logo is a trademark of SD-3C, LLC.
- HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- “AVCHD”, “AVCHD Progressive” and the “AVCHD Progressive” logo are trademarks of Panasonic Corporation and Sony Corporation.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- HDAVI Control™ is a trademark of Panasonic Corporation.
- Adobe is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.
- Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- iMovie, Mac and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store is a service mark of Apple Inc.
- Android and Google Play are trademarks or registered trademarks of Google Inc.
- The Wi-Fi CERTIFIED Logo is a certification mark of the Wi-Fi Alliance.
- The Wi-Fi Protected Setup Mark is a mark of the Wi-Fi Alliance.
- “Wi-Fi”, “Wi-Fi Protected Setup”, “Wi-Fi Direct”, “WPA” and “WPA2” are marks or registered marks of the Wi-Fi Alliance.
- DLNA, the DLNA Logo and DLNA CERTIFIED are trademarks, service marks, or certification marks of the Digital Living Network Alliance.
- This product uses “DynaFont” from DynaComware Corporation. DynaFont is a registered trademark of DynaComware Taiwan Inc.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned.



MENU



This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

Disposal of Old Equipment and Batteries **Only for European Union and countries with recycling systems**



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation.

By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.

For more information about collection and recycling, please contact your local municipality.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.



Note for the battery symbol (bottom symbol):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.