

# Panasonic<sup>®</sup>

## Operating Instructions

Digital Camera/Lens Kit

Model No. **DMC-GH1K**

# LUMIX



**HD**



**VIERA**  
Link

Before use, please read these instructions completely.

Web Site: <http://www.panasonic-europe.com>

## Dear Customer,

We would like to take this opportunity to thank you for purchasing this Panasonic Digital Camera. Please read these Operating Instructions carefully and keep them handy for future reference. Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in these Operating Instructions.

### Carefully observe copyright laws.

- Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.

## Information for Your Safety

### WARNING:

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE,**

- **DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.**
- **USE ONLY THE RECOMMENDED ACCESSORIES.**
- **DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

THE SOCKET OUTLET SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE.

Product Identification Marking is located on the bottom of units.

### ■ About the battery pack

#### CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

- Do not heat or expose to flame.
- Do not leave the battery(ies) in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

#### Warning

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C or incinerate.

## Caution for AC mains lead

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug. Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362. Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

### CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as stated below. If in any doubt please consult a qualified electrician.

## ■ IMPORTANT

The wires in this mains lead are coloured in accordance with the following code: Blue: Neutral, Brown: Live.

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue. The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

**WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL  $\perp$  OR COLOURED GREEN OR GREEN/YELLOW.**

**THIS PLUG IS NOT WATERPROOF—KEEP DRY.**

## ■ Before use


Remove the connector cover.

## ■ How to replace the fuse


The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.

Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

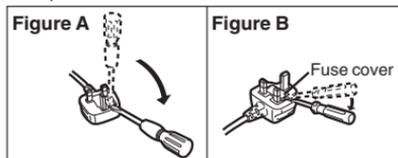

2. Replace the fuse and close or attach the fuse cover.

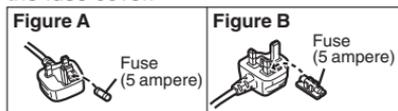

## ■ About the battery charger

### CAUTION!

- DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
- DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.
- DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.
- DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

- The battery charger is in the standby condition when the AC power supply cord is connected. The primary circuit is always "live" as long as the power cord is connected to an electrical outlet.

## ■ Care of the camera

- Do not strongly shake or bump the camera by dropping or hitting it. Do not subject to strong pressure.

The camera may malfunction, recording pictures may become impossible, or the lens, the LCD monitor or the external case may be damaged.

- Be particularly careful in the following places as they may cause this unit to malfunction.
  - Places with a lot of sand or dust.
  - Places where water can come into contact with this unit such as when using it on a rainy day or on a beach.
- Do not touch the lens or the sockets with dirty hands. Also, be careful not to allow liquids, sand and other foreign matter to get into the space around the lens, buttons etc.
- This camera is not waterproof. If water or seawater splashes on the camera, use a dry cloth to wipe the camera body carefully.  
If the unit does not operate normally, please contact the dealer where you purchased the camera or the repair service centre.
- Do not place your hands inside the mount of the digital camera body. Since the sensor unit is a precision apparatus, it may cause a malfunction or damage.

## ■ About Condensation (When the lens or the Viewfinder is fogged up)

- Condensation occurs when the ambient temperature or humidity changes. Be careful of condensation since it causes lens stains, fungus and camera malfunction.
- If condensation occurs, turn the camera off and leave it for about 2 hours. The fog will disappear naturally when the temperature of the camera becomes close to the ambient temperature.

## ■ Read together with the "Cautions for Use". (P168)

## Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.



### For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

### [Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.



### Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Cd

# Contents

---

---

## Before Use

---

---

Information for Your Safety .....	2
Accessories .....	9
Names of the Components .....	11
Operating the Front Dial .....	14
Rotating the LCD monitor .....	14
About the Lens .....	15

---

---

## Preparation

---

---

Attaching/Detaching the Lens .....	17
Attaching the Shoulder Strap .....	19
Attaching the Lens Hood .....	20
Charging the Battery .....	21
• About the Battery (charging/number of recordable pictures) .....	22
Inserting/Removing the Battery .....	24
Using the AC Adaptor .....	25
Inserting/Removing the Card (Optional) .....	26
About the Card .....	27
Setting Date/Time (Clock Set) .....	28
• Changing the clock setting .....	28
Setting the Menu .....	29
• Setting menu items .....	30
Setting the Quick Menu .....	32
About the Setup Menu .....	33
About how to hold and LCD monitor/ Viewfinder .....	39

---

---

## Basic

---

---

Selecting the [REC] mode, and record still picture or motion picture .....	42
• Taking the still picture .....	44
• Recording the motion picture .....	44
• Playback the recorded still pictures or motion picture .....	44
Taking pictures using the automatic function (Intelligent Auto Mode) .....	45
• Scene detection .....	46
• Face Recognition .....	47
• AF Tracking Function .....	47
• Compensating the Exposure .....	47
• About the flash .....	48

• Taking motion pictures using the automatic function .....	48
• Settings in Intelligent auto mode .....	49
Taking pictures with your favourite settings (Programme AE mode) .....	51
• Fix the focus by pressing the shutter button halfway (AFS) .....	52
• Continuously focusing on a subject (AFC) .....	52
• Take a picture with manual focus (MF) .....	52
• Focusing .....	53
• When the subject is not in focus .....	53
• Preventing jitter (camera shake) .....	53
• Programme shift .....	54
Taking Pictures with the Zoom .....	55
• Using the Optical Zoom/ Using the Extra Optical Zoom (EZ)/ Using the Digital Zoom .....	55
Playing back Pictures .....	56
• Changing the Information Displayed on the playback screen .....	57
• Displaying Multiple Screens (Multi Playback) .....	57
• Displaying Pictures by Recording Date (Calendar Playback) .....	58
• Using the Playback Zoom .....	58
Deleting Pictures .....	59
• To delete a single picture .....	59
• To delete multiple pictures (up to 50) or all the pictures .....	60

---

---

## Advanced (Recording pictures)

---

---

Switching the display of the LCD Monitor/Viewfinder .....	61
• Switching the displayed information .....	61
Taking Pictures using the Built-in Flash .....	65
• Switching to the appropriate flash setting .....	65
• Adjust the flash output .....	69
• Setting to the 2nd Curtain Synchro .....	70
Compensating the Exposure .....	71
Taking Pictures using Burst Mode .....	72
Taking Pictures using Auto Bracket .....	74
Taking Pictures with the Self-timer .....	76
Setting the method used to focus (AF mode) .....	77
• Setting up [AF-ON] (AF Tracking) .....	78
• Setting the AF area .....	79

Taking Pictures with Manual Focus ..... 80	• Face settings..... 110
Fixing the Focus and the Exposure (AF/AE Lock)..... 81	Useful Functions at Travel Destinations... 113
Adjusting the White Balance ..... 83	• Recording which Day of the Vacation You Take the Picture ..... 113
• Setting the white balance manually..... 84	• Recording Dates/Times at Overseas Travel Destinations (World Time) ... 115
• Setting the colour temperature..... 84	Using the [REC] Mode Menu ..... 116
• Finely adjusting the white balance ... 85	•  [ASPECT RATIO]..... 116
• White balance bracket ..... 85	•  [PICTURE SIZE]..... 117
Setting the Light Sensitivity..... 86	•  [QUALITY]..... 118
Change tone of the colour for the picture to be taken (Film mode)..... 87	•  [FACE RECOG.]..... 118
• Adjusting each film mode to the desired setting ..... 88	•  [METERING MODE]..... 119
• Multi film bracket..... 89	•  [STABILIZER]..... 119
Taking pictures by specifying the aperture/shutter speed..... 90	•  [FLASH]..... 120
• Aperture-priority AE ..... 90	•  [D.RED-EYE]..... 120
• Shutter-priority AE..... 90	•  [FLASH SYNCHRO]..... 120
Taking picture by setting the exposure manually..... 91	•  [FLASH ADJUST.]..... 121
Confirm the effects of aperture and shutter speed (Preview mode)..... 93	•  [I.EXPOSURE]..... 121
• Confirm the effects of aperture ..... 93	•  [EX. OPT. ZOOM]..... 121
• Confirm the effects of shutter speed..... 93	•  [DIGITAL ZOOM]..... 121
Taking expressive portraits and landscape pictures (Advanced scene mode)..... 94	•  [BURST RATE]..... 122
• [PORTRAIT]..... 95	•  [AUTO BRACKET]..... 122
• [SCENERY]..... 95	•  [SELF-TIMER]..... 122
• [SPORTS]..... 96	•  [COLOR SPACE]..... 122
• [CLOSE-UP]..... 96	•  [LONG SHTR NR]..... 123
• [NIGHT PORTRAIT]..... 97	•  [ISO LIMIT SET]..... 123
Taking pictures that match the scene being recorded (Scene mode) ..... 98	•  [ISO INCREMENTS]..... 123
•  [SUNSET] ..... 98	•  [AUDIO REC.]..... 124
•  [PARTY]..... 99	Using the [MOTION PICTURE] Mode Menu ..... 125
•  [BABY1]/ [BABY2]..... 99	•  [REC MODE]..... 125
•  [PET]..... 100	•  [REC QUALITY]..... 125
Taking pictures while adjusting colour (My colour mode)..... 100	•  [EXPOSURE MODE]..... 125
Registering Personal Menu Settings (Registering custom settings) ..... 101	•  [WIND CUT]..... 126
Taking pictures in Custom mode ..... 102	Using the [CUSTOM MENU]..... 126
Recording Motion Picture..... 103	
• Changing [REC MODE] and [REC QUALITY]..... 105	
• [WIND CUT]..... 107	
Recording Motion Picture with Manual Settings (Creative motion picture mode).... 108	
Taking a picture with Face Recognition function ..... 110	
• Face Recognition functions..... 110	

---



---

## Advanced (Playback)

---



---

Playing Back Motion Pictures/Pictures with Audio ..... 132
• Motion pictures..... 132
• Pictures with audio..... 133
Using the [PLAYBACK] mode menu..... 134
•  [SLIDE SHOW]..... 134
•  [PLAYBACK MODE]..... 135
•  [FAVORITE]..... 136
•  [TITLE EDIT]..... 137
•  [TEXT STAMP]..... 138
•  [RESIZE] Reducing the picture size (number of pixels) ..... 140

•  [TRIMMING].....	141
•  [ASPECT CONV.].....	142
•  [ROTATE]/ [ROTATE DISP.] ....	143
•  [PRINT SET].....	144
•  [PROTECT].....	145
•  [AUDIO DUB.].....	146
•  [FACE RECOG.].....	147

---



---

## Connecting to other equipment

---



---

Playing Back Pictures on a TV Screen .....	148
• Playing back pictures using the AV cable (supplied) .....	148
• Playing back pictures on a TV with an SD Memory Card slot.....	149
• Playing back on the TV with HDMI socket.....	149
Saving the recorded still pictures and motion pictures .....	153
• Copy the playback image using an AV cable.....	153
• Copying to a PC .....	154
Connecting to a PC .....	154
Printing the Pictures .....	157
• Single picture.....	158
• Print Settings .....	158
• [PRINT SET (DPOF)] .....	160

---



---

## Others

---



---

Using the External Flash (optional) .....	161
Using the Protector/Filter (optional).....	162
Using the Remote Shutter (optional) ....	163
Using the External Microphone (optional).....	164
Screen Display .....	165
Cautions for Use.....	168
Message Display .....	172
Troubleshooting.....	175
Number of Recordable Pictures and Available Recording Time.....	183
Specifications .....	188

## Sales and Support Information

### Customer Care Centre

- For customers within the UK: 0844 844 3852
- For customers within the Republic of Ireland: 01 289 8333
- Visit our website for product information
- E-mail: [customer.care@panasonic.co.uk](mailto:customer.care@panasonic.co.uk)

### Technical Support for AV Software

- For customers within the UK: 0844 844 3869
- For customers within the Republic of Ireland: 01 289 8333

### Direct Sales at Panasonic UK

- For customers: 0844 844 3856
- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Care Centre Monday – Thursday 9.00 a.m. – 5.30 p.m., Friday 9.30 a.m. – 5.30 p.m. (Excluding public holidays)
- Or go on line through our Internet Accessory ordering application at [www.panasonic.co.uk](http://www.panasonic.co.uk).
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK Ltd.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details.

*Interested in purchasing an extended guarantee?*

*Please call 0870 240 6284 or visit our website [www.panasonic.co.uk/guarantee](http://www.panasonic.co.uk/guarantee).*

## Accessories

Check that all the accessories are included before using the camera.

- 1 Digital Camera Body  
(This is referred to as **camera body** in these operating instructions.)
  - 2 Interchangeable Lens  
"LUMIX G VARIO HD 14–140 mm/F4.0–5.8 ASPH./MEGA O.I.S."  
(This is referred to as **lens** in these operating instructions.)
  - 3 Battery Pack  
(This is referred to as **battery** in these operating instructions.)  
Charge the battery before use.
  - 4 Battery Charger/AC Adaptor  
(This is referred to as **charger** in these operating instructions.)
  - 5 AC Mains Lead
  - 6 DC Cable
  - 7 AV Cable
  - 8 USB Connection Cable
  - 9 CD-ROM
    - Software:  
Use it to install the software to your PC.
  - 10 Shoulder Strap
  - 11 Body Cap  
(This is attached to the camera body at the time of purchase.)
  - 12 Lens Hood
  - 13 Lens Cap  
(This is attached to the interchangeable lens at the time of purchase.)
  - 14 Lens Rear Cap  
(This is attached to the interchangeable lens at the time of purchase.)
  - 15 Lens Storage Bag
- SD Memory Card and SDHC Memory Card are indicated as **card** in the text.
  - **The card is optional.**
  - Description in these operating instructions is based on the 14–140 mm/F4.0–5.8 lens included in the DMC-GH1K.
  - Consult the dealer or your nearest Service Centre if you lose the supplied accessories. (You can purchase the accessories separately.)

<p><b>1</b></p> 	<p><b>2</b></p>  <p>H-VS014140</p>	<p><b>3</b></p>  <p>DMW-BLB13E</p>	<p><b>4</b></p>  <p>DE-A49C</p>	<p><b>5</b></p>  <p>K2CT3CA00004</p>
<p><b>6</b></p>  <p>VEK0N98</p>	<p><b>7</b></p>  <p>K1HA14CD0001</p>	<p><b>8</b></p>  <p>K1HA14AD0001</p>	<p><b>9</b></p> 	<p><b>10</b></p>  <p>VFC4411</p>
<p><b>11</b></p>  <p>VKF4385</p>	<p><b>12</b></p>  <p>VYC0997</p>	<p><b>13</b></p>  <p>VYF3250</p>	<p><b>14</b></p>  <p>VFC4315</p>	<p><b>15</b></p>  <p>VFC4430</p>

## ■ Optional Accessories

- Battery Pack  
DMW-BLB13E
- Interchangeable Lens  
H-FS045200  
H-FS014045  
H-F007014  
(Read P15 for information about other lenses that can be used.)
- Flash  
DMW-FL220  
DMW-FL360  
DMW-FL500
- MC Protector  
DMW-LMCH62
- ND Filter  
DMW-LND62
- PL Filter (Circular Type)  
DMW-LPL62
- Remote Shutter  
DMW-RSL1
- Stereo Microphone  
DMW-MS1
- Soft Bag  
DMW-BAG1
- Shoulder Strap  
DMW-SSTG1  
DMW-SSTG2  
DMW-SSTG3


- HDMI mini cable  
RP-CDHM15  
RP-CDHM30
- Mount Adaptor  
DMW-MA1
- SDHC Memory Card  
32 GB: RP-SDV32GE1K  
16 GB: RP-SDV16GE1K  
12 GB: RP-SDM12GE1K  
8 GB: RP-SDV08GE1K  
6 GB: RP-SDM06GE1K  
4 GB: RP-SDM04GE1K/RP-SDV04GE1K
- SD Memory Card  
2 GB: RP-SDM02GE1A/RP-SDV02GE1A  
1 GB: RP-SDR01GE1A
- CardBus PC Card Adapter  
BN-SDPC3E

Some optional accessories may not be available in some countries.

## Names of the Components

### ■ Camera body

- 1 Flash (P65)
- 2 Sensor
- 3 Self-timer indicator (P76)  
AF assist lamp (P129)
- 4 Lens release button (P18)
- 5 Lens lock pin
- 6 Mount
- 7 Lens fitting mark (P17)
- 8 Front dial (P47, 54, 57, 58, 71, 79, 85, 90, 91)

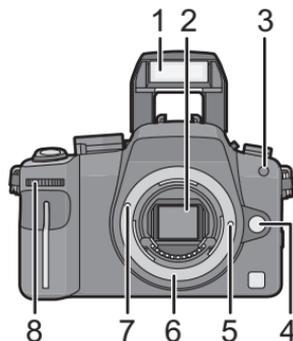

Front dial is described as following in these operating instructions.

e.g.: Rotating left or right




e.g.: Pressing the front dial




- Refer to P14 for operation of the front dial.

- 9 [LVF/LCD] button (P41)
  - 10 Diopter adjustment dial (P41)
  - 11 Viewfinder (P41, 62, 165)
  - 12 Eye sensor (P41)
  - 13 Playback button (P56, 59, 132, 148, 149, 150)
  - 14 [AF/AE LOCK] button (P81)
  - 15 Camera ON/OFF switch (P28)
  - 16 Motion picture button (P44)
  - 17 Eye Cup (P169)
  - 18 LCD monitor (P39, 57, 61, 165)
  - 19 [DISPLAY] button (P57, 61, 93)
  - 20 Delete button (P59)/  
Preview button (P93)
  - 21 [MENU/SET] button (P28)
  - 22 Cursor buttons
    - ▲/ISO (P86)
    - ◀/AF mode (P77)
    - ▼/Function button (P33)
- Assign Menu to ▼ button. It is convenient to register Menu that is used often.  
 [ASPECT RATIO]/[QUALITY]/[METERING MODE]/[I.EXPOSURE]/[GUIDE LINE]/  
 [% REC AREA]/[REMAINING DISP.]  
 ►/WB (White balance) (P83)

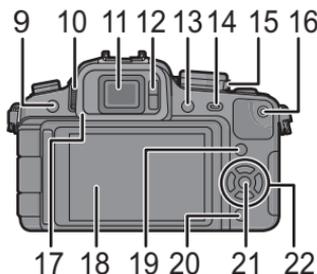

In these operating instructions, the cursor buttons are described as shown in the figure below or described with ▲/▼/◀/▶.  
 e.g.: When you press the ▼ (down) button

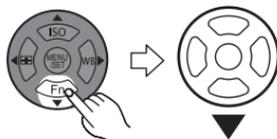

or

Press ▼

23 Focus mode dial (P44, 45, 51, 52, 77, 80, 104, 108)

24 Flash open lever (P65)

25 Stereo microphone (P104, 124, 146)

26 Drive mode lever

Single (P51):

Burst (P72):

Auto bracket (P74):

Self-timer (P76):

27 Shutter button (P44)

28 Focus distance reference mark (P81)

29 Hot shoe (P161, 164)

30 Mode dial (P42)

31 Status indicator (P42)

32 [Q.MENU] button (P32)

33 [FILM MODE] button (P87)



34 [MIC/REMOTE] socket (P163, 164)

35 Shoulder strap eyelet (P19)

- Be sure to attach the shoulder strap when using the camera to ensure that you will not drop it.


36 [HDMI] socket (P149, 150)

37 [AV OUT/DIGITAL] socket (P148, 153, 155, 157)

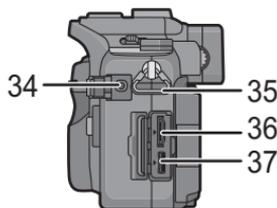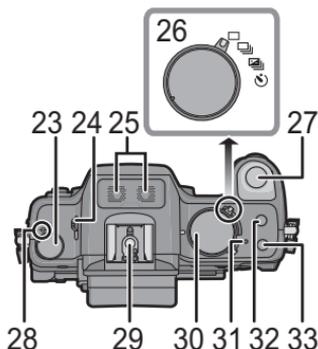


38 Card door (P26)

39 DC cable cover (P25)

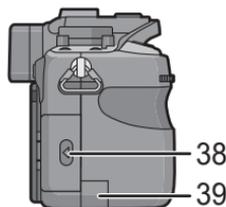


- 40 Battery door (P24)
- 41 Release lever (P24)
- 42 Tripod receptacle
  - When you use a tripod, make sure the tripod is stable when the camera is attached to it.

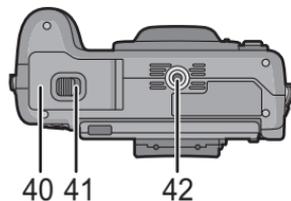

### ■ Lens


#### H-VS014140 (LUMIX G VARIO HD 14–140 mm/F4.0–5.8 ASPH./MEGA O.I.S.)

- 43 Tele
- 44 Lens surface
- 45 Focus ring (P80)
- 46 Wide
- 47 Zoom ring (P55)
- 48 [O.I.S.] switch (P18)
- 49 Contact point
- 50 Lens fitting point (P17)

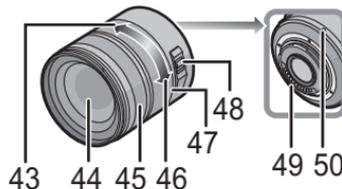


### ■ Battery charger/AC adaptor (P21, 25)

- 51 Power input socket [AC IN]
- 52 [CHARGE] indicator
- 53 Power output socket [DC OUT]
- 54 Battery holder

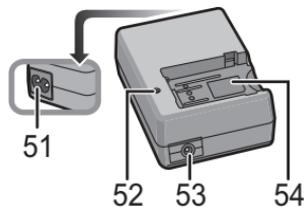

## Operating the Front Dial

There are 2 ways to operate the front dial, rotating left or right, and deciding by pressing.

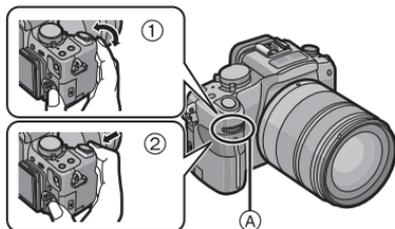

### Example of operation

	① “Rotating”	② “Pressing” <sup>*3</sup>
*1	Adjustments of programme shift (P54), aperture (P90), shutter speed (P90), etc.	Compensating the exposure (P47, 71) etc.
*2	Multi (calendar) playback (P57), playback zoom (P58)	Normal playback (while multi playback), move images while zoomed (while playback zoom)

Ⓐ Front dial

\*1 Recording

\*2 Playback

\*3 It functions in the same way as [MENU/SET] button in various settings including set and finish.

## Rotating the LCD monitor

At the time when this camera is purchased, the LCD monitor is stowed in the camera body. Bring out the LCD monitor as shown below.




① Open the LCD monitor. (Maximum 180°)

② It can be rotated 180° forwards.

③ Return the monitor to its original position.

## Rotation range of the LCD monitor

### ■ Horizontal opening direction

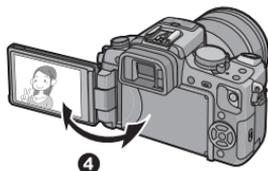

4 Maximum 180°


5 180°

- It can be rotated 180° forwards.

6 90°

- It can only be rotated 90° towards you.

### ■ Vertical rotating direction

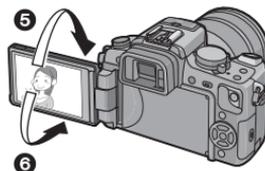

### Note

- **Only rotate the LCD monitor after opening it wide enough, and be careful not to use excessive force as it may be damaged.**
- When holding the edge of the LCD monitor, there may be some distortion, however this is not a malfunction. Moreover, this has no effect on the taken pictures or playback.
- When not using the LCD monitor it is recommended that you close it with the screen facing inwards to prevent dirt and scratches.



## About the Lens

This unit can use the dedicated lenses compatible with the Micro Four Thirds™ System lens mount specification (Micro Four Thirds mount) such as the LUMIX G VARIO HD 14–140 mm/F4.0–5.8 ASPH./MEGA O.I.S. lens included in DMC-GH1K.

Select a lens that matches the scene being recorded and your use of the pictures. If you use a lens other than a dedicated interchangeable lens, auto focus cannot be activated and accurate metering is not possible. Also, some functions will not work.

### ■ “Micro Four Thirds Mount”

This is the lens mount standard for the “Micro Four Thirds System”. This was newly developed as interchangeable lens dedicated for digital cameras.



## ■ When using lenses other than the 14–140 mm/F4.0–5.8 lens included in DMC-GH1K

- Depending on the type of lens, you may not be able to use some functions such as the direction detection function (P40), [STABILIZER] (P119), Quick AF (P128) and Continuous AF (P128).
- The available flash range etc. differs depending on the aperture value of the lens you are using.
- Take some test pictures with the lens you are using.
- Lens with the Four Thirds™ mount specification can be used by using the mount adaptor (DMW-MA1; optional). Because of its structure, Micro Four Thirds mount specification lenses cannot be used on the Four Thirds mount specification cameras. It can only be used on the Micro Four Thirds mount specification cameras.



## Interchangeable lens that can be used with this unit and compatibility of the functions

(○: Usable, ●: Some functions/features limited, —: Not usable)

Lens type	when recording still pictures		while recording motion pictures	
	Auto focus	Auto aperture setting	Auto focus	Auto aperture setting
Micro Four Thirds mount specification lens compatible to motion pictures (LUMIX G VARIO HD)	○ ([AFS], [AFC])	○	○*2	○
Micro Four Thirds mount specification lens not compatible to motion pictures	○ ([AFS], [AFC])	○	●*2, 3, 4	●*5
Four Thirds mount specification lens compatible to contrast AF*1	● ([AFS])	○	●*3, 4	●*5
Four Thirds mount specification lens not compatible to contrast AF*1	—	○	—	●*5

\*1 Mount adaptor (DMW-MA1; optional) is necessary to use with this unit.

\*2 When recording motion pictures, the focus is continuously adjusted for both [AFS] and [AFC] (P52).

\*3 Fewer tracking functions are compatible than with the Micro Four Thirds mount specification lens compatible with motion pictures. Also, the sound of auto focus operation may be recorded.

\*4 Auto focus does not work and [MF] is used when recording with [REC MODE] set to [AVCHD] and [REC QUALITY] set to [FHD] ([FHD]).

\*5 The sound of aperture operation may be recorded.


Refer to catalogues/Web pages for most current information regarding compatible lenses.  
<http://panasonic.co.jp/pavc/global/cs> (This Site is English only.)

## Attaching/Detaching the Lens

- Check that the camera is turned off.
- Close the flash.

### Attaching a lens to the camera body


- 1** Turn the lens rear cap **(A)** and the body cap **(B)** in the direction of the arrow to detach them.

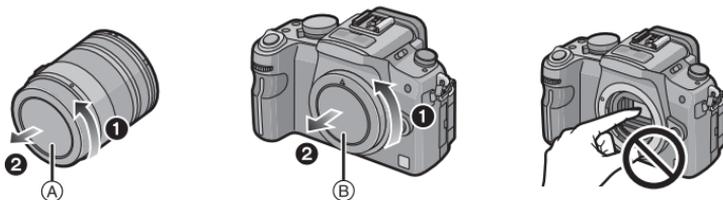

- Do not put your hands inside the mount.


- 2** Align the lens fitting marks **(C)** (red marks) on the camera body and the lens and then rotate the lens in the direction of the arrow until it clicks.

- Do not press the lens release button when you attach a lens.
- Do not try to attach the lens when holding it at an angle to the camera body as the lens mount may get scratched.
- Check that the lens is attached correctly.

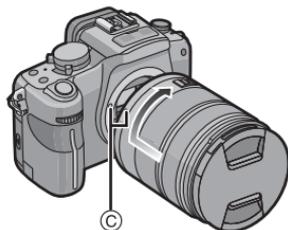

- 3** Detach the lens cap.

- Detach the lens cap before taking pictures.

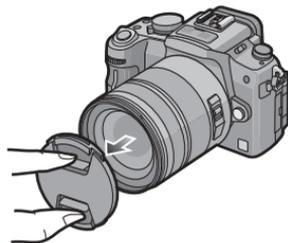


## ■ Optical image stabilizer

The 14–140 mm/F4.0–5.8 lens included in the DMC-GH1K has a stabiliser function. The optical image stabilizer function is set for activation when the lens is attached to the camera body.

### Set the [O.I.S.] switch to [ON].

- You can change the optical image stabilizer mode to [MODE1], [MODE2] or [MODE3] using [STABILIZER] in the [REC] mode menu. (P119) It is set to [MODE1] at the time of purchase.
- We recommend setting the [O.I.S.] switch to [OFF] when using a tripod. If the [O.I.S.] switch is set to [OFF], [O.I.S. OFF] is displayed on the LCD monitor/Viewfinder.

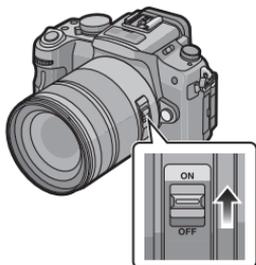

## Detaching a lens from the camera body

### 1 Attach the lens cap.

### 2 Press the lens release button $\text{\textcircled{D}}$ while turning the lens as far as possible in the direction of the arrow to detach it.

- Always attach the body cap to the camera body so that dirt or dust does not get inside.
- Attach the lens rear cap so that the lens contact point does not get scratched.

### Note

- Change lenses where there is not a lot of dirt or dust. Refer to P169 when dirt or dust gets on the lens.
- When you turn the camera off or carry the camera, attach the lens cap to protect the surface of the lens.
- Be careful not to lose the lens cap, the lens rear cap and the body cap.**




## Attaching the Shoulder Strap


- We recommend attaching the shoulder strap when using the camera to prevent it from dropping.

- 1** Pass the shoulder strap through the shoulder strap eyelet on the camera body.


(A): Shoulder strap eyelet

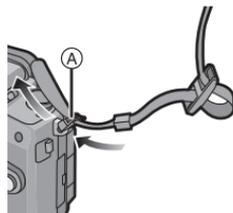

- 2** Pass the end of the shoulder strap through the ring in the direction of the arrow and then pass it through the stopper.

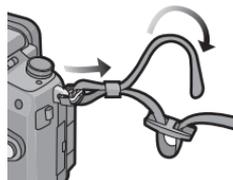


- 3** Pass the end of the shoulder strap through the hole on the other side of the stopper.

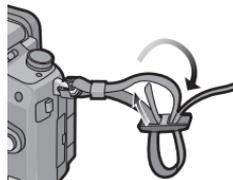

- 4** Pull the other side of the shoulder strap and then check that it will not come out.

- Perform steps **1** to **4** and then attach the other side of the shoulder strap.

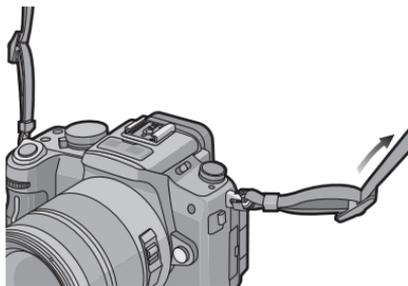

### Note

- Be sure to follow the steps and attach the shoulder strap correctly.
- Check that the shoulder strap is firmly attached to the camera.
- Attach the shoulder strap so that the "LUMIX" LOGO is on the outside.
- Use the shoulder strap around your shoulder.
  - Do not wrap around your neck.
  - It may result in injury or accident.
- Do not leave the shoulder strap where an infant can reach it.
  - It may result in accident by mistakenly wrapping around the neck.


## Attaching the Lens Hood

In bright sunlight or backlight, the lens hood will minimise lens flare and ghosting. The lens hood cuts off excess lighting and improves the picture quality.

- Check that the camera is turned off.
- Close the flash.

**Insert the lens hood into the lens with the short sides at the top and bottom, and turn in the direction of the arrow until it stops.**

- Ⓐ Fitting to the mark.

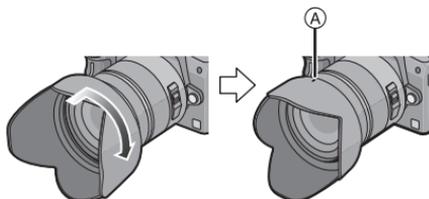

### ■ Temporarily storing the lens hood

**1 Turn the lens hood in the direction of the arrow to detach it.**



**2 Reverse the lens hood and then attach it in the same way as shown previously.**

- Attach the lens cap.
- When temporarily storing the lens hood, check that it is firmly attached and that it does not appear in the picture.



### ⓘ Note

- Hold the short sides of the flower shape lens hood when attaching or detaching it.
- When taking pictures with flash with the lens hood attached, the lower portion of the photo may turn dark (vignetting effect) and the control of the flash may be disabled because the photo flash may be obscured by the lens hood. We recommend detaching the lens hood.
- When using the AF assist lamp in the dark, detach the lens hood.

## Charging the Battery

### ■ About batteries that you can use with this unit


The battery that can be used with this unit is DMW-BLB13E.

It has been found that counterfeit battery packs which look very similar to the genuine product are made available to purchase in some markets. Some of these battery packs are not adequately protected with internal protection to meet the requirements of appropriate safety standards. There is a possibility that these battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack. To ensure that safe products are used we would recommend that a genuine Panasonic battery pack is used.

- Use the dedicated charger and battery.
- This unit has a function that can distinguish useable batteries. Exclusive batteries (DMW-BLB13E) are supported by this function. (Conventional batteries not supported by this function cannot be used)
- The battery is not charged when the camera is shipped. Charge the battery before use.
- Charge the battery with the charger indoors.
- Charge the battery in a temperature between 10 °C to 35 °C (50 °F to 95 °F). (The battery temperature should also be the same.)


### 1 Connect the AC mains lead.

- The battery cannot be charged when the DC cable is connected to the AC adaptor.

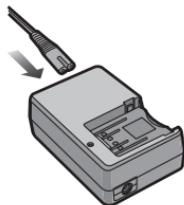


### 2 Attach the battery with attention to the direction of the battery.

- Charging starts when the [CHARGE] indicator (A) lights green.

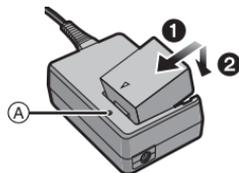

### 3 Detach the battery after charging is completed.

- Charging is complete when the [CHARGE] indicator (A) turns off.

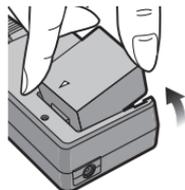

### ■ When the [CHARGE] indicator flashes

- The battery temperature is excessively high or low. The charging time will be longer than normal. Also, charging may not be completed.
- The terminals of the charger or the battery are dirty. In this case, wipe them with a dry cloth.



#### Note

- Do not use any other AC cables except the supplied one.
- Disconnect the charger from the power outlet after the charging is completed.
- The battery becomes warm after using it and during and after charging. The camera also becomes warm during use. This is not a malfunction.
- The battery will be exhausted if left for a long period of time after being charged.
- The battery can be recharged even when it still has some charge left, but it is not recommended that the battery charge be frequently topped up while the battery is fully charged. (The battery has characteristics that will reduce its operating duration and cause the battery to swell up.)
- When the operating time of the camera becomes extremely short even after properly charging the battery, the life of the battery may have expired. Buy a new battery.
- **Do not leave any metal items (such as clips) near the contact areas of the power plug. Otherwise, a fire and/or electric shocks may be caused by short-circuiting or the resulting heat generated.**

## About the Battery (charging/number of recordable pictures)

### ■ Battery indication

The battery indication is displayed on the LCD monitor/Viewfinder.

[It does not appear when you use the camera with the AC adaptor (P25) connected.]



- The indication turns red and blinks if the remaining battery power is exhausted. (The status indicator also blinks) Recharge the battery or replace it with a fully charged battery.

### ■ The battery life

<b>Number of recordable pictures</b>	<b>Approx. 300 pictures</b>	(By CIPA standard in programme AE mode)
<b>Recording time</b>	<b>Approx. 150 min</b>	

### Recording conditions by CIPA standard

- CIPA is an abbreviation of [Camera & Imaging Products Association].
- Temperature: 23 °C (73.4 °F)/Humidity: 50% when LCD monitor is on. \*
- Using a Panasonic SD Memory Card (512 MB).
- Using the supplied battery.
- Use the 14 – 140 mm/F4.0 – 5.8 lens included in DMC-GH1K.
- Starting recording 30 seconds after the camera is turned on. (When the optical image stabilizer function is set to [MODE1].)
- **Recording once every 30 seconds** with full flash every second recording.
- Turning the camera off every 10 recordings and leaving it until the temperature of the battery decreases.

\* The number of recordable pictures decreases in Auto power LCD mode or Power LCD mode. (P35)

The number of recordable pictures varies depending on the recording interval time. If the recording interval time becomes longer, the number of recordable pictures decreases.

[e.g. When recording once every 2 minutes, the number of recordable pictures decreases to about 75.]

When using the viewfinder

Number of recordable pictures	Approx. 320 pictures	(By CIPA standard in programme AE mode)
Recording time	Approx. 160 min	

Playback time when using the LCD monitor

Playback time	Approx. 260 min
---------------	-----------------

The number of recordable pictures and playback time will vary depending on the operating conditions and storing condition of the battery.

#### ■ Charging

Charging time	Approx. 155 min
---------------	-----------------

- The indicated charging time is for when the battery has been discharged completely. The charging time may vary depending on how the battery has been used. The charging time for the battery in hot/cold environments or a battery that has not been used for long time may be longer than normal.

When the charging has been completed successfully, the [CHARGE] indicator turns off. Charging time and **number of recordable pictures** with the optional battery pack (DMW-BLB13E) are the same as above.

#### Note


- The battery may swell and its operating time may become shorter as the number of times it is charged increases. For long term battery use, we recommend you do not frequently charge the battery before it is exhausted.
- The performance of the battery may temporarily deteriorate and the operating time may become shorter in low temperature conditions (e.g. skiing/snowboarding).

## Inserting/Removing the Battery


- Check that this unit is turned off.
- Close the flash.

**1** Slide the release lever in the direction of the arrow (OPEN side) and then open the battery door.

- Always use genuine Panasonic batteries (DMW-BLB13E).
- If you use other batteries, we cannot guarantee the quality of this product.

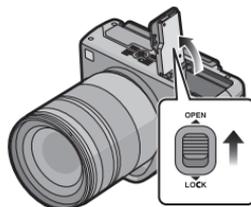

**2** Insert until it is locked by the lever (A) being careful about the direction you insert it. Pull the lever (A) in the direction of the arrow to remove the battery.

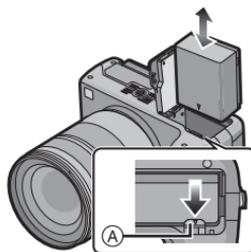

**3** **1:** Close the battery door.

**2:** Slide the release lever in the direction of the arrow (LOCK side) and then close it firmly.



### Note


- Remove the battery after use.
- Do not remove the battery while the power is on as the settings on the camera may not be stored properly.
- The supplied battery is designed only for the camera. Do not use it with any other equipment.
- Before removing the battery, turn the camera off, and wait until the status indicator has gone off completely. (Otherwise, this unit may no longer operate normally and the card itself may be damaged or the recorded pictures may be lost.)

## Using the AC Adaptor

You can use the camera without worrying about battery discharge when it is connected to a PC or a printer if you use the DC cable to connect the camera to the battery charger/AC adaptor and connect the AC mains lead.


- Check that the camera is turned off.
- Close the flash.

### 1 Connect the AC mains lead.

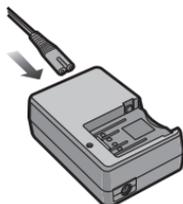

### 2 Connect the DC cable (A).

- Pull open the DC cable cover (1) and then connect the DC cable to the camera body using the same steps as "Inserting/Removing the Battery" (P24). Pull the DC cable through the opening as shown in the illustration and then close the battery door.
- Be careful not to catch the DC cable when closing the battery door.
- You cannot charge the battery if you connect the DC cable.

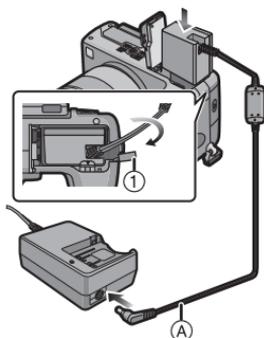


### Note

- Do not use any other AC cables except the supplied one.
- Do not use any other DC cables except the supplied one. If you use other DC cables, it may cause a malfunction.
- The camera becomes warm during use. This is not a malfunction.
- Disconnect the charger/AC adaptor and DC cable when the camera is not in use.
- It is recommended to use a fully charged battery or AC adaptor when recording motion pictures.
- If while recording motion pictures using the AC adaptor the power supply is cut off due to a power cut or if the AC adaptor is disconnected etc., the motion picture being recorded will not be recorded.
- The unit is in the standby condition when the AC adaptor is connected. The primary circuit is always "live" as long as the AC adaptor is connected to an electrical outlet.

## Inserting/Removing the Card (Optional)


- Check that this unit is turned off.
- Close the flash.
- We recommend using a Panasonic card.

**1** Slide the card door to open it.

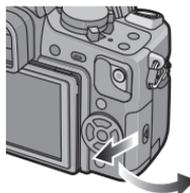

**2** Push it fully until it clicks being careful about the direction you insert it. To remove the card, push the card until it clicks, then pull the card out upright.


- (A): Do not touch the connection terminals of the card.
- The card may be damaged if it is not fully inserted.

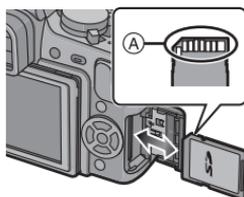

**3** **1**: Close the card door.

**2**: Slide the card door to the end and then close it firmly.

- If the card door cannot be completely closed, remove the card, check its direction and then insert it again.

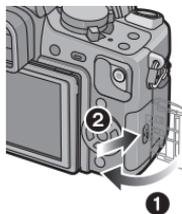

### Note

- Always turn the camera off before opening the card door.
- Before removing the card, turn the camera off, and wait until the status indicator has gone off completely. (Otherwise, this unit may no longer operate normally and the card itself may be damaged or the recorded pictures may be lost.)

## About the Card

### Access to the card

The access indication lights red when pictures are being recorded on the card.



### Card

The following types of cards can be used with this unit.  
(These cards are indicated as **card** in the text.)

Type of card	Characteristics
<b>SD Memory Card (8 MB to 2 GB)</b> (Formatted using the FAT12 or FAT16 format in compliance with the SD standard)	<ul style="list-style-type: none"> <li>Fast recording and writing speed</li> <li>Write-Protect switch (A) provided (When this switch is set to the [LOCK] position, no further data writing, deletion or formatting is possible. The ability to write, delete and format data is restored when the switch is returned to its original position.)</li> </ul> 
<b>SDHC Memory Card (4 GB to 32 GB)*</b> (Formatted using the FAT32 format in compliance with the SD standard)	

- \* The SDHC Memory Card is a memory card standard decided by the SD Association in 2006 for high capacity memory cards more than 2 GB.
- \* You can use an SDHC Memory Card in equipment that is compatible with SDHC Memory Cards however you cannot use an SDHC Memory Card in equipment that is only compatible with SD Memory Cards. (Always read the operating instructions for the equipment being used.)
- You can only use cards with SDHC logo (indicating compliance with the SD standard) if using cards with 4 GB or more capacity.
- It is recommended to use a card with SD Speed Class\* with "Class 6" or higher when recording motion pictures.
- \* SD speed class is the speed standard regarding continuous writing.
- Please confirm the latest information on the following website.  
<http://panasonic.co.jp/pavc/global/cs>  
 (This Site is English only.)

### Note


- **Do not turn off the power or remove the battery, card, or the DC cable (when the AC adaptor is in use), while the access indicator is lit, while writing, reading, or deleting the picture, formatting (P38), etc. Also, do not apply vibration, shock, or static electricity to the unit.**  
**The card or the data on the card may be damaged, and this unit may no longer operate normally.**  
**If operation fails due to vibration, impact or static electricity, perform the operation again.**
- The data on the card may be damaged or lost due to electromagnetic waves, static electricity or breakdown of the camera or the card. We recommend storing important data on a PC etc.
- Do not format the card on your PC or other equipment. Format it on the camera only to ensure proper operation. (P38)
- Keep the Memory Card out of reach of children to prevent swallowing.

## Setting Date/Time (Clock Set)

- The clock is not set when the camera is shipped.

### 1 Turn the camera on.

- (A) [MENU/SET] button

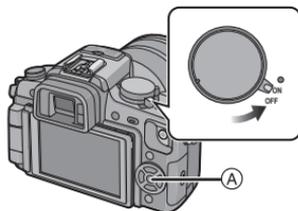


### 2 Press [MENU/SET].



### 3 Press ◀/▶ to select the items (year, month, day, hour, minute, display sequence or time display format), and press ▲/▼ to set.

- (A): Time at the home area  
 (B): Time at the travel destination (P115)  
 [Esc]: Cancel without setting the clock.

- Select either [24HRS] or [AM/PM] for the time display format.
- AM/PM is displayed when [AM/PM] is selected.
- When [AM/PM] is selected as the time display format, midnight is displayed as AM 12:00 and noon is displayed as PM 12:00. This display format is common in the US and elsewhere.

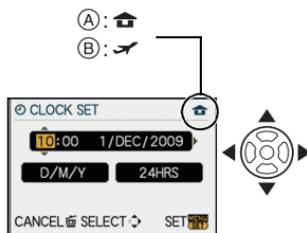

### 4 Press [MENU/SET] to set.

- Turn the camera off after finishing setting the clock. Then turn it on and check that the clock setting is correct.
- When [MENU/SET] has been pressed to complete the settings without the clock having been set, set the clock correctly by following the “Changing the clock setting” procedure below.

## Changing the clock setting

Select [CLOCK SET] in the [SETUP] menu, and press ▶. (P30)

- It can be changed in steps 3 and 4 to set the clock.
- The clock setting is maintained for 3 months using the built-in clock battery even without the battery. (Leave the charged battery in the unit for 24 hours to charge the built-in battery.)



### Note

- The clock is displayed when [DISPLAY] is pressed several times during recording.
- You can set the year from 2000 to 2099.
- If the clock is not set, the correct date cannot be printed when you stamp the date on the pictures with [TEXT STAMP] (P138) or order a photo studio to print the pictures.
- If the clock is set, the correct date can be printed even if the date is not displayed on the screen of the camera.

## Setting the Menu

The camera comes with menus that allow you to set the settings for taking pictures and playing them back just as you like and menus that enable you to have more fun with the camera and use it more easily.

In particular, the [SETUP] menu contains some important settings relating to the camera's clock and power. Check the settings of this menu before proceeding to use the camera.
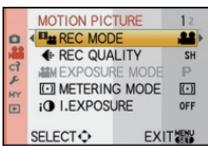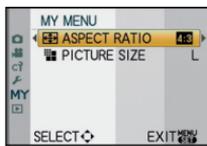
<p><b>[REC] mode menu (P116 to 124)</b></p> <ul style="list-style-type: none"> <li>• This menu lets you set the aspect ratio, number of pixels and other aspects of the pictures you are recording.</li> </ul> 	<p><b>[SETUP] menu (P33 to 38)</b></p> <ul style="list-style-type: none"> <li>• This menu lets you perform the clock settings, select the operating beep tone settings and set other settings which make it easier for you to operate the camera.</li> </ul> 
<p><b>[MOTION PICTURE] mode menu (P125 to 126)</b></p> <ul style="list-style-type: none"> <li>• This menu lets you set the [REC MODE], [REC QUALITY], and other aspects for motion picture recording.</li> </ul> 	<p><b>MY [MY MENU]</b></p> <ul style="list-style-type: none"> <li>• Up to 5 menu items used recently can be memorised. Items used a lot can be recalled easily.</li> </ul> 
<p><b>[CUSTOM MENU] (P126 to 131)</b></p> <ul style="list-style-type: none"> <li>• Operation of the unit, such as displaying of the screen and button operations, can be set up according to your preferences. Also, it is possible to register the modified settings.</li> </ul> 	<p><b>[PLAYBACK] mode menu (P134 to 147)</b></p> <ul style="list-style-type: none"> <li>• This menu lets you make the protection, trimming or print settings (DPOF), etc. of recorded pictures.</li> </ul> 

### Note

- There are functions that cannot be set or used depending on the modes or menu settings being used on the camera due to the specifications.

## Setting menu items


This section describes how to select the [REC] mode menu settings, and the same setting can be used for the [MOTION PICTURE] mode menu, [CUSTOM MENU] menu, [SETUP] menu, [MY MENU] menu and [PLAYBACK] mode menu as well.

- If you set [MENU RESUME] (P131) in the [CUSTOM MENU] menu to [ON], the screen shows the last selected menu item when the camera was turned off.

Example: Setting [I.EXPOSURE] from [OFF] to [HIGH] in the programme AE mode

### 1 Turn the camera on.

- (A) [MENU/SET] button
- (B) Mode dial

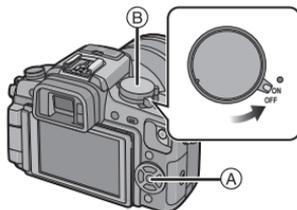

### 2 Set the mode dial to [P].


### 3 Press [MENU/SET] to display the menu.



## Switching to other menus

e.g.: Switching to the [SETUP] menu

### 1 Press ◀.

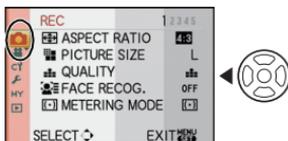

### 2 Press ▼ or rotate the front dial to select the [SETUP] menu icon [⌂].




### 3 Press ▶.

- Select a menu item next and set it.



#### 4 Press ▲/▼ or rotate the front dial to select [I.EXPOSURE].

- Select the item at the very bottom, and press ▼ or rotate the front dial right to move to the next screen.

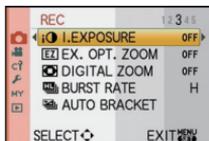

OR



#### 5 Press ► or the front dial.

- Depending on the item, its setting may not appear or it may be displayed in a different way.



OR



#### 6 Press ▲/▼ or rotate the front dial to select [HIGH].



OR



#### 7 Press [MENU/SET] or the front dial to set.



OR



#### 8 Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

## Setting the Quick Menu

By using the quick menu, some of the menu settings can be easily found.

- There are items that cannot be set depending on modes or displayed screen.

**1** Press **[Q.MENU]** to display the quick menu in recording status.

Q.MENU




**2** Press **▲/▼/◀/▶** or rotate the front dial to select the menu item and the setting.

- Menu that can be setup are displayed in orange when selected.
- Setup method is different as following depending on the displayed screen during recording. Refer to P61 about the displayed screen.


**[LCD monitor style]** (LCD monitor style)

- Proceed to step **4** below after selecting the item and settings.

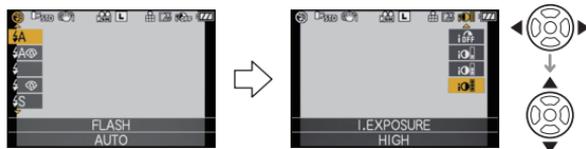

**LCD recording information window in [LCD monitor style]**

- Select the item, press **[MENU/SET]**, and then select the settings.

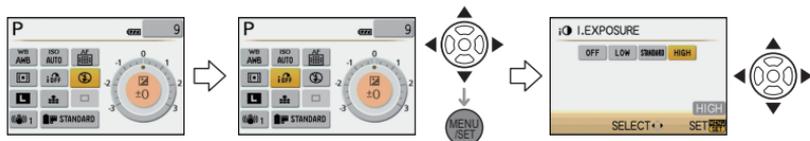

**[Finder style]** (Finder style)

- Select the item, press the front dial, and then select the setting.



**3** Press **[MENU/SET]** or the front dial to set the menu.



or



**4** Press **[Q.MENU]** to close the quick menu.

- You can also press the shutter button halfway to close the quick menu.

Q.MENU



Perform these settings if you need to.

## About the Setup Menu

[CLOCK SET], [ECONOMY] and [AUTO REVIEW] are important items. Check their settings before using them.

- In the Intelligent auto mode, only [CLOCK SET], [WORLD TIME], [BEEP] and [LANGUAGE] can be set.

For details on how to select the [SETUP] menu settings, refer to P30.

 [CLOCK SET]	Setting Date/Time.
---	--------------------

- Refer to P28 for details.

 [WORLD TIME]	Set the time in your home area and travel destination.	
	 [DESTINATION]: Travel destination area	 [HOME]: Your home area

- Refer to P115 for details.

 [TRAVEL DATE]	Set the departure date and the return date of the vacation.	
	[TRAVEL SETUP] [OFF]/[SET]	[LOCATION] [OFF]/[SET]

- Refer to P113 for details.

 [Fn] [Fn BUTTON SET]	Assign [REC] mode menu or [CUSTOM MENU] menu to ▼ button. It is convenient to register functions that are used often.	
	[ASPECT RATIO]/[QUALITY]/[METERING MODE]/ [I.EXPOSURE]/[GUIDE LINE]/[ % REC AREA]/ [REMAINING DISP.]	

- Refer to P116 for details about [REC] mode menu.
- Refer to P126 for details about [CUSTOM MENU].

ECO [ECONOMY]	You can conserve the battery life by setting these menus. Also, it will turn off the LCD monitor automatically when not in use to prevent discharge of the battery.	
	 [POWER SAVE]: The camera is automatically turned off if the camera has not been used for the time selected on the setting.	[OFF]/[1MIN.]/[2MIN.]/[5MIN.]/[10MIN.]
	 [AUTO LCD OFF]: The LCD monitor is automatically turned off if the camera has not been used for the time selected on the setting.	[OFF]/[15SEC.]/[30SEC.]

- Press the shutter button halfway or turn the camera off and on to cancel [POWER SAVE].
- [POWER SAVE] is set to [5MIN.] in the Intelligent auto mode.
- [POWER SAVE] is fixed to [2MIN.] when [AUTO LCD OFF] is set to [15SEC.] or [30SEC.].
- Press any button to turn on the LCD monitor again.
- It is recommended to use this mode with [LVF/LCD AUTO] (P127) in the [CUSTOM MENU] menu is set to [OFF].
- [ECONOMY] does not work in the following cases.
  - When using the AC adaptor
  - When connecting to a PC or a printer
  - When recording or playing back motion pictures
  - During a slide show

 <b>[AUTO REVIEW]</b>	Set the length of time that the picture is displayed after taking it.
	<b>[REVIEW]:</b> <b>[OFF]/[1SEC.]/[3SEC.]/[5SEC.]</b> <b>[HOLD]:</b> The pictures are displayed until shutter button is pressed halfway.
	<b>[ZOOM]:</b> The picture enlarged 4× is displayed. <b>[OFF]/[1SEC.]/[3SEC.]/[5SEC.]</b>

- If [REVIEW] is set to [HOLD], the playback screen display can be switched (P57) during auto review when taking pictures with the drive mode lever set to [□] (P51) or [☺] (P76).
- When [HOLD] has been selected, the zoom time cannot be set.
- The auto review function is activated regardless of its setting when using burst mode (P72) or auto bracket (P74) and when recording still pictures with audio (P124). (Will not enlarge/hold) Also, you cannot set the auto review function.
- If [HIGHLIGHT] (P34) is set to [ON], white saturated areas appear blinking in black and white when the auto review function is activated.
- [AUTO REVIEW] does not work in recording motion pictures.


 <b>[HIGHLIGHT]</b>	When the auto review function is activated or when playing back, white saturated areas appear blinking in black and white.
	<b>[OFF]/[ON]</b>

- If there are any white saturated areas, we recommend compensating the exposure towards negative (P71) referring to the histogram (P64) and then taking the picture again. It may result in a better quality picture.


- There may be white saturated areas if the distance between the camera and the subject is too close when taking pictures with the flash.

If [HIGHLIGHT] is set to [ON] in this case, the area directly illuminated by the photo flash will become white saturated and appear blinking in black and white.

- This does not work while in multi playback (P57), calendar playback (P58), or playback zoom (P58).

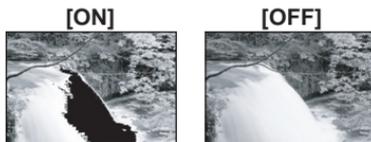

<b>[MONITOR]/ [VIEWFINDER]</b>	Brightness, colour, or red or blue tint of the LCD monitor/ viewfinder is adjusted.
<ul style="list-style-type: none"> <li>Adjust the brightness of the screen with ▲/▼, contrast and saturation with ◀/▶ or the front dial.</li> <li>When [DISPLAY] is pressed in screen shown right, it will switch to the colour adjustment screen. Adjust between red and green with ▲/▼, or between orange and blue with ◀/▶ or the front dial.</li> <li>It will adjust the LCD monitor when the LCD monitor is in use, and the viewfinder when the viewfinder is in use.</li> </ul>	

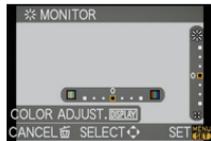

<b>[LCD MODE]</b>	These menu settings make it easier to see the LCD monitor when you are in bright places.  <b>[OFF]</b> <b>[AUTO POWER LCD]:</b> The brightness is adjusted automatically depending on how bright it is around the camera. <b>[POWER LCD]:</b> The LCD monitor becomes brighter and easier to see even when taking pictures outdoors.
-------------------	--

- The brightness of the pictures displayed on the LCD monitor is increased so some subjects may appear differently from actuality on the LCD monitor. However, this does not affect the recorded pictures.
- The LCD monitor automatically returns to normal brightness after 30 seconds when recording in Power LCD mode. Press any button to make the LCD monitor bright again.
- If the screen is difficult to see because of light from the sun etc. shining on it, use your hand or another object to block the light.
- The number of recordable pictures decreases in Auto power LCD and Power LCD modes.
- [AUTO POWER LCD] cannot be selected when playing back pictures.
- [AUTO POWER LCD] is disabled during motion picture recording.

<b>[SCENE MENU]</b>	Set the screen that is displayed when the mode dial is set to , , ,  and .  <b>[OFF]:</b> The recording screen in the currently selected advanced scene mode (P94) or scene mode (P98) appears.  <b>[AUTO]:</b> The advanced scene mode or scene mode menu screen appears.
---------------------	--

<b>[BEEP]</b>	Set the focus confirmation beep, the self-timer beep and the alarm beep.  <b>(Muted)</b> <b>(Low)</b> <b>(High)</b>
---------------	---

<b>[VOLUME]</b>	Adjust the volume of the speaker to any of 7 levels.
-----------------	--

- When you connect the camera to a TV, the volume of the TV speakers does not change.

 <b>[NO.RESET]</b>	Reset the file number of the next recording to 0001.
---	--

- The folder number is updated and the file number starts from 0001. (P156)
- A folder number between 100 and 999 can be assigned.  
When the folder number reaches 999, the number cannot be reset. We recommend formatting the card (P38) after saving the data on a PC or elsewhere.
- To reset the folder number to 100, format the card first and then use this function to reset the file number.  
A reset screen for the folder number will then appear. Select [YES] to reset the folder number.

 <b>[RESET]</b>	The [REC] or [SETUP]/[CUSTOM MENU] menu settings are reset to the initial settings.
--	---

- When the [REC] mode settings are reset, data registered with [FACE RECOG.] will be also reset, too.
- When [SETUP]/[CUSTOM MENU] menu settings are reset, the following settings are also reset. In addition, [FAVORITE] (P136) in [PLAYBACK] mode menu is set to [OFF], and [ROTATE DISP.] (P143) is set to [ON].
  - Film mode (P87)
  - The birthday and name settings for [BABY1]/[BABY2] (P99) and [PET] (P100) in scene mode.
  - The settings of [TRAVEL DATE] (P113) (departure date, return date, location)
  - The [WORLD TIME] (P115) setting.
- The folder number and the clock setting are not changed.

 <b>[USB MODE]</b>	Select the USB communication system after or before connecting the camera to your PC or your printer with the USB connection cable (supplied).
	 <b>[SELECT ON CONNECTION]:</b> Select either [PC] or [PictBridge(PTP)] if you connected the camera to a PC or a printer supporting PictBridge.  <b>[PC]:</b> Set after or before connecting to a PC.  <b>[PictBridge(PTP)]:</b> Set after or before connecting to a printer supporting PictBridge.

- When [PC] is selected, the camera is connected via the “USB Mass Storage” communication system.
- When [PictBridge(PTP)] is selected, the camera is connected via the “PTP (Picture Transfer Protocol)” communication system.

 <b>[VIDEO OUT]</b>	Set to match the colour television system in each country.
	<b>[NTSC]:</b> Video output is set to NTSC system. <b>[PAL]:</b> Video output is set to PAL system.

- This will operate when the AV cable or HDMI mini cable (optional) is connected.

 <b>[TV ASPECT]</b>	Set to match the type of TV.
	<b>[16:9]:</b> When connecting to a 16:9 screen TV. <b>[4:3]:</b> When connecting to a 4:3 screen TV.

- This will work when the AV cable is connected.

HDMI [HDMI MODE]	Set the format for the HDMI output when playing back on the HDMI compatible high definition TV connected with this unit using the HDMI mini cable (optional).
	<p><b>[AUTO]:</b> The output resolution is automatically set based on the information from the connected TV.</p> <p><b>[1080i]:</b> The interlace method with 1080 available scan lines is used for output.</p> <p><b>[720p]:</b> The progressive method with 720 available scan lines is used for output.</p> <p><b>[576p]<sup>*1</sup>/[480p]<sup>*2</sup>:</b> The progressive method with 576<sup>*1</sup>/480<sup>*2</sup> available scan lines is used for output.</p>

\*1 When [VIDEO OUT] is set to [PAL]

\*2 When [VIDEO OUT] is set to [NTSC]

• **Interlace method/progressive method**

i= interlace scanning is scanning the screen with half of the effective scanning lines every 1/50 seconds, where p= progressive scanning is a high density image signal that is scanning the screen with all the effective scanning lines every 1/50 seconds.

The [HDMI] terminal on this unit is compatible with high definition output [1080i]. It is necessary to have a compatible TV to enjoy progressive and high definition images.

- If the images are not output on the TV when the setting is [AUTO], match with the image format your TV can display, and select number of effective scanning lines. (Please read the operating instructions for the TV.)
- This will work when the HDMI mini cable (optional) is connected.
- Refer to P149 for details.

VIERA Link [VIERA Link]	Setup so this unit can be controlled by the remote control of the VIERA by automatically coupling this unit with the VIERA Link compatible equipment using HDMI mini cable (optional).
	<p><b>[OFF]:</b> Operation is performed with the buttons on this unit.</p> <p><b>[ON]:</b> Remote control operation of the VIERA Link compatible equipment is enabled. (Not all operations are possible) Button operation of the main unit will be limited.</p>

• This will work when the HDMI mini cable (optional) is connected.

• Refer to P150 for details.

Ver. [VERSION DISP.]	This enables the firmware versions of the camera and lens to be checked.
----------------------	--

- [-. -] is displayed as the lens firmware when the lens is not mounted.

 [LANGUAGE]	Set the language displayed on the screen.
	[ENGLISH]/[DEUTSCH]/[FRANÇAIS]/[ESPAÑOL]/[ITALIANO]/ [日本語]

- If you set a different language by mistake, select  from the menu icons to set the desired language.

 [FORMAT]	The card is formatted. <b>Formatting irretrievably deletes all the data so check the data carefully before formatting.</b>
--	---

- Use a battery with sufficient battery power or the AC adaptor (P25) when formatting. Do not turn the camera off during formatting.
- If the card has been formatted on a PC or other equipment, format it on the camera again.
- If the card cannot be formatted, consult your nearest Service Centre.

## About how to hold and LCD monitor/Viewfinder

- The [LVF/LCD AUTO] (P127) is set to [ON] initially. It will switch to viewfinder display and LCD monitor will be turned off when there is a hand or object near the eye sensor.

### Tips for taking good pictures


- Ⓐ AF assist lamp
- Hold the camera gently with both hands, keep your arms still at your side and stand with your feet slightly apart.
- Be careful not to move the camera when you press the shutter button.
- Do not cover the flash or the AF assist lamp with your fingers or other objects.
- Do not touch the front of the lens. (P170)
- When taking pictures, make sure your footing is stable and there is no danger of colliding with another person, a ball etc.



### LCD Monitor


This is convenient as it allows you to take pictures from various angles by adjusting the LCD monitor. (P14)

#### ■ Taking pictures at a normal angle

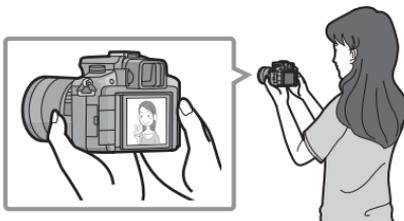


#### ■ Taking pictures at a high angle

Open the LCD monitor 180° toward you, and adjust the angle.

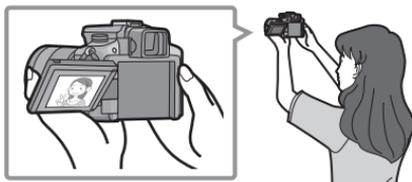

#### ■ Taking pictures at a low angle

Open the LCD monitor 180° toward you, and adjust the angle.

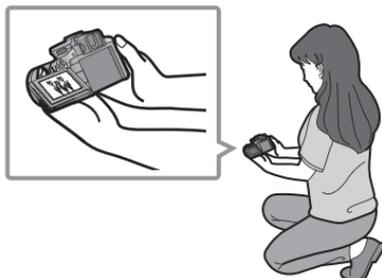


- This is convenient when there is someone in front of you and you cannot get close to the subject.
- This is convenient when taking pictures of flowers etc. that are in a low position.

### ■ Taking pictures with the camera held vertically


Open the LCD monitor and rotate it to an angle that makes it easy to see.

- Do not cover the AF assist lamp (P11) with your fingers or other objects.


### Taking pictures at a normal angle

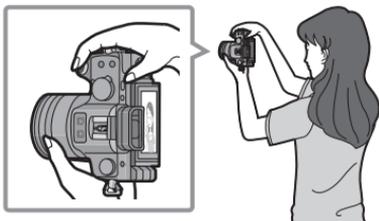

### Taking pictures at a high angle

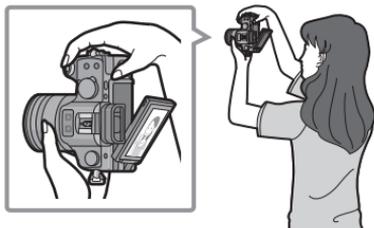

### Taking pictures at a low angle

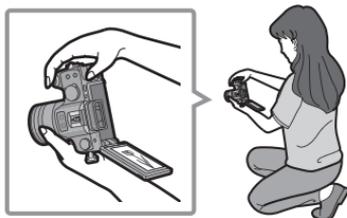

### Direction detection function

Pictures recorded with the camera held vertically are played back vertically (rotated). (Only when [ROTATE DISP.] (P143) is set to [ON])

- The direction detection function may not operate correctly if recording is performed with the camera aimed up or down.
- Motion pictures taken with the camera held vertically are not displayed vertically.
- You can only use the direction detection function when using a compatible lens. (P15)  
(Refer to the catalogue, website etc. for compatible lenses.)

## Switching the LCD monitor/Viewfinder

### ■ About the eye sensor automatic switching

Eye sensor is active when the [LVF/LCD AUTO] (P127) in the [CUSTOM MENU] menu is set to [ON], switching automatically to viewfinder display when an eye or object is moved closer to the viewfinder, and to LCD monitor display when it is moved away.

#### Ⓐ AF assist lamp

- When the LCD monitor turns on, the Viewfinder turns off (and vice versa).
- Eye sensor might not work properly depending on the shape of your eyeglasses, the way you hold the camera, or bright light shining around the eyepiece. Switch manually in that case.
- The eye sensor automatic switching works when the sensor recognises things that come closer to it, therefore it is recommended that [LVF/LCD AUTO] be set to [OFF] in [ECONOMY] (P33).
- The eye sensor is disabled during motion picture playback.




### Press [LVF/LCD] to switch the monitor screen.

- It is possible to switch between the LCD (LCD monitor) and LVF (viewfinder) display manually.

"LVF" is abbreviation of "Live View Finder" and it represents the viewfinder display.

- Ⓑ Viewfinder
- Ⓒ Eye sensor
- Ⓓ LCD monitor
- Ⓔ [LVF/LCD] button
- Ⓕ Eye cup

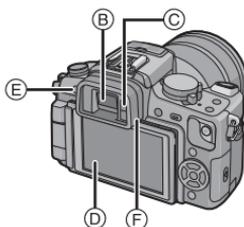



### ■ Diopter adjustment

Adjust the diopter to suit your vision so that you can see the Viewfinder clearly.

Look at the display on the Viewfinder and rotate the diopter adjustment dial to where the screen is clearest.

#### 📌 Note

- The eye cup cannot be removed. Please read P169 for the cleaning and care.

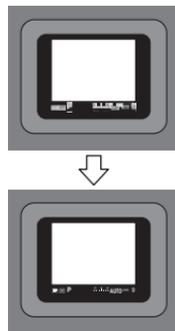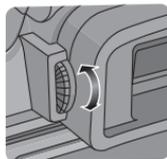


## Mode switching

## Selecting the [REC] mode, and record still picture or motion picture

### 1 Turn the camera on.

- The status indicator ② lights when you turn this unit on ①.
- Make sure the drive mode lever is set to [□].

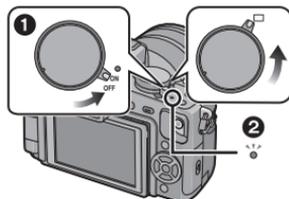

### 2 Switching the mode by rotating the mode dial.

Align a desired mode with part ①.

- Rotate the mode dial slowly and surely to adjust to each mode. (The mode dial rotates 360°)



#### ■ Basic

##### **iA** Intelligent auto mode (P45)

The subjects are recorded using settings automatically selected by the camera.

##### **P** Programme AE mode (P51)

The subjects are recorded using your own settings.

## ■ Advanced

### **Aperture-priority AE mode (P90)**

The shutter speed is automatically determined by the aperture value you set.

### **Shutter-priority AE mode (P90)**

The aperture value is automatically determined by the shutter speed you set.

### **Manual exposure mode (P91)**

The exposure is adjusted by the aperture value and the shutter speed which are manually adjusted.

### **Creative motion picture mode (P108)**

Record motion picture with manual settings.

### **Custom mode (P102)**

Use this mode to take pictures with previously registered settings.

### **Scene mode (P98)**

This allows you to take pictures that match the scene being recorded.

### **My colour mode (P100)**

Easily check the colour of light, brightness, and vividness of colour when the picture is taken.

## ■ Advanced scene mode

### **Portrait mode (P95)**

Use this mode to take pictures of people.

### **Scenery mode (P95)**

Use this mode to take pictures of scenery.

### **Sports mode (P96)**

Use this mode to take pictures of sporting events, etc.

### **Close-up mode (P96)**

Use this mode to take picture of close-by subject.


### **Night portrait mode (P97)**

Use this mode to take pictures of night scenes and people with night time scenery.

### 3 Set the focus mode dial to [AFS] or [AFC].

- (A) Shutter button
- (B) Motion picture button
- (C) [ ] button

• Refer to P52 for [AFS] and [AFC].

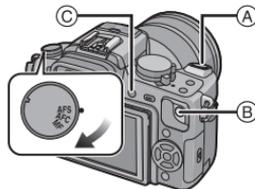

## Taking the still picture

### 1 Press the shutter button halfway to focus.



### 2 Press the shutter button fully (push it in further), and take the picture.



■ For more details, refer to the explanation of each recording mode.

## Recording the motion picture

### 1 Press the motion picture button to start the recording.



### 2 Press the motion picture button again to stop the recording.



■ Recording of motion picture appropriate for each mode is possible.  
For more details, refer to “Taking motion pictures using the automatic function” (P48), “Recording Motion Picture” (P103).

## Playback the recorded still pictures or motion picture

### 1 Press [ ].

### 2 Press ◀/▶ to select the picture.

■ For more details, refer to “Playing back Pictures” (P56), “Playing Back Motion Pictures/Pictures with Audio” (P132).

[REC] mode: **IA**

## Taking pictures using the automatic function

**IA**: Intelligent Auto Mode


The camera will set the most appropriate settings to match the subject and the recording conditions so we recommend this mode for beginners or those who want to leave the settings to the camera and take pictures easily.

- The following functions are activated automatically.
  - Scene detection/[D.RED-EYE]/Face detection/Intelligent ISO sensitivity control/[I.EXPOSURE]/[LONG SHTR NR]/[QUICK AF]/[FOCUS PRIORITY]/Backlight Compensation

**1** Set the mode dial to **IA**.

**2** Set the focus mode dial to **[AFS]** or **[AFC]**.

- Refer to P52 for [AFS] and [AFC].

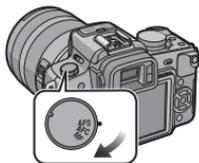

**3** Press the shutter button halfway to focus.

- The focus indication ① (green) lights when the subject is focused.
- The AF area ② is displayed around the subject's face by the face detection function. In other cases, it is displayed at the point on the subject which is in focus.
- The focus indication blinks when the subject is not focused. In this case, a picture is not taken. Press the shutter button halfway to focus on the subject again.
- The focus range is different depending on used lens.
  - When 14–140 mm/F4.0–5.8 lens included in DMC-GH1K is used: 0.5 m (1.64 feet) to ∞



**4** Press the shutter button fully (push it in further), and take the picture.

- A picture is not taken until the subject is brought into focus.
- The access indication (P27) lights red when pictures are being recorded on the card.



- When taking pictures using the flash (P65)
- When taking pictures using the zoom (P55)
- When taking pictures with manual focus (P80)

## Scene detection

When the camera identifies the optimum scene, the icon of the scene concerned is displayed in blue for 2 seconds, after which its colour changes to the usual red.

<b>iA</b> →		[i- PORTRAIT]	
		[i- SCENERY]	
		[i- CLOSE-UP]	
		[i- NIGHT PORTRAIT]	• Only when [  ] is selected
		[i- NIGHT SCENERY]	• Only when [  ] is selected
		[i- BABY]*	

- [**iA**] is set if none of the scenes are applicable, and the standard settings are set.
- If a tripod is used, for instance, and the camera has judged that camera shake is minimal when the scene mode has been identified as [], the shutter speed will be slower than normal. Take care not to move the camera while taking pictures.
- An optimum scene for the specified subject will be chosen when set to AF tracking (P47).
- When [FACE RECOG.] is set to [ON], and the face similar to the registered face is detected, [R] is displayed in the top right of [, , and ].
- \* When [FACE RECOG.] is set to [ON], [] will be displayed for birthdays of registered faces already set only when the face of a person 3 years old or younger is detected.

### ■ Face detection

When [, , or ] is selected, the camera automatically detects a person's face, and it will adjust the focus and exposure. (P78)

#### Note

- Due to conditions such as the ones below, a different scene may be identified for the same subject.
  - Subject conditions: When the face is bright or dark, The size of the subject, The distance to the subject, The contrast of the subject, When the subject is moving
  - Recording conditions: Sunset, Sunrise, Under low brightness conditions, When the camera is shaken, When zoom is used
- To take pictures in an intended scene, it is recommended that you take pictures in the appropriate recording mode.



### ■ The Backlight Compensation

Backlight refers to when light comes from the back of a subject.

In this case, the subject will become dark, so this function compensates the backlight by brightening the whole of the picture automatically.

Backlight compensation is automatically applied in Intelligent auto mode.

## Face Recognition

Face of the person that is taken often can be registered along with information such as name and birthday.

When a picture is taken with [FACE RECOG.] turned [ON], it will search for the face similar to the registered face, setting the focus and exposure preferentially.

It is also possible, during face recognition, to make the camera remember people's faces, to detect faces that have been taken more often than others, and to display the face recognition registration screen of that face. (P110)



### Note

- [FACE RECOG.] will find a face similar to the registered face, and does not guarantee secure recognition of a person.
- Faces with similar distinctive features such as those of parents and children or siblings may not be correctly recognised.
- Face Recognition may take more time to select and recognise distinctive facial features than regular face detection.

## AF Tracking Function

It is possible to set the focus and exposure to the specified subject. Focus and exposure will keep following the subject automatically even if it moves.

### 1 Press ◀.

- [AF-ON] is displayed in the lower left of the screen.
- AF Tracking frame is displayed in the centre of the screen.
- Press ◀ again to cancel.



### 2 Place the subject in the Tracking frame, and press the shutter button halfway to lock the subject.

- AF area will turn green when the camera detects the subject.
- AF tracking frame will turn yellow when you release the shutter button and the optimum scene for the locked subject will be identified.
- Press ◀ to cancel.



### Note

- [FACE RECOG.] does not work during AF tracking.
- Please read the Note regarding the AF tracking on P78.

## Compensating the Exposure

You can compensate the exposure.  
Refer to P71 for details.

### 1 Press the front dial to switch to exposure compensation operation.

### 2 Rotate the front dial.

- The exposure compensation value appears on the lower portion of the screen.
- Select [0] to return to the original exposure.



## About the flash

- **Open the flash when the flash is to be used. (P65)**

- [iA], [iA], or [iA] will appear depending on the type and brightness of the subject.
- Flash is activated twice. Especially with [iA] or [iA], digital red-eye reduction (P66) is executed, and the time until the second flash is longer, so subject should not move until the second flash is activated.
- Flash modes cannot be switched using the menu in the Intelligent auto mode.

## Taking motion pictures using the automatic function

It is possible to take motion pictures matching the subjects and conditions with intelligent auto mode.

- 1 Perform steps 1 and 2 on page 45.
- 2 Start recording by pressing the motion picture button.
- 3 Stop the recording by pressing the motion picture button again.



- Refer to P103 for details about recording motion pictures.

### ■ Scene detection

When the camera identifies the optimum scene in recording motion pictures, the icon of the scene concerned is displayed in blue for 2 seconds, after which its colour changes to the usual red.

iA →	[iA]	[i- PORTRAIT]
	[iA]	[i- SCENERY]
	[iA]	[i- LOW LIGHT]
	[iA]	[i- CLOSE-UP]

- [iA] is set if none of the scenes are applicable, and the standard settings are set.

### ■ Face detection

When [iA] is selected, the camera automatically detects a person's face, and it will adjust the focus and exposure (P78).

### ■ The Backlight Compensation

Backlight refers to when light comes from the back of a subject.

In this case, the subject will become dark, so this function compensates the backlight by brightening the whole of the picture automatically.

Backlight Compensation will work automatically when a face is recognised with the [iA].

### Note

- Due to conditions, a different scene may be identified for the same subject. Please read the Note regarding the Scene detection (P46) for details.
- Functions enabled for motion picture recording are different to those enabled for still picture recording.

## Settings in Intelligent auto mode

- Only the following functions can be set in this mode.

### [REC] mode menu

- [ASPECT RATIO] (P116)/[PICTURE SIZE] (P117)/[QUALITY] (P118)/[FACE RECOG.] (P118)/[STABILIZER]\*<sup>1</sup> (P119)

\*1 Only [MODE1] or [MODE2] can be set.

### [MOTION PICTURE] mode menu

- [REC MODE] (P105)/[REC QUALITY]\*<sup>2</sup> (P105)/[WIND CUT] (P107)

\*2 [] for [MOTION JPEG] cannot be set.

### [CUSTOM MENU] menu

- [CUST. SET MEM.] (P102)/[LCD INFO.DISP.] (P126)/[GUIDE LINE] (P127)/[REMAINING DISP.] (P130)

### [SETUP] menu

- [CLOCK SET]/[WORLD TIME]/[BEEP]/[LANGUAGE]

- Only [STANDARD] and [STANDARD] () in film mode (P87) can be selected.

- In recording still pictures, the settings of the following items are fixed.

Item	Settings
[ECONOMY] ([POWER SAVE]) (P33)	[5MIN.]
Flash (P65)	 
[FLASH SYNCHRO] (P70)	[1ST]
[BURST RATE] (P72)	[H] (High speed)
[AUTO BRACKET] (P74)	[STEP]: [3·1/3] [SEQUENCE]: [0/-/+]
[SELF-TIMER] (P76)	 <sub>10</sub>
[AF MODE] (P77)	 (Set to [  ] when a face cannot be detected)
[WHITE BALANCE] (P83)	[AWB]
[SENSITIVITY] (P86)	 ISO (Intelligent ISO) (The maximum ISO sensitivity: ISO800)
[METERING MODE] (P119)	[  ]
[D.RED-EYE] (P120)	[ON]
[I.EXPOSURE] (P121)	[STANDARD]
[COLOR SPACE] (P122)	[sRGB]
[LONG SHTR NR] (P123)	[ON]
[PRE AF] (P128)	 AF
[FOCUS PRIORITY] (P128)	[ON]
[AF ASSIST LAMP] (P129)	[ON]

- In recording motion pictures, the settings of the following items are fixed.

Item	Settings
[AF MODE] (P77)	 (This mode is set to Multi auto focus mode for motion pictures when a face cannot be detected.)
[WHITE BALANCE] (P83)	[AWB]
[SENSITIVITY] (P86)	[AUTO] (The maximum ISO sensitivity: ISO1600)
[METERING MODE] (P119)	
[STABILIZER] (P119)	[MODE1]
[I.EXPOSURE] (P121)	[STANDARD]

- The following functions cannot be used.
  - [AUTO LCD OFF] of [ECONOMY]/[HIGHLIGHT]/AF/AE lock/White balance fine adjustment/White balance bracket/Multi film bracket/Flash output adjustment/[EX. OPT. ZOOM]/[DIGITAL ZOOM]/[ISO LIMIT SET]/[AUDIO REC.]/[AF/AE LOCK]/[AF/AE LOCK HOLD]/[DIRECT AF AREA]/[SHOOT W/O LENS]
- During motion picture recording, the functions disabled in other recording modes are also disabled. For details, refer to the explanations for each mode.
- The other items on the [SETUP] menu and [CUSTOM MENU] menu can be set in a mode such as the programme AE mode. What is set will be reflected in the Intelligent auto mode.

[REC] mode: **P**

## Taking pictures with your favourite settings

**(P: Programme AE mode)**


The camera automatically sets the shutter speed and the aperture value according to the brightness of the subject.

You can take pictures with greater freedom by changing various settings in [REC] menu.

- Set the drive mode lever to [□].

### 1 Set the mode dial to **[P]**.

- To change the setting while taking pictures, refer to “Using the [REC] Mode Menu” (P116) or “Using the [CUSTOM MENU]” (P126).

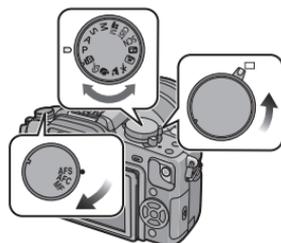

### 2 Set the focus mode dial to **[AFS]** or **[AFC]**.

- Refer to P52 for [AFS] and [AFC].

### 3 Press the shutter button halfway to focus.

- The focus indication (green) lights when the subject is focused.
- The focus indication blinks when the subject is not focused. In this case, a picture is not taken. Press the shutter button halfway to focus on the subject again.
- The focus range is different depending on used lens.
  - When 14–140 mm/F4.0–5.8 lens included in DMC-GH1K is used: 0.5 m (1.64 feet) to ∞
- If the [SENSITIVITY] is set to [ISO100] and the aperture value is set to F4.0 (when 14–140 mm/F4.0–5.8 lens included in DMC-GH1K is attached), the shutter speed is automatically set between about 30 seconds and 1/4000th of a second.



### 4 Press the halfway pressed shutter button fully to take a picture.

- A picture is not taken until the subject is brought into focus.
- If you want to press the shutter button fully to take a picture even when the subject is not focused, set [FOCUS PRIORITY] in the [CUSTOM MENU] menu to [OFF]. (P128)
- The access indication lights (P27) red when pictures are being recorded on the card.




- To adjust the exposure and take pictures at times when the image appears too dark (P71)
- To adjust the colours and take pictures at times when the image appears too red (P83)
- When recording motion pictures (P103)

## Fix the focus by pressing the shutter button halfway (AFS)

### Set the focus mode dial to [AFS].

- “AFS” is an abbreviation of “Auto Focus Single”. The focus is fixed when you press the shutter button halfway.
- Normally use the [AFS].
- Focus during the burst is fixed at the first picture. Refer to P72 for details.
- When recording motion pictures, the focus is continuously adjusted for both [AFS] and [AFC].

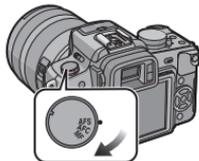


## Continuously focusing on a subject (AFC)

This mode allows you to compose a picture more easily by continuously focusing on the movement of the subject while the shutter button is pressed halfway.

When taking pictures of a moving subject, the camera predicts the movement of the subject and focuses on it. (motion prediction)

### Set the focus mode dial to [AFC].


- “AFC” is an abbreviation of “Auto Focus Continuous”. The camera is continuously focusing on the subject while the shutter button is pressed halfway.
- It may take time to focus on the subject if you rotate the zoom ring from Wide to Tele or suddenly change the subject from a distant one to a nearby one.
- Focusing will continue even after the shutter button is pressed during the burst. Refer to P72 for details.
- Set the [PRE AF] of [CUSTOM MENU] menu item (P128) when you would like to set focus before pressing the shutter button halfway.
- Focus sound will not go off in [AFC] even if the subject comes into focus. Also, AF area will not be displayed if the AF mode is set to [AF-ON].
- When brightness is not enough, the mode will turn to [AFS] and in that case the AF area will be displayed and the focus sound will beep when the subject comes into focus.
- Press the shutter button halfway again when it is difficult to focus on the subject.

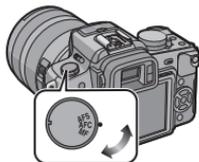

## Take a picture with manual focus (MF)

### Set the focus mode dial to [MF].

- For details, refer to P80.

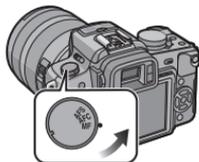

## Focusing

Align the subject to the screen, and then press the shutter button halfway.



Focus	When the subject is focused	When the subject is not focused
Focus indication	On	Blinks
AF area	Green	—
Sound	Beeps 2 times	—

- (A) Focus indication
- (B) AF area (normal)
- (C) AF area (when using the digital zoom or when it is dark)
- (D) Aperture value\*
- (E) Shutter speed\*
- (F) ISO sensitivity

\* It will flash in red when appropriate exposure is not achieved.  
(Except when flash is activated)

- When the AF mode is set to [AF-ON], and multiple AF areas (up to 23 areas) have turned on, all the AF areas that have turned on are focused. If you would like to take a picture focused to certain area, switch the AF mode to [AF-ON]. (P77)
- Focus sound will not beep if the focus mode is set to [AFC]. Also, the AF area will not be displayed if the AF mode is set to [AF-ON].

## When the subject is not in focus

If the subject is not in the centre of composition when the AF mode is set to [AF-ON], it is possible to move the AF area. (P79)

### ■ Take picture with different focus modes depending on the subject (P77)

### ■ Subjects and recording conditions which are difficult to focus

- Fast-moving subjects, extremely bright subjects or subjects without contrast
- When recording subjects through windows or near shiny objects
- When it is dark or when jitter occurs
- When the camera is too close to the subject or when taking a picture of both distant and near subjects


## Preventing jitter (camera shake)

When the jitter alert [JITTER] appears, use [STABILIZER] (P119), a tripod, the self-timer (P76) or the remote shutter (DMW-RSL1; optional) (P163).

- Shutter speed will be slower particularly in the following cases. Keep the camera still from the moment the shutter button is pressed until the picture appears on the screen. We recommend using a tripod.
  - Slow sync.
  - Slow sync./Red-eye reduction
  - [NIGHT PORTRAIT] and [NIGHT SCENERY] in the advanced scene mode (P94)
  - In [PARTY] in scene mode (P98)
  - When you set to a slow shutter speed

## Programme shift

In programme AE mode, you can change the preset aperture value and shutter speed without changing the exposure. This is called programme shift. You can make the background more blurred by decreasing the aperture value or record a moving subject more dynamically by slowing the shutter speed when taking a picture in programme AE mode.

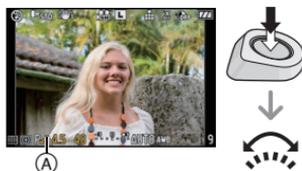

**1 Press the shutter button halfway and display the aperture value and shutter speed value on the screen.**

**2 While the values are displayed (about 10 seconds), perform the programme shift by rotating the front dial.**

- It will switch between programme shift operation and exposure compensation operation (P71) every time the front dial is pressed while the values are displayed.
- The programme shift indication (A) appears on the screen when programme shift is activated.
- To cancel programme shift, turn the camera off or rotate the front dial until the programme shift indication disappears.


### ■ Example of programme shift

(When 14–140 mm/F4.0–5.8 lens included in DMC-GH1K is used)

(A): Aperture value

(B): Shutter speed

- Programme shift amount
- Programme shift line chart
- Programme shift limit

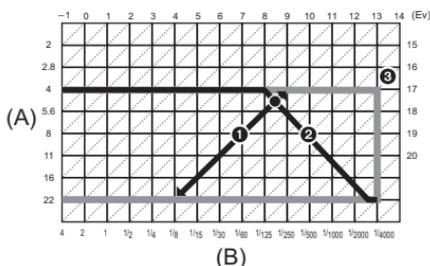

### Note

- How the exposure compensation is switched can be changed by [EXPO. SETTINGS] (P129) in the [CUSTOM MENU] menu.
- If the exposure is not adequate when the shutter button is pressed halfway, the aperture value and shutter speed turn red and blink.
- Programme shift is cancelled and the camera returns to normal programme AE mode if more than 10 seconds pass after programme shift is activated. However, the programme shift setting is memorised.
- Depending on the brightness of the subject, programme shift may not be activated.
- Programme shift is not possible when the [SENSITIVITY] is set to [ISO].

[REC] mode:

## Taking Pictures with the Zoom

### Using the Optical Zoom/Using the Extra Optical Zoom (EZ)/ Using the Digital Zoom

You can zoom-in to make people and objects appear closer or zoom-out to record landscapes in wide angle.

**To make subjects appear closer use (Tele)**

**Rotate the zoom ring towards Tele. (P13)**

**To make subjects appear further away use (Wide)**

**Rotate the zoom ring towards Wide. (P13)**

To enlarge further, set the [EX. OPT. ZOOM] in the [REC] mode menu to [ON], or set the [DIGITAL ZOOM] to [2×] or [4×] for further enlargement.

When the [EX. OPT. ZOOM] (max. 2 times) is used, set the aspect ratio (**4:3** / **3:2** / **16:9** / **1:1**) to numbers of recordable pixels other than [L].

#### ■ Types of zooms

(When 14–140 mm/F4.0–5.8 lens included in DMC-GH1K is used)

Feature	Optical zoom	Extra optical zoom (EZ)	Digital zoom
Focus range/ Maximum magnification	14 mm to 140 mm (28 mm to 280 mm)*1	2×*2 (54 mm to 546 mm)*1	40× [including optical zoom 10×] 80× [including extra optical zoom 2×]
Picture quality	No deterioration	No deterioration	The higher the magnification level, the greater the deterioration.
Conditions	None	Set the [EX. OPT. ZOOM] in [REC] mode menu (P121) to [ON], and then select number of recordable pixels with [EZ] (P117)	[DIGITAL ZOOM] (P121) on the [REC] mode menu is set to [2×] or [4×].

\*1 This is the equivalent value for a 35 mm film camera.

\*2 The magnification level differs depending on [PICTURE SIZE] and [ASPECT RATIO] setting.

#### ■ Extra optical zoom mechanism

Example: When it is set to [SEZ] (equal to 3.1 million pixels), it will take the picture using the 3.1 million pixels in the centre out of the 12 million pixels of the imaging device, resulting to be more of a telephoto picture.

#### Note

- “EZ” is an abbreviation of “Extra optical Zoom”.
- If you use the zoom function after focusing on the subject, focus on the subject again.
- When using the digital zoom, [STABILIZER] may not be effective.
- When using the digital zoom, we recommend using a tripod and the self-timer (P76) for taking pictures.

- The [AF MODE] is fixed to [ ] when using the digital zoom.
- The extra optical zoom cannot be used in the following cases.
  - In Intelligent auto mode
  - In Creative motion picture mode
  - When recording motion pictures
  - When [QUALITY] is set to [RAW<sup>1</sup>], [RAW<sup>2</sup>] or [RAW]
- [DIGITAL ZOOM] cannot be used in the following cases.
  - In Intelligent auto mode
  - In advanced scene mode
  - In scene mode
  - When [ISO] is set
  - When [QUALITY] is set to [RAW<sup>1</sup>], [RAW<sup>2</sup>] or [RAW]

## Playing back Pictures

**1** Press [ ].

(A) [ ] button



**2** Press ◀/▶ to select the picture.

◀: Play back the previous picture

▶: Play back the next picture

• Speed of picture forwarding/rewinding changes depending on the playback status.

• If you press and hold ◀/▶, you can play back the pictures in succession.



### ■ To finish playback

Press [ ] again, press the motion picture button or press the shutter button halfway.

### Note


- This camera complies with the DCF standard “Design rule for Camera File system” established by JEITA “Japan Electronics and Information Technology Industries Association” and with Exif “Exchangeable Image File Format”. Files which do not comply with the DCF standard cannot be played back.

## Changing the Information Displayed on the playback screen

Press **[DISPLAY]** to switch the monitor screen.

Ⓐ **[DISPLAY]** button

- When the menu screen appears, the **[DISPLAY]** button is not activated. During playback zoom (P58), while playing back motion pictures (P132) and during a slide show (P134), you can only select “Normal display Ⓑ” or “No display Ⓕ”.
- Refer to P64 for information about the histogram Ⓓ.

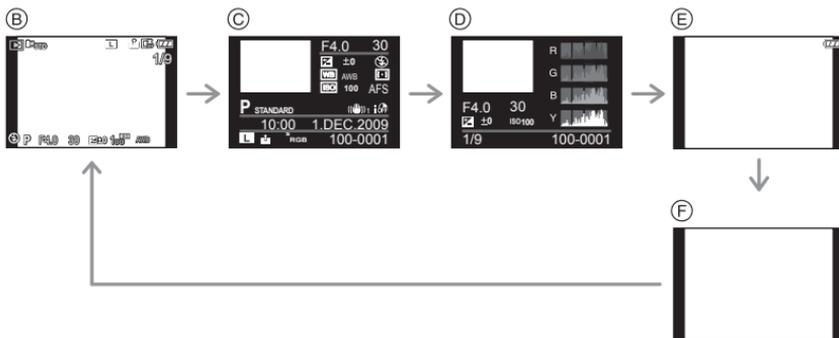

Ⓑ Normal display

Ⓒ Detailed information display

Ⓓ Histogram display

Ⓔ Highlight display\*

Ⓕ No display

\* This is displayed if **[HIGHLIGHT]** (P34) in the **[SETUP]** menu is set to **[ON]**.

## Displaying Multiple Screens (Multi Playback)

**Rotate the front dial left.**

1 screen → 12 screens → 30 screens → Calendar screen display

Ⓐ Number of the selected picture and the total number of recorded pictures

- Rotate the front dial right to return to the previous screen.
- Pictures are not rotated for display.

■ **To return to normal playback**

**1** Press **▲/▼/◀/▶** to select a picture.

- An icon will be displayed depending on the recorded picture and the settings.

**2** Press **[MENU/SET]** or the front dial.


- The picture that was selected will appear.



## Displaying Pictures by Recording Date (Calendar Playback)

You can display pictures by recording date.

- 1 Rotate the front dial left to display the calendar screen.

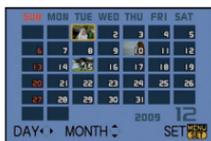

- 2 Press ▲/▼/◀/▶ to select the date to be played back.

▲/▼: Select the month

◀/▶: Select the date

- If there were no pictures recorded during a month, the month is not displayed.

- 3 Press [MENU/SET] or the front dial to display the pictures that were recorded on the selected date.

- Rotate the front dial left to return to the calendar screen display.



- 4 Press ▲/▼/◀/▶ to select a picture and then press [MENU/SET] or the front dial.

- The picture that was selected will appear.

### Note

- The recording date of the picture selected in the playback screen becomes the date selected when the calendar screen is first displayed.
- If there are multiple pictures with the same recording date, the first picture recorded on that day is displayed.
- You can display the calendar between January 2000 and December 2009.
- If the date is not set in the camera, the recording date is set as the 1st January, 2009.
- If you take pictures after setting the travel destination in [WORLD TIME], the pictures are displayed by the dates at the travel destination in calendar playback.

## Using the Playback Zoom

### Rotate the front dial right.

1× → 2× → 4× → 8× → 16×

- When you rotate the front dial left after enlarging the picture, the magnification becomes lower.
- When you change the magnification, the zoom position indication (A) appears for about 1 second, and the position of the enlarged section can be moved by pressing ▲/▼/◀/▶.
- The more a picture is enlarged, the more its quality deteriorates.
- When you move the position to be displayed, the zoom position indication appears for about 1 second.



## ■ Switching the displayed image while maintaining the playback zoom

You can switch the displayed image while maintaining the same zoom magnification and zoom position for the playback zoom.

### Switch to picture select operation by pressing the front dial during playback zoom, and select pictures with ◀/▶.



- It will switch between picture select operation and move zoom position operation every time the front dial is pressed during playback zoom.

#### Note

- You can also delete the recording information etc. on the LCD monitor/Viewfinder during playback zoom by pressing [DISPLAY].
- If you want to save the enlarged picture, use the trimming function. (P141)
- The playback zoom may not operate if pictures have been recorded with other equipment.
- The zoom magnification and the zoom position are cancelled when the camera is turned off (including power save mode).
- The zoom position returns to the centre in the following images.
  - Images with different aspect ratios
  - Images with different numbers of recorded pixels
  - Images with a different rotation direction (when [ROTATE DISP.] is set to [ON])
- Playback zoom cannot be used during motion picture playback or pictures with audio playback.

## Deleting Pictures

Once deleted, pictures cannot be recovered.

Press [▶].

### To delete a single picture

- 1 Select the picture to be deleted, and then press [▶].

- A [▶] button
- B [DISPLAY] button
- C [▶] button




- 2 Press ◀ to select [YES] and then press [MENU/SET].



## To delete multiple pictures (up to 50) or all the pictures

- 1 Press .
- 2 Press **▲/▼** to select **[DELETE MULTI]** or **[DELETE ALL]** and then press **[MENU/SET]**.
  - **[DELETE ALL]** → step 5.
- 3 Press **▲/▼/◀/▶** to select the picture, and then press **[DISPLAY]** to set. (Repeat this step.)
  -  appears on the selected pictures. If **[DISPLAY]** is pressed again, the setting is cancelled.
- 4 Press **[MENU/SET]**.
- 5 Press **▲** to select **[YES]** and then press **[MENU/SET]** to set.

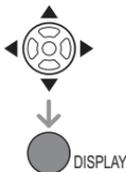

### ■ When **[DELETE ALL]** has been selected with the **[FAVORITE] (P136)** setting

The selection screen is displayed again. Select **[DELETE ALL]** or **[ALL DELETE EXCEPT ★]**, press **▲** to select **[YES]** and delete the pictures. (**[ALL DELETE EXCEPT ★]** cannot be selected if no pictures have been set as **[FAVORITE]**.)

#### Note

- Do not turn the camera off while deleting (while  is displayed). Use a battery with a sufficient power or the AC adaptor (P25).
- If you press **[MENU/SET]** while deleting pictures using **[DELETE MULTI]**, **[DELETE ALL]** or **[ALL DELETE EXCEPT ★]**, the deleting will stop halfway.
- Depending on the number of pictures to be deleted, it may take some time to delete them.
- If pictures do not conform to the DCF standard or are protected (P145), they will not be deleted even if **[DELETE ALL]** or **[ALL DELETE EXCEPT ★]** is selected.

# Switching the display of the LCD Monitor/ Viewfinder

## Switching the displayed information

Press **[DISPLAY]** to change.

Ⓐ [DISPLAY] button


- When the menu screen appears, the [DISPLAY] button is not activated.



## LCD monitor display

With the [LCD DISP.STYLE] (P126) of the [CUSTOM MENU] menu, you can choose the displayed screen on the LCD monitor to display in **[ ]** (LCD monitor style) or **[ ]** (viewfinder style).

When **[ ]** is set

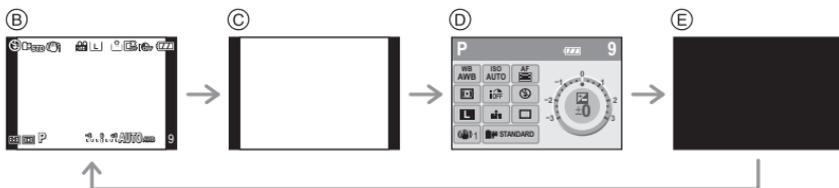


Ⓑ Normal display\*1, 2

Ⓒ No display\*1

Ⓓ [LCD INFO.DISP.]\*3

Ⓔ Turned off

When **[ ]** is set

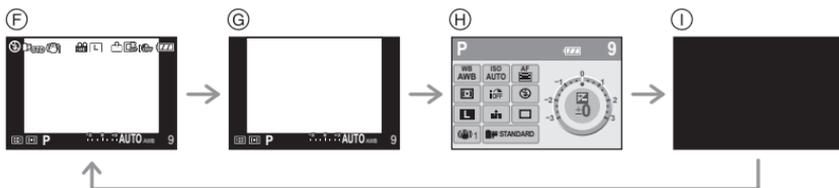

Ⓕ Normal display + detailed information\*1, 2

Ⓖ Normal display\*1

Ⓗ [LCD INFO.DISP.]\*3


Ⓘ Turned off

## Viewfinder display

With the [LVF DISP.STYLE] (P126) of the [CUSTOM MENU] menu, you can choose the displayed screen on the viewfinder to display in [ ] (viewfinder style) or [ ] (LCD monitor style).


## When [ ] is set

- Ⓐ Normal display\*1
- Ⓑ Normal display+detailed information\*1, 2

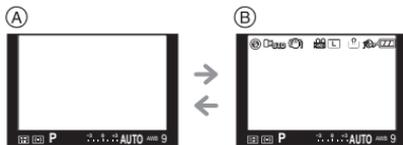

## When [ ] is set

- Ⓒ No display\*1
- Ⓓ Detailed information\*1, 2

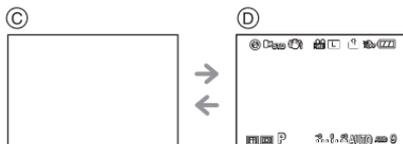

\*1 Guide lines are displayed when the [GUIDE LINE] of the [CUSTOM MENU] menu is set to anything except [OFF].

It is possible to move the position of the guide line using the quick menu when it is set to [ ]. (P63)

\*2 Histograms are displayed when the [HISTOGRAM] of the [CUSTOM MENU] menu is set to [ON].

It is possible to move the position of the histogram using the quick menu. (P64)

\*3 It is displayed when the [LCD INFO.DISP.] of the [CUSTOM MENU] menu is set to anything except [OFF]. Colour of the screen can be selected from 3 colours of brown, red or black. (P126)


 **Note**

- In [NIGHT PORTRAIT] (P97), the guide line is grey.

## ■ Recording guide line

When you align the subject on the horizontal and vertical guide lines or the cross point of these lines, you can take pictures with well-designed composition by viewing the size, the slope and the balance of the subject.

- (A) : This is used when dividing the entire screen into 3×3 for taking pictures with a well-balanced composition.
- (B) : This is used when you want to position the subject at the exact centre of the screen.
- (C) : Position of the guide line can be set. It is used to take well balanced pictures of subjects off the centre of the image.

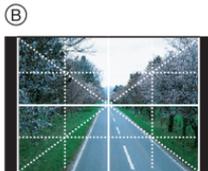

## ■ Set the position of the guide line with

- Set the [GUIDE LINE] in the [CUSTOM MENU] menu to . (P127)

### 1 Press [Q.MENU] to display the quick menu. (P32)

### 2 Press / to select guide line, and then press [MENU/SET].

- You can also use the front dial to set.
- Selected item will be displayed in orange in the quick menu
- The guide line itself will be displayed in orange when the guide line is selected.



### 3 Press / / / to set the position.

- The guide line returns to the centre when  is pressed.

### 4 Press [MENU/SET] to finish the setting.

### 5 Press [Q.MENU] to close the quick menu.

- You can also press the shutter button halfway to close the quick menu.
- Position of the guide line can be set from the [CUSTOM MENU] menu too.



## ■ About the Histogram

A histogram is a graph that displays brightness along the horizontal axis (black to white) and the number of pixels at each brightness level on the vertical axis. It allows you to easily check a picture's exposure.


## Examples of histogram

1 Properly Exposed

2 Under Exposed

3 Overexposed

\* Histogram

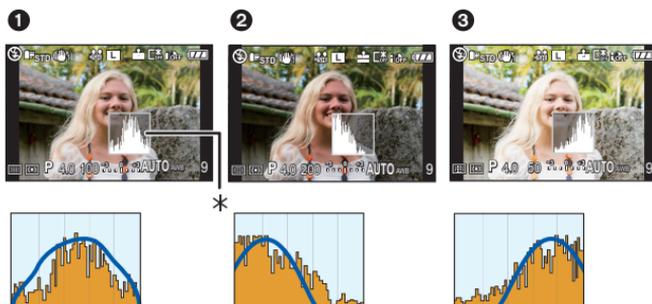

## ■ Set the position of the histogram

• Set the [HISTOGRAM] in the [CUSTOM MENU] menu to [ON]. (P127)

1 Press [Q.MENU] to display the quick menu. (P32)

2 Press ◀/▶ to select histogram, and then press [MENU/SET].

- You can also use the front dial to set.
- Selected item will be displayed in orange in the quick menu screen, and the frame of the histogram will be displayed in orange when the histogram is selected.

3 Press ▲/▼/◀/▶ to set the position.

4 Press [MENU/SET] to finish the setting.

5 Press [Q.MENU] to close the quick menu.

- You can also press the shutter button halfway to close the quick menu.
- Position of the histogram can be set from the [CUSTOM MENU] menu too.



## Note

• When the recorded picture and the histogram do not match each other under the following conditions, the histogram is displayed in orange.

- When the manual exposure assistance is other than  $[\pm 0\text{EV}]$  during exposure compensation or in the manual exposure mode
- When the flash is activated
- When the flash is closed
  - When the brightness of the screen is not correctly displayed in dark places
  - When the exposure is not adequately adjusted
- The histogram is an approximation in recording mode.
- The histogram displayed in this camera does not match histograms displayed by picture editing software used in PCs etc.
- Histogram is displayed in R (red), G (green), B (blue), and Y (luminance) during the playback.


[REC] mode: **P A S M** CUST SCN 

## Taking Pictures using the Built-in Flash

**(A)** To open the flash  
Slide the flash open lever.

**(B)** To close the flash  
Press the flash until it clicks.

- Be sure to close the flash when not in use.
- The flash setting is fixed to while the flash is closed.

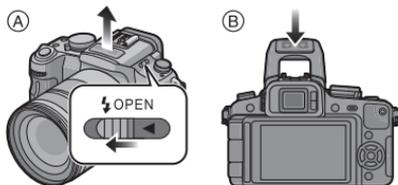

### Switching to the appropriate flash setting

Applicable modes: **P A S M** CUST SCN

Set the built-in flash to match the recording.

- Open the flash.

**1** Select [FLASH] in the [REC] mode menu. (P30)

**2** Press / to select a mode and press [MENU/SET].


- For information about flash settings that can be selected, refer to “Available flash settings by recording mode”. (P66)



**3** Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

Item	Description of settings
A: AUTO	The flash is automatically activated when the recording conditions make it necessary.
A (with red-eye reduction icon) (A (with red-eye reduction icon)): AUTO/Red-eye reduction	The flash is automatically activated when the recording conditions make it necessary. It is activated once before the actual recording to reduce the red-eye phenomenon (eyes of the subject appearing red in the picture) and then activated again for the actual recording. • Use this when you take pictures of people in low lighting conditions.
: Forced flash ON	The flash is activated every time regardless of the recording conditions. • Use this when your subject is back-lit or under fluorescent light.
(with red-eye reduction icon) ( (with red-eye reduction icon)): Forced ON/Red-eye reduction	The flash is activated every time regardless of the recording conditions. Simultaneously it reduces the red-eye phenomenon. • Use this when your subject is back-lit or under fluorescent light.
S: Slow sync.	If you take a picture with a dark background landscape, this feature will slow the shutter speed when the flash is activated so that the dark background landscape will become bright. • Use this when you take pictures of people in front of a dark background.

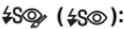 : <b>Slow sync./Red-eye reduction</b>	If you take a picture with a dark background landscape, this feature will slow the shutter speed when the flash is activated so that the dark background landscape will become bright. Simultaneously it reduces the red-eye phenomenon. <b>• Use this when you take pictures of people in front of a dark background.</b>
 : <b>Forced flash OFF</b>	The flash is not activated in any recording conditions. <b>• Use this when you take pictures in places where the use of the flash is not permitted.</b>

- \* The flash is activated twice. The interval between the first and second flash is longer when [, [, [] is set. The subject should not move until the second flash is activated. Flash interval depends on the brightness of the subject.

### ■ About the digital red-eye correction

When the flash is used with the Red-eye reduction (, [, [] selected, it will automatically detect and correct the red-eye in the image data.

- It may not be able to correct the red-eye depending on the recording conditions. It may also correct objects other than red-eye.
- It can be set to [OFF] (, [, [] with the [D.RED-EYE] in the [REC] mode menu (P120).
- It will be fixed to [ON] in the intelligent auto mode.

### ■ Available flash settings by recording mode

The available flash settings depend on the recording mode.

(○: Available, —: Not available, ●: Initial setting of advanced scene mode and scene mode)

							
	○*	—	—	—	—	—	○
	○	○	○	○	○	○	○
	○	○	○	○	○	○	○
	○	○	○	○	—	—	○
	—	—	○	○	—	—	○
	—	—	—	—	—	—	○
	—	—	—	—	—	—	○
	○	●	○	—	—	—	○
	○	●	○	—	—	—	○
	●	○	○	—	—	—	○
	○	●	○	—	—	—	○
	○	●	○	—	—	○	○
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	●	—	○	—	—	—	○

							
	●	—	○	—	—	—	○
	●	—	○	—	—	—	○
	●	—	○	—	—	—	○
	●	—	○	—	—	—	○
	●	—	○	—	—	—	○
	●	—	○	—	—	—	○
	●	—	○	—	—	—	○
	—	—	—	—	—	●	○
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	—	—	—	—	—	—	●
	○	●	○	—	—	—	○
	○	●	○	—	—	—	○
	●	—	○	—	—	—	○

- \* When [] is selected, [], [] or [] is set depending on the type of subject and brightness.

- The flash setting may change if the recording mode is changed. Set the flash setting again if necessary.
- The flash setting is memorised even if the camera is turned off. However, the advanced scene mode or the scene mode flash setting is reset to the initial setting if the advanced scene mode or the scene mode is changed and then used.
- Available flash settings are those that were set for still picture recording.
- Flash will not be activated when recording motion picture.

#### ■ The available flash range to take pictures

(When 14–140 mm/F4.0–5.8 lens included in DMC-GH1K is used)

- The available flash range is an approximation.

When the aspect ratio is [4:3] or [16:9].

ISO sensitivity	Available flash range according to focal length of lens		
	Wide to 21 mm	22 mm	Tele
AUTO	Vignetting effect occurs due to the light of the flash.	1.0 m (3.28 feet) to 4.8 m (15.8 feet)*	50 cm (1.64 feet) to 3.7 m (12.1 feet)*
ISO100		1.0 m (3.28 feet) to 2.4 m (7.87 feet)	50 cm (1.64 feet) to 1.8 m (5.91 feet)
ISO200		1.0 m (3.28 feet) to 3.4 m (11.2 feet)	50 cm (1.64 feet) to 2.6 m (8.53 feet)
ISO400		1.0 m (3.28 feet) to 4.8 m (15.8 feet)	50 cm (1.64 feet) to 3.7 m (12.1 feet)
ISO800		1.0 m (3.28 feet) to 6.9 m (22.6 feet)	50 cm (1.64 feet) to 5.3 m (17.4 feet)
ISO1600		1.0 m (3.28 feet) to 9.7 m (31.8 feet)	50 cm (1.64 feet) to 7.5 m (24.6 feet)
ISO3200		1.0 m (3.28 feet) to 13.8 m (45.3 feet)	60 cm (1.97 feet) to 10.7 m (35.1 feet)

When the aspect ratio is [3:2].

ISO sensitivity	Available flash range according to focal length of lens		
	Wide to 17 mm	18 mm	Tele
AUTO	Vignetting effect occurs due to the light of the flash.	1.0 m (3.28 feet) to 5.1 m (16.7 feet)*	50 cm (1.64 feet) to 3.7 m (12.1 feet)*
ISO100		1.0 m (3.28 feet) to 2.5 m (8.20 feet)	50 cm (1.64 feet) to 1.8 m (5.91 feet)
ISO200		1.0 m (3.28 feet) to 3.6 m (11.8 feet)	50 cm (1.64 feet) to 2.6 m (8.53 feet)
ISO400		1.0 m (3.28 feet) to 5.1 m (16.7 feet)	50 cm (1.64 feet) to 3.7 m (12.1 feet)
ISO800		1.0 m (3.28 feet) to 7.2 m (23.6 feet)	50 cm (1.64 feet) to 5.3 m (17.4 feet)
ISO1600		1.0 m (3.28 feet) to 10.2 m (33.5 feet)	50 cm (1.64 feet) to 7.5 m (24.6 feet)
ISO3200		1.0 m (3.28 feet) to 14.4 m (47.2 feet)	60 cm (1.97 feet) to 10.7 m (35.1 feet)

## When the aspect ratio is [16:9].

ISO sensitivity	Available flash range according to focal length of lens		
	Wide	15 mm	Tele
<b>AUTO</b>	2.5 m (8.20 feet) to 5.5 m (18.0 feet)*	1.0 m (3.28 feet) to 5.3 m (17.4 feet)*	50 cm (1.64 feet) to 3.7 m (12.1 feet)*
<b>ISO100</b>	2.5 m (8.20 feet) to 2.7 m (8.85 feet)	1.0 m (3.28 feet) to 2.6 m (8.53 feet)	50 cm (1.64 feet) to 1.8 m (5.91 feet)
<b>ISO200</b>	2.5 m (8.20 feet) to 3.8 m (12.5 feet)	1.0 m (3.28 feet) to 3.7 m (12.1 feet)	50 cm (1.64 feet) to 2.6 m (8.53 feet)
<b>ISO400</b>	2.5 m (8.20 feet) to 5.5 m (18.0 feet)	1.0 m (3.28 feet) to 5.3 m (17.4 feet)	50 cm (1.64 feet) to 3.7 m (12.1 feet)
<b>ISO800</b>	2.5 m (8.20 feet) to 7.7 m (25.3 feet)	1.0 m (3.28 feet) to 7.5 m (24.6 feet)	50 cm (1.64 feet) to 5.3 m (17.4 feet)
<b>ISO1600</b>	2.5 m (8.20 feet) to 11.0 m (36.1 feet)	1.0 m (3.28 feet) to 10.7 m (35.1 feet)	50 cm (1.64 feet) to 7.5 m (24.6 feet)
<b>ISO3200</b>	2.5 m (8.20 feet) to 15.5 m (50.9 feet)	1.0 m (3.28 feet) to 15.1 m (49.5 feet)	60 cm (1.97 feet) to 10.7 m (35.1 feet)

\* When the [ISO LIMIT SET] (P123) is set to [OFF]

- At the time of flash photography, when distance with the subject is near, the flash light is interrupted with lens and a part of picture being taken becomes dark. Check the distance between the camera and the subject when taking a picture. The distance with subject from which the flash light is interrupted differs according to the lens used.

– When 14–140 mm/F4.0–5.8 lens included in DMC-GH1K is attached:

When the aspect ratio is [4:3] or [3:4].

Vignetting effect occurs due to the light of the flash. (Wide to 21 mm/

1.0 m (3.28 feet) or less (22 mm)/50 cm (1.64 feet) or less (Tele)

When the aspect ratio is [3:2].

Vignetting effect occurs due to the light of the flash. (Wide to 17 mm/

1.0 m (3.28 feet) or less (18 mm)/50 cm (1.64 feet) or less (Tele)

When the aspect ratio is [16:9].

2.5 m (8.20 feet) or less (Wide)/1.0 m (3.28 feet) or less (15 mm)/50 cm (1.64 feet) or less (Tele)

### ■ Shutter speed for each flash setting

Flash setting	Shutter speed (Sec.)
	1/30*1 to 1/4000th
	1/30*2 to 1/160th

Flash setting	Shutter speed (Sec.)
	1 to 1/4000th
	60*3 to 1/4000th

\*1 This becomes 60 seconds in shutter-priority AE mode

\*2 This becomes 60 seconds in shutter-priority AE mode and B (Bulb) in the manual exposure mode.

\*3 This becomes B (Bulb) in the manual exposure mode.

- When the flash is activated, the shutter speed cannot be set to faster than 1/160th of a second.
- In Intelligent auto mode, shutter speed changes depending on the identified scene.

### Note

- Do not bring the flash too close to objects or close the flash while it is activated. The objects may be discoloured by its heat or lighting.
- Do not close the flash soon after the flash is activated prior to taking pictures due to AUTO/Red-eye reduction etc. It causes a malfunction.
- When you take a picture beyond the available flash range, the exposure may not be adjusted properly and the picture may become bright or dark.
- When the flash is being charged, the flash icon blinks red, and you cannot take a picture even when you press the shutter button fully.
- The white balance may not be properly adjusted if the flash level is insufficient for the subject.
- **When taking a picture with the flash, we recommend removing the lens hood. In some cases it may not allow the scene to be illuminated properly.**
- It may take time to charge the flash if you repeat taking a picture. Take a picture after the access indication disappears.
- The red-eye reduction effect differs between people. Also, if the subject was far away from the camera or was not looking at the first flash, the effect may not be evident.
- When you attach an external flash, it takes priority over the built-in flash. Refer to P161 for the external flash.

## Adjust the flash output


Applicable modes: **P A S M** CUST SCN      

Adjust the flash output when the subject is small, or the reflectivity is very high or low.

**1** Select [FLASH ADJUST.] in the [REC] mode menu. (P30)

**2** Press   to set the flash output and then press [MENU/SET].

- You can adjust from [-2 EV] to [+2 EV] in steps of [1/3 EV].
- Select [0 EV] to return to the original flash output.
- You can also use the front dial to set.

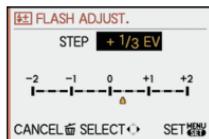

**3** Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

### Note

- [+ ] or [- ] is displayed on the flash icon in the LCD monitor/viewfinder when the flash level is adjusted.
- The flash output setting is memorised even if the camera is turned off.

## Setting to the 2nd Curtain Synchro

Applicable modes: **PASM**<sup>CUST</sup>

2nd curtain synchro activates the flash just before the shutter closes when taking pictures of moving objects such as cars using a slow shutter speed.

**1** Select [FLASH SYNCHRO] in the [REC] mode menu. (P30)

**2** Press ▼ to select [2ND] and then press [MENU/SET].

**3** Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.



Item	Effect
1st curtain synchro	The normal method when taking pictures with the flash. 
2nd curtain synchro	The light source appears behind the subject and picture becomes dynamic. 

**Note**

- Set it to [1ST] normally.
- [2nd] is displayed in the flash icon on the LCD monitor/Viewfinder if you set [FLASH SYNCHRO] to [2ND].
- The flash sync. settings are also effective when using an external flash. (P161)
- When a fast shutter speed is set, the effect of [FLASH SYNCHRO] may deteriorate.
- You cannot set [A], [S] or [S] when [FLASH SYNCHRO] is set to [2ND].

[REC] mode: **iA PAS**  **CUST** **SCN** 


## Compensating the Exposure

Use this function when you cannot achieve appropriate exposure due to the difference in brightness between the subject and the background. Look at the following examples.

**Under exposed**



**Properly exposed**

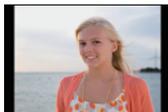

**Overexposed**



Compensate the exposure towards positive.

Compensate the exposure towards negative.

**1** Press the front dial to switch to exposure compensation operation.

**2** Rotate the front dial to compensate the exposure.

- Ⓐ Exposure compensation value
- Select [0] to return to the original exposure.



**3** Take a picture.

### Note


- EV is an abbreviation of [Exposure Value]. It refers to the amount of light given to the CCD by the aperture value and the shutter speed.
- The set exposure value is memorised even if the camera is turned off. However, the exposure value during the Intelligent auto mode is not memorised.
- The compensation range of the exposure will be limited depending on the brightness of the subject.
- Rotate the dial slowly but surely.
- When the aperture and shutter speed values are displayed in the screen in the programme AE mode, programme shift operation and exposure compensation operation is switched every time the front dial is pressed.
- In the aperture-priority AE mode, aperture setting operation (P90) and exposure compensation operation is switched every time the front dial is pressed.
- In the shutter-priority AE mode, shutter speed setting operation (P90) and exposure compensation operation is switched every time the front dial is pressed.
- Operation method can be changed with [EXPO. SETTINGS] in the [CUSTOM MENU] menu. (P129)
- In quick menu (P32) in [ ] (LCD monitor style), after selecting the exposure compensation display using  or the front dial, you can compensate the exposure with / .
- In quick menu in [ ] (Finder style), after selecting the exposure compensation display using the front dial or , pressing the front dial or [MENU/SET] will allow you to compensate the exposure with the front dial or .

[REC] mode: 

## Taking Pictures using Burst Mode

Pictures are taken continuously while the shutter button is pressed.  
Select the ones you really like from among the pictures you have taken.

### 1 Set the drive mode lever to [ ].

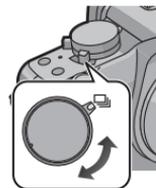

### 2 Focus on the subject and take a picture.

- A** When burst mode is set to high speed [H].
- Hold down the shutter button fully to activate the burst mode.



### Changing the burst speed

1 Select [BURST RATE] in the [REC] mode menu. (P30)

2 Press  $\blacktriangle/\blacktriangledown$  to select the burst speed and then press [MENU/SET].

3 Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.



		[H] (High speed)	[L] (Low speed)
Burst speed (pictures/second)		3	2
*1	With RAW files	4 to 7*2	
	Without RAW files	Depends on the remaining capacity of the card*2	

\*1 Number of recordable pictures

\*2 Pictures can be taken until the capacity of the card becomes full. However the burst speed will become slower halfway. The exact timing of this depends on the aspect ratio, the picture size, the setting for the quality and the type of card used.

- First burst speed has no relation with the transfer speed of the card.
- The burst speed values given above apply when the shutter speed is 1/60 or faster and when the flash is not activated.
- The burst mode speed may become slower depending on the following settings.
  - [SENSITIVITY] (P86)/[PICTURE SIZE] (P117)/[QUALITY] (P118)/[FOCUS PRIORITY] (P128)/Focus mode
- Refer to P118 for information about RAW files.

## ■ Focusing in burst mode

The focus changes depending on the setting for [FOCUS PRIORITY] (P128) in the [CUSTOM MENU] menu and the focus mode setting.

Focus mode	Focus Priority	Focus
AFS	ON	At the first picture
	OFF	
AFC*1	ON	Normal focusing*2
	OFF	Predicted focusing*3
MF	—	Focus set with manual focus

\*1 When subject is dark, the focus is fixed on the first picture.

\*2 The burst speed may become slower because the camera is continuously focusing on the subject.

\*3 Burst speed takes priority, and focus is estimated within possible range.

### Note

- We recommend using the remote shutter (DMW-RSL1; optional) when you want to keep the shutter button pressed fully while taking pictures in burst mode. Refer to P163 for information about the remote shutter.
- When the burst speed is set to [H], the exposure and white balance are fixed at the settings used for the first picture for the subsequent pictures as well. When the burst speed is set to [L], they are adjusted each time you take a picture.
- If you are following a moving subject while taking pictures in a place (landscape) indoors, outdoors etc. where there is a large difference between the light and shade, it may take time until the exposure is stable. If burst is used at this time, the exposure may not become optimal.
- Since the shutter speed becomes slower in dark places, the burst speed (pictures/second) may become slower.
- The auto review function is activated regardless of the auto review setting. (Will not enlarge/hold) You cannot set the auto review function in the [SETUP] menu.
- When the flash is activated, you can take only 1 picture.
- **White balance bracket (P85) will record 3 pictures at 1 recording, so it will take longer to be able to take next picture.**
- **Maximum of 3 films will be recorded depending on the multi film bracket setting during the multi film bracket recording (P89).**
- The burst mode is disabled during recording of the motion pictures.

[REC] mode:

## Taking Pictures using Auto Bracket

Maximum of 7 pictures will be recorded with different exposure settings following the exposure compensation range every time the shutter button is pressed.  
You can select the picture with the desired exposure among different exposures.

With auto bracket

[STEP]: [3•1/3], [SEQUENCE]: [0/-/+]

1st picture



±0 EV

2nd picture




-1/3 EV

3rd picture



+1/3 EV

**1** Set the drive mode lever to [].

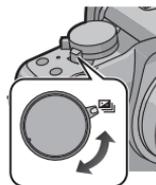


**2** Focus on the subject and take a picture.

- If you press and hold the shutter button, the number of pictures that you set is taken.
- The auto bracket indication (A) blinks until the number of pictures that you set is taken.
- The picture count is reset to [0] if you change the auto bracket setting, change the setting on the drive mode lever or turn the camera off before all the pictures that you set are taken.



### ■ Changing the settings for [STEP] and [SEQUENCE] in auto bracket

- 1 Select [AUTO BRACKET] in the [REC] mode menu. (P30)
- 2 Press  $\blacktriangle/\blacktriangledown$  to select [STEP] or [SEQUENCE] and then press  $\blacktriangleright$ .

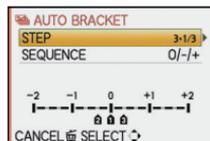

**3 Press ▲/▼ to select the setting and then press [MENU/SET].**

Item	Settings
[STEP]	[3•1/3] (3 pictures)
	[3•2/3] (3 pictures)
	[5•1/3] (5 pictures)
	[5•2/3] (5 pictures)
	[7•1/3] (7 pictures)
	[7•2/3] (7 pictures)

Item	Settings
[SEQUENCE]	[0/-/+]
	[-/0/+]

**4 Press [MENU/SET] twice to close the menu.**

- You can also press the shutter button halfway to close the menu.


**Note**

- When taking pictures using auto bracket after setting the exposure compensation range, the pictures taken are based on the selected exposure compensation range.
- The exposure may not be compensated with auto bracket depending on the brightness of the subject.
- The auto review function is activated regardless of the auto review setting. (Will not enlarge/hold) You cannot set the auto review function in the [SETUP] menu.
- When the flash is activated, you can take only 1 picture.
- Set number of pictures cannot be recorded if the recordable number of pictures is less than set number of pictures.
- **Settings for multi film bracket have priority during the multi film bracket recording (P89).**
- The auto bracket will be disabled during recording of the motion pictures.

[REC] mode: **P** **A** **S** **M** **C** **U** **S** **T** **S** **C** **N** **A** **S** **T** **R** **O** **N** **E** **R** **I** **N** **G** **A** **S** **S** **T** **E** **R**

## Taking Pictures with the Self-timer


### 1 Set the drive mode lever to $\odot$ .

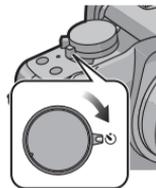

### 2 Press the shutter button halfway to focus and then press it fully to take the picture.

(A) When self-timer is set to  $\odot_{10}$ .

- A picture is not taken until the subject is brought into focus.
- If you want to press the shutter button fully to take a picture even when the subject is not focused, set [FOCUS PRIORITY] in the [CUSTOM MENU] menu to [OFF]. (P128)
- The self-timer indicator  $\odot$  blinks and the shutter is activated after 10 seconds (or 2 seconds).
- If you press [MENU/SET] while taking a picture with the self-timer, it is cancelled.
- When  $\odot_{10}$  is selected, the self-timer indicator blinks again after the first and the second pictures are taken and the shutter is activated 2 seconds after it blinks.

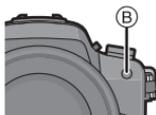

### Changing the time setting for the self-timer

#### 1 Select [SELF-TIMER] in the [REC] mode menu. (P30)

#### 2 Press $\blacktriangle/\blacktriangledown$ to select the mode and then press [MENU/SET].

Item	Settings
$\odot_{10}$	10 seconds
$\odot_{10}$ $\equiv$	10 seconds/3 pictures
$\odot_2$	2 seconds



- If you set  $\odot_{10}$   $\equiv$ , after 10 seconds the camera takes 3 pictures at about 2 second intervals.

#### 3 Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

#### Note

- When using a tripod etc., setting the self-timer to 2 seconds is a convenient way to avoid the jitter caused by pressing the shutter button.
- We recommend using a tripod when recording with the self-timer.
- Depending on the recording conditions, the recording interval may become more than 2 seconds when  $\odot_{10}$   $\equiv$  is selected.
- The flash output may not be constant when  $\odot_{10}$   $\equiv$  is set.
- Operation will be same as  $\odot_{10}$  even if it is set to  $\odot_{10}$   $\equiv$  while multi film bracket recording (P89).
- Self-timer cannot be set to  $\odot_2$  or  $\odot_{10}$   $\equiv$  in Intelligent auto mode.
- The self-timer will be disabled during recording of the motion pictures.

[REC] mode: **PASM**  **CUST** **SCN**     

## Setting the method used to focus (AF mode)


This allows the focusing method that suits the positions and number of the subjects to be selected.

Select the mode that matches the recording conditions and the composition.

**1** Set the focus mode dial to [AFS] or [AFC].

**2** Press ◀ (M) and then press ▶/▶ to select AF mode.

- You can also use the front dial to select.

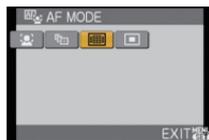

Item	Effect
 : Face detection	The camera automatically detects the person's face. The focus and exposure can then be adjusted to fit that face no matter what portion of the picture it is in. (max. 15 areas)
 : AF Tracking	Focus and exposure can be adjusted to a specified subject. Focus and exposure will keep on following the subject even if it moves. (Dynamic tracking)
 : 23-area-focusing	Up to 23 points for each AF area can be focused. This is effective when the subject is not in the centre of the screen. (AF area frame will be same as image aspect ratio setting)
 : 1-area-focusing	The camera focuses on the subject in the AF area on the screen. Position and size of the AF area can be changed.

**3** Press [MENU/SET] to close.

- You can also press the shutter button halfway to close.

### Note

- When the subject is not in the centre of the composition in , you can bring the subject into the AF area, fix the focus and exposure by pressing the shutter button halfway, move the camera to the composition you want with the shutter button pressed halfway, and then take the picture. (Only when the focus mode dial is set to [AFS])
- The camera is focusing on all the AF areas using  when multiple AF areas (max. 23 areas) light at the same time. If you want to determine the focus position to take pictures, switch the AF mode to .
- If the AF mode is set to  or , the AF area is not displayed until the picture is brought into focus. Also, if you set the focus mode to [AFC] in , AF area will not be displayed even if the subject comes into focus.
- When it is set to  or  during motion picture recording, it will switch to Multi auto focus mode for motion pictures. AF area is not displayed at this time.
- The camera may detect the subjects other than a person as the face. In this case, switch the AF mode to any modes other than  and then take a picture.
- [FACE RECOG.] only works when  is set.

- It is not possible to set [AF-ON] in the following cases.
  - In [FOOD] in [CLOSE-UP]
  - In [NIGHT SCENERY] and [ILLUMINATIONS] in [NIGHT PORTRAIT]
- The [AF MODE] is fixed to [AF-ON] when using the digital zoom.

### About [AF-ON]

When the camera detects a person's face, the following colour AF area is displayed.

Yellow:

When the shutter button is pressed halfway, the frame turns green when the camera is focused.

White:

Displayed when more than one face is detected. Other faces that are the same distance away as faces within the yellow AF areas are also focused.

- When [AF-ON] is selected and [METERING MODE] is set to multiple [MULTI], the camera will adjust the exposure to suit the person's face.
- Under certain picture-taking conditions including the following cases, the facial recognition function may fail to work, making it impossible to detect faces. [AF MODE] is switched to [AF-ON].
  - When the face is not facing the camera
  - When the face is at an angle
  - When the face is extremely bright or dark
  - When there is little contrast on the faces
  - When the facial features are hidden behind sunglasses, etc.
  - When the face appears small on the screen
  - When there is rapid movement
  - When the subject is other than a human being
  - When the camera is shaking



## Setting up [AF-ON] (AF Tracking)

### 1 Bring the subject to the AF tracking frame, and press the shutter button halfway to lock the subject.

- (A) AF tracking frame (White)
- (B) AF tracking frame (Yellow)

Before locking

Locked



- When the subject is recognised, AF area will turn green and the subject will be locked. Focus and exposure will be fixed automatically and continuously in accordance with the movement of the subject when you release the shutter button (Dynamic tracking). AF area will be displayed in yellow in this case.
- AF tracking is cancelled when [MENU/SET] or ◀ is pressed.

### 2 Take the picture.

#### Note

- If it fails to lock, AF area will flash in red, and disappear. Try to lock again.

- AF Tracking will not operate when it has failed to AF track. AF mode will be switched to [□] in that case.
- [FACE RECOG.] does not work when AF tracking is active.
- [AF-ON] will operate as [□] in the [STANDARD] ( [B&W] ), [DYNAMIC] ( [B&W] ) or [SMOOTH] ( [B&W] ) in film mode.
- Dynamic tracking function may not work in the following cases:
  - When the subject is too small
  - When the recording location is too dark or bright
  - When the subject is moving too fast
  - When the background has the same or similar colour to the subject.
  - When jitter is occurring
  - When zoom is operated

## Setting the AF area

AF area can be moved when [□] is selected. The size of AF area can also be changed.

- You can also set from the quick menu. (P32)

### 1 Select [□] and then press ▼.

- AF area setting screen is displayed. It will return to previous screen by pressing [DISPLAY].

### 2 Press ▲/▼/◀/▶ to move the AF area.



- You can set to arbitrary position of the screen. (It cannot be set to edge of the screen)
- The AF area returns to the centre when [TOP] is pressed.

### 3 Rotate the front dial to change the size of AF area.

Front dial clockwise: Enlarge  
Front dial counter clockwise: Shrink

- It can be changed to 4 different sizes of "spot" (A), "normal" (B), "large" (C), and "extra large" (D).

### 4 Press [MENU/SET] to set.

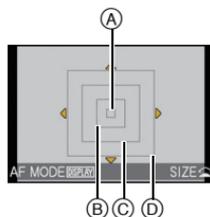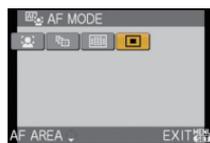

## ■ Move the AF area easily while taking pictures

When the [DIRECT AF AREA] (P128) in the [CUSTOM MENU] menu is set to [ON] while [□] is selected, it is possible to move the AF area directly with ▲/▼/◀/▶.

It is also possible to change the size of AF area by rotating the front dial in the screen to set the position.

- [SENSITIVITY] (P86), [Fn BUTTON SET] (P33), [AF MODE] (P77), or [WHITE BALANCE] (P83) cannot be set with ▲/▼/◀/▶. Make the setting with the quick menu (P32).

### Note

- The spot metering target can also be moved to match the AF area when using [□]. (P119)
- Set the size of AF area to "normal", "large", or "extra large" when it is hard to focus using the "spot".
- The [DIRECT AF AREA] will be fixed to [OFF] when advanced scene mode, scene mode, or My colour mode is selected.
- [DIRECT AF AREA] is disabled during motion picture recording.

[REC] mode: PASM M CUST SCN D A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 0-9 \* # / \ ^ \_

## Taking Pictures with Manual Focus

Use this function when you want to fix the focus or when the distance between the lens and the subject is determined and you do not want to activate auto focus.

### 1 Set the focus mode dial to [MF].

- [MF] is displayed on a screen for about 5 seconds.

### 2 Rotate the focus ring to focus on the subject.

- Screen will be enlarged about 5 times as MF assist.
- The enlarged area can be moved by pressing  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ .
- MF assist disappears about 10 seconds after you stop pressing  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$  or rotating the focus ring.
- MF assist is enlarged from 5 times to 10 times when the front dial is rotated clockwise. It will return to 5 times by rotating the front dial counter clockwise.



### 3 Take the picture.

#### ■ MF ASSIST

If [MF ASSIST] (P129) of [CUSTOM MENU] menu is set to [OFF], an enlarged screen will not be displayed as MF assist, even if focus ring is rotated. To display the MF assist, press  $\blacktriangleleft$  and then press [MENU/SET] for enlarged display.

#### 1 Press $\blacktriangleleft$ to display the MF assist screen.

#### 2 Press $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ to change the position of the MF assist screen.

- The following will return the MF assistance to the original position.
  - Switching the focus mode dial to [AFS] or [AFC].
  - Changing [ASPECT RATIO] or [PICTURE SIZE].
  - Turning the camera off.



#### 3 Press [MENU/SET] to magnify the MF assist screen.

- Rotate the focus ring to focus on the subject.
- The enlarged area can be moved by pressing  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ .
- MF assist is enlarged from 5 times to 10 times when the front dial is rotated clockwise. It will return to 5 times by rotating the front dial counter clockwise.



#### 4 Press [MENU/SET] to close MF assist.

- The screen returns to the previous screen.

#### ■ Technique for Manual focus


- 1 Rotate the focus ring to focus on the subject.
- 2 Rotate it a little more.
- 3 Finely focus on the subject by rotating the focus ring slowly in reverse.



## ■ About the focus distance reference mark (When 14–140 mm/F4.0–5.8 lens included in DMC-GH1K is used)

The focus distance reference mark is a mark used to measure the focus distance. Use this when taking pictures with manual focus or taking close-up pictures.

- (A) Focus distance reference mark
- (B) Focus distance reference line
- (C) 0.5 m (1.64 feet)

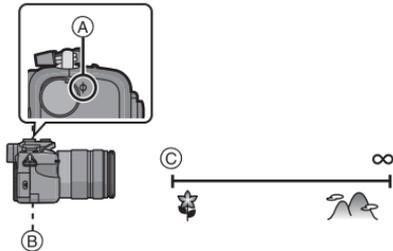

- If you are taking close-up pictures
  - We recommend using a tripod and the self-timer (P76).
  - The effective focus range (depth of field) is significantly narrowed. Therefore, if the distance between the camera and the subject is changed after focusing on the subject, it may become difficult to focus on it again.
  - The resolution of the periphery of the picture may decrease slightly. This is not a malfunction.

### Note

- When the MF assist is started by ◀, MF assist will continue to display even after 10 seconds has past without operating the focus ring or ▲/▼/◀/▶.
- If you use the zoom function after focusing on the subject, focus on the subject again.
- The MF assist does not appear when using the digital zoom or recording motion pictures.
- Even if ◀ is pressed in My Colour mode, the MF assist screen is not displayed.
- After cancelling power save mode, focus on the subject again.

[REC] mode: **P A S M**

## Fixing the Focus and the Exposure (AF/AE Lock)

This is useful when you want to take a picture of a subject outside the AF area or the contrast is too strong and you cannot achieve appropriate exposure.

### ■ Fixing the exposure only

- 1** Align the screen with the subject.
- 2** Press and hold [AF/AE LOCK] to fix the exposure.

(A) [AF/AE LOCK] button

- The aperture value and the shutter speed light.
- If you release [AF/AE LOCK], AE Lock is cancelled.



- 3** While pressing [AF/AE LOCK], move the camera as you compose the picture.

(B) AE lock indication



- 4** Press the shutter button halfway to focus on the subject and then press it fully.



### ■ Fixing the focus or the focus/the exposure

- 1 Select [AF/AE LOCK] in the [CUSTOM MENU] menu. (P30)
- 2 Press ▲/▼ to select [AF] or [AF/AE] and then press [MENU/SET].
- 3 Press [MENU/SET] to close the menu.
  - You can also press the shutter button halfway to close the menu.



### Taking pictures when [AF] or [AF/AE] is set

- 1 Aim the lens at the subject.
- 2 Press and hold [AF/AE LOCK] to fix the focus and the exposure.
  - When [AF] is selected, [AFL], the focus indication, aperture value, the shutter speed light when the subject is focused.
  - When [AF/AE] is selected, [AFL], [AEL], the focus indication, aperture value and the shutter speed light when the subject is focused and the exposure is set.
  - If you release [AF/AE LOCK], AF/AE Lock is cancelled.
- 3 While pressing [AF/AE LOCK], move the camera to the composition you would like to take and then press the shutter button fully.

### Note

- If you set [AF/AE LOCK HOLD] in the [CUSTOM MENU] menu to [ON], you can fix the focus and the exposure even if you release [AF/AE LOCK] after pressing it. (P127)
- The brightness of the image displayed on the LCD monitor/viewfinder (Live View) will be also locked when the AE lock is performed.
- AF Lock only is effective when taking pictures in manual exposure mode.
- AE Lock only is effective during manual focus or preview mode.
- AE lock and AF lock can be used during motion picture recording, but AE/AF lock cannot be performed again during motion picture recording. During motion picture recording only cancellation of AE/AF lock can be performed.
- The exposure is set, even if the brightness of the subject changes.
- The subject can be focused again by pressing the shutter button halfway even when AE is locked.
- Programme shift can be set even when AE is locked.

[REC] mode: **PASM** 

## Adjusting the White Balance

In sunlight, under incandescent lights or in other such conditions where the colour of white takes on a reddish or bluish tinge, this item adjusts to the colour of white which is closest to what is seen by the eye in accordance with the light source.

**1** Press **▶** (WB).



**2** Press **◀/▶** to select the white balance and then press **[MENU/SET]** to set.

- You can also use the front dial to set.
- You can also press the shutter button halfway to set.



Item	Recording conditions
[AWB]	Automatic adjustment
[☀]	When taking pictures outdoors under a clear sky
[☁]	When taking pictures outdoors under a cloudy sky
[🏠]	When taking pictures outdoors in the shade
[💡]	When taking pictures under incandescent lights
[🔆]	When taking pictures with the flash only
[📺]/[📺]	When using the preset white balance
[🌡]	When using the preset colour temperature setting


\* It will operate as [AWB] during motion picture recording.

### ■ Auto white balance

Depending on the conditions prevailing when pictures are taken, the pictures may take on a reddish or bluish tinge. Furthermore, when a multiple number of light sources are being used or there is nothing with a colour close to white, auto white balance may not function properly. In a case like this, set the white balance to a mode other than [AWB].

- 1 Auto white balance will work within this range.
- 2 Blue sky
- 3 Cloudy sky (Rain)
- 4 Shade
- 5 TV screen
- 6 Sunlight
- 7 White fluorescent light
- 8 Incandescent light bulb
- 9 Sunrise and sunset
- 10 Candlelight

K=Kelvin colour Temperature

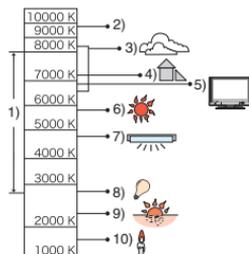

**Note**

- The optimal white balance will differ depending on the type of halogen lighting being recorded under so use [AWB], [1] or [2].
- The white balance might not be adjusted for the subject where the flash does not reach when the flash is used.
- The white balance is memorised even if the camera is turned off, but [WHITE BALANCE] for the advanced scene mode or the scene mode is set to [AWB] when the advanced scene mode or the scene mode is changed and then used.
- White balance is fixed to [AWB] in following conditions.
  - In Intelligent auto mode
  - In [OUTDOOR PORTRAIT] and [INDOOR PORTRAIT] in [PORTRAIT]
  - In [SCENERY]
  - In [OUTDOOR SPORTS] and [INDOOR SPORTS] in [SPORTS]
  - In [FOOD] in [CLOSE-UP]
  - In [NIGHT PORTRAIT]
  - In [SUNSET] or [PARTY] in scene mode
  - My colour mode


### Setting the white balance manually

Set the white balance value. Use to match the condition when taking photographs.

- You can also set from the quick menu. (P32)

**1** Select [**1**] or [**2**] and then press **▲**.

**2** Aim the camera at a sheet of white paper etc. so that the frame in the centre is filled by the white object only and then press [MENU/SET].

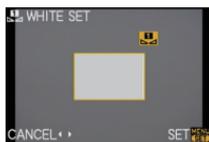**Note**

- You may not be able to properly set a white balance if the subject is too bright or too dark. In this case, adjust the subject to an appropriate brightness and then reset the white balance.

### Setting the colour temperature

You can set the colour temperature manually for taking natural pictures in different lighting conditions. The colour of light is measured as a number in degrees Kelvin. As the colour temperature becomes high the picture becomes bluish and as the colour temperature becomes low the picture becomes reddish.

- You can also set from the quick menu. (P32)

**1** Select [**WB K**] and then press **▲**.

**2** Press **▲/▼** to select the colour temperature and then press [MENU/SET].

- You can set a colour temperature from [2500K] to [10000K].
- You can also use the front dial to set.



## Finely adjusting the white balance [WB+]

You can finely adjust the white balance when you cannot acquire the desired hue by setting the white balance.

- You can also set from the quick menu. (P32)

**1** Select the white balance and then press **▼**.

**2** Press **▲/▼/◀/▶** to adjust the white balance and then press **[MENU/SET]**.

- ◀ : A (AMBER: ORANGE)
- ▶ : B (BLUE: BLUISH)
- ▲ : G+ (GREEN: GREENISH)
- ▼ : M- (MAGENTA: REDDISH)



### Note

- If you finely adjust the white balance to A (amber), the white balance icon on the LCD monitor/Viewfinder will change to orange. If you finely adjust the white balance to B (blue), the white balance icon on the LCD monitor/Viewfinder will change to blue.
- If you finely adjust the white balance to G+ (green) or M- (magenta), [+ ] (green) or [- ] (magenta) appears beside the white balance icon on the LCD monitor/Viewfinder.
- Press **[ ]** to return to the centre point.
- Select the centre point if you are not finely adjusting the white balance.
- The white balance fine adjustment setting is reflected in the picture when using the flash.
- You can finely adjust the white balance independently for each white balance item.
- The white balance fine adjustment setting is memorised even if the camera is turned off.
- The white balance fine adjustment level returns to the standard setting (centre point) in the following cases.
  - When you reset the white balance in **[ ]** or **[ ]**
  - When you reset the colour temperature manually in **[ ]**

## White balance bracket

Bracket setting is performed based on the adjustment values for the white balance fine adjustment, and 3 pictures with different colours are automatically recorded when the shutter button is pressed once.

**1** Finely adjust the white balance in step 2 of the “Finely adjusting the white balance” procedure, and rotate the front dial to set the bracket.

Front dial clockwise: Horizontal (A to B)  
Front dial counter-clockwise: Vertical (G+ to M-)

**2** Press **[MENU/SET]**.

- You can also use the front dial to set.



### Note

- [BKT]** is displayed in white balance icon in the LCD monitor/viewfinder when the white balance bracket is set.


- The white balance bracket setting is released when the power has been turned off (including power save mode).
- Pictures can be taken with white balance bracket regardless of the drive mode settings.
- You will only hear the shutter sound once.
- White balance bracket cannot be set when the [QUALITY] is set to [RAW:III], [RAW:II], or [RAW].
- White balance bracket does not work when recording motion picture.

[REC] mode: **PASM**  **CUST**

## Setting the Light Sensitivity


This allows the sensitivity to light (ISO sensitivity) to be set. Setting to a higher figure enables pictures to be taken even in dark places without the resulting pictures coming out dark.

**1** Press **▲** (ISO).

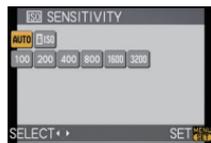

**2** Press **▲/▼/◀/▶** to select the ISO sensitivity and then press **[MENU/SET]** to set.

- You can also use the front dial to set.
- You can also press the shutter button halfway to set.

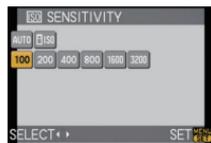

ISO sensitivity	100	3200
Recording location (recommended)	When it is light (outdoors)	When it is dark
Shutter speed	Slow	Fast
Noise	Less	Increased

ISO sensitivity	Settings
<b>AUTO*</b>	The ISO sensitivity is automatically adjusted according to the brightness.
 <b>Intelligent*</b>	The ISO sensitivity is adjusted according to the movement of the subject and the brightness.
<b>100/200/400/800/1600/3200</b>	The ISO sensitivity is fixed to various settings. <b>(When the [ISO INCREMENTS] in [REC] mode menu (P123) is set to [1/3 EV], items of ISO sensitivity that can be set will increase.)</b>

\* When the [ISO LIMIT SET] of [REC] mode menu (P123) is set to anything except [OFF], it is set automatically within the value set in [ISO LIMIT SET].

It is set as following when the [ISO LIMIT SET] is set to [OFF].

- When [AUTO] is selected, ISO sensitivity is adjusted automatically depending on brightness within a maximum setting of [ISO400].

- When setting to [ISO], ISO sensitivity will adjust automatically depending on brightness within the maximum setting of [ISO800]. ([ISO400] when the flash is used)
  - The maximum ISO sensitivity during motion picture recording is [ISO1600].
- [ISO] will operate as [AUTO] while recording a motion picture. Also, [ISO LIMIT SET] is fixed to [OFF].

### ■ About [ISO] (Intelligent ISO sensitivity control)

The camera automatically sets the optimum ISO sensitivity and shutter speed to suit the movement of the subject and brightness of the scene to minimise the jitter of the subject.

- The shutter speed is not fixed when the shutter button is pressed halfway. It is continuously changing to match the movement of the subject until the shutter button is pressed fully. Confirm the actual shutter speed on the information display for the picture being played back.

#### Note

- The higher the value set for the ISO sensitivity, the more the jitter is reduced but the greater the amount of picture noise.
- Refer to P67 for the flash range.
- Depending on the brightness and how fast the subject is moving, jitter may not be avoided even if [ISO] is selected.
- Movements may not be detected when a moving subject is small, when a moving subject is at the edge of the screen or when a subject has moved at the very moment when the shutter button was pressed fully.
- The setting is fixed to [ISO] in the following cases.
  - In [BABY1]/[BABY2] and [PET] in scene mode
  - In [INDOOR PORTRAIT], [NORMAL SPORTS], [OUTDOOR SPORTS] and [INDOOR SPORTS] in advanced scene mode
- Programme shift cannot be activated when the ISO sensitivity is set to [ISO].
- You cannot select [ISO] in shutter-priority AE mode and manual exposure mode. Also, you cannot select [AUTO] in manual exposure mode.
- To avoid picture noise, we recommend reducing the ISO sensitivity, setting [NOISE RED.] in [FILM MODE] towards [+] or setting the items except [NOISE RED.] towards [-] to take pictures. (P88)
- If you want to set ISO sensitivity and record a motion picture, use the Creative motion picture mode. (P108)

[REC] mode: **[A]** **[P]** **[AS]** **[M]** **[M]** **[CUST]** **[SCN]** **[D]** **[A]** **[S]** **[L]** **[\*]**

## Change tone of the colour for the picture to be taken (Film mode)

[You can only select [STANDARD] and [STANDARD] ( **[B&W]** ) in [A], [SCN], [D], [A], [S], [L] and [\*] mode.]

Every type of film for film cameras has its own colour tone and contrast characteristics. In film mode, you can select the colour tone of the pictures from 9 types in the same way as you would select different films for film cameras.

Select different settings in film mode to match the recording situation and your picture of the recording.


### 1 Press [FILM MODE].

- (A) [FILM MODE] button



## 2 Press ◀/▶ to select an item.

- You can also use the front dial to select.
- When you press [DISPLAY] on the screen shown right, explanations about each film mode are displayed. (When you press [DISPLAY] again, the screen returns to the previous screen.)

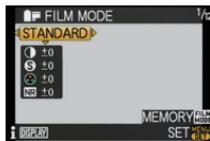

## 3 Press [MENU/SET] to set.

- You can also press the shutter button halfway to set.

Item	Effect
[STANDARD] (COLOUR)	This is the standard setting.
[DYNAMIC] (COLOUR)	The saturation and contrast of the stored colours are increased.
[NATURE] (COLOUR)	Brighter red, green and blue. Enhanced beauty of nature.
[SMOOTH] (COLOUR)	The contrast is lowered for smoother and clearer colour.
[NOSTALGIC] (COLOUR)	Lower saturation and contrast. Reflecting passage of time.
[VIBRANT] (COLOUR)	Higher saturation and contrast than dynamic.
[STANDARD] ( B&W )	This is the standard setting.
[DYNAMIC] ( B&W )	The contrast is increased.
[SMOOTH] ( B&W )	Smooths the picture without losing the skin texture.
[MY FILM 1]/[MY FILM 2]	The saved setting is used.
[MULTI FILM]	It will take pictures changing the type of film in accordance with the setting every time the shutter button is pressed. (Up to 3 pictures)

### Note

- In film mode, the camera may do something equivalent to pull processing or push processing to create a picture with particular characteristics. The shutter speed may become very slow at this time.


## Adjusting each film mode to the desired setting

- You can also set from the quick menu. (P32)

## 1 Press ◀/▶ to select a film.

## 2 Press ▲/▼ to select an item and ◀/▶ to adjust.

- You can also use the front dial to adjust.
- Registered settings are memorised even if the camera is turned off.

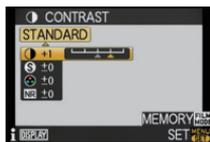

## 3 Press [FILM MODE], press ▲/▼ to select an item, and then press [MENU/SET].



- You can register 2 settings. ([MY FILM 1] and [MY FILM 2])  
(After registering, the film mode name that was registered previously is displayed.)
- [STANDARD] is registered in [MY FILM 1] and [MY FILM 2] at the time of purchase.

Item		Effect
[CONTRAST]	[+]	Increases the difference between the brightness and the darkness in the picture.
	[-]	Decreases the difference between the brightness and the darkness in the picture.
[SHARPNESS]	[+]	The picture is sharply defined.
	[-]	The picture is softly focused.
[SATURATION]	[+]	The colours in the picture become vivid.
	[-]	The colours in the picture become natural.
[NOISE RED.]	[+]	The noise reduction effect is enhanced. Picture resolution may deteriorate slightly.
	[-]	The noise reduction effect is reduced. You can obtain pictures with higher resolution.

#### Note

- Noise may become visible when you take pictures in dark places. To avoid picture noise, we recommend setting [NOISE RED.] towards [+] or setting the items except [NOISE RED.] towards [-] to take pictures.
- If you adjust a film mode, [+] is displayed beside the film mode icon on the LCD monitor/Viewfinder.
- You cannot adjust [SATURATION] in the black and white settings in film mode.
- Film mode cannot be adjusted in the Intelligent auto mode, advanced scene mode and scene mode.

## Multi film bracket

It will take pictures changing the type of film in accordance with the setting every time the shutter button is pressed. (Up to 3 pictures)

- You can also set from the quick menu. (P32)

**1** Press **◀/▶** to select [MULTI FILM].

**2** Select either [MULTI FILM 1], [MULTI FILM 2], or [MULTI FILM 3] with **▲/▼**, and then select the film to be set for each with **◀/▶**.

- You can also use the front dial to set.
- [OFF] can be selected only for [MULTI FILM 3].



**3** Press [MENU/SET] to set.

- You can also press the shutter button halfway to set.

**4** Focus on the subject and take a picture.

- It will continuously take pictures by keeping the shutter button pressed when it is set to burst mode. (Up to 3 pictures)

- When using a self-timer, up to 3 pictures with set film will be taken if the shutter button is pressed. (It will operate same as [S<sub>10</sub>] even if it is set to [S<sub>10</sub>].)
- Multi film indication ([MFF]) displayed on the LCD monitor/Viewfinder will flash until all pictures of preset amount are taken.

### Note

- [STANDARD] is registered in [MULTI FILM 1], [MULTI FILM 2] and [OFF] is registered in [MULTI FILM 3] at the time of purchase.
- **White balance bracket will be disabled when the multi film bracket is set.**
- Multi film bracket does not work while recording motion pictures.

[REC] mode: **AS**

## Taking pictures by specifying the aperture/ shutter speed

### [A] Aperture-priority AE

Set the aperture value to a higher number when you want a sharp focus background. Set the aperture value to a lower number when you want a soft focus background.

**1** Set the mode dial to [A].

**2** Rotate the front dial to set the aperture value.

- It will switch between aperture setting operation and exposure compensation operation every time the front dial is pressed.



**3** Take a picture.

### [S] Shutter-priority AE

When you want to take a sharp picture of a fast moving subject, set with a faster shutter speed. When you want to create a trail effect, set to a slower shutter speed.

**1** Set the mode dial to [S].

**2** Rotate the front dial to set the shutter speed.

- It will switch between shutter speed setting operation and exposure compensation operation every time the front dial is pressed.



**3** Take a picture.

## Note

- It will be a normal motion picture recording when recording a motion picture. Use the **Creative Motion Picture Mode** when you would like to record by setting the aperture or shutter speed. (P108)
- How the exposure compensation is switched can be changed by [EXPO. SETTINGS] (P129) in the [CUSTOM MENU] menu.
- The brightness of the LCD monitor/Viewfinder and the recorded pictures may differ. Check the pictures on the playback screen.
- Set the aperture value to a higher number when the subject is too bright in aperture-priority AE mode. Set the aperture value to a lower number when the subject is too dim.
- When you use a lens with an aperture ring, the setting for the front dial becomes effective if you rotate the aperture ring to the [A] position and the aperture ring setting takes priority if you rotate the aperture ring to a position other than [A] in aperture-priority AE mode.
- The aperture value and the shutter speed displayed on the screen turn red and blink when the exposure is not adequate.
- We recommend using a tripod when the shutter speed is slow.
- When the flash is activated, the shutter speed cannot be set to faster than 1/160th of a second in shutter-priority AE mode. (P68)
- If you press the shutter button fully when the shutter speed is slow, the shutter speed on the screen counts down in shutter-priority AE mode.
- [1/S] and [1/S] cannot be set for shutter-priority AE mode.
- The [SENSITIVITY] is automatically set to [AUTO] when you switch the recording mode to shutter-priority AE mode while the [SENSITIVITY] is set to [iISO] (Intelligent).

[REC] mode: **M**

## Taking picture by setting the exposure manually

Determine the exposure by manually setting the aperture value and the shutter speed.

- 1 Set the mode dial to **[M]**.
- 2 Rotate the front dial to set the aperture and shutter speed.
  - It will switch between aperture setting operation and shutter speed setting operation every time the front dial is pressed.
  - You can also set the focus manually by rotating the focus mode dial to [MF]. (P80)
- 3 Press the shutter button halfway.
  - The manual exposure assistance **(A)** appears on the lower portion of the screen to indicate the exposure.
  - Set the aperture value and the shutter speed again when the exposure is not adequate.
- 4 Take the picture.



## Manual Exposure Assistance

	The exposure is adequate.
	Set to faster shutter speed or larger aperture value.
	Set to slower shutter speed or smaller aperture value.

- The manual exposure assistance is an approximation. We recommend checking the pictures on the playback screen.

## About [B] (Bulb)

If you set the shutter speed to [B], the shutter stays open while the shutter button is pressed fully (up to about 4 minutes).

The shutter closes if you release the shutter button.

Use this when you want to keep the shutter open for a long time to take pictures of fireworks, a night scene etc.

- If you set the shutter speed to [B], [B] is displayed on the screen.
- When you take pictures with the shutter speed set to [B], use a sufficiently charged battery. (P22)
- We recommend using a tripod or the remote shutter (DMW-RSL1; optional) when you take pictures with the shutter speed set to [B]. Refer to P163 for information about the remote shutter.
- When you take pictures with the shutter speed set to [B], noise may become visible. To avoid picture noise, we recommend setting [LONG SHTR NR] in the [REC] mode menu to [ON] before taking pictures. (P123)
- The manual exposure assistance does not appear.

### Note

- **It will be a normal motion picture recording when recording a motion picture. Use the Creative Motion Picture Mode when you would like to record by setting the aperture or shutter speed. (P108)**
- It is possible to change the switching method of aperture and shutter speed settings with the [EXPO. SETTINGS] (P129) in the [CUSTOM MENU] menu.
- The brightness of the LCD monitor/Viewfinder may differ from the brightness of the actual pictures. Check the pictures using the playback screen.
- If the exposure is not adequate, the aperture value and the shutter speed turn red and blink when the shutter button is pressed halfway.
- [~~1/A~~], [~~1/A~~], [~~1/S~~] and [~~1/S~~] for flash cannot be set.
- The [SENSITIVITY] is automatically set to [ISO100] when you switch the recording mode to Manual exposure while the [SENSITIVITY] is set to [AUTO] or [ISO] (Intelligent).
- If you press the shutter button fully when the shutter speed is slow, the shutter speed on the screen counts down.
- When you use a lens with an aperture ring, the aperture ring setting takes priority.

[REC] mode:

## Confirm the effects of aperture and shutter speed (Preview mode)

### Confirm the effects of aperture

You can check the depth of field (effective focus range) before taking a picture by closing the leaf shutter to the aperture value you set.

Press (preview button).

- Preview screen is displayed. It will return to previous screen when is pressed.



### ■ Depth of field properties

*1	Aperture value	Small	Large
	Focus length of the lens	Tele	Wide
	Distance to the subject	Near	Distant
Depth of field (effective focus range)		Shallow (Narrow)*2	Deep (Wide)*3

\*1 Recording conditions

\*2 Example: When you want to take a picture with a blurred background etc.

\*3 Example: When you want to take a picture with everything in focus including the background etc.


### Confirm the effects of shutter speed

Movement can be confirmed by displaying the actual picture that will be taken with that shutter speed.

When the shutter speed is set for high speed, display in the shutter speed preview will be displayed like a time-release film. It is used in cases such as stopping the movement of running water.

Press [DISPLAY] while displaying the preview screen.

- Shutter speed preview screen is displayed. It will return to previous screen by pressing [DISPLAY] again.

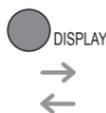

### Note

- Operation method of can be changed with [PREVIEW HOLD] of [CUSTOM MENU] menu (P128).
- It is possible to record while in preview mode.
- Range for shutter speed effect check is 8 seconds to 1/1000th of a second.

[REC] mode:      

## Taking expressive portraits and landscape pictures (Advanced scene mode)

You can take high-quality pictures of such subjects as people, scenery, sporting events and activities, flowers and people in night scenes in accordance with the surrounding conditions.


### 1 Set the mode dial.

### 2 Press /▶ to select the advanced scene mode.

- You can also use the front dial to select.


### 3 Press [MENU/SET] to set.

- The menu screen is switched to the recording screen in the selected advanced scene mode.

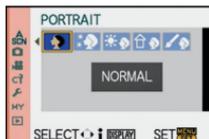

### About the information

- If you press [DISPLAY] when selecting an advanced scene mode in step 2, explanations about each advanced scene mode are displayed. (If you press [DISPLAY] again, the screen returns to the screen shown in step 2.)

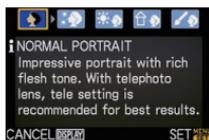

### Note

- To change the advanced scene mode, press [MENU/SET], and return to above step 2 by pressing ▶, while selecting the advanced scene mode menu  by pressing ▲/▼/◀/▶.
- The advanced scene mode flash setting is reset to the initial setting when the advanced scene mode is changed and then used.
- When you take a picture with a advanced scene mode that is not adequate for the purpose, the hue of the picture may differ from the actual scene.
- The following items cannot be set in advanced scene mode because the camera automatically adjusts them to the optimal setting.
  - [SENSITIVITY]/Items other than [STANDARD] and [STANDARD] (**B&W**) in film mode/[METERING MODE]/[FLASH SYNCHRO]/[I.EXPOSURE]/[DIGITAL ZOOM]/[ISO LIMIT SET]

### About the aperture value and the shutter speed when you select a creative setting

- You can change the aperture value and the shutter speed if you select a creative setting in advanced scene mode. If you cannot get an adequate exposure when you rotate the front dial, the aperture value and the shutter speed or the selection cursor will turn red.
- You can also press ◀/▶ to set.
- It will switch between aperture setting or shutter speed setting operation and exposure compensation operation when the front dial is pressed.



 [PORTRAIT]

The person stands out from the background and has a healthier complexion.

 [NORMAL PORTRAIT]

Shades the background and photographs skin colour beautifully.

 [SOFT SKIN]

Makes the skin surface appear especially smooth.

- When [SOFT SKIN] is selected, if a part of the background etc. is a colour close to skin colour, this part is also smoothed.
- When [SOFT SKIN] is selected, this mode may not be effective when there is insufficient brightness.

 [OUTDOOR PORTRAIT]

Prevents faces from appearing dark when photographing outside.

 [INDOOR PORTRAIT]

Sets the ISO sensitivity setting to the appropriate setting to prevent blurring of photo subject for indoor photography.

 [CREATIVE PORTRAIT]

You can change the amount of background blurring by changing the aperture value (P90).

### ■ Technique for Portrait mode

To make this mode more effective:

- 1 Rotate the zoom ring as far as possible to Tele.
- 2 Move close to the subject to make this mode more effective.

### Note

- During motion picture recording, settings for [PORTRAIT] are used.
- In [INDOOR PORTRAIT], the Intelligent ISO sensitivity control operates, and the maximum ISO sensitivity level becomes [ISO400].
- The initial setting for [AF MODE] is [AF-ON].

 [SCENERY]

This allows you to take pictures of a wide landscape.

 [NORMAL SCENERY]

The focus adjusts onto far away subjects as a priority.

 [NATURE]

The best setting for photographing natural scenery.

 [ARCHITECTURE]

This setting takes sharp photographs of architecture. The guide lines are displayed. (P63)

 [CREATIVE SCENERY]

The shutter speed (P90) can be changed in the [NORMAL SCENERY] setting.

 **Note**

- During motion picture recording, settings for [SCENERY] are used.
- The flash setting is fixed to [☺].

 [SPORTS]

Set here when you want to take pictures of sports scenes or other fast-moving events.

 [NORMAL SPORTS]

Controls the ISO sensitivity while stopping movement with a high shutter speed.

 [OUTDOOR SPORTS]

Fast shutter speed for stopping movement when taking photographs outdoors in good weather.

 [INDOOR SPORTS]

Increases the ISO sensitivity and increases the shutter speed to prevent blurring for indoor photography.

 [CREATIVE SPORTS]

The shutter speed (P90) can be changed in the [NORMAL SPORTS] setting.

 **Note**

- During motion picture recording, settings for [SPORTS] are used.

 [CLOSE-UP]

This mode allows you to take close-up pictures of a subject, e.g. when taking pictures of flowers.

(The distance from the subject that you can take close-up pictures differs depending on the lens you are using.)

 [FLOWER]

Flowers outdoor are recorded with natural colours in macro settings. The guide lines are displayed. (P63)

 [FOOD]

You can take pictures of food with a natural hue without being affected by the ambient light in restaurants etc.

 [OBJECTS]

You can take clear and vivid pictures of accessories or small objects in a collection.

 [CREATIVE CLOSE-UP]

You can change the degree of blurring of the background by changing the aperture value in the macro settings. (P90)

 **Note**

- During motion picture recording, the motion picture will reflect the settings for each mode with [FLOWER], [FOOD] and [OBJECTS]. [CREATIVE CLOSE-UP] is suitable for near distance motion picture recording.

- We recommend using a tripod and the self-timer.
- We recommend setting the flash to when you take pictures at close range.
- Refer to “About the focus distance reference mark” on P81 for the focus range.
- When a subject is close to the camera, the effective focus range is significantly narrowed. Therefore, if the distance between the camera and the subject is changed after focusing on the subject, it may become difficult to focus on it again.
- Close-up mode gives priority to a subject close to the camera, so it takes longer to focus on the further subjects.
- When you take pictures at close range, the resolution of the periphery of the picture may decrease slightly. This is not a malfunction.
- If the lens becomes dirty with fingerprints or dust, the lens may not be able to focus on the subject correctly.

## [NIGHT PORTRAIT]

This allows you to take pictures of a person and the background with near real-life brightness.

### [NIGHT PORTRAIT]

Uses when taking photographs of people with night scenery as a background.

- **Open the flash.**  
(You can set to .)
- The initial setting for [AF MODE] is .

### [NIGHT SCENERY]

Night scenery is vividly photographed with a slow shutter.

- **The flash setting is fixed to .**

### [ILLUMINATIONS]

Illuminations are photographed beautifully.

- **The flash setting is fixed to .**

### [CREATIVE NIGHT SCENERY]

The aperture value (P90) can be changed in the [NIGHT SCENERY] setting.

- **The flash setting is fixed to .**

## ■ Technique for Night portrait mode

- Since the shutter speed becomes slower, we recommend using a tripod and the self-timer for taking pictures.
- When [NIGHT PORTRAIT] is selected, keep the subject still for about 1 second after taking the picture.

### Note

- **During motion picture recording, low light settings are used, which will provide better pictures in dimly lit rooms or at nightfall.**
- Noise may become visible when you take pictures in dark places.
- The shutter may remain closed after taking the picture. This is due to signal processing and is not a malfunction.

[REC] mode: **SCN**

## Taking pictures that match the scene being recorded (SCN: Scene mode)

When you select a scene mode to match the subject and recording situation, the camera sets the optimal exposure and hue to obtain the desired picture.

**1** Set the mode dial to **[SCN]**.

**2** Press **◀/▶** to select the scene mode.

- You can also use the front dial to select.

**3** Press **[MENU/SET]** to set.

- The menu screen is switched to the recording screen in the selected scene mode.



### ■ About the information **i**

- If you press **[DISPLAY]** when selecting a scene mode in step **2**, explanations about each scene mode are displayed. (If you press **[DISPLAY]** again, the screen returns to the scene mode menu.)



### **Note**

- To change the scene mode, press **[MENU/SET]**, and return to above step **2** by pressing **▶**, while selecting the scene mode menu **[SCN]** by pressing **▲/▼/◀/▶**.
- The scene mode flash setting is reset to the initial setting when the scene mode is changed and then used.
- When you take a picture with a scene mode that is not adequate for the purpose, the hue of the picture may differ from the actual scene.
- The following items cannot be set in scene mode because the camera automatically adjusts them to the optimal setting.
  - **[SENSITIVITY]**/Items other than **[STANDARD]** and **[STANDARD]** (**B&W**) in film mode/**[METERING MODE]**/**[FLASH SYNCHRO]**/**[I.EXPOSURE]**/**[DIGITAL ZOOM]**/**[ISO LIMIT SET]**

## **[SUNSET]**

Select this when you want to take pictures of a sunset view. This allows you to take vivid pictures of the red colour of the sun.

### **Note**

- During motion picture recording, settings for **[SUNSET]** are used.
- The flash setting is fixed to **[☺]**.

## [PARTY]

Select this when you want to take pictures at a wedding reception, an indoor party etc. This allows you to take pictures of people and the background with near real-life brightness.

### ■ Technique for Party mode

- **Open the flash.** (You can set to [⚡] or [⚡].)
- We recommend using a tripod and the self-timer for taking pictures.

### 📌 Note

- **During motion picture recording, settings for [PARTY] are used.**
- The initial setting for [AF MODE] is [Ⓜ].

## [BABY1]/[BABY2]

This takes pictures of a baby with a healthy complexion. When you use the flash, the light from it is weaker than usual.

It is possible to set different birthdays and names for [BABY1] and [BABY2]. You can select to have these appear at the time of playback, or have them stamped on the recorded image using [TEXT STAMP] (P138).

### ■ Birthday/Name setting

- 1 Press ▲/▼ to select [AGE] or [NAME] and then press ►.
- 2 Press ▲/▼ to select [SET] and then press [MENU/SET].
- 3 Enter the birthday or name.

Birthday: ◀/▶: Select the items (year/month/day).

▲/▼: Setting.  
[MENU/SET]: Exit.

Name: For details on how to enter characters, read the [TITLE EDIT] section on P137.

- When the birthday or name is set, [AGE] or [NAME] is automatically set to [ON].
- If [ON] is selected when the birthday or name has not been registered, the setting screen appears automatically.

- 4 Press [MENU/SET] to finish.

- You can also use the front dial to set.



### ■ To cancel [AGE] and [NAME]

Select the [OFF] setting in step 2 of the “Birthday/Name setting” procedure.

### 📌 Note

- **During motion picture recording, settings for [PORTRAIT] are used.**
- The age and name can be printed out using the “PHOTOfunSTUDIO 3.1 HD Edition” bundled software on the CD-ROM (supplied).
- If [AGE] or [NAME] is set to [OFF] even when the birthday or name has been set, the age or name will not be displayed. Before taking pictures, set [AGE] or [NAME] to [ON].
- Intelligent ISO sensitivity control is activated, and maximum ISO sensitivity level becomes [ISO400].
- If the camera is turned on with [BABY1]/[BABY2] set, the age and name are displayed at the lower left of the screen for about 5 seconds, along with the current date and time.
- If the age is not properly displayed, check the clock and birthday settings.
- The birthday setting and name setting can be reset with [RESET].
- The initial setting for [AF MODE] is [Ⓜ].



Select this when you want to take pictures of a pet such as a dog or a cat. You can set your pet's birthday and name. You can select to have these appear at the time of playback, or have them stamped on the recorded image using [TEXT STAMP] (P138). For information about [AGE] or [NAME], refer to [BABY1]/[BABY2] on P99.

### Note

- It will be a normal motion picture recording during the motion picture recording.
- The initial setting for the AF assist lamp is [OFF].
- Intelligent ISO sensitivity control is activated, and maximum ISO sensitivity level becomes [ISO800].
- The initial setting for [AF MODE] is [ $\infty$ ].
- Refer to [BABY1]/[BABY2] for other information about this mode.

[REC] mode:

## Taking pictures while adjusting colour

: My colour mode)

Easily confirm the subject on the LCD monitor or viewfinder (Live View) and adjust the colour, brightness, or saturation before taking a picture.

**1** Set the mode dial to .

**2** Press  $\blacktriangle/\blacktriangledown$  to select an item and press  $\blacktriangleleft/\blacktriangleright$  to adjust the item.

- You can also use the front dial to set.



Item	Adjustment contents
[COLOR]	This will adjust the colour of the image from red light to blue light. (11 steps in $\pm 5$ )
[BRIGHTNESS]	This will adjust the brightness of the image. (11 steps in $\pm 5$ )
[SATURATION]	This will adjust the colour intensity of the image from black and white to vivid colour. (11 steps in $\pm 5$ )
[RESET]	Return all settings to default

- Description of adjustment is displayed by pressing [DISPLAY]. (It will return to selection screen when it is pressed again.)

**3** Press [MENU/SET] to set.

- You can also press the shutter button halfway to set.
- Recording screen is displayed.



## ■ Return My colour settings to default

- 1 Select [RESET] in above step 2.
- 2 Press ◀ to select [YES] and press [MENU/SET].
  - Adjusted value for each item returns to standard (centre point).

## ■ Readjust the My colour settings

Return to above step 2 by pressing front dial or one of ▲/▼/◀/▶.

- [SENSITIVITY] (P86), [Fn BUTTON SET] (P33) or [AF MODE] (P77) cannot be set with ▲/▼/◀.
- Make the setting with the quick menu (P32).

### Note

- During motion picture recording, settings for My colour mode are used.
- Adjustments made with My colour mode are not in effect in other recording modes.
- My colour setting set is memorised even if the camera is turned off.
- Icons for the adjusted items are displayed in the LCD monitor/viewfinder when the My Colour settings are adjusted. Displayed icon is the one for direction of adjustment.
- Auto bracket cannot be used in My colour mode.
- AF tracking may not function if you adjust [SATURATION] to make the colour lighter.

[REC] mode: 

## Registering Personal Menu Settings (Registering custom settings)

It is possible to register up to 3 sets of current camera settings as custom sets.

- Set to the mode dial to the desired mode and select the desired menu settings in advance.

### 1 Select [CUST. SET MEM.] in the [CUSTOM MENU] menu. (P30)

### 2 Press ▲/▼ to select the custom set to register and then press [MENU/SET].



### 3 Press ▲ to select [YES] and then press [MENU/SET].

- When [YES] is selected, the settings that were previously stored are overwritten.
- You cannot save the following menu items because they affect other recording modes.
  - [CLOCK SET], [TRAVEL DATE], [NO.RESET], [RESET] and [SCENE MENU]
  - [BABY1]/[BABY2] or [PET] birthday and name settings in scene mode
  - Data registered with [FACE RECOG.]



### 4 Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

[REC] mode: **CUST**

## Taking pictures in Custom mode

You can select one of your own custom settings saved with [CUST. SET MEM.] to suit the picture-taking conditions.

Initial setting of the programme AE mode is registered as the custom settings initially.

### 1 Set the mode dial to **[CUST]**.


- (A) Display custom settings

### 2 Press [MENU/SET] to display the menu.




### 3 Press **▲/▼** to select the custom settings you want to use.

- Press **▶** or the front dial to display the settings for each menu item. (Press **◀** to return to the selection screen.)
- Only some of the menu items are displayed. (Refer to the following for the menu items that are displayed.)

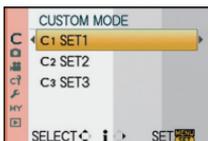

<b>AFL</b> <b>AEL</b>	[AF/AE LOCK]	<b>P-AF</b>	[PRE AF]
<b>AF- HOLD</b>	[AF/AE LOCK HOLD]	<b>[Fn]</b>	[Fn BUTTON SET]
<b>+AF</b>	[AF+MF]	<b>[REVIEW]</b>	[AUTO REVIEW]
<b>FOCUS</b> <b>MODE</b>	[FOCUS PRIORITY]	<b>[NR]</b>	[LONG SHTR NR]
<b>AF*</b>	[AF ASSIST LAMP]	<b>[SHOOT]</b>	[SHOOT W/O LENS]

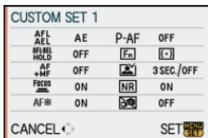

### 4 Press [MENU/SET] to enter the settings.

- (A) Saving of the selected custom settings is displayed on the screen.

#### ■ When changing the menu settings

Even if the menu settings are changed temporarily with [C 1 SET1], [C 2 SET2] or [C 3 SET3] selected, what has been registered will remain unchanged.

To change what has been registered, overwrite the registered data using [CUST. SET MEM.] (P101) on the [CUSTOM MENU] menu.

#### Note

- You cannot register the settings of the following menu items as a custom mode. If they are changed, other recording modes will also be affected.
  - [CLOCK SET], [TRAVEL DATE], [NO.RESET], [RESET] and [SCENE MENU]
  - [BABY1]/[BABY2] or [PET] birthday and name settings in scene mode
  - Data registered with [FACE RECOG.]

[REC] mode: **iA P A S M**  **CUST** **SCN**      

## Recording Motion Picture

This can record full high definition motion pictures compatible with the AVCHD format or motion pictures recorded in Motion JPEG.


Audio will be recorded in stereo and Dolby Digital Stereo Creator format.

Auto focus and automatic setting of the aperture are available even during the recording of a motion picture when the 14–140 mm/F4.0–5.8 lens included in DMC-GH1K is used. Refer to P15 for information about other lenses.

- Close the flash.

### 1 Select the mode.

- (A) Mode dial
- (B) Motion picture button

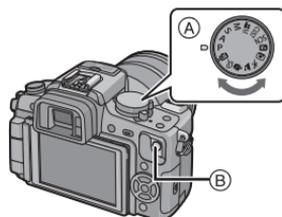

### ■ Modes that can be recorded for motion picture

Item	Settings/Note
<b>iA</b> Intelligent auto mode	The camera will set the most appropriate settings to match the subject and the recording conditions, so you can leave the settings to the camera and take motion pictures easily. (P48)
<b>P/A/S/M</b> mode	Record motion pictures by automatically setting aperture and shutter speed.
 Creative motion picture mode	Record motion pictures by manually setting aperture and shutter speed.
<b>CUST</b> Custom mode	Record motion pictures with selected custom mode settings.
<b>SCN</b> Scene mode	Record motion pictures that match the scene being recorded. (P98 to 100)
 [PORTRAIT]	Record motion pictures with [PORTRAIT] setting.
 [SCENERY]	Record motion pictures with [SCENERY] setting.
 [SPORTS]	Record motion pictures with [SPORTS] setting.
 [CLOSE-UP]	This mode allows you to record motion pictures suitable for [FLOWER], [FOOD] and [OBJECTS] modes and for near distance recording.
 [NIGHT PORTRAIT]	Record clear motion pictures with low light setting inside dim rooms or at dusk.
 My colour mode	Record motion pictures in My colour mode setting.

## 2 Set the focus mode dial to [AFS] or [AFC].

- When recording motion pictures, the focus is continuously adjusted for both [AFS] and [AFC].

## 3 Start recording by pressing the motion picture button.

- (A) Elapsed recording time
- (B) Available recording time

- Release the motion picture button right after you press it. Audio will not be recorded for few second after it starts recording if it is kept pressed.
- The audio is also recorded simultaneously from the built-in microphone on this unit. (Motion pictures cannot be recorded without audio.)



- The recording state indicator (red) (C) will flash while recording motion pictures.
- Press the shutter button halfway when it is difficult to focus on the subject.
- You can also set the focus manually by rotating the focus mode dial to [MF]. (P80)
- Check the battery status and make sure the power is on when using the stereo microphone (DMW-MS1; optional) (P164).

## 4 Stop the recording by pressing the motion picture button again.

- If the card becomes full in the middle of recording, the camera stops recording automatically.

### Note

- The flash setting is fixed to [☺].
- Available recording time is displayed when the [REMAINING DISP.] (P130) in the [CUSTOM MENU] menu is set to [REMAINING TIME].
- Refer to P187 for information about the available recording time.
- The available recording time displayed on the screen may not decrease regularly.
- Depending on the type of the card, the card access indication may appear for a while after recording motion pictures. This is not a malfunction.
- The operational sound of the zoom or button operation may be recorded when it is operated during the recording of a motion picture.
- The screen may be blacked out momentarily, or the unit may record noise due to static electricity or electromagnetic waves etc. depending on the environment of the motion picture recording.
- When operating the zoom in recording motion pictures, it may take time to come into focus.
- If the Extra optical zoom was used before pressing the motion picture button, those settings will be cleared, so the focus range will change dramatically.
- When the aspect ratio setting is different in still and motion pictures, the angle of view changes at the start of motion picture recording. When [📐 REC AREA] (P130) is set to [👤], angle of view during motion picture recording is displayed.
- [ISO] will operate as [AUTO] while recording a motion picture, and the maximum ISO sensitivity level becomes [ISO1600].
- In recording motion pictures, [STABILIZER] is fixed to [MODE1].
- In recording motion pictures, the following functions cannot be used.
  - [📷] and [📷] in [AF MODE]
  - Direction detection function
  - [FACE RECOG.]/[EX. OPT. ZOOM]/[ISO LIMIT SET]/[DIRECT AF AREA]
- It is recommended to use a fully charged battery or AC adaptor when recording motion pictures.

- If while recording motion pictures using the AC adaptor the power supply is cut off due to a power cut or if the AC adaptor is disconnected etc., the motion picture being recorded will not be recorded.
- **When recording fast-moving subjects in the [FHD] setting, some afterimages or distortion may be particularly noticeable during playback.**
- When you attach the stereo microphone (DMW-MS1; optional), it takes priority over the built-in microphone. Refer to P164 for the stereo microphone.

## Changing [REC MODE] and [REC QUALITY]

- 1** Select [REC MODE] from the [MOTION PICTURE] mode menu, and press **▶**. (P30)



- 2** Press **▲/▼** to select the item and then press [MENU/SET].



Recording format	Effect
[AVCHD]	This is the data format appropriate to playback on the high definition TV, etc. High definition motion picture can be recorded for long time.
[MOTION JPEG]	This is the data format appropriate to playback on the PC, etc. It can be recorded with small picture size, making it convenient when there is not much space left on the memory card or when you want to attach the motion picture to an e-mail on the PC later.

- 3** Press **▲/▼** to select [REC QUALITY] and then press **▶**.



- 4** Press **▲/▼** to select the item and then press [MENU/SET].

## When [AVCHD] is selected in step 2

	Item	Quality (bit rate) <sup>*1</sup>		fps	Aspect ratio
<b>High quality</b>  <b>Longer time</b>	 ([FHD])	1920×1080 pixels 17 Mbps <sup>*2</sup>	Full high definition	50i (Sensor output is 25 fps)	16:9
	 ([SH])	1280×720 pixels 17 Mbps <sup>*2</sup>			
	 ([H])	1280×720 pixels 13 Mbps <sup>*2</sup>	High definition	50p (Sensor output is 50 fps)	
	 ([L])	1280×720 pixels 9 Mbps <sup>*2</sup>			

## \*1 What is bit rate

This is the volume of data for definite period of time, and the quality becomes higher when the number gets bigger. This unit is using the “VBR” recording method. “VBR” is an abbreviation of “Variable Bit Rate”, and the bit rate (volume of data for definite period of time) is changed automatically depending on the subject to record. Therefore, the recording time is shortened when a subject with fast movement is recorded.

## \*2 What is Mbps

This is an abbreviation of “Megabit Per Second”, and it represents the speed of transmission.

## When [MOTION JPEG] is selected in step 2

	Item	Picture size	fps	Aspect ratio
<b>High quality</b>  <b>Longer time</b>	 ([HD])	1280×720 pixels	30	16:9
	 <sup>*3</sup> ([WVGA])	848×480 pixels		
	 ([VGA])	640×480 pixels		
	 ([QVGA])	320×240 pixels		4:3

## \*3 This item cannot be set in the Intelligent auto mode.

- With the [AVCHD] or  for [MOTION JPEG], high quality motion picture can be enjoyed on the TV by using the HDMI mini cable (optional). For details, see “Playing back on the TV with HDMI socket” on P149.

## 5 Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

### Note

- It is recommended to use a card with SD Speed Class<sup>\*1</sup> with “Class 6” or higher when recording motion pictures.

\*1 The SD Speed Class Rating is the speed standard for successive writes.

- When you set the picture quality to [P1], [P2] or [P3], we recommend using a high-speed card with "10MB/s" or greater displayed on the package.
- Motion pictures can be recorded continuously for up to 29 minutes 59 seconds. Also, motion picture recorded continuously in [MOTION JPEG] is up to 2 GB. (Example: [8m 20s] with [P1]) Remaining time for continuous recording is displayed on the screen.
- Recording and deleting repeatedly may cause the recordable time on the card to be reduced. In this case, format (P38) the card in the unit. Because formatting will delete all data recorded on the card, save important data beforehand on the computer.
- **Motion pictures recorded in [AVCHD] or [MOTION JPEG] may be played back with poor picture or sound quality or playback may not be possible even when played back with equipment compatible with these formats. Also, the recording information may not be displayed properly. In this case, use this unit.**  
For details on AVCHD compatible devices, refer to the support sites below.  
<http://panasonic.co.jp/pavc/global/cs>

(This Site is English only.)

- Motion picture recorded in [AVCHD] cannot be played back on the equipment that is not compatible to the AVCHD (conventional DVD recorder, etc.), so read the instruction manual for the equipment in use for the action.
- Motion picture recorded in [AVCHD] does not comply with the "DCF/Exif", so some information will not display while playback.
- **The sound recording specifications on this model have been changed to improve audio quality. For this reason, some motion pictures recorded in [MOTION JPEG] and pictures with audio may not be played back with Panasonic digital cameras (LUMIX)\*. (Motion pictures recorded with a Panasonic digital camera (LUMIX) can be played back on this model.)**


\* Models launched before December 2008, and some models launched in 2009 (FS, LS series).

## [WIND CUT]

Wind noise can be reduced efficiently. Use this when the wind noise is bothersome.

- 1** Select [WIND CUT] from the [MOTION PICTURE] mode menu, and press **▶**. (P30)
- 2** Press **▲/▼** to select the item and then press [MENU/SET].
- 3** Press [MENU/SET] to close the menu.

- You can also press the shutter button halfway to close the menu.

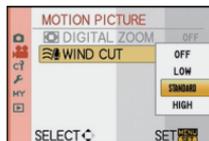

### Note

- Sound quality will be different than usual when [WIND CUT] is set.
- [WIND CUT] does not function with still pictures with audio or when audio dubbing.

[REC] mode: 

## Recording Motion Picture with Manual Settings

: Creative motion picture mode)

It is possible to manually change the aperture and shutter speed and record motion pictures. Switching the [EXPOSURE MODE] allows you to use settings such as those when mode dial is switched to [P], [A], [S] and [M], including changing items that can be set with the front dial during recording.

- 1 Set the mode dial to .
- 2 Set the focus mode dial to [AFS] or [AFC].
- 3 Select [EXPOSURE MODE] from the [MOTION PICTURE] mode menu, and press . (P30)
- 4 Press / to select the item and then press [MENU/SET].



Item	Items that can be set	
		
P (Programme AE mode)	—	exposure compensation
A (Aperture-priority AE mode)	aperture	exposure compensation
S (Shutter-priority AE mode)	shutter speed	exposure compensation
M (Manual exposure mode)	shutter speed	aperture

- 5 Press [MENU/SET] to close the menu.
  - You can also press the shutter button halfway to close the menu.

- 6 Rotate the front dial to change setting.
  - Items that can be set will switch every time the front dial is pressed.



- 7 Start recording by pressing the motion picture button.

- 8 Stop the recording by pressing the motion picture button again.
  - If the card becomes full in the middle of recording, the camera stops recording automatically.

■ **Setting the aperture value and shutter speed for each [EXPOSURE MODE]**  
 (When 14–140 mm/F4.0–5.8 lens included in DMC-GH1K is used)

[EXPOSURE MODE]	Aperture value	Shutter speed (Sec.)
P	—	—
A	F4.0 (Wide)/F5.8 (Tele) to F22	
S	—	1/30 to 1/4000th
M	F4.0 (Wide)/F5.8 (Tele) to F22	

 **Note**

• **Aperture value**

- Set the aperture value to a higher number when you want a sharp focus background. Set the aperture value to a lower number when you want a soft focus background.

• **Shutter speed**

- When you want to take a sharp picture of a fast moving subject, set with a faster shutter speed. When you want to create a trail effect, set to a slower shutter speed.
- Manually setting a higher shutter speed may increase the noise on-screen due to the higher sensitivity.
- Colour or brightness of the image may change, or you may see horizontal bars on the sides of the image when the subject is recorded in an extremely bright place or under fluorescent light, mercury light, sodium light, etc. In this case, record in another recording mode or manually adjust the shutter speed to 1/60 or 1/100.
- The [AF MODE] is automatically set to [■] when you switch the recording mode to Creative motion picture mode while the [AF MODE] is set to [⌂].
- [% REC AREA] (P130) is fixed to [●●].
- [REMAINING DISP.] (P130) is fixed to [REMAINING TIME].
- It is possible to press the shutter button and record motion pictures.
- You can change the settings and switch settable items even during motion picture recording. However please note that operating sounds may be recorded.
- Refer to “Recording Motion Picture” on P103 for other settings and operations for recording motion pictures.
- **The sound recording specifications on this model have been changed to improve audio quality. For this reason, some motion pictures recorded in [MOTION JPEG] and pictures with audio may not be played back with Panasonic digital cameras (LUMIX)\*.** (Motion pictures recorded with a Panasonic digital camera (LUMIX) can be played back on this model.)
- \* Models launched before December 2008, and some models launched in 2009 (FS, LS series).

[REC] mode: **PASM**

## Taking a picture with Face Recognition function

For details on [REC] mode menu settings, refer to P30.

### Face Recognition functions

When [AF MODE] is set to , the following [FACE RECOG.] functions will work when [FACE RECOG.] in [REC] mode menu is set to [ON].

- It will search for the face similar to the registered face, setting the focus and exposure preferentially.
- If a name is set for a registered face, the name is displayed when the camera detects the registered face.
- The camera will remember the face during the face recognition when the [AUTO REGISTRATION] is set to [ON], and detect the face that the picture is taken for many times automatically, displaying the face recognition registration screen.
- It is possible to display the name during playback.



### Face settings

Up to 6 face images can be registered together with information such as name and birthday. It makes the recognition easier by registering multiple images of same person.

#### ■ Registering from the [REC] mode menu

- 1 Press () and then press to set [AF MODE] to .
- 2 Select [FACE RECOG.] on the [REC] mode menu and then press (P30)
- 3 Press / to select [MEMORY] and then press [MENU/SET].
  - A list of registered people is displayed when there are 6 people already registered. Select the person to be replaced. Information of the person that was replaced will be deleted.
- 4 Take the picture adjusting the face with the guide.




**5** Press **▲** to select [YES] and then press [MENU/SET].

**6** Press **▲/▼** to select the item and then press **▶**.

[NAME]: It is possible to register names.  
For details on how to enter characters, read the [TITLE EDIT] section on P137.

Ⓐ Face image

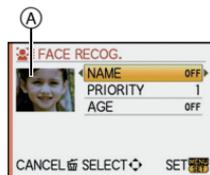

Edit screen

[PRIORITY]: The focus and exposure are preferentially adjusted for higher-priority faces.  
The priority can be changed in following operation.  
Press **▲/▼/◀/▶** to select the priority and then press [MENU/SET].

[AGE]: Press **◀/▶** to select the items, and then press **▲/▼** to set and then press [MENU/SET].

- Face image can be retaken by selecting Ⓐ by pressing **◀** in the edit screen, and then pressing [MENU/SET].  
Return to step **4** by selecting [YES] with **▲**, and pressing [MENU/SET].

**7** Press [MENU/SET] to close the menu.

#### ■ Changing information for registered faces

- 1** In Step **3** of “Registering from the [REC] mode menu”, select [SET] and then press [MENU/SET].
- 2** Press **▲/▼** to select [EDIT] and then press [MENU/SET].
- 3** Select the face you wish to edit with **▲/▼/◀/▶**, press [MENU/SET] and proceed from step **6** in “Registering from the [REC] mode menu”.




#### ■ Registering from the automatic registration screen

When the [AUTO REGISTRATION] is set to [ON] in step **2** of the “Changing information for registered faces”, the registration screen will display automatically after taking the picture of a face that has high number of appearance.


(Registration screen is displayed after approximately 5 pictures. It is not counted when the burst mode, auto bracket, white balance bracket, multi film bracket or [AUDIO REC.] is set.)

- 1** Press **▲** to select [YES] and then press [MENU/SET].
  - Selection screen is displayed again when [NO] is selected, and when [YES] is selected with **▲**, [AUTO REGISTRATION] will be set to [OFF].
- 2** Use the operation in Step **6** and following in “Registering from the [REC] mode menu”.
  - Automatic register screen is not displayed when there are 6 people already registered.

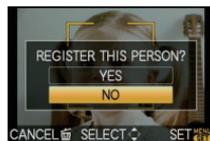

## ■ Deleting information for registered faces

- 1 In Step 2 of “Changing information for registered faces”, select [DELETE] and then press [MENU/SET].
- 2 Press ▲/▼/◀/▶ to select the image of the person to delete and then press [MENU/SET].
- 3 Press ▲ to select [YES] and then press [MENU/SET].

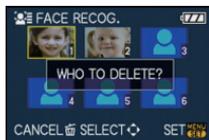

### Note

- [FACE RECOG.] only works when [AF MODE] is set to [∞].
- Face Recognition may not be possible or may not recognise faces correctly even for registered faces in the following instances, depending on the facial expression and environment.
  - When the face is not facing the camera
  - When the face is at an angle
  - When the face is extremely bright or dark
  - Hidden by sunglasses, glasses reflecting light, hair, hat, etc.
  - When the face appears small on the screen
  - The entire face is not in the screen
  - When distinctive facial features have changed with age
  - Facial expression is very different
  - When there is little contrast on the faces
  - When there is rapid movement
  - When the camera is shaking
  - When digital zoom is used
- During the burst mode, [FACE RECOG.] picture information can be attached to only the first picture.
- After pressing the shutter button halfway down, a different person's picture information may be added when the camera is turned to a different subject to take the photograph.
- When a person who is registered is not recognised, correct by re-registering.
- [FACE RECOG.] cannot be used with the [FOOD] in [CLOSE-UP], [NIGHT SCENERY] and [ILLUMINATIONS] in [NIGHT PORTRAIT] and in recording motion pictures.
- The data registered with [FACE RECOG.] will be reset when the [REC] menu settings are reset with [RESET].
- Name registered with [FACE RECOG.] does not display for an image with names set in [BABY1]/[BABY2] and [PET] of the scene mode, [LOCATION] in travel date, or characters set in [TITLE EDIT].
- Software “PHOTOfunSTUDIO 3.1 HD Edition” in the CD-ROM (supplied) allows to check information of up to 3 people registered in one picture.

[REC] mode: **PA** **SM** **M** **CUST** **SCN** **W** **A** **R** **S** **+** **+** **+**

## Useful Functions at Travel Destinations

### Recording which Day of the Vacation You Take the Picture

For details on the [SETUP] menu settings, refer to P30.


If you set the departure date or the travel destination of the vacation in advance, the number of days that have passed since the departure date (which day of the vacation it is) is recorded when you take the picture. You can display the number of days that have passed when playing back the pictures and stamp it on the recorded pictures with [TEXT STAMP] (P138).

- The number of days that have passed since the departure date can be printed out using the "PHOTOfunSTUDIO 3.1 HD Edition" bundled software on the CD-ROM (supplied).
- Select [CLOCK SET] to set the current date and time in advance. (P28)

- 1 Select [TRAVEL DATE] from the [SETUP] menu, and then press **▶**.



- 2 Press **▲** to select [TRAVEL SETUP] and then press **▶**.

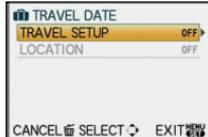

- 3 Press **▼** to select [SET] and then press [MENU/SET].




- 4 Press **▲/▼/◀/▶** to set the departure date (year/month/day), and then press [MENU/SET].




- 5 Press **▲/▼/◀/▶** to set the return date (year/month/day), and then press [MENU/SET].

- If you do not want to set the return date, press [MENU/SET] while the date bar is displayed.

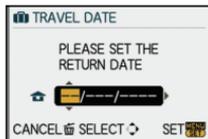

- 6** Press **▼** to select [LOCATION] and then press **▶**.

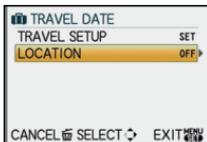

- 7** Press **▼** to select [SET] and then press **[MENU/SET]**.



- 8** Enter the location.

- For details on how to enter characters, read the [TITLE EDIT] section on P137.

- 9** Press **[MENU/SET]** twice to close the menu.

- 10** Take a picture.

- The number of days that have passed since the departure date is displayed for about 5 seconds if this unit is turned on etc. after setting the travel date or when the travel date is set.
- When the travel date is set,  appears on the lower right of the screen.

### ■ Cancelling the travel date

The travel date is automatically cancelled if the current date is after the return date. If you want to cancel the travel date before the end of the vacation, select [OFF] on the screen shown in step **3** or **7** and then press [MENU/SET] twice. If the [TRAVEL SETUP] is set to [OFF] in step **3**, [LOCATION] will be also set to [OFF].

### Note

- The travel date is calculated using the date in the clock setting and the departure date you set. If you set [WORLD TIME] (P115) to the travel destination, the travel date is calculated using the date in the clock setting and the travel destination setting.
- The travel date setting is memorised even if the camera is turned off.
- If [TRAVEL DATE] is set to [OFF], the number of days that have passed since the departure date will not be recorded even if you set the travel date or the return date. Even if [TRAVEL DATE] is set to [SET] after taking the pictures, which day of the vacation you took them is not displayed.
- If you set a departure date and then take a picture on a date before this departure date, [-] (minus) is displayed in orange and the day of the vacation that you took the picture is not recorded.
- If the travel date is displayed as [-] (minus) in white, there is a time difference that involves date change between the [HOME] and [DESTINATION]. (It will be recorded)
- The text set as [LOCATION] can be edited later with [TITLE EDIT].
- The name for [BABY1]/[BABY2] and [PET] in scene mode will not be recorded when [LOCATION] is set.
- [TRAVEL DATE] cannot be recorded when taking motion pictures.
- [TRAVEL DATE] cannot be set in the Intelligent auto mode. Setting of other recording mode will be reflected.

## Recording Dates/Times at Overseas Travel Destinations (World Time)

For details on the [SETUP] menu settings, refer to P30.

You can display the local times at the travel destinations and record them on the pictures you take.


- Select [CLOCK SET] to set the current date and time in advance. (P28)

**1** Select [WORLD TIME] from the [SETUP] menu, and then press **▶**.

- When first using the camera after purchasing it, the [PLEASE SET THE HOME AREA] message appears. Press [MENU/SET], and set the home area on the screen in step **3**.



**2** Press **▼** to select [HOME], and then press [MENU/SET].

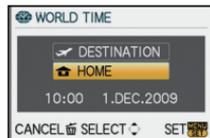

**3** Press **◀/▶** to select the home area, and then press [MENU/SET].

- (A) Current time
- (B) Time difference from GMT (Greenwich Mean Time)
- If daylight saving time [**☀/☿**] is used at the home area, press **▲**. Press **▲** again to return to the original time.
- The daylight saving time setting for the home area does not advance the current time. Advance the clock setting by one hour.



**4** Press **▲** to select [DESTINATION] and then press [MENU/SET] to set.

- (C) Depending on the setting, the time at the travel destination area or the home area is displayed.



**5** Press **◀/▶** to select the area the travel destination is in and then press [MENU/SET] to set.

- (D) Current time of the destination area
- (E) Time difference
- If daylight saving time [**☀/☿**] is used at the travel destination, press **▲**. (The time advances by one hour.) Press **▲** again to return to the original time.



**6** Press [MENU/SET] to close the menu.

**Note**

- Return the setting to [HOME] when the vacation is finished by performing steps **1**, **2** and **3**.
- If [HOME] is already set, change only the travel destination, and use.
- If you cannot find the travel destination in the areas displayed on the screen, set by the time difference from the home area.
- Except for the motion pictures recorded in [AVCHD], the pictures recorded at travel destination will display [✂] on the screen when played back.

## Using the [REC] Mode Menu

- [METERING MODE], [I.EXPOSURE], and [DIGITAL ZOOM] are common to both the [REC] mode menu and [MOTION PICTURE] mode menu. Changing these settings in one of these menus is reflected in other menu.

### [ASPECT RATIO]

For details on [REC] mode menu settings, refer to P30.

This allows you to select the aspect ratio of the pictures to suit printing or the playback method.

Applicable modes: **iA P A S M CUST SCN**      

**[4:3]**: [ASPECT RATIO] of a 4:3 TV

**[3:2]**: [ASPECT RATIO] of a 35 mm film camera

**[16:9]**: [ASPECT RATIO] of a high-definition TV, etc.

**[1:1]**: Square aspect ratio

**[4:3]**



**[3:2]**



**[16:9]**



**[1:1]**

**Note**

- The ends of the recorded pictures may be cut at printing so check before printing. (P181)

## [PICTURE SIZE]

For details on [REC] mode menu settings, refer to P30.

Set the number of pixels. The higher the numbers of pixels, the finer the detail of the pictures will appear even when they are printed onto large sheets.

Applicable modes: **[TA] P A S M** CUST SCN    

■ When the aspect ratio is [4:3].

L	4000×3000 pixels (12 million pixels)
M	2816×2112 pixels (5.9 million pixels)
S	2048×1536 pixels (3.1 million pixels)

■ When the aspect ratio is [3:2].

L	4128×2752 pixels (11.4 million pixels)
M	2928×1952 pixels (5.7 million pixels)
S	2064×1376 pixels (2.8 million pixels)

■ When the aspect ratio is [16:9].

L	4352×2448 pixels (10.7 million pixels)
M	3072×1728 pixels (5.3 million pixels)
S	1920×1080 pixels (2.1 million pixels)

■ When the aspect ratio is [1:1].

L	2992×2992 pixels (9.0 million pixels)
M	2112×2112 pixels (4.5 million pixels)
S	1504×1504 pixels (2.3 million pixels)

### Note

- If you set [EX. OPT. ZOOM] (P121) to [ON], [EZ] is displayed on the screen when the picture size is set to a size other than the maximum picture size for each aspect ratio. "EZ" is an abbreviation of "Extra optical Zoom".


- A digital picture is made of numerous dots called pixels. The higher the numbers of pixels, the finer the picture will be when it is printed on a large piece of paper or displayed on a PC monitor.

(A) Many pixels (Fine)

(B) Few pixels (Rough)

\* These pictures are examples to show the effect.

- If you change the aspect ratio, set the picture size again.
- Refer to P183 for information about the number of recordable pictures.

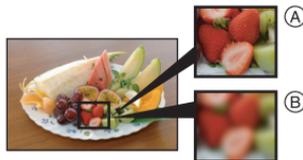

 [QUALITY]
**For details on [REC] mode menu settings, refer to P30.**

Set the compression rate at which the pictures are to be stored.

**Applicable modes:**             

: Fine (when giving priority to the picture quality)

: Standard (when using the standard picture quality and increasing the number of pictures to be recorded without changing the number of pixels)

: RAW+Fine (In addition to the [RAW] settings, a fine-equivalent JPEG image is simultaneously created.)\*<sup>1</sup>

: RAW+Standard (In addition to the [RAW] settings, a standard-equivalent JPEG image is simultaneously created.)\*<sup>1</sup>

: RAW file (When the image is to be edited with a PC in high quality)\*<sup>2</sup>

\*<sup>1</sup> If you delete a RAW file from the camera, the corresponding JPEG image will also be deleted.

\*<sup>2</sup> It is fixed to maximum recordable pixels ([L]) for each image aspect ratio.

 **Note**

- Refer to P183 for information about the number of recordable pictures.
- You can enjoy more advanced picture editing if you use RAW files. You can save RAW files in a file format (JPEG, TIFF etc.) that can be displayed on your PC etc., develop them and edit them using the software "SILKYPIX Developer Studio" by Ichikawa Soft Laboratory on the CD-ROM (supplied).
- [RAW] images are recorded with a smaller data volume than [RAW] or [RAW].
- [PRINT SET] and [FAVORITE] cannot be set to a picture taken by [RAW].

 [FACE RECOG.]
**For details on [REC] mode menu settings, refer to P30.**

Specify a person's face and use the face recognition functions.

**Applicable modes:**             

[OFF]/[ON]/[MEMORY]/[SET]

 **Note**

- Refer to P110 for details.

## [METERING MODE]

For details on [REC] mode menu settings, refer to P30.

Type of optical measurement to measure brightness can be changed.

Applicable modes: **P A S M**  **CUST** 

[]: Multiple


This is the method in which the camera measures the most suitable exposure by judging the allocation of brightness on the whole screen automatically. Usually, we recommend using this method.

[]: Centre weighted

This is the method used to focus on the subject on the centre of the screen and measure the whole screen evenly.

[]: Spot

This is the method to measure the subject in the spot metering target .

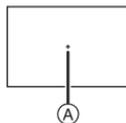

### Note

- When the AF mode is set to  while [] is selected, exposure is adjusted to the face of a person, and when it is set to , exposure is adjusted to the locked subject.

## [STABILIZER]

For details on [REC] mode menu settings, refer to P30.

Using one of these modes, jitter during picture taking is detected, and the camera automatically compensates the jitter, enabling jitter-free images to be taken.

Check that the [O.I.S.] switch on the lens is set to [ON].

Applicable modes: **TA P A S M** **CUST** **SCN**      

[MODE1]: Jitter is always compensated during [REC] mode.

[MODE2]: The jitter is compensated for when the shutter button is pressed.

[MODE3]: Camera shake is corrected for up/down movements. This mode is ideal for panning (a method of taking pictures which involves turning the camera to track the movements of a subject which continues to move in a fixed direction).

### Note

- The stabilizer function may not be effective in the following cases.
  - When there is a lot of jitter.
  - When the zoom magnification is high.
  - When using the digital zoom.
  - When taking pictures while following a moving subject.
  - When the shutter speed becomes slower to take pictures indoors or in dark places.

- Be careful of camera jitter when you press the shutter button.
- The panning effect in [MODE3] is more difficult to achieve in the following cases.
  - In brightly lit places such as in broad daylight on a summer's day
  - When the shutter speed is faster than 1/100th of a second.
  - When you move the camera too slowly because the subject is moving slowly. (The background will not become a blur.)
  - When the camera does not keep up with the subject satisfactorily
- We recommend taking pictures with the Viewfinder when panning in [MODE3].
- [STABILIZER] cannot be selected when a lens without stabilizer function is used.
- The setting is fixed to [MODE1] in recording motion pictures.

### [FLASH]

For details on [REC] mode menu settings, refer to P30.

You can switch the flash setting.

Applicable modes: **P A S M** CUST SCN    

[A]/[A]/[]/[S]/[S]

#### Note

- Refer to P65 for details.

### [D.RED-EYE]

For details on [REC] mode menu settings, refer to P30.

When the flash is used with the Red-eye reduction ([A], [], [S]) selected, it will automatically detect and correct the red-eye in the image data.

Applicable modes: **P A S M** CUST SCN      

[OFF]/[ON]

#### Note

- It may not be able to correct the red-eye depending on the recording conditions. It may also correct objects other than red-eye.

### [FLASH SYNCHRO]

For details on [REC] mode menu settings, refer to P30.

You can set to the 2nd curtain synchro.

Applicable modes: **P A S M** CUST

[1ST]/[2ND]

#### Note

- Refer to P70 for details.

 [FLASH ADJUST.]

For details on [REC] mode menu settings, refer to P30.

You can adjust the flash output.

Applicable modes: **P A S M**        

[-2 EV]/[-1 2/3 EV]/[-1 1/3 EV]/[-1 EV]/[-2/3 EV]/[-1/3 EV]/[0 EV]/[+1/3 EV]/  
[+2/3 EV]/[+1 EV]/[+1 1/3 EV]/[+1 2/3 EV]/[+2 EV]

 **Note**

- Refer to P69 for details.

 [I.EXPOSURE] (Intelligent exposure adjustment)

For details on [REC] mode menu settings, refer to P30.

Contrast and exposure will be adjusted automatically when there is a big difference in brightness between the background and subject, to bring the image close to how you see.

Applicable modes: **P A S M**   

[OFF]/[LOW]/[STANDARD]/[HIGH]

 **Note**

- Even when the [SENSITIVITY] is set to [ISO100]/[ISO125], [SENSITIVITY] may be set higher than [ISO100]/[ISO125] if the picture is taken with [I.EXPOSURE] set to valid.
- Compensation effect may not be achieved depending on the conditions.
- [] in the screen turns to yellow when [I.EXPOSURE] is in effect.
- [LOW], [STANDARD], or [HIGH] represents the maximum range of effect.

 [EX. OPT. ZOOM]

For details on [REC] mode menu settings, refer to P30.

Enlarging a picture with no picture quality deterioration

Applicable modes: **P A S M**        

[OFF]/[ON]

 **Note**

- Refer to P55 for details.

 [DIGITAL ZOOM]

For details on [REC] mode menu settings, refer to P30.

This can enlarge subjects even more than the optical zoom or extra optical zoom.

Applicable modes: **P A S M**   

[OFF]/[2×]/[4×]

 **Note**

- Refer to P55 for details.
- If camera shake (jitter) is a problem during zooming, it is recommended that [STABILIZER] be set to [MODE1].

 [BURST RATE]

For details on [REC] mode menu settings, refer to P30.

You can set the burst speed.

Applicable modes: **P A S M**        

[H]/[L]

 **Note**

- Refer to P72 for details.

 [AUTO BRACKET]

For details on [REC] mode menu settings, refer to P30.

You can set the compensation range of the exposure and the bracket order.

Applicable modes: **P A S M**        

[STEP]: [3•1/3]/[3•2/3]/[5•1/3]/[5•2/3]/[7•1/3]/[7•2/3]

[SEQUENCE]: [0/-/+]/[-/0/+]

 **Note**

- Refer to P74 for details.

 [SELF-TIMER]

For details on [REC] mode menu settings, refer to P30.

You can set the time for the self-timer.

Applicable modes: **P A S M**        

/[]/[]

 **Note**

- Refer to P76 for details.

 [COLOR SPACE]

For details on [REC] mode menu settings, refer to P30.

Set this when you want to correct the colour reproduction of the recorded pictures on a PC, printer etc.

Applicable modes: **P A S M**        


[sRGB]: Colour space is set to sRGB colour space.  
This is widely used in computer related equipment.

[AdobeRGB]: Colour space is set to AdobeRGB colour space.  
AdobeRGB is mainly used for business purposes such as professional printing because it has a greater range of reproducible colours than sRGB.

 **Note**

- Depending on the colour space setting, the file name of the recorded picture changes as shown.

P1000001.JPG

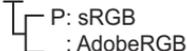

P: sRGB  
\_: AdobeRGB

- Set to sRGB if you are not very familiar with AdobeRGB.
- The setting is fixed to [sRGB] in recording motion pictures.

**NR [LONG SHTR NR]**

For details on [REC] mode menu settings, refer to P30.

The camera automatically removes noise that appears when the shutter speed becomes slower to take pictures of night scenery etc. so you can take beautiful pictures.

Applicable modes: **P A S M**        

[OFF]/[ON]

 **Note**

- If you set [ON], the countdown screen is displayed when the shutter button is pressed. Do not move the camera at this time. After the countdown is finished, [PLEASE WAIT...] is displayed for the same time as the selected shutter speed for signal processing.
- We recommend using a tripod when the shutter speed is slowed to take pictures.
- This does not operate during motion picture recording.

**ISO [ISO LIMIT SET]**

For details on [REC] mode menu settings, refer to P30.

It will select optimal ISO sensitivity with set value as limit depending on the brightness of the subject.

Applicable modes: **P A S** 

[OFF]/[200]/[400]/[800]/[1600]

 **Note**

- The upper limit of the ISO sensitivity can be set.
- The higher the value set for the ISO sensitivity, the more the jitter is reduced but the greater the amount of picture noise.
- It will work when the [SENSITIVITY] is set to [AUTO] or [ISO].

**ISO [ISO INCREMENTS]**

For details on [REC] mode menu settings, refer to P30.

ISO sensitivity settings between [ISO100] and [ISO3200] are changed for every 1/3 EV.

Applicable modes: **P A S M**        

[1/3 EV]: [100]/[125]/[160]/[200]/[250]/[320]/[400]/[500]/[640]/[800]/[1000]/[1250]/[1600]/[2000]/[2500]/[3200]

[1 EV]: [100]/[200]/[400]/[800]/[1600]/[3200]

 **Note**

- When the setting is changed from [1/3 EV] to [1 EV], ISO sensitivity will be set to value closest to the value set during the [1/3 EV]. (Set value will not restore when the setting is changed back to [1/3 EV]. It will stay as the setting selected for [1 EV].)

 **[AUDIO REC.]****For details on [REC] mode menu settings, refer to P30.**

Audio can be recorded simultaneously with the image. You can record the conversation during the shooting or the situation as a memo.

**Applicable modes:** **P A S M**        

**[OFF]:** Audio will not be recorded.

**[ON]:**  is displayed on the screen.  
Audio will be recorded as soon as the image is recorded.  
(It will stop in 5 seconds)

- If you press [MENU/SET] during audio recording, the audio recording is cancelled.

 **Note**

- Audio is recorded from the built-in microphone on the camera.
- Audio recorded with this unit may not playback on other equipment.
- **The sound recording specifications on this model have been changed to improve audio quality. For this reason, some motion pictures recorded in [MOTION JPEG] and pictures with audio may not be played back with Panasonic digital cameras (LUMIX)\*.**
  - \* Models launched before December 2008, and some models launched in 2009 (FS, LS series).
- [AUDIO REC.] cannot be set in the following cases.
  - When recording with Auto Bracket
  - During burst shooting
  - When recording with White balance bracket
  - When recording with Multi film bracket
  - When [QUALITY] is set to [RAW $\frac{1}{1}$ ], [RAW $\frac{1}{2}$ ] or [RAW]

## Using the [MOTION PICTURE] Mode Menu

- [METERING MODE], [I.EXPOSURE], and [DIGITAL ZOOM] are common to both the [REC] mode menu and [MOTION PICTURE] mode menu. Changing these settings in one of these menus is reflected in other menu.
  - For details, refer to the explanation for the corresponding setting in [REC] mode menu.

### [REC MODE]

For details on [MOTION PICTURE] mode menu settings, refer to P30.  
This sets up the data format of motion pictures.

Applicable modes:  **P A S M**  **CUST**  **SCN**      

 [AVCHD]]/[] [MOTION JPEG]]

#### Note

- Refer to P105 for details.

### [REC QUALITY]

For details on [MOTION PICTURE] mode menu settings, refer to P30.  
This sets up the picture quality of motion pictures.

Applicable modes:  **P A S M**  **CUST**  **SCN**      

■ When [REC MODE] is [] [AVCHD]].

[FHD]/[SH]/[H]/[L]

■ When [REC MODE] is [] [MOTION JPEG]].

[HD]/[WVGA]/[VGA]/[QVGA]

#### Note

- Refer to P105 for details.

### [EXPOSURE MODE]

For details on [MOTION PICTURE] mode menu settings, refer to P30.  
This changes the setup in Creative motion picture mode.

Applicable modes: 

[P]/[A]/[S]/[M]

#### Note

- Refer to P108 for details.

 [WIND CUT]

For details on [MOTION PICTURE] mode menu settings, refer to P30.

This reduces the wind noise in the audio recording.

Applicable modes:           

[OFF]/[LOW]/[STANDARD]/[HIGH]

 **Note**

- Refer to P107 for details.

Perform these settings if you need to.

## Using the [CUSTOM MENU]

- In the Intelligent auto mode, only [CUST. SET MEM.], [LCD INFO.DISP.], [GUIDE LINE] and [REMAINING DISP.] can be set.

For details on how to select the [CUSTOM MENU] menu settings, refer to P30.

[CUST. SET MEM.]	Up to 3 current camera settings can be registered as custom settings.
------------------	---

- Refer to P102 for details.

[LVF DISP.STYLE]	This will set the display style of the viewfinder.
	 : Viewfinder style  : LCD monitor style

- Refer to P62 for details.

[LCD DISP.STYLE]	This will set the display style of the LCD monitor.
	 : Viewfinder style  : LCD monitor style

- Refer to P61 for details.

[LCD INFO.DISP.]	This will set the colour of the information display screen on the LCD monitor. (P61)
	[OFF]
	 : Brown colours
	 : Red colours
	 : Black colours

<b>[LVF/LCD AUTO]</b>	It will switch automatically to viewfinder display when an eye or object gets near the viewfinder using an eye sensor. It will return to LCD monitor display when it goes away.
	<b>[OFF]/[ON]</b>

- LCD monitor display and viewfinder display can be switched manually by pressing [LVF/LCD]. (P41)

<b>[HISTOGRAM]</b>	This allows you to set either to display or not display the histogram. (P64)
	<b>[OFF]</b> <b>[ON]:</b> Position of the histogram can be set. Refer to P64 on how to set.

<b>[GUIDE LINE]</b>	This will set the pattern of guide lines displayed when taking a picture. (P63)
	<b>[OFF]/[]/[</b> <b>[]:</b> Position of the guide line can be set. Refer to P63 on how to set.

<b>[AF/AE LOCK]</b>	This will set what will be fixed by the [AF/AE LOCK] button when taking a picture with fixed focus or exposure.
	<b>[AE]:</b> Only the exposure is locked.
	<b>[AF]:</b> Only the focus is locked. <b>[AF/AE]:</b> Both focus and exposure are locked.

- Refer to P81 for details.

<b>[AF/AE LOCK HOLD]</b>	This will set the operation of [AF/AE LOCK] button when taking a picture with fixed focus or exposure.
	<b>[OFF]:</b> The focus and the exposure are fixed only while you are pressing [AF/AE LOCK]. (P81) If you release [AF/AE LOCK], AF/AE Lock is cancelled. <b>[ON]:</b> The focus and the exposure remain fixed even if you release [AF/AE LOCK] after pressing it. If you press [AF/AE LOCK] again, AF/AE Lock is cancelled.

<b>[PREVIEW HOLD]</b>	This will set the operation of the  button when displaying the preview screen.
	<p><b>[OFF]:</b> Preview screen is displayed only when the  is pressed. It will return to previous screen when  is released.</p> <p><b>[ON]:</b> Preview screen is displayed even after the  is released after pressing. (P93) It will return to previous screen when  is pressed again.</p>

<b>[PRE AF]</b>	Depending on the setting, camera will adjust the focus automatically before pressing the shutter button halfway.
	<p><b>[OFF]</b></p> <p><b>[Q<sub>AF</sub>]: Quick AF</b></p> <p><b>[C<sub>AF</sub>]: Continuous AF</b></p>

### About [Q<sub>AF</sub>] and [C<sub>AF</sub>]

[Q<sub>AF</sub>] will adjust the focus automatically when the jitter of the camera gets small. [C<sub>AF</sub>] will adjust the focus at all times (continuous AF operation).

The camera will adjust the focus automatically, and the focus adjustment when the shutter button is pressed becomes faster. It is effective when you do not want to miss the photo opportunity.

#### Note

- The battery will be consumed faster than usual.
- Press the shutter button halfway again when it is difficult to focus on the subject.
- When [PRE AF] is set to [C<sub>AF</sub>], it may take time to focus on the subject if you rotate the zoom ring from Wide to Tele or suddenly change the subject from a distant one to a nearby one.
- [PRE AF] does not work during the preview mode.
- [PRE AF] function does not work with lenses without the AF function. Also, [C<sub>AF</sub>] can only be used when a compatible lens (P15) is used.

<b>[DIRECT AF AREA]</b>	Position and size of the AF area can be modified easily during recording.
	<p><b>[OFF]</b></p> <p><b>[ON]:</b> AF area can be moved freely with /// when  is selected.</p>

- Refer to P79 for details.

<b>[FOCUS PRIORITY]</b>	It will set so no picture can be taken when it is out of focus.
	<p><b>[OFF]:</b> This gives priority to the best time to take a picture so you can take a picture when the shutter button is pressed fully.</p> <p><b>[ON]:</b> You cannot take a picture until the subject is brought into focus.</p>

- If you set [OFF], be careful as the picture may not be properly focused even if [AFS] or [AFC] in focus mode is set.
- This does not operate during motion picture recording.

<b>[AF ASSIST LAMP]</b>	illuminating the subject makes it easier for the camera to focus when recording in low light conditions that make focusing difficult.
	<p><b>[OFF]:</b> The AF assist lamp does not turn on.</p> <p><b>[ON]:</b> When taking pictures in dark places, the AF assist lamp lights while the shutter button is pressed halfway. (Larger AF areas are now displayed.)</p>

- The effective range of the AF assist lamp is different depending on used lens.
  - When 14–140 mm/F4.0–5.8 lens included in DMC-GH1K is attached and at Wide: Approx. 1.0 m (3.28 feet) to 3.0 m (9.84 feet)
- When you do not want to use the AF assist lamp (e.g. when taking pictures of animals in dark places), set the [AF ASSIST LAMP] to [OFF]. In this case, it will become more difficult to focus on the subject.
- Remove the lens hood.
- When you use a lens with a large filter diameter that obscures the AF assist lamp, shadows may appear on the picture and the performance of the camera may deteriorate.
- The setting for the [AF ASSIST LAMP] is fixed to [OFF] in [SCENERY] mode, [NIGHT SCENERY] or [CREATIVE NIGHT SCENERY] in [NIGHT PORTRAIT] mode, and [SUNSET] in scene mode.

<b>[AF+MF]</b>	It is possible to adjust focus manually after it was adjusted automatically.
	<p><b>[OFF]</b></p> <p><b>[ON]:</b> It is possible to fine adjust the focus manually by rotating the focus ring while AF lock (focus mode is set to [AFS] and shutter button is half-way pressed, or AF lock with [AF/AE LOCK]).</p>

- This does not operate during motion picture recording.

<b>[MF ASSIST]</b>	In manual focus, the assistance screen appears on the screen to facilitate focusing on the subject.
	<p><b>[OFF]</b></p> <p><b>[ON]:</b> Centre of the screen will be enlarged automatically when the focus ring is rotated.</p>

- Refer to P80 for details.

<b>[EXPO. SETTINGS]</b>	Change the method of exposure compensation setting switching when the mode dial is set to <b>P</b> , <b>A</b> , <b>S</b> and <b>M</b> .
	<p><b>[SWITCH BY PRESSING THE FRONT DIAL]:</b> Press the front dial to switch between exposure compensation, programme shift, aperture setting, and shutter speed setting.</p>
	<p><b>[SWITCH BY PRESSING THE LVF/LCD BUTTON]:</b> Press [LVF/LCD] to switch between exposure compensation, programme shift, aperture setting, and shutter speed setting.</p>

- Switchable setting items differ depending on the [REC] mode.
- You cannot switch between LCD monitor and viewfinder by pressing [LVF/LCD] when it is set to [SWITCH BY PRESSING THE LVF/LCD BUTTON].
- [EXPO. SETTINGS] is disabled when you set [LVF/LCD AUTO] to [OFF].

## Setting items for each [REC] mode

		 or 
<b>P</b>	programme shift	exposure compensation
<b>A</b>	aperture	exposure compensation
<b>S</b>	shutter speed	exposure compensation
<b>M</b>	shutter speed	aperture

<b>[ REC AREA]</b>	This changes the angle of view during motion picture recording and still picture recording.
	<b>[] (Picture)/[] (Motion picture)</b>

- The recording area indicated is a guide line.

<b>[REMAINING DISP.]</b>	This will switch display between the number of recordable pictures and available recording time.
	<p> <b>[REMAINING SHOTS]:</b> This will display the number of recordable pictures for still pictures.</p> <p> <b>[REMAINING TIME]:</b> This will display the available recording time for motion pictures.</p>

<b>[ BUTTON]</b>	Enables/disables the motion picture button.
	<b>[OFF]/[ON]</b>

<b>[DIAL GUIDE]</b>	Sets if the operation switch guide when the mode dial is switched to <b>P</b> , <b>A</b> , <b>S</b> and <b>M</b> is to be displayed or not.
	<b>[OFF]/[ON]</b>

- It will display dial operation guide to the screen that is possible to perform exposure compensation, programme shift, aperture setting, or shutter speed setting when set to [ON].

**A** Dial operation guide



**A**

<b>[MENU RESUME]</b>	The last operated menu position is saved even if the camera is turned off.
	<b>[OFF]/[ON]</b>

<b>[PIXEL REFRESH]</b>	It will perform optimization of imaging device and image processing.
------------------------	--

- Imaging device and image processing is optimised when the camera is purchased, and it needs to be optimised annually after the purchase.
- Turn the camera off and on after the pixels are corrected.

<b>[SENSOR CLEANING]</b>	Dust reduction to blow off the debris and dust that have affixed to the front of the imaging device is performed.
--------------------------	---

- Dust reduction function will operate automatically when the camera is turned on, but you can use this function when you see dust. (P169)

<b>[SHOOT W/O LENS]</b>	It is possible to setup so the shutter will not operate when there is no lens on the unit.
	<b>[OFF]:</b> You cannot press the shutter button when a lens is not attached to the camera body or is not attached correctly.
	<b>[ON]:</b> Shutter will operate regardless of the lens on the unit.

## Playing Back Motion Pictures/Pictures with Audio

- File formats of motion pictures/still pictures with audio that can be played with this unit are QuickTime Motion JPEG or AVCHD.
- Motion pictures in AVCHD format that can be played back on this unit are [AVCHD] motion pictures that were recorded with this unit, AVCHD format (including [AVCHD Lite]) motion pictures recorded with Panasonic digital cameras (LUMIX) only.

Press [▶].

### Motion pictures


Press ◀/▶ to select a picture with a motion picture icon (such as [🎬]), and then press ▲ to playback.

- (A) Motion picture icon
- (B) The motion picture recording time

- After playback starts, the elapsed playback time is displayed on the upper right of the screen.

For example, 8 minutes and 30 seconds is displayed as [8m30s].

- Some information (recording information, etc.) is not displayed for motion pictures recorded in [AVCHD].

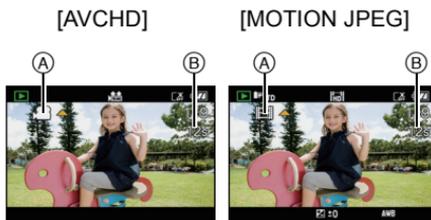


### ■ Operations performed during motion picture playback

The cursor displayed during playback is the same as ▲/▼/◀/▶.

- (A) Play/Pause
- (B) Stop
- (C) Fast rewind, Frame-by-frame rewind\*
- (D) Fast forward, Frame-by-frame forward\*

\* These operations can be performed only in the pause mode.

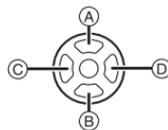

- (E) Reduce volume level
- (F) Increase volume level



### Note

- Please note that the bundled software includes QuickTime or "PHOTOfunSTUDIO 3.1 HD Edition" to play back motion picture files created with the camera on the PC.
- QuickTime Motion JPEG motion pictures that were recorded with a PC or other equipment may have lower image quality or may not be able to playback with this unit.

## Pictures with audio

Press ◀▶ to select a picture with the audio icon [🔊] and then press ▲ to play back.

Ⓐ Audio icon

- Refer to [AUDIO REC.] (P124) and [AUDIO DUB.] (P146) for information about how to create still pictures with audio.



 **Note**

- Sound can be heard through the speaker. Refer to [VOLUME] (P35) for information about how to adjust the volume in the [SETUP] menu.
- Pictures with audio recorded with other equipment may not playback on this unit.
- When using a high capacity card, it is possible that fast rewinding may be slower than usual.

## Using the [PLAYBACK] mode menu

You can use various functions in playback mode to rotate pictures, set protection for them etc.

- With [TEXT STAMP], [RESIZE], [TRIMMING] or [ASPECT CONV.], a new edited picture is created. A new picture cannot be created if there is no free space on the card so we recommend checking that there is free space and then editing the picture.

### [SLIDE SHOW]

You can play back the pictures you have taken in synchronisation with music, and you can do this in sequence while leaving a fixed interval between each of the pictures.

Furthermore, you can play back still pictures only, motion pictures only, pictures set as favourite, or pictures registered with face recognition as a slide show.

This playback method is recommended when you have connected the camera to a TV set to view the pictures you have taken.

#### 1 Select [SLIDE SHOW] on the [PLAYBACK] mode menu. (P30)

#### 2 Press ▲/▼ to select the item and then press [MENU/SET].

- [FAVORITE] can be selected only when [FAVORITE] on the [PLAYBACK] menu (P136) is at [ON] and there are pictures already set as favourites.



#### 3 Press ▲ to select [START] and then press [MENU/SET].



#### 4 Press ▼ to finish the slide show.

- Normal playback resumes after the slide show finishes.

#### ■ Operations performed during slide show


The cursor displayed during playback is the same as ▲/▼/◀/▶.

- The menu screen is restored when [MENU] is pressed.

- (A) Play/Pause
- (B) Stop
- (C) Back to previous picture\*
- (D) Ahead to next picture\*

\* These operations can be performed only in the pause mode or during motion picture playback.

- (E) Reduce volume level
- (F) Increase volume level

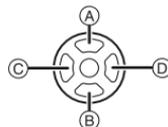

## ■ Changing the slide show settings

You can change the settings for slide show playback by selecting [EFFECT] or [SETUP] on the slide show menu screen.

### [EFFECT]

This allows you to select the screen effects when switching from one picture to the next.

[NATURAL], [SWING], [URBAN], [OFF]

- When [URBAN] has been selected, the picture may appear in black and white as a screen effect.
- [EFFECT] is set to [OFF] when playing slide show with motion pictures only.

### [SETUP]

[DURATION] or [REPEAT] can be set.

Item	Settings
[DURATION]	1SEC./2SEC./3SEC./5SEC.
[REPEAT]	ON/OFF
[MUSIC]	ON/OFF
[AUDIO]	ON/OFF

- [DURATION] can be set only when [OFF] has been selected as the [EFFECT] setting.
- [AUDIO] can be set only when [OFF] has been selected as the [MUSIC] setting. Audio will be played along with the still picture with audio or audio of the motion picture by setting the [AUDIO] to [ON].



### Note

- Music effects cannot be played back simultaneously with motion pictures or still pictures with audio.
- It is not possible to add new music effects.

## [PLAYBACK MODE]

Playback in [NORMAL PLAY], [PICTURE PLAY], [AVCHD PLAY], [MOTION JPEG PLAY], [FACE RECOG. PLAY] or [FAVORITE PLAY] can be selected.

**1** Select [PLAYBACK MODE] on the [PLAYBACK] mode menu. (P30)

**2** Press **▲/▼** to select the item and then press [MENU/SET].

- [FAVORITE PLAY] can be selected only when [FAVORITE] on the [PLAYBACK] menu (P136) is at [ON] and there are pictures already set as favourites.
- Refer to P56 for information about how to play back pictures.



## ★ [FAVORITE]

You can do the following if a mark has been added to pictures and they have been set as favourites.

- Play back the pictures set as favourites only as a slide show.
- Play back only the pictures set as favourites. ([FAVORITE PLAY])
- Delete all the pictures not set as favourites. ([ALL DELETE EXCEPT ★])

**1** Select [FAVORITE] on the [PLAYBACK] mode menu. (P30)

**2** Press ▼ to select [ON] and then press [MENU/SET].

- You cannot set pictures as favourites if [FAVORITE] is set to [OFF]. Also [★] will not appear when [FAVORITE] is set to [OFF] even if it was previously set to [ON].



**3** Press [MENU/SET] to close the menu.

**4** Press ◀/▶ to select the picture and then press ▼ to set it during playback.

- Repeat the above procedure.
- If ▼ is pressed again, the favourite setting is cancelled.



### ■ Cancelling all the [FAVORITE] settings

**1** Select [CANCEL] on the screen shown in step 2 and then press [MENU/SET].

**2** Press ▲ to select [YES] and then press [MENU/SET].

**3** Press [MENU/SET] to close the menu.

- You cannot select [CANCEL] if not even one picture has been set as a favourite.

#### Note

- You can set up to 999 pictures as favourites.
- When printing pictures at a photo printing store, [ALL DELETE EXCEPT ★] (P60) is useful so only the pictures you want to be printed remain on the card.
- You may not be able to set pictures taken with other equipment as favourites.
- The motion pictures recorded in [AVCHD] and pictures that were taken with the [QUALITY] set to [RAW] cannot be set to [FAVORITE].
- You can perform, check and cancel the settings of images as favourites using the "PHOTOfunSTUDIO 3.1 HD Edition" bundled software on the CD-ROM (supplied).

 [TITLE EDIT]

You can add text (comments) to pictures. After text has been registered, it can be included in prints using [TEXT STAMP] (P138). (Only alphabetic characters and symbols can be entered.)

Names set in [BABY1]/[BABY2] and [PET] in scene mode or [LOCATION] in travel date are also recorded as the titles.

**1** Select [TITLE EDIT] on the [PLAYBACK] mode menu. (P30)

**2** Press ▲/▼ to select [SINGLE] or [MULTI] and then press [MENU/SET].



**3** Select the picture, and then press [MENU/SET] to set.

-  is displayed for pictures with titles already registered.

#### [MULTI] setting

Press [DISPLAY] to set (repeat), and then press [MENU/SET] to set.

[SINGLE]



Press ◀/▶ to select the picture.

[MULTI]



Press ▲/▼/◀/▶ to select the pictures.

- The setting is cancelled when [DISPLAY] is pressed again.

**4** Press ▲/▼/◀/▶ to select text and then press [MENU/SET] to register.

- Press [DISPLAY] to switch text between [A] (capitals), [a] (small case) and [&/1] (special characters and numbers).
- The entry position cursor can be moved left and right with the front dial.
- To enter a blank, move the cursor to [SPACE] or to delete an entered character, move the cursor to [DELETE], and press [MENU/SET].
- To stop editing at any time during text entry, press [EXIT].
- A maximum of 30 characters can be entered. (Maximum of 9 characters when setting names in [FACE RECOG].)



**5** Press ▲/▼/◀/▶ to move the cursor to [EXIT] and then press [MENU/SET] to end text input.

**6** Press  to return to the menu screen.\*

- \*The menu screen is automatically restored when [MULTI] is selected.
- Press [MENU/SET] to close the menu.

## ■ Delete the title

### [SINGLE] setting

- In step 4, delete all the texts, select [EXIT], and press [MENU/SET].
- Press [ ].
- Press [MENU/SET] to close the menu.

### [MULTI] setting

- In step 4, delete all the texts, select [EXIT], and press [MENU/SET].
- Press [MENU/SET] to close the menu.

### Note

- Text can be scrolled if all of the registered text does not fit on the screen.
- The name setting of [FACE RECOG.] or [BABY1]/[BABY2] and [PET] in scene mode or [LOCATION] in travel date can also be registered by using the operation in steps 4 and following.
- The name setting of [BABY1]/[BABY2] or [PET] in scene mode, [LOCATION] in travel date and [TITLE EDIT] cannot be registered at the same time.
- You can print out texts (comments) using the "PHOTOfunSTUDIO 3.1 HD Edition" bundled software on the CD-ROM (supplied).
- You can set up to 50 pictures at one time with [MULTI].
- You cannot use title edit for the following pictures.
  - Motion pictures
  - Protected pictures
  - Pictures taken with [RAW], [RAW] or [RAW]
  - Pictures recorded with other equipment

## [TEXT STAMP]

You can stamp the recording date/time, age, travel date or title onto the recorded pictures. It is suitable for regular size printing. (Pictures with a picture size larger than [S] will be resized when stamping the date etc. on them.)

### 1 Select [TEXT STAMP] on the [PLAYBACK] mode menu. (P30)

### 2 Press ▲/▼ to select [SINGLE] or [MULTI] and then press [MENU/SET].



### 3 Select the picture, and then press [MENU/SET] to set.

- [ ] appears on screen if the picture is stamped with text.

### [MULTI] setting

Press [DISPLAY] to set (repeat), and then press [MENU/SET] to set.

- The setting is cancelled when [DISPLAY] is pressed again.

[SINGLE]



Press ◀▶ to select the picture.

[MULTI]



Press ▲/▼/◀▶ to select the pictures.

- 4** Press **▲/▼/◀/▶** to select **[SHOOTING DATE]**, **[AGE]**, **[TRAVEL DATE]** or **[TITLE]** and then press **[MENU/SET]** to set each item.

#### [SHOOTING DATE]

**[W/OTIME]:** Stamp the year, month and date.

**[WITHTIME]:** Stamp the year, month, day, hour and minutes.

#### [AGE] (P99)

If this is set to **[ON]**, **[AGE]** is stamped on the pictures.

#### [TRAVEL DATE]

If this is set to **[ON]**, **[TRAVEL DATE]** is stamped on the pictures.

#### [TITLE]

Text is printed together with the image for pictures that have already been recorded with text in **[FACE RECOG.]** or **[BABY1]/[BABY2]** and **[PET]** name settings in scene mode, **[LOCATION]** in travel date or **[TITLE EDIT]**.

- 5** Press **[MENU/SET]**.

- If you set **[TEXT STAMP]** for a picture with a picture size larger than **[S]**, the picture size will become smaller as shown below.

Aspect ratio setting	Picture size
4:3	L / M → S
3:2	L / M → S
16:9	L / M → S
1:1	L / M → S

- The picture becomes slightly rougher.

- 6** Press **▲** to select **[YES]** and then press **[MENU/SET]**.

- The message **[SAVE NEW PICTURES?]** appears if the picture was recorded with a picture size **[S]**.



- 7** Press **[🗑️]** to return to the menu screen.\*

\*The menu screen is automatically restored when **[MULTI]** is selected.

- Press **[MENU/SET]** to close the menu.

#### Note

- When you print pictures stamped with text, the date will be printed over the stamped text if you specify printing of the date at the photo shop or on the printer.
- You can set up to 50 pictures at one time in **[MULTI]**.
- Depending on the printer being used, some characters may be cut at printing. Check before printing.
- Text and dates cannot be stamped on the pictures in the following cases.
  - Motion pictures
  - Pictures with audio
  - Pictures recorded without setting the clock and title
  - Pictures that were previously stamped with **[TEXT STAMP]**
  - Pictures taken with **[RAW\_###]**, **[RAW\_###]** or **[RAW]**
  - Pictures recorded with other equipment

## [RESIZE] Reducing the picture size (number of pixels)

We recommend resizing to [S] if you want to attach a picture to an e-mail or use it on a website. (Pictures set to the minimum number of pixels for [ASPECT RATIO] cannot be further reduced in size.)

**1** Select [RESIZE] on the [PLAYBACK] mode menu. (P30)

**2** Press ▲/▼ to select [SINGLE] or [MULTI] and then press [MENU/SET].



**3** Select the picture and size.

### [SINGLE] setting

**1** Press ◀/▶ to select the picture, and then press [MENU/SET].

**2** Press ▲/▼ to select the size\*, and then press [MENU/SET].

\* Only the sizes to which the pictures can be resized is displayed.

### [MULTI] setting

**1** Press ▲/▼ to select the size, and then press [MENU/SET].


**2** Press ▲/▼/◀/▶ to select the picture, and then press [DISPLAY].

- Repeat this step for each picture, and press [MENU/SET] to set.

### [SINGLE]



### [MULTI]

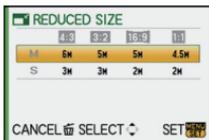

**4** Press ▲ to select [YES] and then press [MENU/SET].

**5** Press  to return to the menu screen.\*

\*The menu screen is automatically restored when [MULTI] is selected.

- Press [MENU/SET] to close the menu.



### Note

- You can set up to 50 pictures at one time in [MULTI].
- The picture quality of the resized picture will deteriorate.
- It may not be possible to resize pictures recorded with other equipment.
- Motion pictures, pictures with audio, pictures stamped with [TEXT STAMP] and pictures taken with [RAW], [RAW], or [RAW] cannot be resized.

## ✂ [TRIMMING]

You can enlarge and then clip the important part of the recorded picture.

**1** Select [TRIMMING] on the [PLAYBACK] mode menu. (P30)

**2** Press ◀/▶ to select the picture, and then press [MENU/SET].



**3** Use the front dial and press ▲/▼/◀/▶ to select the parts to be trimmed.



Front dial (clockwise):  
Enlargement  
Front dial (counter-clockwise):  
Reduction  
▲/▼/◀/▶: Move

Reduction



Enlargement




Move the position



**4** Press [MENU/SET].

**5** Press ▲ to select [YES] and then press [MENU/SET].

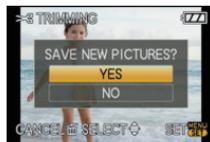

**6** Press [ ] to return to the menu screen.

• Press [MENU/SET] to close the menu.

**Note**

- Depending on the cut size, the picture size of the trimmed picture may become smaller than that of the original picture.
- The picture quality of the trimmed picture will deteriorate.
- It may not be possible to trim pictures recorded with other equipment.
- Motion pictures, pictures with audio, pictures stamped with [TEXT STAMP] and pictures taken with [RAW], [RAW] or [RAW] cannot be trimmed.
- Information regarding the face recognition in the original picture will not be copied to images having undergone [TRIMMING].

## ⇄ [ASPECT CONV.]

You can convert pictures taken with a [16:9] aspect ratio to a [3:2], a [4:3] or a [1:1] aspect ratio.

**1** Select [ASPECT CONV.] on the [PLAYBACK] mode menu. (P30)

**2** Press ▲/▼ to select [3:2], [4:3] or [1:1] and then press [MENU/SET].



**3** Press ◀/▶ to select a picture taken with [16:9] aspect ratio, and then press [MENU/SET].




**4** Press ◀/▶ to determine the horizontal position, and press [MENU/SET] to set.

- Use ▲/▼ to set the frame position for pictures rotated vertically.



**5** Press ▲ to select [YES] and then press [MENU/SET].

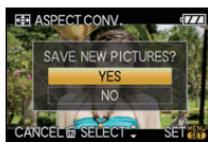

**6** Press [EXIT] to return to the menu screen.

- Press [MENU/SET] to close the menu.

### Note

- After converting the aspect ratio, the picture size may become larger than that of the original picture.
- You may not be able to convert pictures taken on other equipment.
- The [ASPECT CONV.] cannot be performed on the motion pictures, pictures with audio, pictures stamped with [TEXT STAMP] and pictures taken with [RAW], [RAW] or [RAW].
- Information regarding the face recognition in the original picture will not be copied to images having undergone [ASPECT CONV.].

## 🔄 [ROTATE]/🔄A [ROTATE DISP.]

This mode allows you to automatically display pictures vertically if they were recorded holding the camera vertically or rotate pictures manually in 90° steps.

### Rotate (The picture is rotated manually)

- 1 Select [ROTATE] on the [PLAYBACK] mode menu. (P30)**
  - The [ROTATE] function is disabled when [ROTATE DISP.] is set to [OFF].

- 2 Press ◀/▶ to select the picture and then press [MENU/SET].**

- Motion pictures and protected pictures cannot be rotated.



- 3 Press ▲/▼ to select the direction to rotate the picture and then press [MENU/SET].**

➡: The picture rotates clockwise in steps of 90°.

⬅: The picture rotates counter-clockwise in steps of 90°.



- 4 Press [🗑] to return to the menu screen.**

- Press [MENU/SET] to close the menu.

### Rotate display (The picture is automatically rotated and displayed)

- 1 Select [ROTATE DISP.] on the [PLAYBACK] mode menu. (P30)**

- 2 Press ▼ to select [ON] and then press [MENU/SET].**

- The pictures are displayed without being rotated when you select [OFF].
- Refer to P56 for information about how to play back pictures.

- 3 Press [MENU/SET] to close the menu.**



#### Note


- [ROTATE DISP.] can only be used with the lens compatible (P15) with the direction detection function (P40).
- When you play back pictures on a PC, they cannot be displayed in the rotated direction unless the OS or software is compatible with Exif. Exif is a file format for still pictures which allows recording information etc. to be added. It was established by "JEITA (Japan Electronics and Information Technology Industries Association)".
- It may not be possible to rotate pictures that have been recorded with other equipment.
- The picture will not rotate display when multi playback (P57) or calendar playback (P58) is selected.
- Pictures recorded with the camera upside down will not be displayed rotated.

## [PRINT SET]

DPOF "Digital Print Order Format" is a system that allows the user to select which pictures to print, how many copies of each picture to print and whether or not to print the recording date on the pictures when using a DPOF compatible photo printer or photo printing store. For details, ask at your photo printing store.

**1** Select [PRINT SET] on the [PLAYBACK] mode menu. (P30)

**2** Press  $\blacktriangle/\blacktriangledown$  to select [SINGLE] or [MULTI] and then press [MENU/SET].

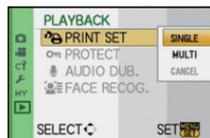

[SINGLE]

[MULTI]

**3** Select the picture, and then press [MENU/SET].



Press  $\blacktriangle/\blacktriangledown$  to select the picture.

Press  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$  to select the pictures.

**4** Press  $\blacktriangle/\blacktriangledown$  to set the number of prints, and then press [MENU/SET] to set.

- When [MULTI] has been selected, repeat steps **3** and **4** for each picture. (It is not possible to use the same setting for a multiple number of pictures.)

**5** Press  to return to the menu screen.

- Press [MENU/SET] to close the menu.

### ■ Cancelling all the [PRINT SET] settings

- 1** Select [CANCEL] on the screen shown in step **2** and then press [MENU/SET].
- 2** Press  $\blacktriangle$  to select [YES] and then press [MENU/SET].
- 3** Press [MENU/SET] to close the menu.

- You cannot select [CANCEL] if not even one picture has been set for printing.

### ■ To print the date

After setting the number of prints, set/cancel printing with the recording date by pressing [DISPLAY].

- When you go to a photo printing store for digital printing, be sure to order the printing of the date additionally if required.
- Depending on the photo printing store or the printer, the date may not be printed even if you set to print the date. For further information, ask at your photo printing store or refer to the operating instructions for the printer.
- The date cannot be printed on pictures stamped with text.

**Note**

- The number of prints can be set from 0 to 999.
- With a printer supporting PictBridge, the date print settings of the printer may take precedence so check if this is the case.
- It may not be possible to use the print settings with other equipment. In this case, cancel all the settings, and reset the settings.
- If the file is not based on the DCF standard, the print setting cannot be set.
- [PRINT SET] cannot be set for motion pictures recorded in [AVCHD] and pictures that were taken with the [QUALITY] set to [RAW].

**[PROTECT]**

You can set protection for pictures you do not want to be deleted by mistake.

**1 Select [PROTECT] on the [PLAYBACK] mode menu. (P30)****2 Press ▲/▼ to select [SINGLE] or [MULTI] and then press [MENU/SET].****3 Select the picture, and then press [MENU/SET].**

When [MULTI] has been selected

- Repeat these steps for each picture.
- The settings are cancelled when [MENU/SET] is pressed again.

[SINGLE]



Press ◀▶ to select the picture.

[MULTI]



Press ▲/▼/◀▶ to select the pictures.

**4 Press [ ] to return to the menu screen.**

- Press [MENU/SET] to close the menu.

**■ Cancelling all the [PROTECT] settings****1 Select [CANCEL] on the screen shown in step 2 and then press [MENU/SET].****2 Press ▲ to select [YES] and then press [MENU/SET].****3 Press [MENU/SET] to close the menu.**

- If you press [MENU/SET] while cancelling protection, the cancelling will stop halfway.

**Note**

- The protect setting may not be effective on other equipment.
- Even if you protect pictures on a card, they will be deleted if the card is formatted.
- Even if you do not protect pictures on an SD Memory Card or an SDHC Memory Card, they cannot be deleted when the card's Write-Protect switch is set to [LOCK].

 [AUDIO DUB.]

You can add the audio after taking a picture.

### 1 Select [AUDIO DUB.] on the [PLAYBACK] mode menu. (P30)

### 2 Press ◀/▶ to select the picture and then press [MENU/SET] to start audio recording.

- The message [OVERWRITE AUDIO DATA?] screen appears when audio has already been recorded. Press ▲ to select [YES] and then press [MENU/SET] to start audio recording. (The original audio is overwritten.)
- Audio is recorded from the built-in microphone on the camera.
- If you press [🗑️], the audio dubbing is cancelled.



### 3 Press [MENU/SET] to stop recording.

- It will automatically stop after recording about 10 seconds without pressing [MENU/SET].



### 4 Press [🗑️] to return to the menu screen.

- Press [MENU/SET] to close the menu.

#### Note

- Audio dubbing may not work properly on pictures recorded by other equipment.
- Audio dubbing does not work on motion pictures, protected pictures and pictures taken with [RAW+], [RAW] or [RAW].
- **The sound recording specifications on this model have been changed to improve audio quality. For this reason, some motion pictures recorded in [MOTION JPEG] and pictures with audio may not be played back with Panasonic digital cameras (LUMIX)\*.**

\* Models launched before December 2008, and some models launched in 2009 (FS, LS series).

## [FACE RECOG.]

All the information regarding the [FACE RECOG.] of the selected image will be cleared.

**1** Select [FACE RECOG.] on the [PLAYBACK] mode menu. (P30)

**2** Press ◀/▶ to select the picture and then press [MENU/SET].

**3** Press ▲ to select [YES] and then press [MENU/SET].

**4** Press [🗑️] to return to the menu screen.

- Press [MENU/SET] to close the menu.

### Note


- Cleared information regarding the [FACE RECOG.] cannot be restored.
- Images cleared of [FACE RECOG.] will not be categorized for face recognition for [SLIDE SHOW] and [PLAYBACK MODE].
- Clearing of [FACE RECOG.] cannot be done of the protected image.



## Playing Back Pictures on a TV Screen

### Playing back pictures using the AV cable (supplied)

Preparations: Set the [TV ASPECT]. (P36)  
Turn this unit and the TV off.

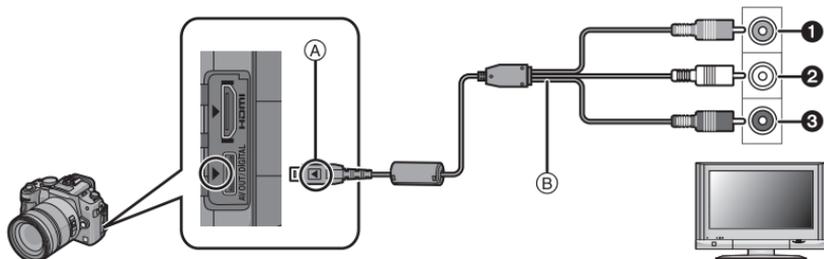

① Yellow: to the video input socket

② White: to the audio input socket

③ Red: to the audio input socket

Ⓐ Align the marks, and insert.

Ⓑ AV cable (supplied)

• Check the directions of the connectors, and plug them straight in or unplug them straight out. (Otherwise the connectors may be bent out of shape which will cause trouble.)

**1** Connect the AV cable Ⓑ (supplied) to the video input and the audio input sockets on the TV.

**2** Connect the AV cable to the [AV OUT] socket on the camera.

**3** Turn the TV on and select external input.

**4** Turn the camera on and then press [▶].

#### Note

- Depending on the [ASPECT RATIO], black bands may be displayed on the top and bottom or the left and right of the pictures.
- Do not use any other AV cables except the supplied one.
- Read the operating instructions for the TV.
- When you play back a picture vertically, it may be blurry.
- You can view pictures on TVs in other countries (regions) which use the NTSC or PAL system when you set [VIDEO OUT] in the [SETUP] menu.
- Audio will be played back as stereo (2ch).
- The viewfinder cannot be displayed when connected with a AV cable.

## Playing back pictures on a TV with an SD Memory Card slot

Still pictures recorded on an SD Memory Card can be played back on a TV with an SD Memory Card slot.

### Note

- Depending on the TV model, pictures may not be displayed on the full screen.
- Motion pictures recorded with [AVCHD] can be played back on Panasonic TVs (VIERA) with the AVCHD logo mark. In all other cases, connect the camera to the TV using the AV cable (supplied) and playback the motion picture.
- You cannot play back pictures on SDHC cards if the TV does not support these cards.

## Playing back on the TV with HDMI socket


You can enjoy high quality pictures and motion pictures on the TV by connecting the camera with the HDMI compatible high definition TV using HDMI mini cable (optional).

### What is HDMI?

HDMI is the interface for digital devices. When this unit is connected to a HDMI compatible device, the image and audio can be output with a digital signal. If you connect this unit to a HDMI compatible high definition TV and then play back the recorded high definition images, you can enjoy them in high resolution with high quality sound.

If you connect this unit to a Panasonic TV compatible with VIERA Link, linked operations (VIERA Link) are possible. (P150)

Preparations: Check the [HDMI MODE]. (P37)  
Turn this unit and the TV off.

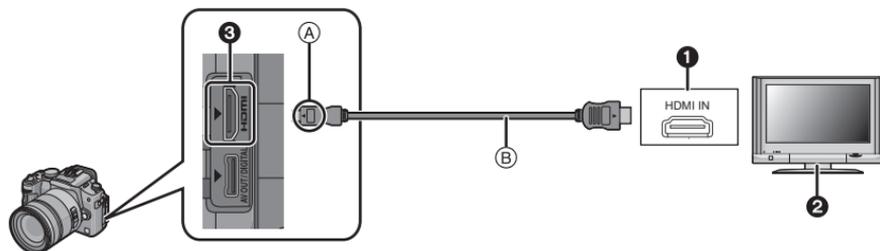

- 1 HDMI socket
  - 2 TV with HDMI socket
  - 3 HDMI mini (C type)
- (A) Align the marks, and insert.  
(B) HDMI mini cable (optional)
- Check the direction of the terminals and plug in/out straight holding onto the plug. (It may result in malfunction by the deforming of the terminal if it is plugged in obliquely or in wrong direction.)

**1** Connect the HDMI mini cable (B) (optional) to the HDMI input socket on the TV.

**2** Connect the HDMI mini cable to the [HDMI] socket on the camera.

**3** Turn the TV on and switch to HDMI input.

**4** Turn the camera on and then press [▶].

- When [VIERA Link] (P37) is set to [ON] and the camera is connected to a TV supporting VIERA Link, input of the TV will be switched automatically and playback screen will be displayed (P150).

#### Note

- Depending on the [ASPECT RATIO], bands may be displayed on the top and bottom or the left and right of the pictures.
- Do not use any other cables except a genuine Panasonic HDMI mini cable (RP-CDHM15, RP-CDHM30; optional).  
Part numbers: RP-CDHM15 (1.5 m) (5 feet), RP-CDHM30 (3.0 m) (10 feet)
- Output from the HDMI mini cable has priority when both AV cable and HDMI mini cable are connected.
- HDMI output is not possible even if you connect the HDMI mini cable while the unit is connected to the PC or the printer.
- HDMI connection is disabled and connection with the USB connection cable will take priority when you connect the USB connection cable while the HDMI mini cable is connected (P149).
- Image is not displayed on the LCD monitor/Viewfinder when the HDMI mini cable is connected.
- [AUDIO DUB.] does not work when connected with a HDMI mini cable.
- When pictures are displayed, they may not be displayed properly depending on the type of TV.
- Read the operating instructions for the TV.
- Audio will be played back as stereo (2ch).

### Playback using VIERA Link (HDMI) (HDAVI Control™)

#### What is the VIERA Link?


- This function allows you to use your remote control for the Panasonic TV for easy operations when this unit has been connected to a VIERA Link compatible device using a HDMI mini cable (optional) for automatic linked operations. (Not all operations are possible.)
- VIERA Link is a unique Panasonic function built on a HDMI control function using the standard HDMI CEC (Consumer Electronics Control) specification. Linked operations with HDMI CEC compatible devices made by other companies are not guaranteed. When using devices made by other companies that are compatible with VIERA Link, refer to the operating instructions for the respective devices.
- This unit is compatible with VIERA Link Ver.4. VIERA Link Ver.4 is the newest Panasonic version and is also compatible with existing Panasonic VIERA Link devices. (As of December 2008)

Preparations: Set the [VIERA Link] to [ON]. (P37)

**1** Connect this unit to a Panasonic TV compatible with VIERA Link with a HDMI mini cable (optional) (P149).

**2** Turn the camera on and then press [▶].

**3** Operate with the remote control for the TV.

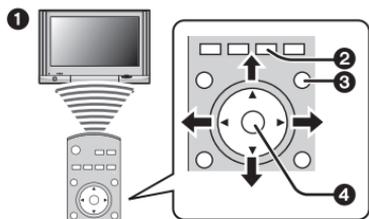

- ❶ Panasonic TV compatible with VIERA Link
- ❷ [OPTION] button
- ❸ [EXIT] button
- ❹ [OK] button

\* The shape of the remote control varies depending on the region. Operate following the TV guide displayed on screen.

## ■ Usable functions

Operate with the remote control for the TV.

### 1) Multi playback

**Press [Red] on the TV remote control to switch the type of data for playback.**

- The type of data for playback changes in the order of [ALL] → [📷] → [👤] → [📺] → [ALL].

**Select the picture with ▲/▼/◀/▶ and press [OK] for one screen display.**

- You can set the slide show etc. when you press [OPTION].

### 2) One screen display

**Select the image with ◀/▶.**

**Recording information is displayed with ▲.**

**You can return to multi playback (1) with ▼.**

- Slideshow (3) will start if [OK] is pressed when using one screen display from [ALL] or [📷].
- Playback of the motion picture will start when you press [OK] when one screen display is performed from [👤] or [📺]. Use ◀/▶ for forward/back and ▼ to stop playback.

### ❺ Operation icons

### 3) Slide show

**Press [OK] to start/pause the slide show.**

**Select the image with ◀/▶ in the pause mode.**

**The screen will be returned to one screen display (2) by pressing ▼ to finish the slide show.**

### • Playing audio in the slideshow


If [ALL] is selected when playing motion picture audio in the slideshow, press [OPTION], set [EFFECT] to Off and [AUDIO] to On in the slideshow to play audio in the slideshow.

### • Turning control icon display on and off

Operation icons can be hidden when you press [EXIT]. Also, operation icons will be displayed when you press [OPTION] while the operation icons are hidden.

## 📌 Note

- It is recommended to connect this unit to an HDMI terminal other than the HDMI1 if there are 2 or more HDMI input terminals on the TV.
- When the [VIERA Link] (P37) of this unit is set to [ON], operation using the button on this unit will be limited.
- VIERA Link must be activated on the connected TV. (Read the operating instructions of the TV for how to set etc.)
- If you are not using VIERA Link, set [VIERA Link] (P37) to [OFF].

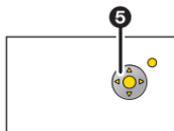

## ■ Other linked operations

### Turning the power off:

If you use the remote control for the TV to turn off the power, the power on this unit also turns off. (When connecting the unit to a PC with a USB cable, the power will not turn off.)

### Automatic input switching:

- If you connect with a HDMI mini cable and then turn on the power on this unit, and then press , the input channel on the TV automatically switches to this unit's screen. If the TV's power is in standby status, it will turn on automatically (if [Set] has been selected for the TV's [Power on link] setting).
- Depending on the HDMI terminal on the TV, the input channel may not switch automatically. In this case, use the remote control for the TV to switch the input channel. (For details on how to switch input, please read the operating instructions for the TV.)
- If VIERA Link does not work properly, refer to page 181.



### Note

- If you are unsure whether or not the TV you are using are compatible with VIERA Link, read the operating instructions for the devices.
- Available linked operations between this unit and a Panasonic TV is different depending on the types of Panasonic TVs even if they are compatible with VIERA Link. Refer to the operating instructions of the TV for the operations that support on the TV.
- Operation is not possible with a cable that is not based on the HDMI standard.  
Do not use any other cables except a genuine Panasonic HDMI mini cable (RP-CDHM15, RP-CDHM30; optional).

Part numbers: RP-CDHM15 (1.5 m) (5 feet), RP-CDHM30 (3.0 m) (10 feet)

- VIERA Link will not work even if you connect the HDMI mini cable while the unit is connected to the PC or the printer.
- [HDMI MODE] (P37) [1080i] is valid only for the following conditions:  
Outputting to HDMI:
  - During playback of motion pictures recorded with 
  - When [PICTURE PLAY] is selected in the [PLAYBACK MODE]
  - When [PICTURE ONLY] is selected in the [SLIDE SHOW]

When the [VIERA Link] is set to [ON]:

- During playback of still pictures on one screen after selecting  displayed on the TV screen
- During playback of motion pictures recorded with  after selecting  displayed on the TV screen
- When [PICTURE ONLY] is selected for the [SLIDE SHOW]

It will be output as [720p] except for the above conditions.

- The screen will be blacked out for a while when displaying in 1 screen, the [HDMI MODE] (P37) of the camera is set to [AUTO] or [1080i], and  displayed on the TV screen is selected, but this is not a malfunction.
- If the picture is disrupted when [HDMI MODE] (P37) is set to [AUTO] or [1080i], change the setting to [720p].

## Saving the recorded still pictures and motion pictures


Method to acquire into other equipment is different for the still pictures and motion pictures recorded with this unit depending on their file format (JPEG, RAW, AVCHD, or Motion JPEG). Select the following methods depending on the equipment to be used.

### Copy the playback image using an AV cable

File formats that can be used: [AVCHD], [Motion JPEG]

Copy images played back with this unit to DVD disc, hard disk, or video using a DVD recorder, or video.

This can be played back with equipment that is not compatible with high definition (AVCHD), so it is convenient for distributing copies. Image will be standard quality instead of high definition at this time.

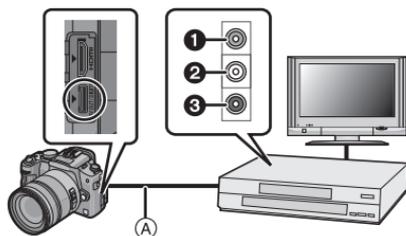

- ① Yellow: to the video input socket
- ② White: to the audio input socket
- ③ Red: to the audio input socket
- Ⓐ AV cable (supplied)

- 1** Connect this unit with the recording equipment with an AV cable (supplied)
- 2** Start the playback of this unit
- 3** Start the recording on the recording equipment

- When ending the recording (copying), stop the playback on this unit after stopping the recording in recording equipment.

#### Note

- When you play back motion pictures on 4:3 aspect ratio TV, you must set [TV ASPECT] (P36) on this unit to [4:3] before starting a copy. The image will be vertically long if you play back motion pictures copied with [16:9] setting on a [4:3] aspect TV.
- Do not use any other AV cables except the supplied one.
- It is recommended to turn off the display of the screen by pressing the [DISPLAY] on the camera while copying. (P57)
- See the instruction manual for the recording equipment about the details of copying and playing back.

## Copying to a PC

File formats that can be used: [JPEG], [RAW]/[AVCHD], [Motion JPEG]

It is possible to acquire still pictures and motion pictures recorded in [AVCHD] or [MOTION JPEG] formats, or create standard quality DVD video which is not high definition from the motion picture that was recorded as [AVCHD], using the software "PHOTOfunSTUDIO 3.1 HD Edition" in the CD-ROM (supplied). (P154)

- If the files and folders related to [AVCHD] motion pictures are deleted, modified, or moved by the Windows Explorer or similar, it becomes unable to perform playback, edit, etc., so always use "PHOTOfunSTUDIO 3.1 HD Edition" to acquire the [AVCHD] motion pictures.



## Connecting to a PC

You can acquire recorded pictures to a PC by connecting the camera and the PC.

- You can easily print out or mail the pictures you have imported. Use of the "PHOTOfunSTUDIO 3.1 HD Edition" bundled software on the CD-ROM (supplied) is a convenient way of doing this.
- Read the separate operating instructions for the supplied software for more information about the software in the CD-ROM (supplied) and how to install it.

### ■ PC that can be used

	Windows			Macintosh
	98/98SE	Me	2000/XP/Vista	OS 9/OS X
Can the PHOTOfunSTUDIO be used?	—		○*1	—
Can the [AVCHD] motion picture be acquired to the PC?	—		○*2	—
Can the still pictures and [MOTION JPEG] motion pictures in the digital camera be acquired to the PC using a USB connection cable?		○		○ (OS 9.2.2/OS X [10.1~10.5])
Is the installation of a USB driver required?	○		—	—


- PC with Windows 95 or older, or Mac OS 8.x or older cannot be connected via USB, but it can acquire the pictures if an SD memory card reader/writer can be used.

\*1 It is necessary for Internet Explorer 6.0 or newer to be installed. PC with higher processing performance is required depending on the function to be used. It may not playback correctly or operate correctly depending on the environment of the PC used.

\*2 Always acquire the [AVCHD] motion pictures using the "PHOTOfunSTUDIO 3.1 HD Edition".

## Acquiring of still pictures and [MOTION JPEG] motion pictures (other than [AVCHD] motion pictures)

Preparations: Turn the LCD monitor so the LCD will show out.  
Turn on the camera and the PC.

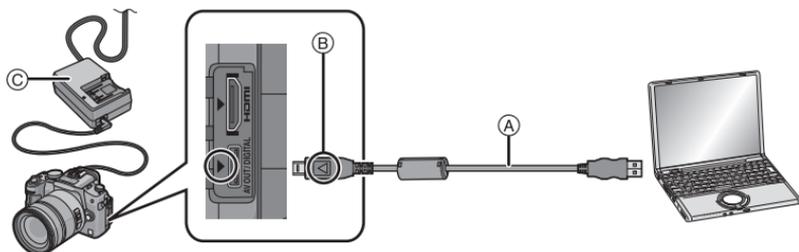

(A) USB connection cable (supplied)

• Check the directions of the connectors, and plug them straight in or unplug them straight out. (Otherwise the connectors may be bent out of shape which will cause trouble.)

(B) Align the marks, and insert.

(C) AC adaptor (supplied)

• Use a battery with sufficient battery power or the AC adaptor (P25). If the remaining battery power becomes low while the camera and the PC are communicating, the status indicator blinks and the alarm beeps.

Refer to “Disconnecting the USB connection cable safely” (P156) before disconnecting the USB connection cable. Otherwise, data may be destroyed.


### 1 Connect the camera to a PC via the USB connection cable (A) (supplied).

• Do not use any other USB connection cables except the supplied one. Use of cables other than the supplied USB connection cable may cause malfunction.

### 2 Press ▲/▼ to select [PC], and then press [MENU/SET].

• If [USB MODE] (P36) is set to [PC] in the [SETUP] menu in advance, the camera will be automatically connected to the PC without displaying the [USB MODE] selection screen. Since there is no need to set this each time you connect to the PC, it is convenient.

• When the camera has been connected to the PC with [USB MODE] set to [PictBridge(PTP)], a message may appear on the PC's screen. Select [Cancel] to close the screen, and disconnect the camera from the PC. Then set [USB MODE] to [PC] again.

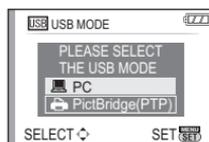

### 3 Double-click on [Removable Disk] in [My Computer].

• When using a Macintosh, the drive is displayed on the desktop. (“LUMIX”, “NO\_NAME” or “Untitled” is displayed.)

### 4 Double-click [DCIM] folder.

## 5 Using a drag-and-drop operation, move the pictures you want to acquire or the folder storing those pictures to any different folder on the PC.

- Data from the PC can not be written to the camera using the USB connection cable.

### ■ Disconnecting the USB connection cable safely


- Proceed with the hardware removal using "Safely Remove Hardware" on the task tray of the PC. If the icon is not displayed, check that [ACCESS] is not displayed on the LCD monitor of the digital camera before removing the hardware.

### Note

- Turn the camera off before connecting or disconnecting the AC adaptor (P25).
- Before inserting or removing a card, turn the camera off and disconnect the USB connection cable. Otherwise, data may be destroyed.
- HDMI connection is disabled and connection with the USB connection cable will take priority when you connect the USB connection cable while the HDMI mini cable is connected (P149).

### ■ Viewing the contents of the card using the PC (folder composition)

- Folders and images processed in the PC cannot be played back on the camera. It is recommended to use the "PHOTOfunSTUDIO 3.1 HD Edition" bundled software on the CD-ROM (supplied) when you write the image from PC to a card.

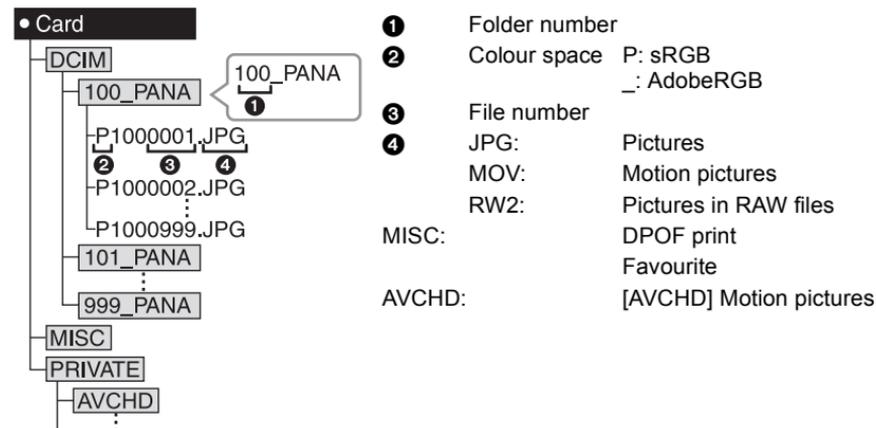

A new folder is created when pictures are taken in the following situations.

- After [NO.RESET] (P36) in the [SETUP] menu has been executed
- When a card containing a folder with the same folder number has been inserted (Such as when pictures were taken using another make of camera)
- When there is a picture with file number 999 inside the folder

### ■ Connection in the PTP mode (Windows® XP, Windows Vista® and Mac OS X only)

Set [USB MODE] to [PictBridge(PTP)].

Data can now be read only from the card into the PC.


- When there are 1000 or more pictures on a card, the pictures may not be imported in the PTP mode.
- [AVCHD] motion picture cannot be played back in PTP mode.

## Printing the Pictures

If you connect the camera to a printer supporting PictBridge, you can select the pictures to be printed out and instruct that printing be started on the camera's LCD monitor.

**Preparations:** Turn on the camera and the printer.

Perform the print quality and other settings at the printer before printing the pictures.

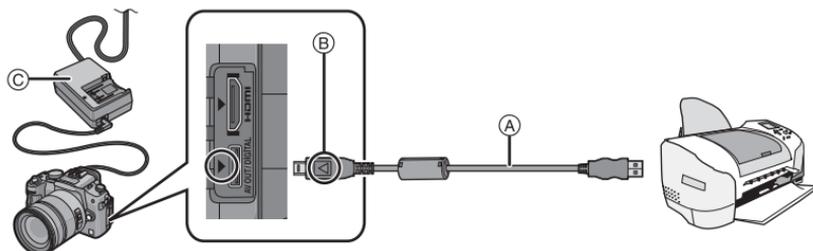

(A) USB connection cable (supplied)

• Check the directions of the connectors, and plug them straight in or unplug them straight out. (Otherwise the connectors may be bent out of shape which will cause trouble.)

(B) Align the marks, and insert.


(C) AC adaptor (supplied)

• Use a battery with a sufficient battery power or the AC adaptor (P25). If the remaining battery power becomes low while the camera and the printer are connected, the status indicator blinks and the alarm beeps. If this happens during printing, stop printing at once. If not printing, disconnect the USB connection cable.

### 1 Connect the camera to a printer via the USB connection cable (A) (supplied).

- When the camera is connected to the printer, the cable disconnect prohibit icon [🚫] appears. Do not disconnect the USB cable while [🚫] is displayed.

### 2 Press ▲/▼ to select [PictBridge(PTP)], and then press [MENU/SET].

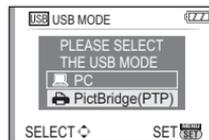


#### Note

- Do not use any other USB connection cables except the supplied one. Use of cables other than the supplied USB connection cable may cause malfunction.
- Turn the camera off before connecting or disconnecting the AC adaptor (P25).
- Before inserting or removing a card, turn the camera off, and disconnect the USB connection cable.
- HDMI connection is disabled and connection with the USB connection cable will take priority when you connect the USB connection cable while the HDMI mini cable is connected (P149).
- Motion pictures recorded with [AVCHD] cannot be printed.

## Single picture


- 1 Press **▲** to select [SINGLE PICTURE] and then press [MENU/SET].

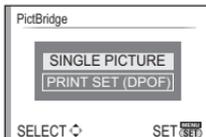

- 2 Press **◀/▶** to select the picture and then press **▼**.
  - The message disappears in about 2 seconds.




- 3 Press **▲/▼** to select [PRINT START] and then press [MENU/SET].
  - Press [MENU/SET] to cancel printing halfway.
  - Disconnect the USB connection cable after printing.

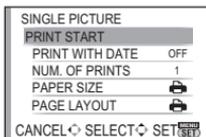

## Print Settings

Select and set the items both on the screen in step 3 of the “Single picture” procedures.

- When you want to print pictures in a paper size or a layout which is not supported by the camera, set [PAPER SIZE] or [PAGE LAYOUT] to [ ] and then set the paper size or the layout on the printer. (For details, refer to the operating instructions of the printer.)

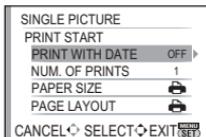

## [PRINT WITH DATE]

Item	Description of settings
[OFF]	Date is not printed.
[ON]	Date is printed.

- If the printer does not support date printing, the date cannot be printed on the picture.
- Since the printer's settings may take precedence over the print with date setting, check the printer's print with date setting as well.
- When printing images with a text stamp, please remember to set print with date to [OFF] or the date will print on top.

### Note

When asking the photo shop to print the pictures

- By stamping the date using [TEXT STAMP] (P138) or setting date printing at the time of the [PRINT SET] (P144) setting before going to a photo shop, the dates can be printed at the photo shop.

**[NUM. OF PRINTS]**

You can set the number of prints up to 999.

- You can also use the front dial to set.

**[PAPER SIZE]**

Item	Description of settings
	Settings on the printer are prioritised.
[L/3.5"×5"]	89 mm×127 mm
[2L/5"×7"]	127 mm×178 mm
[POSTCARD]	100 mm×148 mm
[16:9]	101.6 mm×180.6 mm
[A4]	210 mm×297 mm
[A3]	297 mm×420 mm
[10×15cm]	100 mm×150 mm
[4"×6"]	101.6 mm×152.4 mm
[8"×10"]	203.2 mm×254 mm
[LETTER]	216 mm×279.4 mm
[CARD SIZE]	54 mm×85.6 mm

- Paper sizes not supported by the printer will not be displayed.

**[PAGE LAYOUT] (Layouts for printing that can be set with this unit)**


Item	Description of settings
	Settings on the printer are prioritised.
	1 picture with no frame on 1 page
	1 picture with a frame on 1 page
	2 pictures on 1 page
	4 pictures on 1 page

- An item cannot be selected if the printer does not support the page layout.

## [PRINT SET (DPOF)]


- Set the print setting on the camera in advance. (P144)

**1** Press **▼** to select [PRINT SET (DPOF)] and then press [MENU/SET].

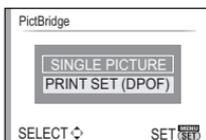

**2** Press **▲/▼** to select [PRINT START] and then press [MENU/SET].

- You cannot select [PRINT START] when the print setting is not set. Select [DPOF SET] and then set the print setting. (P144)
- Press [MENU/SET] to cancel printing halfway.
- Disconnect the USB connection cable after printing.

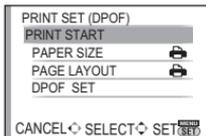

### ■ Layout printing

#### When printing a picture several times on 1 sheet of paper

For example, if you want to print the same picture 4 times on 1 sheet of paper, set [PAGE LAYOUT] to and then set [NUM. OF PRINTS] to 4 for the picture that you want to print.

#### When printing different pictures on 1 sheet of paper (only in print setting)

For example, if you want to print 4 different pictures on 1 sheet of paper, set [PAGE LAYOUT] to and then set [COUNT] in [PRINT SET] (P144) to 1 for each of the 4 pictures.

#### Note

- The camera is receiving an error message from the printer when the indication lights orange during printing. After finishing printing, make sure there are no problems with the printer.
- If the total number of prints or the number of pictures printed is high, pictures may be printed several times in print setting. The remaining number of prints indicated may differ from the number set. This is not a malfunction.
- When the pictures in RAW files are to be printed, the JPEG pictures recorded simultaneously by the camera will be printed. If JPEG pictures do not exist, RAW file pictures cannot be printed.

## Using the External Flash (optional)

After attaching the external flash, the effective range will be increased when compared to the camera's built in flash.


Preparations: Turn off the camera and close the built-in flash.

### ■ Using the dedicated flash (DMW-FL220; optional)

- 1 **Attach the dedicated flash to the hot shoe (A) and then turn on the camera and the dedicated flash.**

- Be sure to firmly secure to the dedicated flash with the lock ring (B).

- 2 **Select [FLASH] on the [REC] mode menu. (P30)**

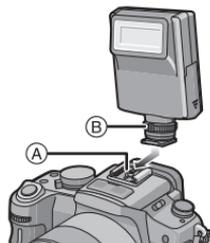

- 3 **Press ▲/▼ to select the mode and then press [MENU/SET].**

- While the external flash is connected, the following icons are displayed.

⚡: External flash Forced ON

⚡S: External flash Slow sync.



- 4 **Press [MENU/SET] to close the menu.**

- You can also press the shutter button halfway to close the menu.

### ■ When using other commercially available external flashes without communication functions with the camera (DMC-GH1)

- It is necessary to set the exposure on the external flash. If you want to use the external flash in auto mode, use an external flash that allows you to set the aperture value and the ISO sensitivity to match the settings on the camera.
- Set to Aperture-priority AE mode or Manual exposure mode on the camera and then set the same aperture value and ISO sensitivity on the external flash. (The exposure cannot be compensated adequately due to the change on the aperture value in Shutter-priority AE mode and the external flash cannot control the light adequately in Programme AE mode because the aperture value cannot be fixed.)

#### Note


- You can set the aperture value, the shutter speed and the ISO sensitivity on the camera even when attaching the external flash.
- Some commercial external flashes have synchro terminals with high-voltage or reversed polarity. Using such extra flashes may cause a malfunction or the camera may not operate normally.
- If you use commercially available external flashes with communication functions other than the dedicated one, they may not operate normally or they may be damaged. Do not use them.

- Even if the external flash is turned off, the camera may enter the external flash mode when the external flash is attached. When you are not using the external flash, detach it.
- When attaching the external flash, the built-in flash cannot be activated.
- Do not open the built-in flash when an external flash is attached.
- The camera will become unstable when attaching the external flash, it is recommended to use a tripod when taking picture.
- Turn off the camera when removing the external flash.
- Detach the external flash when carrying the camera.
- When attaching the external flash, do not hold only the external flash because it may detach from the camera.
- If you use the external flash when the white balance is set to [  $\frac{1}{2}$ W ] finely adjust the white balance depending on the picture quality. (P85)
- If you take pictures close to the subject in Wide, the vignetting effect may appear on the bottom of the recorded picture.
- The external flash cannot be used while the stereo microphone (DMW-MS1; optional) is in use.
- Read the operating instructions of the external flash for details.

## Using the Protector/Filter (optional)

The MC protector (DMW-LMCH62; optional) is a transparent filter which affects neither the colours nor the amount of light, so it can always be used to protect the camera's lens. The ND filter (DMW-LND62; optional) reduces the amount of light to approximately 1/8th (equal to adjusting the aperture value 3 increments) without affecting the colour balance. PL filter (DMW-LPL62; optional) will suppress the reflected light from a metal or non spherical surfaces (flat non-metallic surfaces, water vapour or invisible particles in the air), making it possible to take a picture with enhanced contrast.

### Attach the filter.

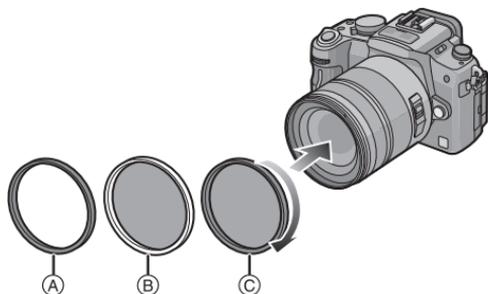

- (A) MC protector
- (B) ND filter
- (C) PL filter

#### Note


- Do not attach multiple filters at the same time.
- If the filter is tightened too much, you may not be able to remove it. Do not tighten it too much.
- If the filter is dropped, it may be destroyed. Be careful not to drop it when attaching it to the camera.
- Be careful not to get a fingerprint, dirt, etc., on the filter when it is attached, otherwise the focus may be adjusted to the lens, resulting in the subject being out of focus.
- You can attach the lens cap or the lens hood when the filter is attached.
- Refer to the instructions for each filter for details.

- **MC**="Multi-coated"
- **ND**="Neutral Density"
- It is recommended to use the MC protector (DMW-LMCH62; optional), the ND filter (DMW-LND62; optional), or the PL filter (DMW-LPL62; optional) with the 14–140 mm/F4.0–5.8 lens included in DMC-GH1K.

## Using the Remote Shutter (optional)


If you use the remote shutter (DMW-RSL1; optional), you can avoid jitter (camera shake) when using a tripod and you can keep the shutter pressed fully when taking pictures with [B] (Bulb) or burst mode. The remote shutter works similar to the shutter button on the camera.

- 1** Firmly connect the remote shutter to the [REMOTE] socket on the camera as far as it will go.

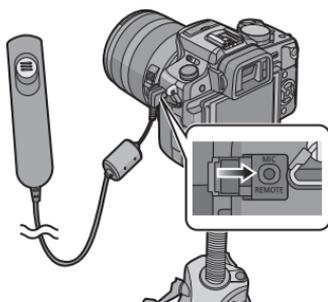

- 2** Take a picture.

- 1 Press the button lightly to press halfway.
- 2 Press the button fully to take the picture.  
(Press it as far as it will go.)

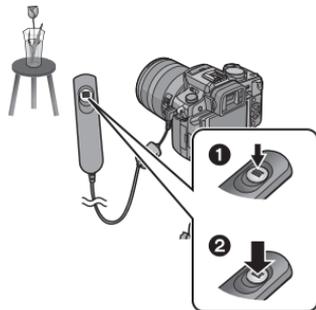

### ■ About [LOCK] on the remote shutter

- You can keep the shutter button pressed fully. This is effective when taking pictures with [B] (Bulb) (P92) or in burst mode (P72).
- While pressing the shutter button fully, slide it to the [LOCK] side.
- Slide it to the other side to cancel [LOCK].



### Note

- Do not use any other remote shutters except DMW-RSL1 (optional).
- You cannot operate the camera with the remote shutter in the following cases.
  - When the power save mode is cancelled
- Record with Creative motion picture mode when using for motion picture recording.
- The remote shutter cannot be used while the stereo microphone (DMW-MS1; optional) is in use.

## Using the External Microphone (optional)


If you use the stereo microphone (DMW-MS1; optional), you can switch to either stereo or monaural sound recording.

It is also possible to reduce the wind noise efficiently by switching the [WIND CUT OFF/ON] switch to [ON].


Preparations: Turn off the camera and close the built-in flash.

### 1 Attach the stereo microphone to the hot shoe (A).

- Be sure to firmly secure to the stereo microphone with the lock ring (B).

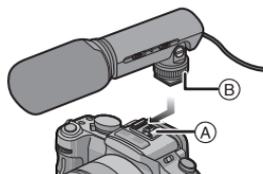

### 2 Firmly connect the stereo mini-plug cord to the [MIC] socket on the camera as far as it will go.

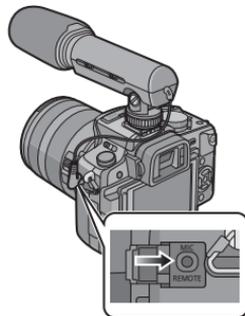

### 3 Turn on the camera and the stereo microphone.

- While the external microphone is connected, [🔊] is displayed on the screen.

#### ■ About the Off/On Mode Selector Switch

**[OFF]:** Turn off the stereo microphone power.

**[MONO]:** Records sound in front of the digital camera in monaural.

**[STEREO]:** Records sound in a wide area in stereo.

#### Battery Check Lamp [BATTERY]

- When the Off/On Mode Selector Switch is changed from [OFF] to [MONO] or [STEREO], the Battery Check Lamp [BATTERY] will light temporarily if there is still plenty of power in the battery. If the Battery Check Lamp [BATTERY] does not light temporarily, replace the battery with a new one.

### Note

- When attaching the stereo microphone, do not hold only the stereo microphone because it may detach from the camera.
- Set the wind noise reduction only on the stereo microphone side.
- The stereo microphone cannot be used while the external flash (optional) is in use.
- The stereo microphone cannot be used while the remote shutter (DMW-RSL1; optional) is in use.
- Read the operating instructions of the stereo microphone for details.


## Screen Display

- The following images are examples of when the display screen is set to [ ] (LCD monitor style) in the LCD monitor.

### ■ In recording


#### Recording in programme AE mode [P] (Initial setting)

- 1 Flash mode (P65)
- 2 Film mode (P87)
- 3 Optical image stabilizer (P119)/[ ]: Jitter alert (P53)
- 4 [ ]: Single\*<sup>1</sup> (P51)  
[ ]: Burst (P72)  
[ ]: Auto bracket (P74)  
[ ]: Self-timer (P76)
- 5 REC MODE (P105)/Recording quality (P105)
- 6 Picture size (P117)
- 7 Quality (P118)
- 8 LCD mode\*<sup>2</sup> (P35)
- 9 Intelligent Exposure (P121)
- 10 Battery indication (P22)
- 11 Card (P27) (displayed only during recording)
- 12 Recording state (Flashes red./ Focus (P53) (Lights green.)
- 13 AF area (P53, 77)
- 14 Dial operation guide (P130)/ Elapsed recording time (P104)
- 15 Number of recordable pictures\*<sup>3</sup> (P183)
- 16 White balance (P83)
- 17 ISO sensitivity (P86)
- 18 Exposure compensation value (P71)/Manual exposure assistance (P91)
- 19 Shutter speed (P53)
- 20 Aperture value (P53)
- 21 Recording mode
- 22 Metering mode (P119)
- 23 AF mode (P77)

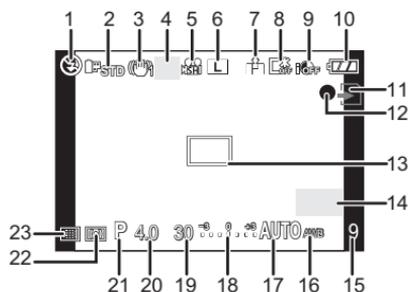


## ■ In recording (after settings)

- 24 Flash output adjustment (P69)
- 25 2nd curtain synchro (P70)
- 26 Extra optical zoom (P55, 121)
- 27 Histogram (P64)
- 28 Travel date (P113)
- 29 AF tracking operation (P47, 78)
- 30 Available recording time\*<sup>3</sup> (P104): R8m30s
- 31 White balance fine adjustment (P85)
- 32 White balance bracket (P85)
- 33 My colour mode adjustment (P100)
- 34 Current date and time/✈: Travel destination setting\*<sup>2, 4</sup> (P115)
- 35 Custom settings (P101)
- 36 Programme shift (P54)
- 37 AE lock (P81)
- 38 Face recognition (P110)
- 39 AF lock (P81)
- 40 Age\*<sup>2, 5</sup> (P99)
- 41 Location\*<sup>2, 4</sup> (P113)
- 42 Name\*<sup>2, 5</sup> (P99)
- 43 Number of days that have passed since the departure date\*<sup>2, 4</sup> (P113)
- 44 Self-timer\*<sup>6</sup> (P76)
- 45 Spot metering target (P119)
- 46 Audio recording (P124)
- 47 WIND CUT (P107)
- 48 Digital zoom (P55, 121)

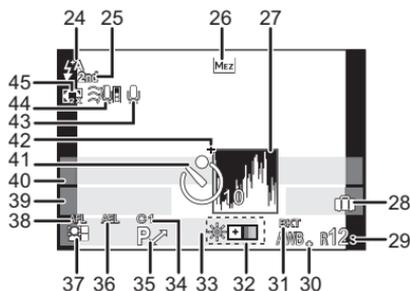

## LCD recording information

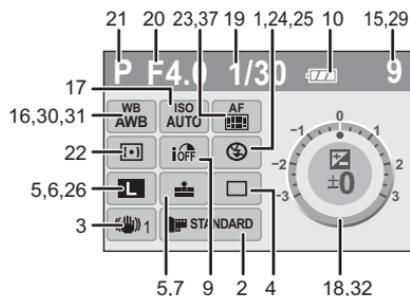


- \*1 Only displayed in the LCD recording information window.
- \*2 Only displayed in the LCD monitor.
- \*3 It is possible to switch the display between the number of recordable pictures and available recording time with the [REMAINING DISP.] setting in the [CUSTOM MENU] menu. In displays other than the LCD recording information display, it will display [9999+] when the number of recordable pictures exceeds 10000.
- \*4 This is displayed for about 5 seconds when the camera is turned on, after setting the clock and after switching from playback mode to recording mode.
- \*5 This is displayed for about 5 seconds when this unit is turned on in [BABY1]/[BABY2] or [PET] in scene mode.
- \*6 This is displayed during countdown.


## ■ In playback

- 1 Playback mode (P56)
- 2 Film mode (P87)
- 3 Protected picture (P145)
- 4 Number of prints (P144)
- 5 REC MODE (P105)/Recording quality (P105)
- 6 Picture size (P117)
- 7 Quality (P118)
- 8 LCD mode (P35)
- 9 Battery indication (P22)
- 10 Picture number/Total pictures
- 11 Elapsed playback time (P132): 8m30s
- 12 Motion picture recording time (P132): 8m30s
- 13 Favourites settings (P136)
- 14 Recording information<sup>\*7</sup>
- 15 Age (P99)
- 16 Name (P99)/Location (P113)/Title (P137)
- 17 Number of days that have passed since the departure date (P113)
- 18 Audio playback (P133)
- 19 : Motion picture playback (P132)
- 20 Stamped with text indication (P138)
- 21 Favourites (P136)
- 22 Cable disconnection warning icon (P157)
- 23 Recorded date and time/Travel destination setting (P115)
- 24 Folder/File number<sup>\*7</sup> (P156)
- 25 Colour space<sup>\*7</sup> (P122)
- 26 Histogram (P64)


<sup>\*7</sup> This is not displayed for motion pictures recorded in [AVCHD].

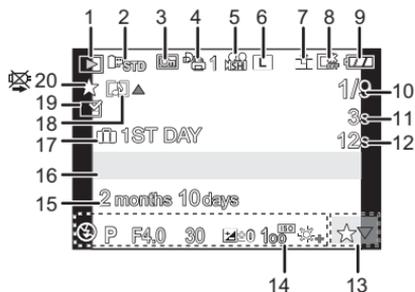

### Detailed information display

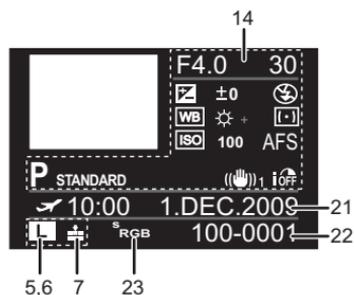

### Histogram display

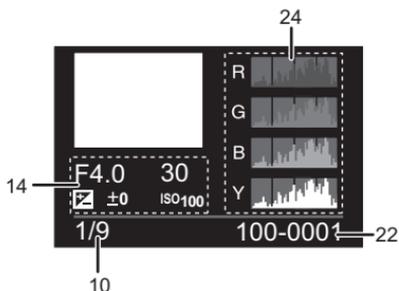

## Cautions for Use

### Optimal use of the camera

**Take care not to drop or knock the unit or put a lot of pressure on it.**

- Take care not to knock or drop the bag/case that you inserted the camera in as the shock may cause damage to the camera, lens or LCD monitor.
- Do not use a paper bag as it can easily rip causing the camera to fall and be damaged.
- We strongly recommend you purchase a good camera bag/case from your local dealer to protect your camera.

**Keep the camera as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).**

- If you use the camera on top of or near a TV, the pictures and sound on the camera may be disrupted by electromagnetic wave radiation.
- Do not use the camera near cell phones because doing so may result in noise adversely affecting the pictures and sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect the camera, disturbing the pictures and sound.
- If the camera is adversely affected by electromagnetic equipment and stops functioning properly, turn the camera off and remove the battery or disconnect AC adaptor. Then reinsert the battery or reconnect AC adaptor and turn the camera on.

**Do not use the camera near radio transmitters or high-voltage lines.**

- If you record near radio transmitters or high-voltage lines, the recorded pictures and sound may be adversely affected.

**Always use the supplied cords and cables. If you use optional accessories, use the cords and the cables supplied with them.****Do not extend the cords or the cables.****Do not spray the camera with insecticides or volatile chemicals.**

- If the camera is sprayed with such chemicals, the body of the camera may be damaged and the surface finish may peel off.
- Do not keep rubber or plastic products in contact with the camera for a long period of time.

### Cleaning

**Before cleaning the camera, remove the battery or disconnect the power plug from the outlet. Then wipe the camera with a dry soft cloth.**

- When the camera is soiled badly, it can be cleaned by wiping the dirt off with a wrung wet cloth, and then with a dry cloth.
- Wipe off any dirt or dust on the zoom ring and the focus ring with a dry, dustless cloth.
- Do not use solvents such as benzine, thinner, alcohol, kitchen detergents, etc., to clean the camera, since it may deteriorate the external case or the coating may peel off.
- When using a chemical cloth, be sure to follow the accompanying instructions.

### ■ About dirt on the image sensor

This camera features an interchangeable lens system so dirt may get inside the camera body when changing lenses. Depending on the recording conditions, dirt on the image sensor may appear on the recorded picture.

Do not change lenses where there is a lot of dust, and always attach the body cap when a lens is not attached to the camera, so that dirt or dust does not get inside the camera body. Remove any dirt on the body cap before attaching it.

#### Dust reduction function

This unit has a dust reduction function that will blow off the debris and dust that have affixed to the front of the imaging device. This function will function automatically when the camera is turned on, but if you see dust, perform the [SENSOR CLEANING] (P131) in the [CUSTOM MENU] menu.

### Removing dirt on the image sensor

The image sensor is very precise and delicate, so be sure to observe the following when you do have to clean it yourself.

- Blow off the dust on the surface of the image sensor with a commercially available blower brush. Be careful not to blow too strongly.
- Do not put the blower brush further inside than the lens mount.
- Do not let the blower brush touch the image sensor as the image sensor may get scratched.
- Do not use any objects except a blower brush to clean the image sensor.
- If you cannot remove the dirt or dust with the blower, consult the dealer or your nearest Service Centre.

### For care of the eye cup on the viewfinder

- As the eye cup cannot be removed, gently wipe it with a dry and soft cloth, and be careful not to remove it.
- If you wipe the eye cup too hard and it is removed, consult the dealer or your nearest Service Centre.


### About the LCD monitor/Viewfinder

- Do not press the LCD monitor with excessive force. Uneven colours may appear on the LCD monitor and it may malfunction.
- If the camera is cold when you turn it on, the picture on the LCD monitor/Viewfinder will be slightly darker than usual at first. However, the picture will return to normal brightness when the internal temperature of the camera increases.

Extremely high precision technology is employed to produce the LCD monitor/Viewfinder screen. However there may be some dark or bright spots (red, blue or green) on the screen. This is not a malfunction. The LCD monitor/Viewfinder screen has more than 99.99% effective pixels with a mere 0.01% of the pixels inactive or always lit. The spots will not be recorded on pictures on a card.

## About the Lens

- Do not press the lens with excessive force.
- Do not leave the camera with the lens facing the sun as rays of light from the sun may cause it to malfunction. Also, be careful when placing the camera outside or near a window.
- When there is dirt (water, oil, and fingerprints, etc.) on the surface of the lens, the picture may be affected. Lightly wipe the surface of the lens with a soft, dry cloth before and after taking pictures.
- Do not place the lens mount facing downwards. Do not allow the lens mount contacts ① to become dirty.

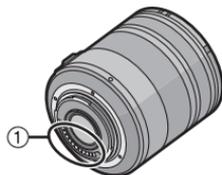

## Battery

The battery is a rechargeable lithium ion battery. Its ability to generate power comes from the chemical reaction that takes place inside it. This reaction is susceptible to the surrounding temperature and humidity. If the temperature is too high or too low, the operating time of the battery will become shorter.

**Always remove the battery after use.**

**If you drop the battery accidentally, check to see if the body of the battery and the terminals are damaged.**

- Inserting a damaged battery in the camera will damage the camera.

**Bring charged spare batteries when going out.**

- Be aware that the operating time of the battery becomes shorter in low temperature conditions such as at a ski resort.
- When you travel, do not forget to bring the battery charger (supplied) and the AC mains lead (supplied) so that you can charge the battery in the country that you are travelling in.

**Dispose of unusable battery.**

- The battery has a limited life.
- Do not throw the battery into fire because it may cause an explosion.

**Do not allow battery terminals to come into contact with metal objects (such as necklaces, hairpins etc.).**

- This can cause short circuiting or heat generation and you may be badly burned if you touch a battery.

## Charger

- If you use the battery charger near a radio, the radio reception may be disturbed.
- Keep the charger 1 m (3.28 feet) or more away from radios.
- The charger may generate whirring sounds when it is being used. This is not a malfunction.
- After use, be sure to disconnect the power supply device from the electrical outlet. (A very small amount of current is consumed if it is left connected.)
- Keep the terminals of the charger and battery clean.

## Card

**Do not leave the card where the temperature is high, where electromagnetic waves or static electricity are easily generated or exposed to direct sunlight.**

**Do not bend or drop the card.**

- The card may be damaged or the recorded content may be damaged or deleted.
- Put the card in the card case or the storage bag after use and when storing or carrying the card.
- Do not allow dirt, dust or water to get into the terminals on the back of the card and do not touch the terminals with your fingers.

**Notice for when transferring to another party, or disposing of the memory card**

- "Format" or "delete" using the camera or a PC will only modify the file management information, and it will not erase the data in the memory card completely.

It is recommended to physically destroy the memory card or use the commercially available computer data deletion software to completely erase the data in the memory card before transferring to another party or disposing.

Management of data in the memory card is the responsibility of the user.

## About the personal information

If a name or birthday is set for [BABY1]/[BABY2]/face recognition function, this personal information is kept in the camera and included in the recorded image.

### Disclaimer

- Information including personal information may be altered or vanish due to erroneous operation, effect of static electricity, accident, malfunction, repair, or other handlings. Please note in advance that Panasonic is not liable in any way for any direct or indirect damage from the alteration or vanishing of information or personal information.

**When requesting a repair, transferring to another party or disposing**

- Reset the settings to protect the personal information. (P36)
- Remove the memory card from the camera when requesting a repair.
- Settings may return to factory default when camera is repaired.
- Please contact the dealer where you purchased the camera or your nearest Service Centre if above operations are not possible due to malfunction.

**When transferring to another party, or disposing of the memory card, please refer to "Notice for when transferring to another party, or disposing of the memory card" on P171.**

## When not using the camera for a long period of time

- Store the battery in a cool and dry place with a relatively stable temperature: [Recommended temperature: 15 °C to 25 °C (59 °F to 77 °F), Recommended humidity: 40% to 60%]
- Always remove the battery and the card from the camera.
- If the battery is left inserted in the camera, it will discharge even if the camera is turned off. If the battery continues to be left in the camera, it will discharge excessively and may become unusable even if charged.
- When storing the battery for a long period of time, we recommend charging it once a year. Remove the battery from the camera and store it again after it has completely discharged.
- We recommend storing the camera with a desiccant (silica gel) when you keep it in a closet or a cabinet.
- **Check all the parts before taking pictures when you have not used the camera for a long period of time.**

### About the picture data

- Recorded data may be damaged or lost if the camera breaks down due to inappropriate handling. Panasonic will not be liable for any damage suffered due to loss of recorded data.

### About tripods

- When you use a tripod, make sure the tripod is stable when this unit is attached to it.
- You may not be able to remove the battery when using a tripod.
- Make sure that the screw on the tripod is not at an angle when attaching or detaching the camera. You may damage the screw on the camera if you use excessive force when turning it. Also, the camera body and the rating label may be damaged or scratched if the camera is attached too tightly to the tripod.
- Read the operating instructions for the tripod carefully.

### About the shoulder strap

- If you attach a heavy interchangeable lens (more than about 1 kg) to the camera body, do not carry the camera by the shoulder strap. Hold the camera and the lens when carrying them.

## Message Display

Confirmation messages or error messages will be displayed on the screen in some cases. The major messages are described below as examples.

#### [THIS MEMORY CARD IS LOCKED]

- The Write-Protect switch on the SD Memory Card and the SDHC Memory Card are moved to [LOCK]. Move the switch back to unlock it. (P27)

#### [NO VALID PICTURE TO PLAY]

- Record a picture or insert a card with a recorded picture and then play it.

#### [THIS PICTURE IS PROTECTED]

- Delete the picture after cancelling the protect setting. (P145)

#### [THIS PICTURE CANNOT BE DELETED]/[SOME PICTURES CANNOT BE DELETED]

- Pictures not based on the DCF standard cannot be deleted.
  - If you want to delete some pictures, format the card after saving necessary data on a PC etc. (P38)

#### [NO ADDITIONAL SELECTIONS CAN BE MADE]

- The number of pictures, which can be set at one time when [MULTI] has been selected for [DELETE MULTI] (P60), [FAVORITE] (P136), [TITLE EDIT] (P137), [TEXT STAMP] (P138) or [RESIZE] (P140) has been exceeded.
  - Reduce the number of pictures set, and then repeat the operation.
- More than 999 favourites have been set.

**[CANNOT BE SET ON THIS PICTURE]**

- [TITLE EDIT], [TEXT STAMP] or [PRINT SET] cannot be set for pictures not based on the DCF standard.

**[MEMORY CARD ERROR  
FORMAT THIS CARD?]**

- This card has a format which is not recognised by the camera.  
→ Format the card again with the camera after saving necessary data on a PC etc. (P38)

**[PLEASE CHECK THAT THE LENS IS ATTACHED CORRECTLY]**

- Do not press the lens release button.
- Check that the lens is attached correctly and then turn the camera off and on.  
→ If the message persists, contact the dealer or your nearest Service Centre.

**[THE LENS IS NOT ATTACHED PROPERLY.]**

- Detach the lens and then attach it again. (P17)

**[MEMORY CARD PARAMETER ERROR]/[THIS MEMORY CARD CANNOT BE USED]**

- Use a card compatible with this unit. (P27)
- You can only use an SDHC Memory Card if using cards with 4 GB or more capacity.

**[MEMORY CARD ERROR  
PLEASE CHECK THE CARD]**

- An error has occurred accessing the card.  
→ Insert the card again.  
→ Insert a different card.

**[READ ERROR/WRITE ERROR  
PLEASE CHECK THE CARD]**

- It has failed to read or write data.  
→ Remove the card after turning the power [OFF]. Insert the card again, turn the power on, and try to read or write the data again.
- The card may be broken.  
→ Insert a different card.

**[CANNOT RECORD DUE TO INCOMPATIBLE FORMAT (NTSC/PAL) DATA ON THIS CARD.]**

- If you want to delete some pictures, format the card after saving necessary data on a PC etc. (P38)
- Insert a different card.

**[MOTION RECORDING WAS CANCELLED DUE TO THE LIMITATION OF THE  
WRITING SPEED OF THE CARD]**

- It is recommended to use a card with SD Speed Class\* with "Class 6" or higher when recording motion pictures.  
\* SD speed class is the speed standard regarding continuous writing.
- When you set the picture quality to [ ], [ ] or [ ], we recommend using a high-speed card with "10MB/s" or greater displayed on the package.
- In the event that it stops even after using a "10MB/s" card or higher, the data writing speed has deteriorated so it is recommended to make a backup and then format (P38).
- Depending on the type of SD Memory Card or SDHC Memory Card, motion picture recording may stop in the middle.

**[A FOLDER CANNOT BE CREATED]**

- A folder cannot be created because there are no remaining folder numbers that can be used. (P156)
  - Format the card after saving necessary data on a PC etc. (P38) If you execute [NO.RESET] in the [SETUP] menu after formatting, the folder number is reset to 100. (P36)

**[PICTURE IS DISPLAYED FOR 4:3 TV]/[PICTURE IS DISPLAYED FOR 16:9 TV]**

- The AV cable is connected to the camera.
  - Press [MENU/SET] if you want to delete this message at once.
  - Select [TV ASPECT] in the [SETUP] menu if you want to change the TV aspect. (P36)
- This message also appears when the USB connection cable is connected to the camera only. In this case, connect the other end of the USB connection cable to a PC or a printer. (P155, 157)

**[PRINTER BUSY]/[PLEASE CHECK THE PRINTER]**

- The printer cannot print.
  - Check the printer.

**[NO BATTERY POWER REMAINS]**

- The remaining battery power is low.
  - Charge the battery.

**[THIS BATTERY CANNOT BE USED]**

- The battery cannot be recognised by the camera.
  - Use a genuine Panasonic battery. If this message is displayed even when a genuine Panasonic battery is used, contact the dealer or your nearest Service Centre.
- The battery cannot be recognised as its terminal is dirty.
  - Remove any dirt etc. from the terminal.

**[PLEASE MAKE SURE TO TURN ON THE POWER OF EXTERNAL MICROPHONE.]**

- When attaching the stereo microphone (DMW-MS1; optional), check the battery status and make sure the power is on before use. (P164)

## Troubleshooting

First, try out the following procedures (P175–182).

If the problem is not resolved, it may be improved by selecting **[RESET] (P36)** on the **[SETUP]** menu.

### Battery and power source

#### The camera cannot be operated even when it is turned on.

- The battery is not inserted correctly. (P24)
- The battery is exhausted.
- Charge the battery.
- AC adaptor is not connected properly. (P25)

#### The LCD monitor turns off while the camera is turned on.

- Is the display set to Viewfinder?  
→ Press [LVF/LCD] button to switch to LCD monitor display. (P41)
- Is [AUTO LCD OFF] (P33) of the [ECONOMY] mode active?  
→ Press the shutter button halfway to cancel these modes.
- Is the LCD monitor switched off?  
→ Switch the display by pressing [DISPLAY]. (P61)
- The battery is exhausted.
- Charge the battery.

#### The camera turns off immediately after it is turned on.

- The battery is exhausted.
- Charge the battery.
- If you leave the camera on, the battery will be exhausted.  
→ Turn the camera off frequently by using the [ECONOMY] mode etc. (P33)

#### This unit is turned off automatically.

- If you connect to a TV compatible with VIERA Link with a HDMI mini cable (optional) and turn off the power on the TV with the remote control for the TV, the power on this unit also turns off.  
→ If you are not using VIERA Link, set [VIERA Link] to [OFF]. (P37)

#### The [CHARGE] lamp flashes.

- Is the temperature of the battery excessively high or low? If it is, it will take longer than usual to charge the battery or charging may remain incomplete.
- Are the terminals of the charger or battery dirty?  
→ Wipe off the dirt using a dry cloth.

## Recording

### **The picture cannot be recorded. The shutter does not activate.**

- Is the mode dial correctly set?
- Is the card inserted?
- Is there any memory remaining on the card?
  - Delete the pictures which are not necessary to increase the available memory. (P59)
- Is the subject focused?
  - At the time of purchase, the camera is set so that you cannot take a picture until the subject is brought into focus. If you want to be able to take a picture when you press the shutter button fully even if the subject is not focused, set [FOCUS PRIORITY] in the [CUSTOM MENU] menu to [OFF]. (P128)

### **The recorded picture is whitish.**

- Picture might look whitish when lens or image sensor gets dirty with finger print or similar.
  - If the lens is dirty turn the camera off and then gently wipe the lens surface with a soft dry cloth.
  - Refer to P169 when the image sensor gets dirty.

### **The recorded picture is too bright or dark.**

- Check that the exposure is correctly compensated. (P71)
- Is the AE lock (P81) applied in inappropriate way?

### **2 or 3 pictures are taken at one time.**

- Unset the settings of white balance bracket (P85).

### **The subject is not focused properly.**

- The subject is beyond the focus range of the camera. (P51)
- There is camera shake (jitter) or the subject is moving slightly. (P53)
- Is [FOCUS PRIORITY] in the [CUSTOM MENU] menu set to [OFF]? (P128)
  - In this case, the picture may not be properly focused even if [AFS] or [AFC] in focus mode is set.
- Is the AF lock (P81) applied in inappropriate way?

### **The recorded picture is blurred. The optical image stabilizer is not effective.**

- The shutter speed will become slower and the optical image stabilizer function may not work properly when taking pictures especially in dark places.
  - We recommend holding the camera firmly with both hands when taking pictures. (P39)
  - We recommend using a tripod and the self-timer (P76) when taking pictures with a slow shutter speed.

### **Taking pictures using white balance bracket is not possible.**

- Is the number of recordable pictures 2 or less?

### The recorded picture looks rough. Noise appears on the picture.

- Is the ISO sensitivity high or the shutter speed slow? (ISO sensitivity is set to [AUTO] when the camera is shipped. Therefore, when taking pictures indoors etc. noise will appear.)
  - Decrease the ISO sensitivity. (P86)
  - Increase the setting for [NOISE RED.] in [FILM MODE] or lower the setting for each of the items other than [NOISE RED.]. (P88)
  - Take pictures in bright places.
  - Set the [LONG SHTR NR] to [ON]. (P123)

### The brightness or the hue of the recorded picture is different from the actual scene.

- If recording under fluorescent light, the brightness or the hue may change slightly when the shutter speed becomes fast. This occurs due to the characteristics of fluorescent light. It is not a malfunction.

### Reddish horizontal streaks appear on the LCD monitor during recording.

- This is characteristic of MOS sensors which serve as the camera's pickup sensors. It appears when the subject has a bright part. Some unevenness may occur in the surrounding areas, but this is not a malfunction.  
It is recorded in motion pictures but is not recorded on still pictures.
- It is recommended that you take pictures while taking care not to expose the screen to sunlight or any other source of strong light.

### Motion picture recording stops in the middle.

- It is recommended to use a card with SD Speed Class\* with "Class 6" or higher when recording motion pictures.
- \* SD speed class is the speed standard regarding continuous writing.
- Depending on the type of the card, recording may stop in the middle.
  - When you set the picture quality to [  ], [  ] or [  ], we recommend using a high-speed card with "10MB/s" or greater displayed on the package.
  - In the event that it stops even after using a "10MB/s" card or higher, the data writing speed has deteriorated so it is recommended to make a backup and then format (P38).

### You cannot compensate the exposure.

- Are you in exposure compensation operation?
  - Press the front dial to switch to exposure compensation operation. (P71)

### Subject cannot be locked. (AF tracking not possible)

- Set the AF area to the distinctive colour of the subject if there is a part that is different from the surrounding colour. (P78)

## Lens

### Recorded image may be warped, or nonexistent colour is surrounding the subject.

- Depending on the lens used, picture may be warped slightly or see colours in the edge depending on the zoom factor, due to the characteristics of the lens. Also, the peripherals of the image might look warped because the perspective is enhanced when the wide angle is used. This is not a malfunction.

## Flash

### The flash is not activated.

- Is the flash closed?  
→ Slide the [**⚡ OPEN**] lever to open the flash. (P65)

### The flash is activated 2 times.

- The flash is activated 2 times. The interval between the first and second flash is longer when Red-eye reduction (P66) is set so the subject should not move until the second flash is activated.

## LCD monitor/Viewfinder

### The LCD monitor turns off although the camera is turned on.

- The LCD monitor turns off when [AUTO LCD OFF] (P33) is selected for the [ECONOMY] mode. [This does not happen when using the AC adaptor (P25).]  
If the remaining battery power is low, it may take longer for the flash to be charged, and the time during which the LCD monitor is turned off may become longer.
- It will switch to viewfinder display if there is hand or object near the eye sensor. (P41)

### The LCD monitor/Viewfinder is too bright or dark.

- Adjust the brightness of the LCD monitor/viewfinder to a proper level. (P35)
- [POWER LCD] is activated. (P35)

### The picture is not displayed on the LCD monitor.

- Does the picture appear on the Viewfinder?  
→ Press [LVF/LCD] to switch to LCD monitor display. (P41)
- Is the LCD monitor switched off?  
→ Switch the display by pressing [DISPLAY]. (P61)

### LCD monitor and viewfinder do not switch when [LVF/LCD] is pressed.

- Is the [EXPO. SETTINGS] set to [SWITCH BY PRESSING THE LVF/LCD BUTTON]? (P129)
- It is only displayed on the LCD monitor when the camera is connected to a PC or printer.

### Black, red, blue and green dots appear on the LCD monitor.

- This is not a malfunction.  
These pixels do not affect the recorded pictures.

### Noise appears on the LCD monitor.

- In dark places, noise may appear to maintain the brightness of the LCD monitor. This does not affect the pictures you are recording.

### The LCD monitor flickers indoors.

- The LCD monitor may flicker for a few seconds after turning the camera on indoors under fluorescent light. This is not a malfunction.

### A flickering horizontal line appears on the LCD monitor under fluorescent light.

- This is characteristic of MOS sensors which serve as the camera's pickup sensors. This is not a malfunction.

### You see red, green, or blue flashes when you move your eyes in the viewfinder, or when the camera is moved rapidly.

- This is a characteristic of the drive system of the viewfinder of this unit, and it is not a malfunction. There will be no problem with the recorded image.

## Playback

### The picture being played back is not rotated, or is rotated in an unexpected direction, when displayed.

- You can display the pictures without being rotated when [ROTATE DISP.] (P143) is set to [OFF].
- You can rotate pictures with the [ROTATE] function. (P143)
- You can only display the pictures rotated if you use a lens (P15) that supports the direction detection function (P40) and [ROTATE DISP.] is set to [ON].

### The picture is not played back.

- Did you press [▶]?
- Is the card inserted?
- Is there a picture on the card?
- Is this a picture whose file name has been changed in the PC? If it is, it cannot be played back by this unit.

### The recorded pictures are not displayed.

- Has [PLAYBACK MODE] been set for playback?  
→ Change to [NORMAL PLAY]. (P135)

### The folder number and the file number are displayed as [—] and the screen turns black.

- Is this a non-standard picture, a picture which has been edited using a PC or a picture which was taken by another make of digital camera?
- Did you remove the battery immediately after picture-taking or did you take the picture using a battery with a low remaining charge?  
→ Format the data to delete the pictures mentioned above. (P38)  
(Other pictures will be deleted as well and it will not be possible to restore them. Therefore, check well before formatting.)

### Images with different date as recorded date are played back in the Calendar Playback.

- Is the clock in the camera set properly? (P28)
- Images edited on a PC or images recorded on other cameras might display a different date to the recorded date during the Calendar Playback.

### White round spots like soap bubbles appear on the recorded picture.

- If you take a picture with the flash in a dark place or indoors, white round spots may appear on the picture caused by the flash reflecting of particles of dust in the air. This is not a malfunction.  
A characteristic of this is that the number of round spots and their position differ in every picture.



### [THUMBNAIL IS DISPLAYED] appears on the screen.

- Is it a picture that has been recorded with other equipment? In such cases, these pictures may be displayed with a deteriorated picture quality.

### Red part of the recorded image has changed colour to black.

- When the flash is set to red-eye reduction ([~~FLASH~~], [~~FLASH~~], [~~FLASH~~]) and if you take a picture of subject with red colour surrounded by a skin tone colour, that red part may be corrected to black by the digital red-eye reduction function.  
→ It is recommended to take picture with the [D.RED-EYE] set to [OFF]. (P120)

### A clicking sound is recorded in the motion pictures.

- This unit automatically adjusts the aperture during motion picture recording. A clicking sound may occur at this time depending on the lens, and this sound may be recorded on the motion pictures. This is not a malfunction.
- The operational sound of the zoom or button operation may be recorded when it is operated during the recording of a motion picture.

## TV, PC and printer

### The picture does not appear on the television.

- Is the camera connected to the TV correctly?  
→ Set the TV input to external input mode.
- Output from the [HDMI] socket is not possible when it is connected to the PC or the printer.  
→ Connect it only to the TV.

### The display areas on the TV screen and the camera's LCD monitor are different.

- Depending on the TV model, the pictures may be extended horizontally or vertically or they may be displayed with their edges cut off.

### The motion pictures cannot be played back on a TV.

- Are you trying to play back the motion pictures by directly inserting the card in the card slot of the TV?  
→ Connect the camera to the TV with the AV cable (supplied), or with the HDMI mini cable (optional), and then play back the motion pictures on the camera. (P148, 149)

- Motion pictures recorded in [AVCHD] can be played back on Panasonic televisions (VIERA) with the AVCHD logo.

### The picture is not displayed fully on the TV.

- Check [TV ASPECT] setting. (P36)

### VIERA Link does not work.

- Is it connected properly with the HDMI mini cable (optional)? (P149)
  - Confirm that the HDMI mini-cable (optional) is firmly fitted.
  - Press [▶] on this unit.
- Is the [VIERA Link] on this unit set to [ON]? (P37)
  - Depending on HDMI terminal of the TV, the input channel may not switch automatically. In this case, use the remote control for the TV to switch input. (For details on how to switch input, please read the operating instructions for the TV.)
  - Check the VIERA Link setting on the connected device.
  - Turn the power to the unit off and then back on again.
  - Set [VIERA Link] to [Off] on the TV and then turn it back to [On]. (Refer to the operating instructions of the TV for details.)
  - Check [VIDEO OUT] setting. (P36)

### The picture cannot be transferred when the camera is connected to a PC.

- Is the camera connected to the PC correctly?
- Is the camera recognised by the PC correctly?
  - Set to [PC] in [USB MODE]. (P36, 155)

### The card is not recognised by the PC.

- Disconnect the USB connection cable. Connect it again while the card is inserted in the camera.

### The picture cannot be printed when the camera is connected to a printer.

- Pictures cannot be printed using a printer which does not support PictBridge.
  - Set to [PictBridge(PTP)] in [USB MODE]. (P36, 157)

### The ends of the pictures are cut at printing.

- When using a printer with a trimming or borderless printing function, cancel this function before printing. (For details, refer to the operating instructions for the printer.)
- When you order photo studios to print pictures, ask the photo studio if the pictures can be printed with both ends.

## Others

### There is a sound from lens unit.

- It is a sound of lens movement or aperture operation when the power is turned [ON] or [OFF], and it is not a malfunction.
  - You may hear a sound from the lens and image in the LCD monitor may suddenly change when the brightness has changed by zoom operation or moving the camera, but there is no effect on recording.
- The sound is caused by the automatic adjustment of the aperture. This is not a malfunction.

**An unreadable language was selected by mistake.**

→ Press [MENU/SET], select the [SETUP] menu icon [] and then select the [] icon to set the desired language. (P38)

**Part of the picture is flashing in black and white.**

- This is a highlight function showing the white saturated area. (P34)
- Is the [HIGHLIGHT] set to [ON]?

**A red lamp sometimes turns on when the shutter button is pressed halfway.**

- In dark places, the AF assist lamp (P129) lights red to make it easier to focus on a subject.

**The AF assist lamp does not turn on.**

- Is [AF ASSIST LAMP] on the [CUSTOM MENU] menu set to [ON]? (P129)
- The AF assist lamp does not turn on in bright places.

**The camera becomes warm.**

- The surface of the camera and the reverse side of the LCD monitor may become warm during use. This does not affect the performance or quality of the camera.

**The clock is reset.**

- If you do not use the camera for a long time, the clock may be reset.  
→ When the message [PLEASE SET THE CLOCK] appears, set the clock again. When you take a picture before setting the clock, [0:00 0. 0. 0] is recorded. (P28)

**The file numbers are not recorded consecutively.**

- When you perform an operation after taking a certain action, the pictures may be recorded in folders with different numbers from the ones used prior to the operation. (P156)

**The file numbers are recorded in ascending order.**

- If the battery was inserted or removed without first turning the camera's power off, the folder and file numbers for the pictures taken will not be stored in the memory. When the power is then turned back on and pictures are taken, they may be stored under file numbers which should have been assigned to previous pictures.

**Age is not displayed correctly.**

- Check the clock (P28) and birthday settings (P99).

## Number of Recordable Pictures and Available Recording Time

- The number of recordable pictures and the available recording time are an approximation. (These vary depending on the recording conditions and the type of card.)
- The number of recordable pictures and the available recording time varies depending on the subjects.

### ■ Number of recordable pictures

Aspect ratio		4:3							
Picture size		L : 4000×3000 pixels (12 million pixels)				M : 2816×2112 pixels (5.9 million pixels)			
Quality				RAW 	RAW 			RAW 	RAW 
Card	32 MB	3	7	0	1	6	14	1	1
	64 MB	7	16	2	3	15	31	3	3
	128 MB	17	35	5	6	32	64	6	7
	256 MB	34	71	11	13	63	127	13	14
	512 MB	70	142	22	26	128	254	26	29
	1 GB	143	286	45	54	257	510	52	59
	2 GB	291	578	92	110	523	1023	107	120
	4 GB	573	1137	182	216	1030	2010	212	235
	6 GB	872	1729	277	329	1566	3056	322	358
	8 GB	1168	2315	371	440	2097	4092	432	480
	12 GB	1762	3493	559	664	3165	6173	651	724
16 GB	2351	4660	747	886	4222	8235	869	966	
32 GB	4719	9350	1499	1779	8471	16520	1744	1939	

Aspect ratio		4:3				3:2			
Picture size		S : 2048×1536 pixels (3.1 million pixels)				L : 4128×2752 pixels (11.4 million pixels)			
Quality		📶	📷	RAW📶	RAW📷	📶	📷	RAW📶	RAW📷
Card	32 MB	17	35	1	1	3	7	0	1
	64 MB	37	74	3	3	8	17	2	3
	128 MB	77	152	7	8	17	36	5	7
	256 MB	152	297	15	15	36	73	11	14
	512 MB	303	591	30	31	73	146	23	28
	1 GB	609	1183	60	63	148	294	47	57
	2 GB	1228	2362	122	128	301	595	97	116
	4 GB	2412	4640	240	252	593	1170	191	228
	6 GB	3668	7056	366	384	902	1780	292	347
	8 GB	4911	9445	490	514	1208	2383	391	465
	12 GB	7408	14248	739	776	1823	3595	590	702
	16 GB	9882	19006	986	1035	2433	4796	787	937
32 GB	19825	38127	1978	2078	4881	9623	1580	1880	

Aspect ratio		3:2							
Picture size		M : 2928×1952 pixels (5.7 million pixels)				S : 2064×1376 pixels (2.8 million pixels)			
Quality		📶	📷	RAW📶	RAW📷	📶	📷	RAW📶	RAW📷
Card	32 MB	6	14	1	1	19	38	1	1
	64 MB	15	31	3	3	41	80	3	4
	128 MB	32	64	6	7	85	165	8	8
	256 MB	64	127	13	15	168	323	16	16
	512 MB	128	254	27	31	334	641	32	33
	1 GB	259	510	55	62	670	1284	64	67
	2 GB	523	1023	113	126	1334	2560	130	137
	4 GB	1030	2010	222	249	2622	5027	256	269
	6 GB	1566	3056	338	378	3987	7644	390	409
	8 GB	2097	4092	453	507	5338	10233	522	548
	12 GB	3165	6173	684	765	8052	15435	788	826
	16 GB	4222	8235	913	1020	10742	20590	1051	1102
32 GB	8471	16520	1832	2047	21549	41304	2109	2212	

Aspect ratio		16:9							
Picture size		L : 4352×2448 pixels (10.7 million pixels)				M : 3072×1728 pixels (5.3 million pixels)			
Quality				RAW	RAW			RAW	RAW
Card	32 MB	3	8	1	1	6	14	1	1
	64 MB	8	18	2	3	15	31	3	4
	128 MB	18	38	6	7	32	66	7	8
	256 MB	37	75	12	15	65	130	14	16
	512 MB	75	151	25	30	130	259	29	33
	1 GB	152	303	50	60	262	519	58	66
	2 GB	310	613	103	123	533	1040	119	134
	4 GB	611	1205	203	242	1048	2044	235	265
	6 GB	930	1833	308	369	1594	3108	358	403
	8 GB	1245	2454	413	494	2134	4161	480	539
	12 GB	1879	3703	624	746	3220	6278	724	814
16 GB	2507	4940	832	996	4295	8374	966	1085	
32 GB	5030	9911	1671	1998	8618	16800	1939	2178	

Aspect ratio		16:9				1:1			
Picture size		S : 1920×1080 pixels (2.1 million pixels)				L : 2992×2992 pixels (9.0 million pixels)			
Quality				RAW	RAW			RAW	RAW
Card	32 MB	26	52	2	2	4	10	1	1
	64 MB	56	108	4	4	10	22	3	4
	128 MB	115	222	8	9	23	48	7	8
	256 MB	226	434	17	18	47	95	14	17
	512 MB	449	862	35	36	95	189	29	34
	1 GB	900	1725	70	73	191	381	59	70
	2 GB	1806	3413	142	148	390	766	120	141
	4 GB	3548	6704	280	291	767	1507	236	279
	6 GB	5395	10193	426	443	1167	2292	359	424
	8 GB	7222	13644	571	593	1563	3068	482	568
	12 GB	10895	20581	861	894	2358	4629	727	857
16 GB	14534	27454	1149	1193	3146	6176	970	1143	
32 GB	29155	55073	2305	2394	6312	12390	1947	2294	

Aspect ratio		1:1							
Picture size		M: 2112×2112 pixels (4.5 million pixels)				S: 1504×1504 pixels (2.3 million pixels)			
Quality				RAW	RAW			RAW	RAW
Card	32 MB	12	25	1	2	24	48	2	2
	64 MB	26	52	4	4	52	100	4	5
	128 MB	54	108	8	9	107	204	9	10
	256 MB	108	213	17	19	210	399	19	20
	512 MB	215	424	35	38	418	793	38	40
	1 GB	433	850	71	78	838	1589	77	81
	2 GB	876	1706	145	158	1660	3072	157	165
	4 GB	1722	3351	285	310	3260	6033	310	324
	6 GB	2620	5095	434	472	4958	9173	471	493
	8 GB	3507	6821	581	632	6637	12280	631	660
	12 GB	5291	10290	877	954	10011	18523	952	995
	16 GB	7058	13726	1170	1273	13355	24708	1270	1328
32 GB	14160	27535	2348	2554	26791	49565	2548	2664	

Aspect ratio		4:3	3:2	16:9	1:1
Quality		RAW			
Card	32 MB	2	2	2	2
	64 MB	4	4	4	5
	128 MB	8	9	9	11
	256 MB	16	17	19	21
	512 MB	33	35	38	42
	1 GB	67	71	76	86
	2 GB	136	144	155	174
	4 GB	267	284	304	342
	6 GB	406	432	463	521
	8 GB	544	579	620	697
	12 GB	821	873	935	1052
	16 GB	1095	1165	1247	1403
32 GB	2198	2338	2503	2816	

## ■ Available recording time (when recording motion pictures)

File format		[AVCHD]				[MOTION JPEG]			
Recording quality setting									
Card	32 MB	Cannot be guaranteed in operation.				4 s	16 s	17 s	52 s
	64 MB					12 s	36 s	38 s	1 min 50 s
	128 MB					29 s	1 min 17 s	1 min 20 s	3 min 45 s
	256 MB					59 s	2 min 30 s	2 min 35 s	7 min 20 s
	512 MB	3 min 00 s	3 min 00 s	4 min 00 s	7 min 00 s	2 min 00 s	5 min 00 s	5 min 10 s	14 min 40 s
	1 GB	7 min 00 s	7 min 00 s	9 min 00 s	14 min 00 s	4 min 00 s	10 min 10 s	10 min 40 s	29 min 30 s
	2 GB	15 min 00 s	15 min 00 s	20 min 00 s	29 min 00 s	8 min 20 s	20 min 50 s	21 min 40 s	1 h 00 min
	4 GB	30 min 00 s	30 min 00 s	40 min 00 s	1 h 00 min	16 min 20 s	41 min 00 s	42 min 40 s	1 h 58 min
	6 GB	46 min 00 s	46 min 00 s	1 h 00 min	1 h 28 min	25 min 00 s	1 h 02 min	1 h 05 min	3 h 00 min
	8 GB	1 h 00 min	1 h 00 min	1 h 20 min	1 h 54 min	33 min 30 s	1 h 23 min	1 h 27 min	4 h 01 min
	12 GB	1 h 34 min	1 h 34 min	2 h 00 min	2 h 54 min	50 min 30 s	2 h 06 min	2 h 11 min	6 h 04 min
	16 GB	2 h 00 min	2 h 00 min	2 h 40 min	4 h 00 min	1 h 07 min	2 h 48 min	2 h 55 min	8 h 05 min
32 GB	4 h 00 min	4 h 00 min	5 h 20 min	8 h 00 min	2 h 15 min	5 h 38 min	5 h 51 min	16 h 14 min	

- \* Motion pictures can be recorded continuously for up to 29 minutes 59 seconds. Also, motion picture recorded continuously in [MOTION JPEG] is up to 2 GB. (Example: [8m 20s] with ) Remaining time for continuous recording is displayed on the screen.

### Note

- The number of recordable pictures and the available recording time displayed on the screen may not decrease in order.
- If you set [EX. OPT. ZOOM] (P121) to [ON],  is displayed on the screen when the picture size is set to a size other than the maximum picture size for each aspect ratio.

## Specifications

### Digital Camera Body

**(DMC-GH1):** Information for your safety

<b>Power Source:</b>	DC 9.3 V
<b>Power Consumption:</b>	2.9 W (When recording with LCD Monitor) 2.7 W (When recording with Viewfinder) 2.0 W (When playing back with LCD Monitor) 1.8 W (When playing back with Viewfinder)
<b>Camera effective pixels:</b>	12,100,000 pixels
<b>Image sensor:</b>	4/3" Live MOS sensor, total pixel number 13,980,000 pixels, Primary colour filter
<b>Digital zoom:</b>	Max. 4×
<b>Extra optical zoom:</b> (Except for the maximum picture size for each aspect ratio)	ON/OFF simple enlargement (compatible with lenses from other manufacturers)
<b>Focus:</b>	Auto focus/Manual focus, Face detection/AF Tracking/ 23-area-focusing/1-area-focusing
<b>Shutter system:</b>	Focal-plane shutter
<b>Burst recording</b>	
<b>Burst speed:</b>	3 pictures/second (High speed), 2 pictures/second (Low speed)
<b>Number of recordable pictures:</b>	Max. 7 pictures (when there are RAW files) Depends on the capacity of the card (when there are no RAW files)
<b>ISO sensitivity (Standard Output Sensitivity):</b>	AUTO/ $\frac{1}{2}$ ISO/100/200/400/800/1600/3200
<b>Shutter speed:</b>	B (Bulb) (max. 4 minutes), 60 seconds to 1/4000th of a second
<b>Metering range:</b>	EV 0 to EV 18
<b>White balance:</b>	Auto white balance/Daylight/Cloudy/Shade/Incandescent lights/ Flash/White set1/White set2/White balance K set
<b>Exposure (AE):</b>	Programme AE (P)/Aperture-priority AE (A)/Shutter-priority AE (S)/Manual exposure (M)/AUTO Exposure compensation (1/3 EV Step, -3 EV to +3 EV)
<b>Metering mode:</b>	Multiple/Centre weighted/Spot
<b>LCD monitor:</b>	3.0" TFT LCD (Approx. 460,000 dots) (field of view ratio about 100%)
<b>Viewfinder:</b>	Colour LCD Viewfinder (Approx. 1,440,000 dots) (field of view ratio about 100%) (with diopter adjustment -4 to +4 diopter)

<b>Flash:</b>	Built-in pop up flash GN 11 equivalent (ISO100·m) Flash range: Approx. 1.0 m (3.28 feet) to 4.8 m (15.8 feet) (When the 14–140 mm/F4.0–5.8 lens included in DMC-GH1K is mounted, focal length is 22 mm, [ISO AUTO] is set, and the aspect ratio is set to [4:3]) AUTO, AUTO/Red-eye reduction, Forced ON, Forced ON/Red-eye reduction, Slow sync./Red-eye reduction, Forced OFF
<b>Flash synchronization speed:</b>	Equal to or smaller than 1/160th of a second
<b>Microphone:</b>	Stereo
<b>Speaker:</b>	Monaural
<b>Recording media:</b>	SD Memory Card/SDHC Memory Card
<b>Picture size</b>	
<b>Still picture:</b>	When the aspect ratio setting is [4:3] 4000×3000 pixels, 2816×2112 pixels, 2048×1536 pixels When the aspect ratio setting is [3:2] 4128×2752 pixels, 2928×1952 pixels, 2064×1376 pixels When the aspect ratio setting is [16:9] 4352×2448 pixels, 3072×1728 pixels, 1920×1080 pixels When the aspect ratio setting is [1:1] 2992×2992 pixels, 2112×2112 pixels, 1504×1504 pixels
<b>Recording quality</b>	
<b>Motion pictures:</b>	[AVCHD] (With stereo audio) When set to [FHD]: 1920×1080 pixels (50i recording/17 Mbps) (Sensor output is 25 frames/sec.)/ When set to [SH]: 1280×720 pixels (50p recording/17 Mbps)/ When set to [H]: 1280×720 pixels (50p recording/13 Mbps)/ When set to [L]: 1280×720 pixels (50p recording/9 Mbps) [MOTION JPEG] (With stereo audio) When set to [HD]: 1280×720 pixels (30 frames/sec.)/ When set to [WVGA]: 848×480 pixels (30 frames/sec.)/ When set to [VGA]: 640×480 pixels (30 frames/sec.)/ When set to [QVGA]: 320×240 pixels (30 frames/sec.)
<b>Quality:</b>	RAW/RAW+Fine/RAW+Standard/Fine/Standard
<b>Recording file format</b>	
<b>Still Picture:</b>	JPEG (based on “Design rule for Camera File system”, based on “Exif 2.21” standard)/DPOF corresponding
<b>Pictures with audio:</b>	JPEG (based on “Design rule for Camera File system”, based on “Exif 2.21” standard)+“QuickTime” (pictures with audio)
<b>Motion pictures with audio:</b>	AVCHD/QuickTime Motion JPEG
<b>Interface</b>	
<b>Digital:</b>	“USB 2.0” (High Speed)
<b>Analogue video/audio:</b>	NTSC/PAL Composite (Switched by menu) Audio line output (stereo)

**Terminal**

<b>[MIC/REMOTE]:</b>	$\phi$ 2.5 mm jack
<b>[AV OUT/DIGITAL]:</b>	Dedicated jack (14 pin)
<b>[HDMI]:</b>	MiniHDMI TypeC (1.3a corresponding)
<b>[DC IN]:</b>	None (when using an AC adaptor, use supplied DC cable)

**Dimensions:** Approx. 124 mm (W)×89.6 mm (H)×45.2 mm (D)  
[4 7/8" (W)×3 1/2" (H)×1 13/16" (D)] (excluding the projecting parts)

**Mass:** Approx. 385 g/13.6 oz (camera body),  
Approx. 903 g/31.9 oz  
(with the 14–140 mm/F4.0–5.8 lens included in DMC-GH1K, card and battery)

**Operating temperature:** 0 °C to 40 °C (32 °F to 104 °F)

**Operating humidity:** 10% to 80%

**AC Adaptor (Panasonic DE-A49C):**

Information for your safety

<b>Input:</b>	110 V to 240 V ~ 50/60 Hz, 0.3 A
<b>Output:</b>	DIGITAL CAMERA 9.3 V --- 1.2 A CHARGE 8.4 V --- 0.65 A

**Battery Pack (lithium-ion) (Panasonic DMW-BLB13E):**

Information for your safety

<b>Voltage/capacity (Minimum):</b>	7.2 V/1250 mAh
--	----------------

**Interchangeable Lens (H-VS014140)****“LUMIX G VARIO HD 14–140 mm/F4.0–5.8 ASPH./MEGA O.I.S.”**

<b>Focal length:</b>	f=14 mm to 140 mm (35 mm film camera equivalent: 28 mm to 280 mm)
<b>Aperture type:</b>	7 leaf shutters/iris diaphragm/circular diaphragm
<b>Aperture range:</b>	F4.0 (Wide) to F5.8 (Tele)
<b>Minimum aperture value:</b>	F22
<b>Lens construction:</b>	17 elements in 13 groups (4 non-spherical lenses/2 ED lenses)
<b>In focus distance:</b>	0.5 m (1.64 feet) to $\infty$ (from the focus distance reference line)
<b>Maximum image magnification:</b>	0.2 $\times$ (35 mm film camera equivalent: 0.4 $\times$ )
<b>Optical image stabilizer:</b>	Available
<b>Mount:</b>	“Micro Four Thirds Mount”
<b>Angle of view:</b>	75° (Wide) to 8.8° (Tele)
<b>Filter diameter:</b>	62 mm (2.44 inch)
<b>Max. diameter:</b>	Approx. 70 mm (2.76 inch)
<b>Overall length:</b>	Approx. 84 mm (3.31 inch) (from the tip of the lens to the base side of the lens mount)
<b>Mass:</b>	Approx. 460 g (16.2 oz)

• G MICRO SYSTEM is a lens exchange type digital camera system of LUMIX based on a Micro Four Thirds System standard.

• Micro Four Thirds™ and Micro Four Thirds Logo marks are trademarks or registered trademarks of Olympus Imaging Corporation, in Japan, the United States, the European Union and other countries.

• Four Thirds™ and Four Thirds Logo marks are trademarks or registered trademarks of Olympus Imaging Corporation, in Japan, the United States, the European Union and other countries.

• SDHC Logo is a trademark.

• "AVCHD" and the "AVCHD" Logo are trademarks of Panasonic Corporation and Sony Corporation.

• Manufactured under license from Dolby Laboratories.

• Dolby and the double-D symbol are trademarks of Dolby Laboratories.

• HDMI, the HDMI Logo and the High-Definition Multimedia Interface are the registered trademarks or trademarks of HDMI Licensing LLC.

• HDAVI Control™ is a trademark of Panasonic Corporation.

• QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.

• Adobe is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.

• Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.

• Other names, company names, and product names printed in these instructions are trademarks or registered trademarks of the companies concerned.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.



AVCHD™



DIGITAL  
STEREO  
CREATOR



EU



**B**

VQT2A73  
F0409SM0

Panasonic Corporation

Web Site: <http://panasonic.net>

Pursuant to at the directive 2004/108/EC, article 9(2)

Panasonic Testing Centre

Panasonic Marketing Europe GmbH

Winsbergring 15, 22525 Hamburg, Germany

© Panasonic Corporation 2009