Safety precautions

WARNING!

- To reduce the risk of fire, electric shock or product damage,
  – Do not expose this unit to rain, moisture, dripping or splashing.
  – Do not place objects filled with liquids, such as vases, on this unit.
  – Use only the recommended accessories.
  – Do not remove covers.
  – Do not repair this unit by yourself. Refer servicing to qualified service personnel.
- The mains plug is the disconnecting device. Install this unit so that the mains plug can be unplugged from the socket outlet immediately.

CAUTION!

Unit

- This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please increase separation between this unit and the mobile telephone.
- Avoid using or placing this unit near sources of heat. Do not leave it in an automobile exposed to direct sunlight for a long time with the doors and windows closed as this may deform the cabinet.
- Avoid cuts, scratches, or poor connections in the AC mains lead, as they may result in possible fire or electric shock hazard. Also, excessive bending, pulling or splicing of the lead should be avoided.
- Do not unplug the AC mains lead by pulling on the lead. To do so may cause premature failure or shock hazard.
- Do not operate this unit in a bathroom, as a potential shock hazard may result.
- When not in use, disconnect the AC mains lead from the household mains socket.
- The function selector switch does not separate entire unit from mains even if in “OFF” position.

Batteries

- If this unit is not used for a long period of time or is used only from an AC power source, remove all the batteries to prevent potential damage due to possible battery leakage.
- Insert so the poles (+ and –) match those in the unit.
- Do not mix old and new batteries.
- Do not use different types of batteries at the same time.
- Do not break open or short-circuit the battery.
- Do not charge the alkaline or manganese battery.
- Do not use the battery if the cover has peeled off.
- Do not heat or expose to flame.
- Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.

Small objects

- The knobs (e.g., [TUNING] knob) can come off when pulled hard. To prevent children from swallowing the knob, do not pull it off.

Supplied accessories

Check and identify the supplied accessories.

For the United Kingdom

Use numbers indicated in parentheses when asking for replacement parts.
(Product numbers correct as of Jan 2017. These may be subject to change.)

1 AC mains lead

For the United Kingdom

(K2CT2YY00097)

For others

(K2CQ2YY00122)

Sales and Support Information

For the United Kingdom

Customer Communications Centre

- For customers within the UK: 0344 844 3899
- For customers within Ireland: 01 289 8333
- Monday – Friday 9:00am – 5:00pm (Excluding public holidays).
- For further support on your product, please visit our website: www.panasonic.co.uk

Direct Sales at Panasonic UK


- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Communications Centre Monday – Friday 9:00am – 5:00pm (Excluding public holidays).
- Or go on line through our Internet Accessory ordering application at www.pas-europe.com.
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK.
- It couldn’t be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products. Take a browse on our website for further details.

Panasonic

FM-AM 2-BAND RECEIVER

RF-2400D

Operating Instructions

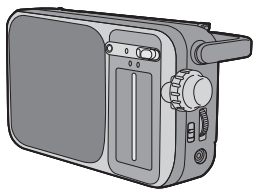

Thank you for purchasing this product.
For optimum performance and safety, please read these instructions carefully.
Please keep this manual for future reference.

“EB” indicates the United Kingdom model.

Manufactured by:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12 Yagumo-higashi-machi, Moriguchi City,
Osaka 570-0021, Japan
Importer for UK:
Panasonic UK, a branch of
Panasonic Marketing Europe GmbH
Maxis 2, Western Road, Bracknell, Berkshire, RG12 1RT
Authorized Representative in Europe:
Panasonic Marketing Europe GmbH
Panasonic Testing Centre
Winsbergring 15, 22525 Hamburg, Germany

Panasonic Entertainment
& Communication Co., Ltd.
Web Site: https://www.panasonic.com

EB EG En

TQBM0069-3
L0117CH2102

Caution for AC mains lead

(For the AC mains plug of three pins)

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.
A 5-ampere fuse is fitted in this plug.
Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark ⓐ or the BSI mark ♡ on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.
If you lose the fuse cover the plug must not be used until a replacement cover is obtained.
A replacement fuse cover can be purchased from your local dealer.

Before use

Remove the connector cover.

How to replace the fuse

The location of the fuse differ according to the type of AC mains plug (Figures A and B). Confirm the AC mains plug fitted and follow the instructions below.
Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

Figure A


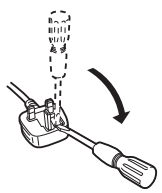


Figure B

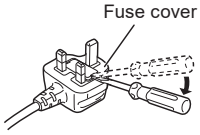

2. Replace the fuse and close or attach the fuse cover.

Figure A





Figure B




Power Supply

■ Connecting AC mains lead


For the United Kingdom
READ THE “Caution for AC mains lead” BEFORE CONNECTION.

The included AC mains lead is for use with this unit only.
Do not use it with other equipment.

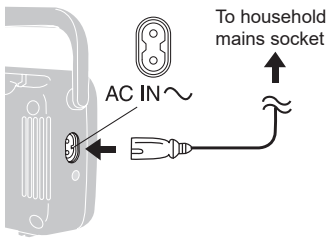

■ Using dry cell batteries (not included)


Unplug the AC mains lead from the household mains socket and the AC IN socket on the unit.

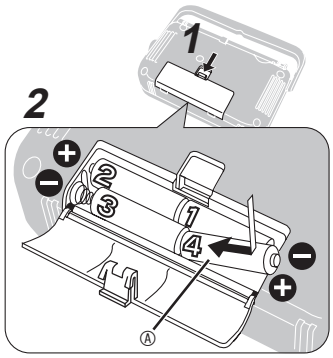

① **Open the battery lid.**
② **Insert batteries in the designated order.**
Ⓐ Four R6/LR6, AA, UM-3 batteries (not included). Press in towards the (–) end.

■ If the battery lid comes loose

Insert the protrusions on the lid into the cutouts on both sides of the compartment.

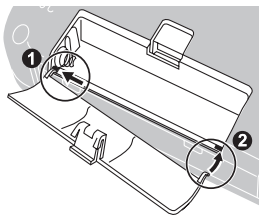

Specifications

Frequency range
FM 87 – 108 MHz
AM 520 – 1730 kHz
Output jack Earphone, Ø 3.5 mm, 8 Ω
Speaker 10 cm, 4 Ω (Full range)
Power output 770 mW (max)
Power requirement
AC For UK 230 to 240 V, 50 Hz
For others 230 V, 50 Hz
Battery DC 6 V (Four R6/LR6, AA, UM-3 batteries)
Power consumption 3 W
Dimension (W x H x D) 234 x 122 x 82 mm
Mass 690 g (without batteries)

Battery life

	Alkaline (LR6)	Manganese (R6)
FM	Approx. 52 H	Approx. 21 H
AM	Approx. 55 H	Approx. 20 H

Note:
Specifications are subject to change without notice. Mass and dimensions are approximate.

Declaration of Conformity (DoC)
Hereby, “*Panasonic Entertainment & Communication Co., Ltd.*” declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.
Customers can download a copy of the original DoC to our RE products from our DoC server:
https://www.ptc.panasonic.eu/compliance-documents
Contact to Authorised Representative: Panasonic Marketing Europe GmbH, Panasonic Testing Centre, Winsbergring 15, 22525 Hamburg, Germany


UK Declaration of Conformity (DoC)
Hereby, “*Panasonic Entertainment & Communication Co., Ltd.*” declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017 No.1206.
Customers can download a copy of the original DoC to our RE products from our DoC server:
https://www.ptc.panasonic.eu/compliance-documents
Contact in the UK: Panasonic Testing Centre on behalf of Panasonic UK, a branch of Panasonic Marketing Europe GmbH (Importer)
Maxis 2, Western Road, Bracknell, Berkshire, RG12 1RT

Listening to the Radio

1 Set [OFF/BAND] to FM or AM.
FM indicator turns orange.
AM indicator turns orange.




2 Tune to a station.
[TUNING] lamp lights when tuned.

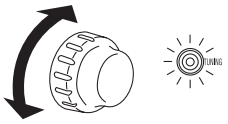

3 Adjust the volume.



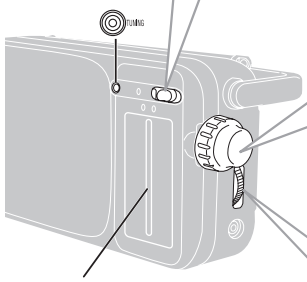

Luminous bar: Collects light from lighting equipment and the sun, and glows when the environment becomes dark.


■ To turn the radio off

Set [OFF/BAND] to OFF.
OFF indicator turns orange.




■ To adjust the antennas

FM
Pull out the telescopic antenna and adjust its length and angle for optimum reception.

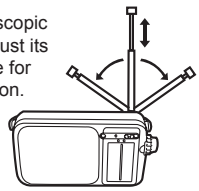


AM
The unit has a built-in ferrite antenna, so try various directions for optimum reception.

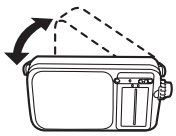

■ Using an earphone (not included)

Sound is not heard from the speaker.
Plug type: 3.5 mm, monaural
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- If a gritty noise is heard, wipe away the dirt on the plug.



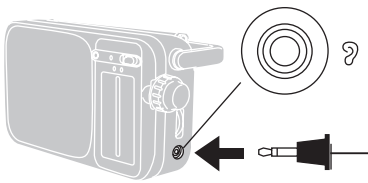

Disposal of Old Equipment and Batteries
Only for European Union and countries with recycling systems



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries must not be mixed with general household waste.
For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points in accordance with your national legislation.
By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.
For more information about collection and recycling, please contact your local municipality.
Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.



Note for the battery symbol (bottom symbol):
This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.